

# Skyjacker® Going Strong For Over 35 Years

The People Behind the Product...  
Bigger and Better Than Ever

The distinguishing values and attributes of people show through in their everyday lives. Their dedication to quality, devotion to integrity, and commitment to excellence shows their passion. 'Our people', the management & staff at Skyjacker®, have a pure passion for off-roading and that heritage goes back over 35 years.

For over 35 years Skyjacker® has proven to be the innovator in the suspension market. This commitment to cutting-edge technology has enabled Skyjacker® to deliver a huge selection of products to you our customers. When you choose Skyjacker®, you can rest easy knowing we have spent the necessary time and testing to design a suspension system to meet the level of perfection you deserve.

**LONNIE  
McCURRY SR.**  
President/CEO, Skyjacker®

**NELL McCURRY**  
CAO, Skyjacker®





# SKYJACKER® SHOCK OPTIONS

**Skyjacker® Hydro and Nitro Shocks** Skyjacker® Suspensions offers you a high quality shock absorber with true velocity sensitive valving. Shock absorbers, or spring dampers as it is called everywhere else except in the U.S., control the rate at which suspension springs compress and rebound. As the shock is pushed together, this is called bump or compression. As the shock expands, this is called rebound or extension. Absorbing the 'shock' of bumps and suspension loading is actually performed by the springs in the suspension. The shock's real job is controlling the energy stored in the springs.



**HYDRO H7000 Series Shocks** are recommended for multiple shock applications and mild to moderate off-road use.

## HYDRO 7000 FEATURES

- Hydraulic Action
- Multi-Stage Velocity Sensitive Valving
- Twin Tube Construction
- Bonded Iron Piston
- Chromed Piston Rod with Micro Pores
- Red Polyurethane Bushings
- Includes Red Boot
- Limited Lifetime Warranty

**Bonded Iron Piston**  
For Durability and  
Longer Shock Life

**D.O.M. Tubing**  
Reduces Internal Wear  
for Longer Product Life

**Chromed Piston Rod**  
Features Micro Polished Shaft  
for Improved Product Life and  
Performance

**Orifice Disk**  
For Axle Control in any Condition.

**Leak Proof Seal**  
Prevents Hydraulic Fluid from passing around Piston Head  
for a Consistent and Reliable Ride

**Performance** The performance specific internal components of Skyjacker's shocks respond to the on- and off-road conditions instantly. Whether you are going over rough or smooth terrain at slow or fast speeds, the true velocity sensitive valving produces a stable, controlled level of resistance for better handling, improved stability, and maximum comfort. The technological innovations of these durable, long lasting shocks from Skyjacker® deliver a noticeable advantage over the original equipment and other shock dampeners. Skyjacker's shock absorbers deliver a safe, comfortable ride with improved handling and stability. They keep the tires in contact with the terrain and put you in control of the road ahead.



**NITRO N8000 Series Shocks** are recommended for full-size vehicles and moderate to extreme off-road applications.

## NITRO 8000 FEATURES

- 150 PSI Pressurized Nitrogen Gas
- Multi-Stage Velocity Sensitive Valving
- Twin Tube Construction
- Bonded Iron Piston
- Chromed Piston Rod with Micro Pores
- Red Polyurethane Bushings
- Includes Red Boot
- Limited Lifetime Warranty





**Skyjacker® Steering Stabilizer** A steering stabilizer is a dampening shock for your steering system. It dampens out the harshness of the highway, the 'shimmy' from running the additional weight of larger tires & wheels and places control back into the driver's hands. Stabilizers also reduce the fatigue of the driver on a personal level by reducing the amount of physical strength it takes to guide those larger tires on and off the road. Changing the weak stock unit for a better performing replacement or adding dual steering stabilizers is an inexpensive but worthy investment.



## Replacement Shock Boots

Skyjacker® offers replacement shock boots in a variety of colors.



**Platinum Series Coil-Overs** Skyjacker® has created a Shock & Coil unit that will take your extreme off-road experience to the highest level. PLATINUM Series Coil-Overs are available as part of a Skyjacker® Suspension System or separately as an Up-grade to your existing system.

**Platinum Coils** Only 5160H alloy material is used to ensure the consistency of all the PLATINUM Series Coils. Each spring is preset to solid to add memory and eliminate settling. They are then load tested at 100% curb weight. A final height rate test is used to certify the consistency of the pound rate through the complete travel cycle.

## Platinum Coils wrap the Platinum Coil-Over Shocks which Feature...

- Massive 2-2.5" O.D. Steel Cylinder Honed to +/- .001"
- 7/8" High Carbon Induction Hardened, Micro Polished Steel Shaft
- Heat-Treated Stainless Steel Valving for High Temperature and High-Pressure Operation
- 7075 Aluminum Alloy Rod Ends Fitted with Teflon Lined Stainless Spherical Bearings
- Piston is Made from A 7075 Alloy and Fitted with a High Temperature Viton Wiper Seal
- Each End has a 7075-Aluminum Alloy Rod End Fitted with Teflon Lined Stainless Spherical Bearings

## SKYJACKER® COIL FEATURES

- Each Coil is 100% Load and Dimensionally Tested
- CNC Wound Coil
- Preset Solid to Eliminate Settling
- 5160h Alloy Material





# M95 PERFORMANCE SHOCKS

Skyjacker's new BigGas Monotube Shock is the ultimate shock absorber for light trucks, Jeeps and SUVs. This single tube design helps operating temperatures stay cooler under extreme conditions. The high pressure nitrogen gas and floating piston technology combine to create the fastest responding shock ever.

## BENEFITS

- Nitro Gas
- Internal Bump Stop
- Monotube Design
- 180° Directional Mounting
- Large 46mm Bore
- No Fade Or Lag for Consistent Performance





# '04-'11 GM COLORADO AND CANYON 2WD/4WD

**4" Suspension for the GM Colorado and Canyon** With engineering at its best, we bring you the 4" Skyjacker® suspension lift for the GM Colorado and Canyon 4WD/2WD. It features CNC machined steering knuckles, front and rear crossmembers, differential drop brackets and unique **torsion bar** relocation brackets. All this with an installation that requires no cutting or welding.



Goodyear Wrangler MTRs on Boyd Coddington Custom Wheels  
Kit shown in red for display purposes only.



## KEY FEATURES

- CNC Machined Steering Knuckles
- Softride® Rear Leaf Springs or Add-A-Leafs
- New Front and Rear Crossmember
- No Welding or Cutting
- Front Track Width stays within 3/8" of OEM

## KIT BENEFITS

- Retains Factory Alignment Specifications
- Retains Factory Structural Strength
- Vehicle Can Be Returned To Factory Height
- Quick And Simple Installation

## Skyjacker's Unique Torsion Bar Relocation

**Brackets** The torsion bar applies torque to the lower A-arm. Skyjacker's unique torsion bar relocation bracketry moves the front mounting location on the lower A-arm UP. The torsion bar's rear mounting bracketry and location remains intact in the factory position. This keeps the torsion bar angle setting in the identical position as OEM.



## Options & Accessories

### Heavy-Duty Skid Plate

Skyjacker® has designed a Heavy-Duty front Skid Plate for the '04-'09 GM Colorado and Canyon 2WD/4WD. Designed to work with Skyjacker's 4" Suspension Lifts, this Skid Plate offers complete protection for the front end.

Skyjacker's product line grows again. In addition to our broad product line we have now added Torsion keys for a variety of applications to complete our leveling kit line. With Skyjacker® you can be assured that one product line has what you need to fulfill all your suspension needs.

Skyjacker's torsion keys are an effective and inexpensive way to gain tire and ground clearance. These keys are forged unlike other manufacturers that are cast iron. They can also be installed with most standard or metric tools.



C104KE



## '07-'11 CHEVROLET / GMC K-1500

**3" Suspension for the Chevy / GMC K-1500** Skyjacker® has developed a true 3" suspension lift like no other that maintains the factory comfortable ride and structural integrity of the stock drive train. The extra strong CNC machined knuckles are the heart of this design. The heavy-duty bracketry, crossmember, and other components have the strength and durability you expect from Skyjacker®.

### K-1500 KIT BENEFITS

- No cutting of upper differential mount
- Lower arm is offset for positive caster alignment
- Front track width is within 3/4" of factory
- No cutting of tie rod assembly
- Maintains factory rack and pinion steering geometry
- CV axle spacer for proper plunge depth of CV joint
- Front replacement strut assembly with 3 adjustable height positions
- Factory style front sway bar endlink assembly
- CNC Machined Steering Knuckles
- OEM tire and wheel can be used
- Front Track Width stays within 3/8" of OEM



Nitto Terra Grappler Tires on Ballistic Off-Road Wheels



## '07-'11 CHEVROLET / GMC SUV

### KIT BENEFITS

- No cutting of upper differential mount
- Lower arm is offset for positive caster alignment
- Front track width is within 3/4" of factory
- No cutting of tie rod assembly
- Maintains factory rack and pinion steering geometry
- Works with Auto Ride models
- CV axle spacer for proper plunge depth of CV joint
- Front replacement strut assembly with 3 adjustable height positions
- Factory style front sway bar endlink assembly
- CNC Machined Steering Knuckles
- OEM tire and wheel can be used
- Front Track Width stays within 3/8" of OEM



Continental Tires on Diablo Wheels



### Options & Accessories

#### 2" Metal Spacer

Simple bolt-on installation. Retains factory shocks. Improved handling characteristics. Clear's 33's. Part # C720MS

#### Autoride or Air Ride Brackets

Skyjacker® has developed these high strength relocation brackets for vehicles equipped with auto-ride or airride shocks. (3 Inch Lift Only SUV Models)

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.



## '07-'11 CHEVROLET / GMC K-1500

**Skyjacker's 6" suspension lift system for the '07-'10 GM K1500** is the ultimate in performance, comfort, and stability for these popular vehicles. Skyjacker's adjustable Performance Struts provide the best ride possible and achieve a full 6" of lift in the front. This complete system features heavy-duty front and rear crossmembers along with the necessary differential drop brackets. Replacement CNC machined ductile iron steering knuckles are included and maintain the correct steering geometry, so there is no need for modifications to the factory steering assembly.

As Seen On  
**BUCK  
COMMANDER**



### K-1500 KIT BENEFITS

- No cutting of upper differential mount
- Lower arm is offset for positive caster alignment
- Maintains factory rack and pinion steering geometry
- CV axle spacer for proper plunge depth of CV joint
- Front replacement strut with 3 adjustable height positions
- Adjustable front anti-torque rod for minimization of front axle pinion wrap
- Factory style front sway bar endlink assembly
- No driveshaft modification
- CNC Machined Steering Knuckles

**Willie Robertson**  
**Buck Commander/Duck Commander**

Toyo Open Country Tires on KMC XD Series Wheels

## '07-'11 CHEVROLET / GMC SUVs



### Options & Accessories

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.



### KIT BENEFITS

- Lower arm is offset for positive caster alignment
- Maintains factory rack and pinion steering geometry
- CV axle spacer for proper plunge depth of CV joint
- Front replacement strut with 3 adjustable height positions
- Factory style front sway bar endlink assembly
- Adjustable front anti-torque rod for minimization of front axle pinion wrap
- No driveshaft modification
- OEM tire and wheel can be used
- CNC Machined Steering Knuckles

As Seen On  
**TRUCKS!**



TrXus Tires on EVO Wheels



## '99-'06 CHEVROLET / GMC K-1500

**3" Suspension for the Chevy / GMC K1500** Skyjacker® has developed a true 3" suspension lift like no other that maintains the factory comfortable ride and structural integrity of the stock drive train. The extra strong CNC machined knuckles are the heart of this design. The heavy-duty bracketry, crossmember, and other components have the strength and durability you expect from Skyjacker®.

### KIT BENEFITS

- Drives and Handles with Better Control and Stability than Stock
- Maintains Front End Alignment to Factory Specs
- Ball Joint Angles Remain Stock
- Front CV Break Angles Near Stock
- Maintains O.E. Skid Plate
- No Replacement or Modifications Needed to the Drive Shaft
- Allows Use of Stock Tires & Wheels
- Front Track Width stays within 3/8" of OEM



BFGoodrich Mud Terrain Tires on Mickey Thompson Classic II Wheels

## '00-'05 CHEVROLET/GMC SUVS & CADILLAC ESCALADE

**3" System For The '00-'05 Suburban** You can count on the Skyjacker's simple, yet sophisticated engineering design to keep up with your active lifestyle. With the addition of Skyjacker's newly developed 3" Suspension Lift, the SUV owners get to 'Go Big' in style, comfort, security with a new level of street performance.

**'00-'05 Escalade ESV, EXT**

**'02-'05 Avalanche**

**'00-'05 Tahoe**

**'00-'05 Suburban**

**'00-'05 Yukon**

**'00-'05 Yukon XL**

**'00-'05 Denali**



### Options & Accessories

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

#### Multiple Shock Kit

Available as a Class II option for the Chevrolet / GMC 1500 the Multi-Shock Kit features a tubular mounting design and installation requires no welding. This Class II option reduces body roll and improves handling.

#### Skyjacker® Rear Add-A-Leafs

Skyjacker® Add-a-Leafs insert directly into your factory rear leaf spring providing lift and added strength. Softride® Add-a-Leafs use only American steel and are shot-peened with hard steel pellets at very high velocities.

#### Autoride or Air Ride Brackets

Skyjacker® has developed these high strength relocation brackets for vehicles equipped with autoride or airride shocks. (3 Inch Lift Only SUV Models)

Nitto Terra Grappler Tires on Raceline Wheels



## '99-'06 CHEVROLET / GMC 1500

**6" System For The '99-'06 Chevy / GMC 1500** Whether used as a workhorse or as a thoroughbred, these trucks are well bred for many practical and functional uses. Skyjacker® recognizes the versatility of these vehicles and their owners. This is why Skyjacker® has designed the best suspension available for these real trucks. This meticulously designed setup allows you to take your truck from the back roads to the boulevard in style.

### KEY FEATURES

- No Replacement or Modifications Needed to the Drive Shaft
- CNC Machined Steering Knuckles
- Drop Bracketry for the Front Upper Differential Mounts
- Heavy-Duty Crossmembers that Drop the Lower Control Arms
- Bracketry to Drop the Torsion Bar Crossmember
- 5-6 Hours of Installation Time



Pro-Comp All Terrain Tires

## '00-'05 CHEVROLET / GMC SUVs

**6" System For The '00-'05 Chevy / GMC SUVs** In 2000 Chevy/GMC, utilizing the torsion bar set up of their pickups, created a new suspension for the rear of these full-size SUVs. It is a smooth riding 4-link coil spring system. Combined with Skyjacker's innovative front system & Softride® coils, you will be set for your next big off-road adventure.

### KEY FEATURES

- No Replacement or Modifications Needed to the Drive Shaft
- CNC Machined Steering Knuckles
- Drop Bracketry for the Front Upper Differential Mounts
- Heavy-Duty Crossmembers that Drop the Lower Control Arms
- Bracketry to Drop the Torsion Bar Crossmember
- Full-Height Softride Rear Coil Springs



BFGoodrich Mud Terrain Tires  
on Helo Max6 Wheels





# 2011 CHEVROLET/GMC 2500HD

**The redesigned 2011 Chevy Silverado 2500HD is making a statement.** At Skyjacker® we wanted that statement to be big and have designed the tallest kit offered on the market at 7". This dependable 7" suspension kit reinforces & strengthens the truck's capabilities while allowing you to clear 37" tires. Skyjacker's design complements the purpose of this truck and equips you with a true truck suspension capable to finish any job.

This new 2500HD 7" kit includes the great components you find from Skyjacker® like CNC machined steering knuckles, front and rear 1/4" steel crossmembers, differential drop brackets, differential skid plate, and raised front torsion bar relocation brackets.

**Winner  
of the GM  
2010 SEMA  
Design  
Award for  
Best New  
Accessory**

**C11781K  
7" KIT**





## KEY FEATURES

- OEM wheels can be reused
- CNC machined steering knuckles
- Front and rear 1/4" steel crossmembers
- Heavy-Duty Raised torsion bar relocation brackets
- Differential skid plate
- All 4 Bump Stops are Relocated
- 4 Nitrogen Gas Charged Shocks included

## BENEFITS

- Can reuse OEM 17" or 18" wheels
- Maintains OEM steering geometry
- Retains factory alignment specs
- Differential skid plate designed to protect drivetrain
- Improves ground clearance
- Raised Torsion Bar Relocation bracket
- No Cutting of Differential



**Sway Bar Links  
Designed to  
OE Specs For  
Longevity and  
Durability**

**Torsion Bar  
Raised for  
Maximum  
Clearance**

**OE Bump Stops  
Relocated To  
Prevent A-Arm  
Warping**



**DEFG114SP**



Skyjacker Suspensions is proud to announce our new DEF/Urea Tank Skid Plate product. This Skid Plate product is made for the 2011 Chevy 2500 HD. This new DEF/Urea Tank skid plate protects the DEF tank from debris on and off-road. It is made from laser cut P&O steel for ultimate protection.

The features of this new DEF skid plate are the laser cut heavy-duty P&O Steel, the black powder coat finish, and all the necessary mounting hardware. The benefits of investing in one of the DEF/Urea Tank Skid Plates is that it protects the DEF/Urea Tank. It also adds appearance & styling for vehicle along with easy installation. The other upside to the new skid plate is it does not have to be used with a lift kit. The DEF/Urea Tank Skid Plate can be used as added protection for stock or lifted vehicles.



## '01-'10 CHEVROLET/GMC 2500HD

**3" System For The '01-'06 Chevy / GMC 2500HD** With the hard working construction foremen, farmers, ranchers, builders and hard playing sportsmen in mind, Skyjacker® has designed a dependable suspension that reinforces & strengthens this Big Rig's capabilities. Skyjacker's design will bring your daily driver to life and enable you to overcome the elements, conquer the obstacles of the terrain, finish the job and move on to the next project in true off-road style.



### Options & Accessories

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

#### Steering Stabilizers

Skyjacker® offers Dual In-Line steering stabilizers for these models. Add these units to take control of the road... on and off the pavement.





# '01-'10 CHEVROLET/GMC 2500HD

**6" System For The '01- '10 Chevy / GMC 2500HD** For the Heavy-duty hauler, Skyjacker has designed a dependable suspension that reinforces & strengthens this Big Rig's capabilities. Skyjacker's design complements the purpose of this work truck and equips you with a true truck suspension capable to finish the job.



## Options & Accessories

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

### Multiple Shock Kit

The Multi-Shock Kit features a tubular mounting design and installation requires no welding. This Class II option reduces body roll and improves handling.

### Steering Stabilizers

Skyjacker® offers Dual In-Line steering stabilizers for these models. Add these units to take control of the road... on and off the pavement.



C9681KS-NSP System



## KEY FEATURES

- No Drive Shaft Replacement or Modifications
- CNC Machined Steering Knuckles
- Drop Bracketry for the Front Upper Differential Mounts

BFGoodrich All Terrain Tires on Raceline Monster Wheels



# '88-'98 CHEVROLET/GMC 1500 & SUBURBAN

**6" System** In addition to its new sheet metal makeover for 1988, Chevy / GMC made a radical change from a leaf spring suspension to an independent front suspension (IFS) with torsion bar setup. Skyjacker® approached this popular truck's suspension with the same exacting standards you have come to know and trust.

## KEY FEATURES

- New Differential Brackets and A-Arm Drop Brackets to Relieve Wear and Tear on the Upper Ball Joints
- Center Steering Stabilizer Link and Stabilizer Arm
- Lower Differential Skid Plate
- Extended D.O.T. Stainless Steel Braided Brake Lines
- Grade 8 Mounting Hardware and Poly Bushings
- Available as a System with Rear Springs or as a Kit Featuring Rear Blocks



Super Swamper  
TSL/SX Tires on  
American Racing  
Outlaw Wheels

Kit shown in  
red for display  
purposes only.



## '88-'98 PICK-UP/SUBURBAN

**2.5" Lift** With the addition of the Skyjacker® 2.5" Kit, the Pick-Up and Suburban become go anywhere, do anything work horses. Always great vehicles for large families or large workloads, the Pick-Up and Suburban are a popular choice for their power and towing abilities. With the addition of a Skyjacker® suspension, the work gets a little easier and the family vacations become more adventurous.



## Options & Accessories

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually all 4WD vehicles. These stabilizers are available in heavy-duty replacement, single, dual and triple kits.

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

### Stainless Steel Braided Brake Lines

Our brake lines are braided from high quality stainless steel with heavy-duty fittings designed to match your vehicle. They also feature an outer extruded polyurethane coating to keep them from chaffing. They don't just meet the specifications, they are the specification.



## KEY FEATURES

- New Differential Brackets and A-Arm Drop Brackets to Relieve Wear and Tear on the Upper Ball Joints
- Increases Front Wheel Travel and Allows for Larger Tires
- Full Length Softride® Rear Add-a-Leafs

BFGoodrich All Terrain Tires on Stock Wheels



# '67-'91 CHEVROLET/GMC PICK-UPS & SUV'S

**2.5", 4", 6" and 8" Lifts** Before the IFS suspensions, Skyjacker® developed and engineered Softride® leaf springs for the earlier generation of Chevrolet and GMC vehicles. Softride® technology produces the highest quality of leaf spring systems that the industry has ever known. With Skyjacker's Softride® technology you can take your classic ride to a new level of performance while reaping the benefits of a Softride® design. These lift kits are available in a variety of front and rear lift heights.



## SOFTTRIDE®

BY SKYJACKER®

### KEY FEATURES

- Polyurethane Spring Eye Bushings
- E-coated U-bolts to Resist Corrosion
- Self Locking Nylon Lock Nuts

Super Swamper Boggers on Allied Wheels



C180AK Kit



### Options & Accessories

#### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications. You CAN eliminate bump steer when you raise your 4x4.

#### Adjustable Drag Link

Heavy duty adjustable drag link designed for additional steering correction. The drag link comes complete with rubber tie rod boots and zerks fittings.

#### Sway Bar Lowering Kits

The sway bar lowering kits realign the front sway bar working angle for lifted vehicles. The realignment of the working angle achieves maximum sway control.



### KEY FEATURES

- Polyurethane Spring Eye Bushings
- E-coated U-bolts to Resist Corrosion
- Self Locking Nylon Lock Nuts

BFGoodrich Mud Terrain Tires  
on American Eagle Wheels



# '67-'91 CHEVROLET/GMC PICK-UPS & SUV'S

**Complimenting Package** The early Chevy/GMC vehicles were designed with rugged use and dependability in mind. Many of these vehicles are still in use today. Skyjacker® followed suit with the design of complimentary suspension packages that took these early Chevy/GMC vehicles beyond the known limits of their performance.



C160AKSD System

## Options & Accessories

### Stainless Steel Braided Brake Lines

Our brake lines are braided from high quality stainless steel with heavy-duty fittings designed to match your vehicle. They also feature an outer extruded polyurethane coating to keep them from chaffing. They don't just meet the specifications, they are the specification.

### Multiple Shock Kits

Skyjacker® offers dual & triple shock kits for the front and rear, depending on application. These versatile kits include all necessary bracketry and hardware. Hydro or Nitro shocks are sold separately.



C160AK Kit



C160AKS System



Super Swamper TSI Tires  
on Mickey Thompson  
Classic II Wheels



## '09-'10 DODGE RAM 1500

Dodge may have redesigned the 09 and newer 1500 Ram, but Skyjacker® has released two new suspension lift kits that redefine this all new setup. The 4 & 6" kits include CNC Machined Steering knuckles, front & rear crossmembers, 1-piece differential skid plate, 4-link relocation brackets and replacement variable rate Softride® rear coil springs.



### KEY FEATURES

- 4 & 6" Lifts available
- CNC Machined Steering Knuckles
- Front & Rear Steel Crossmembers
- Powder Coated Differential Skid Plate
- Variable Rate Softride® Coil Springs
- Rack-and-Pinon Steering Assembly left in OE Position
- Maintains OEM Steering Geometry
- Improved Ride with Softride® coils
- Protection for Differential Housing
- Clearance for Larger Tires & Wheels

**\*Note TRX4 Package order part number D960TRX4**

**As Seen On**



**Craig Foster**





## '06-'11 DODGE RAM 1500

**Skyjacker's 1-2 Inch Quick-Leveling** One of the latest introductions to the Skyjacker® Leveling Kit line is the leveling strut for the 06-11 Dodge Ram 1500 Pickup. This new addition to the S8000 Performance Strut Series is engineered beyond OE and delivers 1.5-2 Inches of front lift for a more level stance. These twin tube, nitrogen gas charged units are designed with a 1.375" piston size (larger than OE) with true velocity sensitive valving. These performance strut designs deliver a noticeable advantage in strength, durability, and performance. The factory coils are retained for a cost effective option that gives you improved stability, better handling, and great looks.



## '02-'05 DODGE RAM 1500

**6" System For The Dodge Ram 1500** Dodge may have 're-designed' the Ram, but Skyjacker® has unleashed a Refined Revolution of Suspension Technology that reaches new heights of performance and durability. To measure up to the tough, work hard, play harder capability, this dynamic suspension system is ready for a hearty dose of your favorite off-road pastime.

**Skyjacker® Delivers** The structurally solid, precision-engineered CNC machined steering knuckles in this package even exceed the OE specs. Our design and additional bracketry allows the rack-and-pinion steering to be left in OE position for precise steering response. The rack & pinion is also protected by sturdy cross members that link together an integrated 2-piece 4-point skid plate. The included Skyjacker® exclusive Patent Pending 'Re-Indexing Ring' and Seal Adapter also mean there is no replacement or modification to the front drive shaft in most cases with this unit. Available in either a Kit form with a Rear Block and U-Bolt or in a System with Replacement Full-Height Softride® Rear Springs, all of these elements combine to achieve a full 6 inches of lift... and help soften those bumpy terrains.

### KEY FEATURES

- Rack-and Pinion Steering Assembly Left in OE Position
- Patent Pending Re-Indexing Ring & Seal Adapter to Re-Clock the Transfer Case
- No Replacement or Modifications needed for Drive Shaft in Most Cases
- CNC Machined Steering Knuckles
- Sturdy Integrated 2-Piece 4-Point Skid Plate
- Bracketry for the Front Upper Differential Mounts
- 3 Heavy-Duty Cross members - two for the Lower Control Arms and one for the Front Skid Plate
- Torsion Bar Crossmember Bracketry



### D2601KS System

order D2601KS-NSP  
for Non Skid Plate

### Options & Accessories

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.





# '94-'01 DODGE RAM 1500

**2", 3" and 5" Dodge Kits & Systems** To match its "big rig" styling Skyjacker® has created the most versatile line of Kits and Systems for the '94-'01 Dodge trucks. 3" options include Kit or System and Class I or Class II options. 5" include such choices as Standard or Single Flex links, Kit or System and Class I or Class II options.



**Standard**



**Single Flex**



**5" D501K Class I Kit**



**5" D501KS Class I System**




Super Swamper TSL Tires on Eagle Alloy 058 Series Wheels


**Kit, System... What's The Difference?** With all these choices, you can see that Skyjacker's '94-'01 Dodge truck selection is very in-depth. Skyjacker® not only offers choices like Class I and Class II, but also Kit and System choices. The Kit form features rear Add-a-Leafs whereas, the System form comes with rear Softride® leaf springs.

## **Class I, Class II... What's The Difference?**

For example, the Dodge **Class I** 3" Kit includes coil springs, lower control arms and bump stops. The same kit in **Class II** form includes coil springs, upper and lower control arms and bump stops, plus front dual shock bracketry and lower link skid plates.

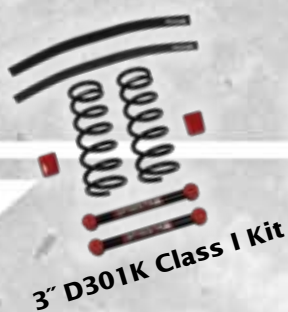


**3" D301K Class I Kit**

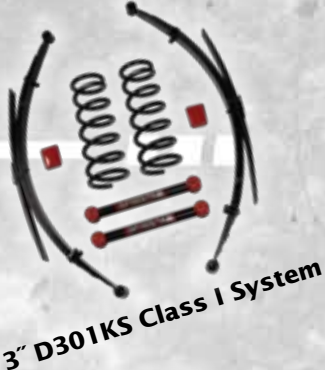

**3" D301KS Class I System**



**2" D201K Kit**

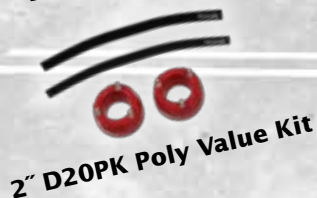

**2" D20PK Poly Value Kit**



## **Options & Accessories**

### **Platinum Series Coil-Over**

The ultimate accessory. Platinum Series Coil-Over's are designed to perform and we are sure you will be pleased with their off-road performance. Available for '94-'01 Dodge 1/2 Ton - 3, 5 & 7 inch lifts and '94-'02 3/4 Ton - 4.5 & 7 inch lifts.

### **Dual Shock Brackets**

Improve performance both on and off-road with the Dual Front Shock assembly. The kit is designed as an easy bolt-on and allows for installation of an additional shock on each side.

**Included in Class II Kits and Systems**

### **Adjustable Track Bar (4"-7" Lifts Only)**

The Adjustable Track Bar replaces the O.E.M. track bar and comes with a new heavy-duty bracket. Track bar assembly is adjustable at two points and features heavy-duty 3/4" spherical rod end.



# 2011 DODGE RAM 2500,3500 & MEGA CAB

**Skyjacker® is leading the trail in the Dodge Market with the 5" suspension lift** for the "big and bold" '10-11 Dodge 2500 and 3500 4WD includes replacement full-height Softride® front coil springs, greaseable upper and lower control arms, relocation brackets for the upper arms, pitman arm, bump stops and all necessary hardware.

This 'Bolt-On' kit requires no welding and allows 37 inch tire clearance with no modifications. This setup is available in a kit design with rear Add-a-Leafs or System design with new Softride® rear leaf springs.

## KEY FEATURES

- Softride® Variable Rate Front Coil Springs
- Longer Control Arms with Upper Arm Relocation Brackets.
- Available with Softride® Rear Leaf Springs

## BENEFITS

- Improved Ride Quality
- Retains OEM Alignment Specifications
- Increased Wheel Travel

## Options & Accessories

### Steering Stabilizers

Skyjacker® offers two different setups to put the control back into your hands... the heavy-duty O.E.M. Replacement or the Dual In-Line design.

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

### Dual Shock Brackets

Improve the performance both on and off-road with the Dual Front Shock assembly. The kit is designed as an easy bolt-on and allows for installation of an additional shock on each side.



**D4510KS  
Class II System**



**D4510PN  
Pallet Kit**



**D4510K  
Class II Kit**





# '03-'10 DODGE RAM 2500,3500 & MEGA CAB

**Skyjacker® Lives Up To Its Reputation in the Dodge Market** The 5" suspension lift for the "big and bold" '03-'09 Dodge 2500 and 3500 4WD includes replacement full-height Softride® front coil springs, greaseable upper and lower control arms, relocation brackets for the upper arms, pitman arm, bump stops and all necessary hardware.



Goodyear MTR Tires on  
Raceline Monster Wheels


This 'Bolt-On' kit requires No Welding and allows 37 inch tire clearance with no modifications. This setup is available in Kit design with rear Add-a-Leafs or System design with new Softride® rear leaf springs.

## KEY FEATURES

- Softride® Variable Rate Front Coil Springs
- Longer Control Arms with Upper Arm Relocation Brackets.
- Available with Softride® Rear Leaf Springs

## BENEFITS

- Improved Ride Quality
- Retains OEM Alignment Specifications
- Increased Wheel Travel

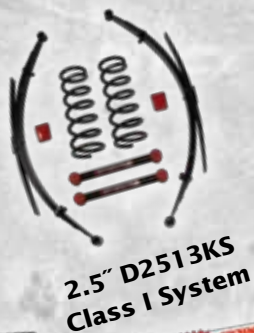

## Options & Accessories

### Steering Stabilizers

Skyjacker® offers two different setups to put the control back into your hands... the heavy-duty O.E.M. Replacement or the Dual In-Line design.

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

### Dual Shock Brackets

Improve the performance both on and off-road with the Dual Front Shock assembly. The kit is designed as an easy bolt-on and allows for installation of an additional shock on each side.





# '94-'02 DODGE RAM 2500

**2", 2.5" and 4.5" Dodge Kits & Systems** Skyjacker® offers the best variety of lift options for the '94-'02 4WD Dodge trucks. 2.5" options include Class I and Class II Kit or System. 4.5" include Standard or Single Flex links in both Class I and Class II Kits or Systems.




**Standard**



**Single Flex**



Super Swamper TSL Tires on  
Factory Wheels

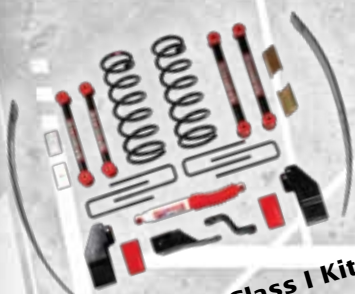


**4.5" D4512K Class I Kit**



**4.5" D4512KS Class I System**

**Kit, System... What's The Difference?** Skyjacker® not only offers choices like Class I and Class II, but also Kit and System choices. The Kit form features rear Add-a-Leafs whereas, the System form comes with rear Softride® leaf springs. With all these choices, you can see that Skyjacker's '94-'02 Dodge truck selection is very in-depth.

**Class I, Class II... What's The Difference?** For example, the Dodge Class I 2.5" Kit includes coil springs, lower control arms and bump stops. The same kit in Class II form includes coil springs, upper and lower control arms and bump stops, plus front dual shock bracketry and lower link skid plates.

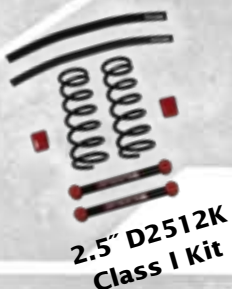

**2.5" D2512K  
Class I Kit**



**2.5" D2512KS  
Class I System**



**2" D251PK  
Poly Value Kit**



## Options & Accessories

### Platinum Series Coil-Over

The ultimate accessory. Platinum Series Coil-Over are designed to perform and we are sure you will be pleased with their off-road performance. Available for '94-'02 Dodge 1/2 Ton - 3, 5 & 7 inch lifts & '94-'02 3/4 Ton - 4.5 & 7 inch lifts.

### Re-Indexing Ring and Seal Adapter

Exclusive to Skyjacker®, the Patent Pending Re-indexing Ring and Seal Adapter reduce the need to replace or modify the front drive shaft.

### Dual Shock Brackets

Improve the performance both on and off-road with the Dual Front Shock assembly. The kit is designed as an easy bolt-on and allows for installation of an additional shock on each side.

**Included in Class II Kits and Systems**





## '94-'01 DODGE 1/2, 3/4 & 1 TON

**7" System** Skyjacker® has gone to great lengths to give you a Lift System for the 1994-'01 long arm Dodge 1/2, 3/4 & 1 Tons. This 'Bolt-On' kit requires No Welding and clears 38's with no other modifications necessary. The Flex Series Long Arm design maintains proper geometry through the travel cycle.



**D752KS-DX System**  
Shocks Sold Separately

**FLEX**  
SERIES  
BY SKYJACKER®

Super Swamper Bogger Tires on  
Weld Racing Mountain Crushers

## '61-'93 DODGE 1/2, 3/4 & 1 TON

**Add More Height to Your Sure Footed Ram Pick-Up** Skyjacker® produces 2", 4", 6" and 8" lift Kits and Systems for the '61-'93 Dodge Ram Pick-Up, Ramcharger and Trailduster. Much of the lift in these great kits and systems is achieved by using Softride® springs. Utilize Skyjacker's Softride® Technology in your early Dodge for the level of performance you deserve.



**D600BKS System**

### KEY FEATURES

- Polyurethane Spring Eye Bushings
- E-coated U-Bolts to Resist Corrosion
- Self Locking Nylon Lock Nuts



BFGoodrich Mud Terrain Tires on  
Mickey Thompson Classic II Wheels

**SOFTTRIDE**  
BY SKYJACKER®



## '09-'11 FORD F-150 4WD

Skyjacker's 4 - 6 inch lift for the 2009-2011 Ford F-150 is another prime example of Skyjacker's innovation in the suspension market. This new lift package features CNC machined steering knuckles to maintain the correct steering geometry, front & rear crossmembers, as well as adjustable front struts to provide the best ride possible and achieve lift from 4 to 6" as desired. All the necessary grade-8 hardware is supplied for this complete, easy to install kit. Note: 20" wheel required.



F9461KS



BFG KM2 Mud Terrains on BMF Wheels

### BENEFITS

- Rack & Pinion Left Intact
- No Cutting Or Grinding Of Front Differential Housing
- Retains Factory Alignment Specs

### KEY FEATURES

- CNC Machined Knuckles
- Front & Rear Crossmembers
- Adjustable Front Struts With 20mm Piston Rod



### Options & Accessories

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

#### 2" Leveling Kit

2009-2011 Ford F-150  
2 Wheel Drive/ 4 Wheel Drive  
Clears 33" Tires.





# '04-'08 FORD F-150 2WD/4WD

**2"-3" Kit with Add-A-Leafs** This 3" suspension kit replaces the factory struts with a higher quality strut and retains the factory coil springs. You keep the same quiet comfortable ride, but gain the extra clearance needed for a more aggressive tire.

**Simply Impressive** This simple yet durable suspension package, allows the rack-and-pinion steering to be left in the stock positions for precise steering response.

**F430STK**

## KEY FEATURES

- 2 Adjustable Lift Heights
- Softride® Rear Add-A-Leafs
- Improved Wheel Travel & Handling Characteristics
- Clears 33's

**Reap The Platinum Series Benefits with Skyjacker's Award Winning Design** Skyjacker's 6" 4WD Lift comes complete with front and rear crossmembers, heavy-duty steering knuckles, Platinum Series Assembly with New Softride® coil springs and full protective front skid plates.

## CUSTOMER BENEFITS

- Improves Handling
- Keeps Same Steering Geometry & Turning Radius
- Strength & Durability over OEM

## BENEFITS

- Improved Ride Quality & Wheel Travel
- Rack and Pinion Assembly Left Intact
- Front and Rear Crossmembers Include Alignment Adjustment
- Clears 315-75's



BFGoodrich Baja TA Tires on KMC Wheels



Goodyear MTR Tires on MKW Wheels



## PRODUCT HIGHLIGHTS

- No Grinding or Cutting of the Front Differential Housing is Necessary.
- Provides Increased Wheel Travel.



**F4601KS System**

## Options & Accessories

### 2" Aluminum Leveling Kit

'04-'08 FORD F-150  
2WD/4WD Clears 33's

### 2.5" Poly Value Kit

'04-'08 FORD F-150  
2WD/4WD Clears 33's

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

**As Seen On  
TRUCKS!**

**This is  
the one  
to do!**

Kit shown in red for display purposes only.



# '97-'03 AND '04 HERITAGE FORD F-150

**6" System For The '97-'03 Ford F-150** When getting your truck muddy, dusty and dirty isn't all from work, but from some playtime too, this system is the perfect setup for you. The classic heritage of these legends of the open road can be enhanced with this fully-functional, bolt-in suspension lift from Skyjacker®. You can enjoy everything this durable lift System has to offer "en route" to your next triumph... whether it's work or play.



## KEY FEATURES

- Direct Bolt-In Setup
- CNC Machined Steering Knuckles
- 2-Piece 4-Point Skid Plate Included
- Heavy-Duty Crossmembers
- Bracketry for the Front Upper Differential Mounts
- Bracketry for the Torsion Bar Crossmember
- Replacement, Longer Front Sway Bar End Links
- No Drive Shaft Replacement or Modifications
- Front & Rear Brake Line Relocation Brackets

BFGoodrich Mud Terrain Tires on KMC Wheels



### F9701KS System

order F9701KS-NSP for Non Skid Plate

**Brilliant Solution** The front suspension includes quality controlled, CNC machined steering knuckles that even exceed the OE specs. This unit utilizes massive replacement crossmembers and an integrated 2-piece 4-point skid plate. The skid plate encompasses the front factory crossmember and reinforces the strength against off-road forces. All of this and more combine to produce a true 6 inches of lift with the ability to clear 35" tires.

**Precisely Engineered** With Skyjacker's unique design, there is No Cutting, Grinding or Welding Required, making this unit completely reversible. **You can put it back to stock if you want to later... but why would you do such a thing?**



## Options & Accessories

### Softride® Leaf Springs

Softride® springs by Skyjacker® are constructed as progressive multi-leaf packs so that the gross vehicle weight rating and load carrying capacity will be equal to or greater than those of the vehicles original equipment.

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

Toyo Open Country MT Tires on American Racing Wheels



# '80-'96 FORD F-150/BRONCO CLASS I

**2", 4", 6" and 8" F-150 & Bronco, 2WD & 4WD Skyjacker®** offers a diverse selection of lifts ranging from 2"-8" for most 2WD and 4WD '80-'96 Independent Fords. Some of the choices include Class I Kits and Systems.

**Class I Kit** The Class I Kit features replacement cast steel radius arm brackets which are exclusive to Skyjacker®. This Kit also features heavy-duty replacement center hinge brackets. The coil springs in these Kits are preset and formed from 5160H chromium alloy to ensure a higher tensile strength and longer life. This Kit includes blocks & u-bolts for the rear.

## **Softride® Coil Springs**

Each coil spring is preset and formed from 5160H Chromium alloy to ensure a higher tensile strength and longer life. Each spring is powder coated to resist corrosion.



186BK Class I Kit



Super Swamper TSL Tires on Weld Wheels

## **Softride® Leaf Springs**

Softride® springs by Skyjacker® are constructed as progressive multi-leaf packs so that the gross vehicle weight rating and load carrying capacity will be equal to or greater than those of the vehicles original equipment.

# '80-'96 FORD F-150

**Class I System** The Class I System features replacement cast steel radius arm brackets which are exclusive to Skyjacker®. This System also features Race Style heavy-duty replacement center hinge brackets. The coil springs in these Systems are preset and formed from 5160H chromium alloy to ensure a higher tensile strength and longer life along with the added benefit of full-height rear springs.



186PKS Class I System



## **Options & Accessories**

### **Radius Arm Caster Adjusting Bushings**

These bushings are designed to aid in the precise adjustment of caster by raising or lowering the radius arm at the frame.

### **Camber Caster Shims**


The upper ball joint sleeve is eccentric allowing the adjustment of both camber and caster.

### **Steering and Pitman Arms**

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### **Stainless Steel Braided Brake Lines**

Our brake lines are braided from high quality stainless steel with heavy-duty fittings designed to match your vehicle. They also feature an outer extruded polyurethane coating to keep them from chaffing. They don't just meet the specifications, they are the specifications.

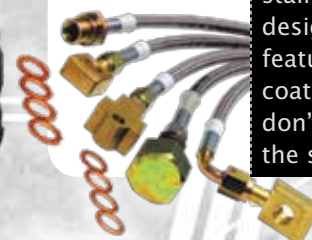

Super Swamper Tires on American Racing Outlaw II Wheels



# '80-'96 FORD F-150/BRONCO CLASS II

**4" and 6" F-150 & Bronco, 2WD & 4WD Skyjacker®** offers a diverse selection of lifts ranging from 4" - 6" for most 2WD and 4WD '80-'96 Independent Fords. Some of the choices include Class II Kits and Systems.

**Class II System** The Skyjacker® Class II System features longer replacement tubular steel radius arms, double shroud replacement center hinge brackets. The coil spring in these Systems are preset and formed from 5160H chromium alloy to ensure a higher tensile strength and longer life. Full-height rear springs are also included.



Super Swamper TSL and Bogger Tires on OMF Bead Locks



286BKS-A Class II System

## Softride® Coil Springs

Each coil spring is preset and formed from 5160H Chromium alloy to ensure a higher tensile strength and longer life. Each spring is powder coated to resist corrosion.

**Class II Kit** This uniquely Skyjacker® Class II Kit features longer tubular steel radius arms, mounting brackets and Race Style replacement center hinge brackets. The Softride® coil springs in these Kits are preset and formed from 5160H

chromium alloy to ensure a higher tensile strength and longer life. This Kit includes blocks & u-bolts for the rear.



## Options & Accessories

### Radius Arm Castor Adjusting Bushings

These bushings are designed to aid in the precise adjustment of castor by raising or lowering the radius arm at the frame.

### Camber Caster Shims

The upper ball joint sleeve is eccentric allowing the adjustment of both camber and caster.

### Stainless Steel Braided Brake Lines

Our brake lines are braided from high quality stainless steel with heavy-duty fittings designed to match your vehicle. They also feature an outer extruded polyurethane coating to keep them from chaffing. They don't just meet the specs, they are the specifications.

### Steering Parts and Pitman Arms

Skyjacker® manufactures a wide array of steering components and pitman arms available for many applications. You can eliminate bump steer when you raise your 4x4.

286BK-A Class II System



Remington Wide Brute Tires on American Racing Wheels



# '66-'79 EARLY FORD APPLICATIONS

**Various Kits Ranging in Heights From 2" - 9" of Lift** Skyjacker® offers a full line of straight axle Ford Kits and Systems that can take your classic Ford to new heights. A wide range of lifts from 2" - 9" gives you the choice of lift desired.

**Simple Installation** The installation of the kits and systems are relatively simple and their performance is exceptional. That's right, you just thought your old Ford was a performer. After the installation of a Skyjacker® lift kit or system, these older beasts come alive with true off-road capabilities.



179PKS System



Super Swamper TSL Tires on Weld Wheels

## Options & Accessories

### Polyurethane Alignment Aids

Skyjacker® has the parts you need to help steer your early Ford straight. Parts are available for various models ranging from '66 -'79.

### Radius Arm Brackets

Relocate the radius arm's rear mounts on '78-'79 Fords to correct caster. Others are available for the '66-'77's.

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for all early Ford applications.



LIFT	RADIUS ARM DROP BRACKETS			DEGREE C-BUSHINGS		
	RAB27	RAB47	RAB40	CB20 or CB200	CB40 or CB400	CB70 or CB700
<b>66-79 F-100, F-150 and 78-79 Bronco</b>						
0-1"						
1.5-2"						
3.5-4"						
5"						
6-7"						
8-9"						
<b>66-77 Bronco</b>						
0-1"						
2-3"						
4-5"						
6-7"						

ONLY Item REQUIRED  
EITHER One Is REQUIRED  
BOTH Are Recommended  
BOTH Are REQUIRED





# 2011 FORD SUPER DUTY F-250/F-350 4WD

**Skyjacker's Performance Lift Packages for the all new 2011 Ford Super Duty F-250 include everything you need to go big and go strong.** Skyjacker® has engineered a 4, 6 and 8.5 Inch system to replace the OEM radius arm design with High-Impact Heavy Wall DOM Tubular 4-Link Arms with adjustable rod ends. The rod end is press fitted with a steel encased vulcanized rubber bushing that can support the torque of the Diesel engine and still provide years of trouble free service. Due to the mounting positions and the length of the new arms, Skyjacker's 4-Link design has essentially zero caster change throughout the entire suspension travel cycle. This 4-Link up-grade is stronger, eliminates binding during articulation, and truly out performs the OEM radius arm design. Specifically designed for ease of installation, this is a 100% Bolt-On set-up.



## KEY FEATURES

- High-Impact Heavy Wall DOM Tubular 4-Link Arms
- Preset and Formed Softride® Coil Springs
- Softride® Rear Leaf Springs
- Ultra-Strong Track Bar Relocation Bracket Captures the Front Crossmember on Both Sides to Prevent Movement in this Critical High Stress Area
- Front Extended Sway Bar End Links
- Brake Line Extensions
- Forged Adjustable Rod Ends with OEM Style Bushings

## Options & Accessories

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### Adjustable Lower Links

This 4-Link up-grade is stronger, eliminates binding during articulation, and truly out performs the OEM radius arm design. Available upgrade for 4" and 6" kits.

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual kits.





# '08-'10 FORD SUPER DUTY F-250/F-350 4WD

**Skyjacker's 8.5 Inch Performance Lift Package for the 2008 Ford Super Duty F-250/F-350 includes everything you need to go big and go strong.** This 8.5" system replaces the OEM radius arm design with High-Impact Heavy Wall DOM Tubular 4-Link Arms with adjustable rod ends. The rod end is press fitted with a steel encased vulcanized rubber bushing that can support the torque of the Diesel engine and still provide years of trouble free service. Due to the mounting positions and the length of the new arms, Skyjacker's 4-Link design has essentially zero caster change throughout the entire suspension travel cycle. This 4-Link up-grade is stronger, eliminates binding during articulation, and truly out performs the OEM radius arm design. Specifically designed for ease of installation, this 100% Bolt-On set-up includes everything you need.



**2.5", 4", 6" and 8" Systems For The 2008 Ford Super Duty** Skyjacker® has heard your call for a bigger, bolder, tougher performance suspension package for the 08-10 Ford Super Duty. Get the exact level of performance you need for your lifestyle... whether it is a 'level fit' or bigger & bolder.

## KEY FEATURES

- High-Impact Heavy Wall DOM Tubular 4-Link Arms
- Preset and Formed Softride® Coil Springs
- Softride® Rear Leaf Springs
- Ultra-Strong Track Bar Relocation Bracket Captures the Front Crossmember on Both Sides to Prevent Movement in this Critical High Stress Area
- Front Extended Sway Bar End Links
- Extended Brake Lines
- Forged Adjustable Rod Ends with OEM Style Bushings



F8651KS System



F825K Kit

## KEY FEATURES

- Softride® Front Coil Springs Gas or Diesel
- Heavy-Duty Track Bar Relocation Bracket
- Radius Arm Drop Brackets Supplied to Set Caster to Factory Specs
- Heavy-Duty Steering Stabilizer and Bracketry Provided
- Rear Lift Options Include Rear Lift Blocks or Rear Softride® Leaf Springs
- Stainless Steel Braided Brakelines

## Options & Accessories

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### Adjustable Lower Links

This 4-Link up-grade is stronger, eliminates binding during articulation, and truly out performs the OEM radius arm design. Available upgrade for 4" and 6" kits.

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual kits.





# '05-'07 FORD SUPER DUTY F-250/F-350 4WD

**4" and 6" Systems For The '05-'06 Ford Super Duty** Skyjacker® has heard your call for a bigger, bolder, tougher performance suspension package for the '05 Ford Super Duty. Increase the toughness & durability of your vehicle with a higher altitude and more attitude. Get the exact level of performance you need for your lifestyle... whether it is a 'level fit' or bigger & bolder, Skyjacker® can meet your needs.



## KEY FEATURES

- Softride® Front Coil Springs Gas or Diesel
- Heavy-Duty Track Bar Relocation Bracket
- Radius Arm Drop Brackets Supplied to Set Caster to Factory Specs
- Heavy-Duty Steering Stabilizer and Bracketry Provided
- Rear Lift Options Include Rear Lift Blocks or Rear Softride® Leaf Springs
- Stainless Steel Braided Brakelines



## Super Duty Lift Options

- 1" Poly Spacer Lift ■ 2" Poly Value Kit ■ 2-2.5" Kit with Add-A-Leafs ■ 4" Kit with Blocks & U-Bolts
- 4" System with Softride® Rear Leaf Springs ■ 6" Kit with Blocks & U-Bolts ■ 6" System with Softride® Rear Leaf Springs
- 8.5" Class II System with Softride® Rear Leaf Springs ■ 8.5" Class II Kit with Blocks and Add-A-Leafs

**8.5" Class II Kit & System for the '05-'06 Super Duty** TRUE Front 4-Link Conversion proves less pinion angle and less caster camber change during the travel cycle. Ultra heavy-duty drop track bar relocation bracket captures the front crossmember on both sides – making good geometry sense of this high-stress area. Front Softride® coils and rear Softride® leaf springs provide the comfortable ride. Includes longer sway bar links, stainless steel braided brake lines, precision-engineered drop bracketry for 4-link mounts to axle and frame.

## KEY FEATURES

- High-Strength Heavy Wall DOM Tubular 4-Link Arms
- Preset and Formed Softride® Coil Springs
- Softride® Rear Leaf Springs Gas or Diesel
- Ultra-Strong Track Bar Relocation Bracket Captures the Front Crossmember on Both Sides to Prevent Movement in this Critical High Stress Area
- Front Extended Sway Bar End Links
- Super Dense Polyurethane Bushings for Surface Resistivity or Material Hardness
- .250" Steel Formed Axle & Frame Mounting Brackets
- Extended Brake Lines



**Ford Design Award**  
Outstanding Achievement  
in Design SEMA 2004  
Project Vehicle




Super Swamper TrXus All Terrain Tires on Weld Wheels



# '05-'07 FORD SUPER DUTY F-250/F-350 4WD

**Level Fit** The 2-2.5" Suspension lifts are designed for the Ford owner who doesn't require a lot of lift, but wants an aggressive off-road look, a leveled stance, and clearance for those larger tires. The 2-2.5" Suspension lift comes with full-height Softride® front coil springs, and new rear Add-a-Leafs.

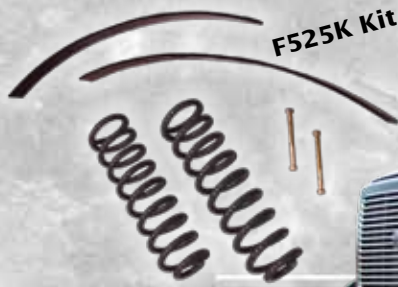

F525K Kit

## Simple Installation

This simple, yet complete Kit installs with ease. Front coil springs and rear Add-a-Leafs achieve a full 2" of lift. The aggressive look can be completed with a set of premium Skyjacker® Hydro or Nitro shocks.



Kit Shown in Red for Display Purposes Only.

**Softride® Coil Spring Kit** This rugged 2" kit features Skyjacker® Softride® coil springs. Each coil spring is preset and formed from 5160H Chromium alloy to ensure a higher tensile strength and longer life. We powder coat each to resist corrosion.

## KEY FEATURES

- Softride® Coil Springs
- Softride® Add-A-Leafs, Gas or Diesel



## Options & Accessories

### Heavy-Duty Skid Plate

1/8" steel plate, dimple dyed for strength plus adjustable mounting brackets allows it to be raised and lowered for lift heights from 2-8.5".

### Heavy-Duty Front Sway Bar

Designed to give you quicker handling response and reduce the 'sway' of larger tires, heavy towing or hauling of oversized loads.

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### 1" Front Poly Spacer Lift

Have you added the weight of a heavy winch and bumper or snow plow? This 1" front polyurethane spacer lift can be added to gain an additional inch of lift.

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual kits.





# '99-'04 FORD SUPER DUTY & EXCURSION

**6" & 8" Super Duty/ Excursion Gas and Diesel** Skyjacker® has the best lifts available for the Ford Super Duty and Excursion. Skyjacker® has engineered these suspension systems to offer true 6 and 8 inches of lift. Whether you have a V8, V10 or Diesel, we have a specific set of Softride® front leaf springs to match your Super Duty.

**The Ultimate Lift** This 8" System includes front & rear extended sway bar links, front & rear extended, D.O.T. certified, stainless steel brake lines, full-height replacement front & rear Softride® springs and relocating brackets for the track bar axle & frame mounts. Another plus is the new Extreme Drop pitman arm (the deepest drop available).



**F9852MKS-A System**



BFGoodrich All Terrain Tires on Ultra Wheels

## **2.5" Leveling Kit (Super Duty Only)**

Level your front end and achieve an inexpensive yet, aggressive look.


This kit features two simple upgrades, a pair of Add-A-Leafs for the front springs and a track bar relocation bracket designed to set your Super Duty straight.

**F93203K Kit**

## **Do You Want The Kit Or The System?**

The Kit features rear blocks or the System offers rear Softride® leaf springs. As you can see, Skyjacker® offers a very in-depth selection of 2 to 8 inches of lift for the Ford Excursion and Super Duty.

**FE60MK Kit**

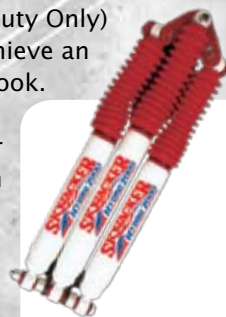

## **Options & Accessories**

### **Multiple Shock Kits**

Skyjacker® manufactures dual and triple shock kits for the front and rear, depending on application. These versatile kits include all necessary bracketry and hardware. Hydro or Nitro shocks are sold separately.

### **Steering and Pitman Arms**

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications. You CAN eliminate bump steer when you raise your 4x4.

### **Carrier Bearing Lowering Kit**

The Skyjacker® carrier bearing lowering kit is essential for correcting the drive line angle on two piece rear drive shafts. (Super Duty only)

## **2" Leveling Kit**

This simple, yet complete Kit installs with ease. Front leaf springs achieve a full 2" of lift.

The aggressive look can be completed with a set of premium Skyjacker® Hydro or Nitro shocks.

Super Duty Only



**F9203K Kit**

BFGoodrich  
All Terrain Tires  
on Weld Wheels





## '88-'98 FORD F-250/F-350

**2", 4" and 6" Lifts Available** You will find all the lift you need in kit form with rear blocks or as a system featuring Softride® rear springs. Other available options are the Class I (Kit or System) featuring two separate center hinge brackets and the Class II (F-250 Kit or System) with a boxed and reinforced one piece center hinge bracket.



Super Swamper  
Bogger Tires on  
Mickey Thompson  
Classic Wheels



F840TK Kit

### KEY FEATURES

- Softride® Leaf Springs, Front and Rear
- Pitman Arm (Included in Class II)
- Class II Includes Heavy-Duty Bracketry, Sway Bar and Steering Correction



F860MKS System



## '67-'79 FORD HIGH BOY/LOW BOY

**2", 4" and 6" Lifts Available for Low Boy Models** The suspension packages for the Low Boys come in a Kit form featuring rear blocks or as a System form with Replacement front and rear full height Softride® leaf springs.

**2" and 4" Lifts are Available for High Boy Models** The suspension packages for the High Boys also come in either a System form featuring replacement front and rear full height Softride® leaf springs, or in a Kit form with rear Add-A-Leaf.



F760KS



Super Swamper Tires on  
American Racing Wheels



### Options & Accessories

#### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

#### Offset & Adjustable Drag Link

The drag link comes complete with rubber tie rod boots and zerk fittings. This heavy-duty adjustable drag link is designed for additional steering correction.

### KEY FEATURES

- Softride Front and Rear Springs
- Grade 8 Hardware
- Durable Polyurethane Spring Eye Bushings




# '83-'97 FORD RANGER 2WD & 4WD

**2", 4", And 6" Lifts For Ford Ranger 2WD & 4WD** You will become the envy of the neighborhood when you transform your Ranger into an impressive off-road capable rig. Capitalize on the additional wheel travel obtained by the 6" Class II System and soak up those bumpy trails like never before. Skyjacker® guarantees you'll leave your stock Ranger buddies in the dust.

**4x4 Choices** Whether you need a little lift or a lot, Skyjacker® has a lift system that will work for you. 2" front leveling coils are available to get your nose off the ground. For those of you who want to take your Ranger to greater heights, get the Skyjacker® 4" or 6" kits.

Skyjacker's precision engineered front axle pivot brackets and matching coil springs are uniquely designed performance essentials. Class II's lower radius arms offer at least 30% more suspension flex and travel. Or choose the Class I Kit with heavy-duty brackets. Get the 8" lift (4WDs only) if you really want to touch the sky.

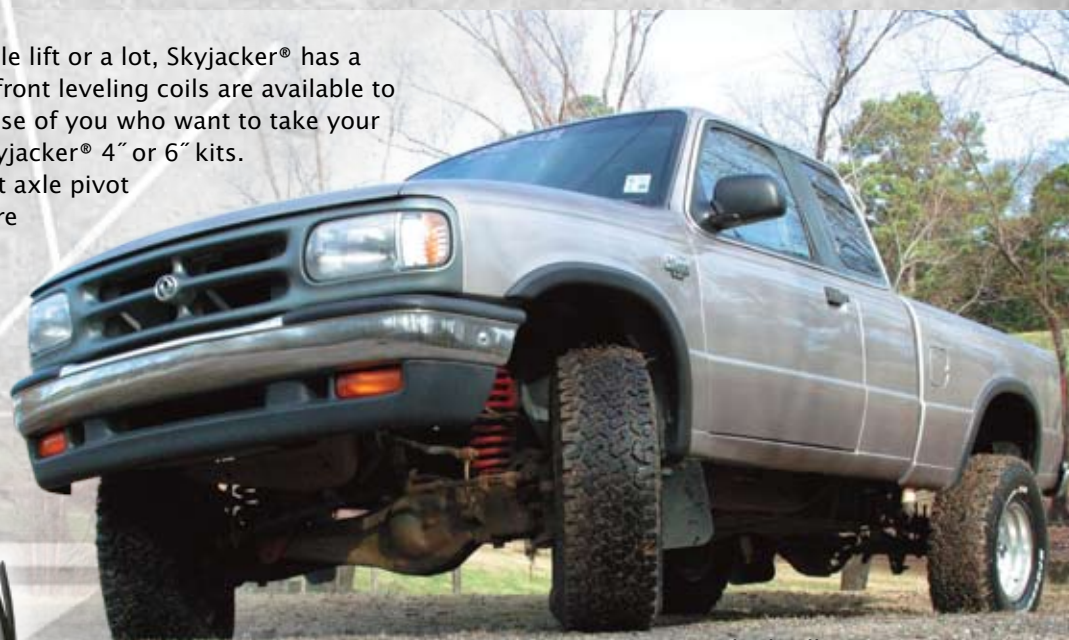

BFGoodrich All Terrains  
on American Eagle Wheels



236RHKS-A  
Class II System

## 4WD KEY FEATURES

- Available in 4", 6" and 8" Kits with Rear Blocks or Systems with Softride® Rear Springs
- Radius Arms (Included in Class II)
- Center Hinge Bracket
- Transmission Crossmember
- Pitman Arm

## 2WD KEY FEATURES

- Available in 4" and 6" Kits with Rear Blocks and Systems with Softride® Rear Springs
- Radius Arms (Included in Class II)
- Center Hinge Bracket
- Transmission Crossmember
- Pitman Arm

**2WD Choices** Many of the same options available for the 4x4 Ranger are also available for the 2WD. As with the 4x4, Class II Kits & Systems include the longer radius arms. Whether you need a little lift or a lot, Skyjacker® has a lift system to meet your personal performance needs. 2" kits are available for the modest lift. For those of you who want to take your Ranger to greater heights, get the Skyjacker® 4" or 6" Kit in Class I or II.



136RHKS  
Class I System

## Options & Accessories

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### Hex Cut Spacer

An alignment aid used for 'Twin I Beam' IFS camber correction.

### Camber/Caster Shims

The upper ball joint sleeve is eccentric allowing the adjustment of both camber and caster.

### Radius Arms

Longer replacement tubular offset radius arms offer up to 30% more wheel articulation and produce less frame fatigue than using drop brackets. This Class II option can be purchased separately.



Remington Mud Brutes on American Eagle Wheels



# '07-'11 JEEP WRANGLER JK 6" & 7"

**Skyjacker® has developed the ultimate system for the new JK.** We have decided to go along with the new innovative suspension of the JK and design a ground-breaking new Skyjacker® suspension to compliment it. Skyjacker® has relocated the lower front control arms inboard the frame for maximum ground clearance. We have made the lower front and rear control arms 40% longer than factory spec for greatly improved articulation. Take your new JK to the highest level of Jeep performance. Designed to achieve maximum flex, the Skyjacker® 6" and 7" lifts give you the most go anywhere, durable suspension, you can get out of a box.

## KEY FEATURES

- Upper and lower Value Flex control arms
- Front and rear tubular upper and lower control arms are 1/4" wall thickness design
- Front lower control arms are arched and relocated inside the frame for maximum ground clearance and turning radius
- Bump stop brackets to help coil retention
- Factory wheel and tire can be used



Toyo Open Country on Raceline Wheels



JK60LAK-SX

## Options & Accessories

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### Poly Value 2"

'07-'09 Wrangler JK Part # JK20

### Dual Steering Stabilizer

Skyjacker® offers two different setups to put the control back into your hands... the heavy-duty O.E.M. Replacement and a Dual In-Line designs.

### Rebuildable Rod Ends

"NG" Next generation Rod Ends are forged for extreme duty rating, rebuildable for continued service life, equipped with greaseable zerk fitting, and utilize special designed "Pivot Plus" inserts for maximum rotation.

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.





## '07-'11 JEEP WRANGLER JK 4" & 5"

The newest addition to the Jeep line is the Jeep Wrangler JK and Skyjacker® was quick to develop a great lineup of new lifts that will gain you the Performance, Strength, Integrity, Durability, and Know How that goes with our complete line of Jeep lift kits and systems. Skyjacker® has what you need to take this JK to a new level of performance with a 2.5", 3.5", 4" and 5" lift kit.



JK401K

### KEY FEATURES

- Tubular lower control arms formed from 1/4" wall tubing for a 30% stronger arm than factory
- Front lower control arms are arched for maximum turning radius
- Adjustable Flex Front and Rear Track Bar
- Coil spring rates are within 10% of factory rates
- Bump stop brackets to help Coil Retention
- Front and rear track bar brackets for 4 wheel track alignment
- Factory wheel and tire can be used



## '07-'11 JEEP WRANGLER JK 2.5" & 3.5"



JK250BK



### Options & Accessories

#### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

#### Poly Value 2"

'07-'09 Wrangler JK Part # JK20

#### Dual Steering Stabilizer

Skyjacker® offers two different setups to put the control back into your hands... the heavy-duty O.E.M. Replacement and a Dual In-Line designs.

#### Rebuildable Rod Ends

"NG" Next generation Rod Ends are forged for extreme duty rating, rebuildable for continued service life, equipped with greaseable zerk fitting, and utilize special designed "Pivot Plus" inserts for maximum rotation.

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.





# '97-'06 JEEP WRANGLER TJ/RUBICON

**6 & 8" Rock Ready® 2 System** - The New TJ Long Arm High Clearance Series also includes ¼" wall control arms that are arched (Bent) for ground clearance and increased approach angles.

These Rock Ready® Systems are specifically designed with the 'mild-to-extreme' rock crawler in mind. These Systems have taken the abuse of some of the harshest terrain in the land and have come back asking for more.

These Long Arm Kits feature the new "NG" (next generation) rod ends. The lower 1 ¼" forged design heims feature 95,000 psi of strength. They also have an internal rebuildable design with new pivot plus inserts for maximum articulation.

These new TJ Kits feature no welding for easy installation.



BFG Krawler Tires on Allied Rock-A-Thon Wheels



**Sub-Frame Assembly for Long Arm Systems**  
Skyjacker's new bolt-on sub-frame is designed for easy installation and allows these Long Arm Systems to really FLEX their muscles.



## Options & Accessories

### High Clearance Skid Plate

This Skid Plate will fit your stock or lifted '97-'06 Jeep® TJ. The Skid Plate is made from 3/16" steel with formed and gusseted corners.

### Adjustable Rear Sway Bar

Skyjacker® offers an adjustable rear sway bar with multiple mounting points. Made of 4140H steel alloy with a larger-than-stock diameter.

### Skyjacker's new patent pending RockLock Selectable Sway Bar

for the 1997-2006 Jeep TJ is totally adjustable for on and off-road use. #JFSBA10





# '04-'06 JEEP UNLIMITED

**2.5", 4" and 6" Systems** for the Jeep Unlimited. There is nothing like loading up your Jeep with all the necessities for the weekend and heading off into the next adventure. Skyjacker® has provided you with a huge list of possibilities to make your next adventure more memorable by taking your Unlimited to a new level of off-road performance.



BFG Krawler Tires on  
Raceline Wheels

Kit Shown in Red for  
Display Purposes Only.



**Unlimited Possibilities** Skyjacker® is world renowned for their Jeep suspension designs. Now these same high quality durable suspension lifts are available for the Jeep Wrangler Unlimited and Unlimited Rubicon.



**Standard**



**Value Flex**



**Rock Ready® Long Arm**

## Your choices include:

- 2.5" & 4" Standard Series
- 6" Rock Ready® Series
- 2.5" & 4" Value FLEX Series

Kit Shown in Red for  
Display Purposes Only.



## Options & Accessories

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

### Skyjacker® Grab Handles

Skyjacker® introduces another superior handling system to our Rock Ready® line. These new Rock Ready® Grab Handles are built to handle all your four wheelin' adventures.

**Skyjacker's new patent pending RockLock Selectable Sway Bar** for the 1997-2006 Jeep TJ is totally adjustable for on and off-road use.  
#JFSBA10



# '97-'06 JEEP WRANGLER TJ/RUBICON

**4" and 6" Wrangler TJ Rock Ready® Long Arm Suspension System** Skyjacker® Suspensions now offers Jeep Wrangler TJ owners the ultimate in suspension technology. Skyjacker® re-engineers the TJ's suspension geometry via an integrated sub-frame assembly.

## KEY FEATURES

- 80% Increase in the Length of the Lower Control Arms Produce No More Than 1.5 Degree of Caster Change.
- Integrated 2 Piece Sub-Frame Assembly
- Adjustable Flex Front & Rear Track Bar
- Double Disconnect Front Sway Bar End Links & Extended Rear Sway Bar End Links
- D.O.T. Front and Rear Extended Length Stainless Steel Braided Brake Lines
- Drop Pitman Arm
- Heavy-Duty Steering Stabilizer



Goodyear MTR Tires on Weld Wheels



## Sub-Frame Assembly for Long Arm Systems

Skyjacker's new bolt-on sub-frame is designed for easy installation and allows these Long Arm Systems to really FLEX their muscles.

## Options & Accessories

### Slip Yoke Eliminator

The Skyjacker® fixed yoke kit replaces the output shaft with a large 32 spline output. #RR231

### CV Drive Shafts

The double Cardan CV drive shafts work in conjunction with our fixed yoke kits.

### Skyjacker®

#### Limiting Straps

Available in 16", 20", 24", 28" and 32" lengths, these high quality straps are built using U.S. made 1.75" nylon



**But Wait...** You CAN clear 33's with 4" and 35's with 6" Kit. These Rock Ready® Kits are available for TJ's equipped with a stock Dana 30, with an aftermarket Dana 44, or a Ford 9" front differential. Skyjacker® is achieving more articulation, more flex, more travel, more height, more affordable fun and more of what you are looking for in a suspension. If you are going to hit the rocks, you'd better be Rock Ready®.



Goodyear Wrangler MTR  
Tires on Alcoa Classic  
Lock Wheels



# '97-'06 JEEP WRANGLER TJ/RUBICON

**2.5" and 4" VALUE FLEX Series Systems** 2.5" and 4" VALUE FLEX Series Systems are just what you need to satisfy your appetite for off-road excitement... and Skyjacker® has it for you. Introducing the Value Flex Series. The Systems in this series achieve all of what you're hungry for in a suspension - the Lift, the Look and the Performance - all at the Right Price. Skyjacker® will fill your plate with a hearty portion of performance parts and you can add the excitement.



**VALUE  
FLEX  
SERIES**



**TJ401K-SVX**

Baja Claw Tires on Mickey Thompson Wheels



**Rock Ready®** Long Arm

## KEY FEATURES

- Double Disconnect Front Sway Bar End Links & Extended Rear Sway Bar End Links
- Adjustable Flex Front Track Bar
- Optional Adjustable Flex Rear Track Bar
- Drop Pitman Arm
- Heavy-Duty Steering Stabilizer
- Front and Rear Softride® Coil Springs



## Options & Accessories

### Tie Rod Tubes

Skyjacker® replaces the original tie rod tube with a 1.25" OD x .25" wall thickness DOM tubing that is swedged down on each end to original specs and fitted with new retaining clamps.

### Coil Spring Isolators

These coil spring isolators can be added to your lift kit to level the TJ front or rear. These are a must for heavy tire carriers and trail ready rigs.

**Skyjacker's new patent pending RockLock Selectable Sway Bar** for the 1997-2006 Jeep TJ is totally adjustable for on and off-road use. #JFSBA10



Interco Tires on O.E. Jeep Wheels



# '97-'06 JEEP WRANGLER TJ/RUBICON

**2.5" Standard Systems** Our Standard System takes you over the top with style and grace. These systems give you the performance you desire to go to more extreme places.



**The TJ251K** (2.5" Kit) features Standard Links, a transfer case lowering kit plus front and rear Softride® Coil Springs and features Standard links that use polyurethane bushings at both the frame and axle ends.

## 2.5 Inch KEY FEATURES

- Front and Rear Softride® Coil Springs
- Lower Standard Links

## Options & Accessories

### Steering Gear Box Skid Plate

This Skid Plate is made of 3/16" steel providing tremendous strength out front and low where you need it. #SSP10

### Poly Value Kit

'97-'06 TJ 2" Poly Lift  
Part# **TJ20**

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual



## 2.5 Inch KEY FEATURES

- Front and Rear Softride® Coil Springs
- Lower Standard Links





# '97-'06 JEEP WRANGLER TJ/RUBICON

**4" Standard Systems** Our Standard System takes you over the top with style and grace. These systems give you the performance you desire to go to more extreme places.

## 4 Inch KEY FEATURES

- Front and Rear Softride® Coil Springs
- Lower Standard Links
- Double Disconnect Front Sway Bar End Links
- Drop Pitman Arm



## Options & Accessories

### High Clearance Skid Plate

This Skid Plate will fit your stock or lifted '97-'06 Jeep® TJ. The Skid Plate is made from 3/16" steel with formed and gusseted corners.

### Adjustable Rear Sway Bar

Skyjacker® offers an adjustable rear sway bar with multiple mounting points. Made of 4140H steel alloy with a larger-than-stock diameter.

**Skyjacker's new patent pending RockLock Selectable Sway Bar** for the 1997-2006 Jeep TJ is totally adjustable for on and off-road use. #JFSBA10





## '87-'96 JEEP WRANGLER YJ

**6" Rock Ready® MonoLinear System** The latest in off-road leaf spring technology is Skyjacker's Rock Ready® MonoLinear System. It has a Single Leaf spring that is technologically advanced and engineered to give the maximum articulation, maximum tire clearance and maximum durability.

**Softride® YJ Style** Softride® technology produces the highest quality of leaf spring systems the industry has ever known. With Skyjacker's Softride® technology you can take your classic ride to a new level of performance and value while reaping the benefits of a Softride®.

**SOFTTRIDE**  
BY SKYJACKER®



Dunlop Mud Rover Tires  
on Centerline Wheels



YJ60MK

### KEY FEATURES

- Four MonoLinear Springs
- Front Extended, Greasable Tow Bar Shackles
- Rear Extended, Greasable Boomerang Shackles
- Extended Front Track Bar
- Double Disconnect Extended Sway Bar End Links
- Drop Pitman Arm
- D.O.T. Certified Stainless Steel Brake Lines

### Options & Accessories

#### YJ 5th Link Traction Bar

Increase the Traction and Keep the Articulation in your 1987-'96 Jeep YJ Wrangler. Skyjacker's NEW 5th Link Traction Bar is the fix for unwanted suspension movement that cause axle-wrap. Axle-wrap relates to unwanted rear pinion changes that causes drivelines to bind-up, driveshafts to buckle, suspension damage and yokes to break.

This innovative design keeps your ground clearance much higher... there's nothing that hangs down. There is no binding and no restriction of movement where you want it. The adjustment in the rod end also allows you to 'fine tune' the desired position of the traction bar.

This Skyjacker® exclusive drastically eliminates wheel hop and applies the torque where you want it... Adjustable for most lift heights, the 5th Link is a must for spring-over applications.





# '87-'96 JEEP WRANGLER YJ

**2.5" and 4" Military Wrap** You will want to utilize the performance of the Double Military Wrap Leaf Springs to gain torque control, main leaf protection and exceptional ride quality. These durable, long lasting units have larger spring eyes at both ends. These larger eyes contain larger bushings designed for strength & longevity.



BFGoodrich Mud Terrain Tires on Allied Bead Locks

## KEY FEATURES

- Four Military Wrap Springs
- Added Torque Control
- Main Leaf Protection
- 2.5" Spring Over Or Under & 4" Spring Under System Applications Are Available



YJ45K

## Options & Accessories

### Slip Yoke Eliminator

The Skyjacker® fixed yoke kit replaces the output shaft with a large 32 spline output. #RR231

### CV Drive Shafts

The double Cardan CV drive shafts work in conjunction with our fixed yoke kit.

### Transfer Case Lowering Kit

The TCL kit allows the enthusiast to gain height without sacrificing the drive shaft. These kits are simple to install and eliminate vibration and drivetrain angle problems.

MILITARY  
WRAP SPRINGS



# '87-'96 JEEP WRANGLER YJ

**2" and 4" Systems** These versatile Systems consist of front and rear Softride® multi-leaf springs and e-coated U-Bolts. The 4" features rear track bar brackets. The 2" and 4" systems are the perfect lifts for the less extreme off road driver. Complete your YJ today by ordering one of these versatile systems.


## KEY FEATURES

- Four Softride® Multi-leaf Springs
- Front And Rear E-coated U-bolts
- Front And Rear Track Bar Brackets (4" Only)



YJ40K

CooperTires on American Racing Wheels

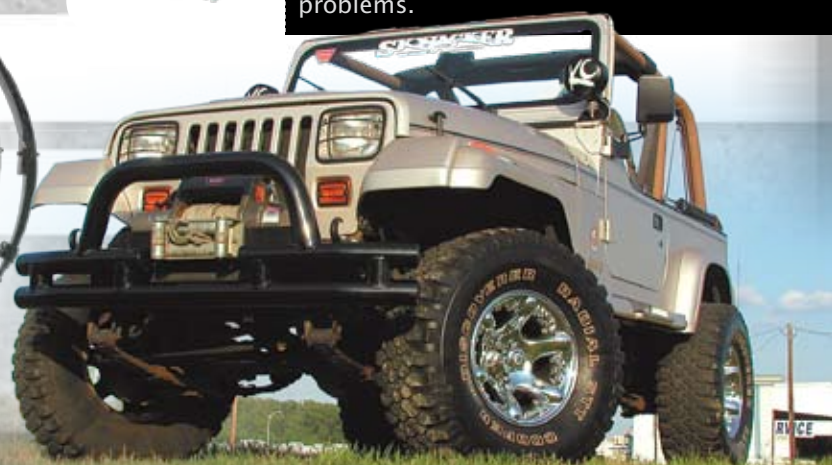



**2" & 4" Systems for the '76-'86 Jeep CJ** Many CJ owners will say the CJ is the only Jeep. Well Skyjacker® has designed the BEST rated springs for these true believers. These Softride® first-rate systems are the perfect way to transform your daily driver into the Conquering Jeep (CJ) you need it to be.



BFG Mud Terrain Tires on Eagle Alloy Wheels



J40K

## KEY FEATURES

- Front and Rear Softride® Multi-leaf Springs
- Long Lasting Red Polyurethane Bushings
- Front and Rear E-coated U-bolts



## Options & Accessories

### Body Lift

Skyjacker® offers a 1" Body lift for '76-'86 CJ's. These poly kits can be used to accommodate larger tires and replace OE rubber body mounts.

### Fitted Leafs

Fitted Leafs can be added to Skyjacker Softride leaf springs for applications where additional weight has been added due to aftermarket accessories, engine swaps, etc.

### Skyjacker® Grab Handles

Skyjacker® introduces another superior handling system to our Rock Ready® line.

### Transfer Case Lowering Kit

The TCL kit allows the enthusiast to gain height without sacrificing the drive shaft. These kits are simple to install and eliminate vibration and drivetrain angle problems.





# '55-'86 JEEP CJ

**Softride® Technology** Softride® Technology enhances every single aspect of leaf spring performance, giving you all the vigorous off-road handling needed while providing the smooth street riding characteristics that you demand. Skyjacker's advanced method of shot-peening, tapered leaves, Teflon® wear pads and 'presetting' process achieves articulation at its best without sacrificing the life of the spring.



J20K

## KEY FEATURES

- Front and Rear Softride® Multi-leaf Springs
- Long Lasting Red Polyurethane Bushings
- Front and Rear E-coated U-bolts

**Noted Accessories** Skyjacker® also has a long list of readily available accessories to take your '55-'86 CJ to an even greater level of performance.

- Hydro or Nitro Shocks
- Drop Pitman Arm (Required For 4" Lift)
- Front Double Disconnect Sway Bar End Links
- Extended D.O.T Certified and T.U.V. Approved Stainless Steel Braided Brake Lines
- Tubular Transfer Case Lowering Kit
- Bump Stop Spacers
- Shackle Bushings



BFGoodrich Krawler Tires on Allied Bead Locks

## Options & Accessories

### Tie Rod Tubes

Skyjacker® replaces the original tie rod tube with a 1.25" OD x .25" wall thickness DOM tubing that is swedged down on each end to original specs and fitted with new retaining clamps.

### Polyurethane Cab Mount Bushings


A wise addition when installing a body lift. These poly bushings replace the stock rubber bushings that wear out over time.

### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual kits.

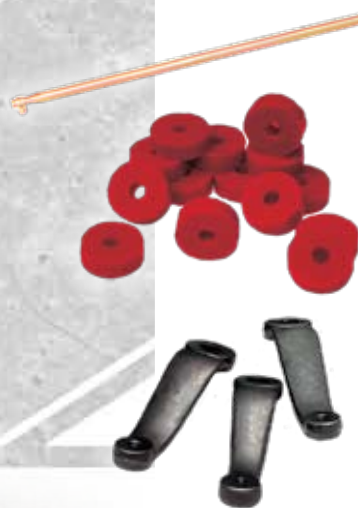

**SOFTTRIDE**  
BY SKYJACKER®



## '02-'07 JEEP LIBERTY KJ

**2.5" System For The '02-'07 Jeep Liberty** Go off-roading & 4 wheelin' with Skyjacker's patent pending 2.5" PLATINUM Series Linear setup.



### KEY FEATURES

- Rack-and Pinion Steering Assembly Left in OE Position
- No Replacement or Modifications Needed to the Drive Shafts
- Massive 2" Piston Bore
- 7/8" Chrome Hardened Piston Shaft
- Off-Road Race Inspired Wafer Valving
- 1/8" Heavy-Gauged Steel Body Wall
- Billet Aluminum Coil Seats
- Preset Softride® Front Coils



Goodyear MTR Tires on American Racing Teron Silver Wheels



LIB250K

**PLATINUM Series** Skyjacker® gives your Liberty additional freedom to go farther off the beaten path with this patent pending 2.5" PLATINUM Series System. This setup replaces the ample strut with a higher quality shock & Softride® coil in the front along with full-height Softride® coils in the rear. This is a surprisingly simple yet completely durable suspension package. It allows the rack-and-pinion steering and front & rear sway bars to be left in stock position for precise steering response. There is also no need to modify or replace the drive shafts and it allows for larger 30" tires.

## '06-'09 COMMANDER AND '05-'09 GRAND CHEROKEE

### Also Includes

- Softride® Full-Height Rear Coils
- Front Polyurethane Bump Stops
- Rear Bump Stop Spacers

### Options & Accessories

#### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.

#### Poly Value Kit

'02-'07 JEEP Liberty KJ - KJ25  
'09-'10 Liberty/Nitro - KKN25  
2.5" LIFT 2WD and 4WD



Nitto Terra Grapplers on  
American Racing Wheels

XK20




**Skyjacker® Poly Value Kits** You can get that aggressive look you want... without the aggressive price. These great value priced lift kits are tailor-made for the New Jeep Grand Cherokee and Jeep Commander 2WD/4WD. These durable, long-lasting Polyurethane, 2" Value Kits include all the parts and hardware necessary to get you up & rollin' in style.



# '93-'98 JEEP GRAND CHEROKEE ZJ

**3" Grand Cherokee ZJ Standard Kit** Skyjacker® Suspensions offers a 3" Kit for the '93-'98 Jeep Grand Cherokee ZJ. Kit features Softride® front and rear coil springs, a track bar relocation bracket and greaseable lower control arms.

**Standard Kit** The Standard system features polyurethane bushings at both ends of the links. Skyjacker's Softride® Coil Springs are preset and formed from 5160H Chromium Alloy to ensure a higher tensile strength and longer life. Each Spring is powder coated to resist corrosion. The lower front and rear control arms feature greaseable polyurethane bushings at both ends. A front track bar relocation bracket is included to re-center the front axle.

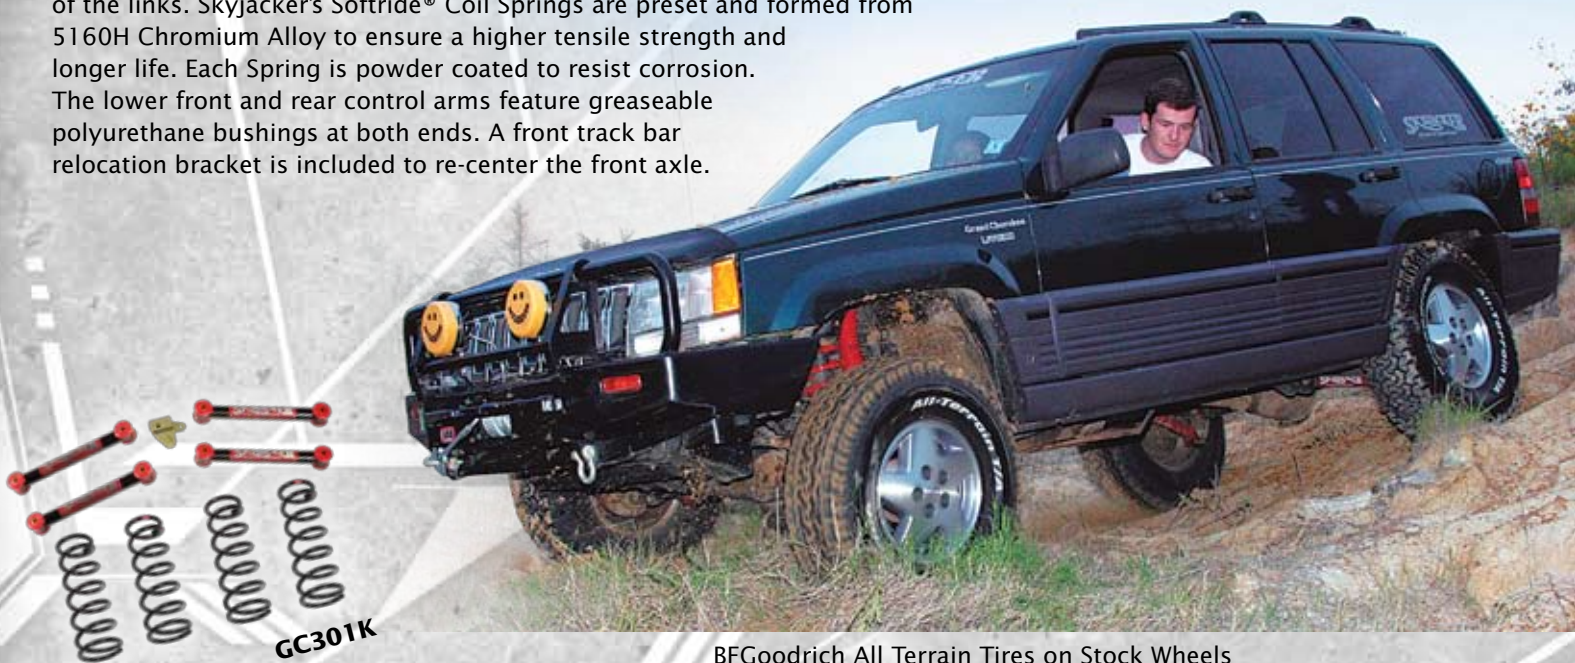

BFGoodrich All Terrain Tires on Stock Wheels

**GC301K Grand Cherokee ZJ 3" Standard Kit** features front and rear Softride® coils and Standard lower links. The links have polyurethane bushings at both the frame and axle ends.



## Options & Accessories

### Tie Rod Tubes

Skyjacker® replaces the original tie rod tube with a 1.25" OD x .25" wall thickness DOM tubing that is swaged down on each end to original specs and fitted with new retaining clamps.

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single, dual and triple kits.

### Transfer Case Lowering Kit

The TCL kit allows the enthusiast to gain height without sacrificing the drive shaft. These kits are simple to install and eliminate vibration and drivetrain angle problems.

### Poly Value Kit

'93-'98 Grand Cherokee ZJ  
2" LIFT 2WD and 4WD

### Poly Value Kit

'99-'01 Grand Cherokee WJ  
2" LIFT 2WD and 4WD





# '84-'01 JEEP CHEROKEE XJ

**6" and 8" Rock Ready® Cherokee XJ System** Skyjacker® Suspensions offers Jeep Cherokee XJ owners the ultimate in suspension technology. Whether you're twisting it up on the Red Rock of Moab or conquering the South American jungles of Peru, this is the suspension system you need.



Nitto Mud Grappler Tires

## KEY FEATURES

- 8" Full-Height Front Coils
- Unique Front Axle Differential Cradle (8" Only)
- Integrated 3-Piece Sub-Frame Assembly
- Extended Upper & Lower Double FLEX Links
- Adjustable, Replacement FLEX Front Track Bar
- Extended Polyurethane Bump Stops
- New Bump Stop Cups
- Double Disconnect Front Sway Bar Links & Extended Rear Sway Bar End Links
- Skyjacker's New EXTREME Drop Pitman Arm
- D.O.T. Certified Extended Length, Stainless Steel Braided, Polyurethane Coated Front & Rear Brake Lines
- Full-Height, 2-Stage Softride® Rear Springs
- Heavy-Duty Greasable Rear Shackles
- Heavy-Duty Replacement Softride® Steering Stabilizer
- All the Proper Attaching Hardware is Included



JC601KS-SVX

JC801K-DX

**Go Anywhere** With an unprecedented 8 inches or an outstanding 6 inches of lift, you can devour the harshest terrain on the planet. A uniquely engineered, high performance replacement sub-frame assembly is at the core of this suspension marvel. Numerous other suspension components including coils, Softride® Technology rear leaf springs, D.O.T. certified extended stainless steel brake hoses and corrective steering components make this an instant response to defy the laws of gravity. The results are the best performing suspensions in the Northern and Southern hemispheres.

## Options & Accessories

### Tie Rod Tubes

Skyjacker® replaces the original tie rod tube with a 1.25" OD x .25" wall thickness DOM tubing that is swaged down on each end to original specs and fitted with new retaining clamps.

### Slip Yoke Eliminator

The Skyjacker® fixed yoke kit replaces the output shaft with a large 32 spline output and increases the drive shaft length by 4.5". #RR231

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual kits.



Pro-Comp X-Terrain Tires on Rock Crawler Wheels





# '84-'01 JEEP CHEROKEE XJ

**3" Jeep Cherokee Standard Kits & Systems** Skyjacker® Suspensions offers a 3" Kit with rear Add-A-Leafs, or a 3" System with Softride® rear springs. Both Kits feature Softride® front coil springs, track bar relocation bracket and greaseable lower control arms



JC301KS



JC301K



JC301KS-SVX



Maxxis Buckshot Mudder Tires on Rock Crawler Wheels



Pro-Comp X-Terrain Tires on American Racing Wheels




Goodyear AT Tires on Centerline Wheels

## '74-'91

### CHEROKEE/WAGONEER

**3.5" - 4" Lifts Available** Skyjacker® produces 3.5-4 inch lifts for the full-size Cherokee, Wagoneer and J10, J20 Pickups. The simplicity and durability of these vehicles are what makes them so legendary in the exploration of the outback... and even the suburbs.

JP45KS

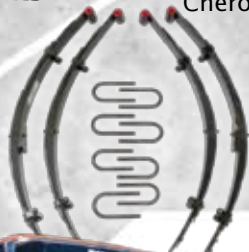

#### Options & Accessories

##### Adjustable Front Track Bar

Allows for 24" of travel and features a Teflon®/Kevlar® self lubricating, self sealing rod end, a heavy-duty replacement steering stabilizer and mounting hardware.

##### Transfer Case Lowering Kit

The transfer case lowering kit allows the enthusiast to gain height without sacrificing the drive shaft. These kits are simple to install and eliminate vibration and drivetrain angle problems.

##### Poly Value Kits

'84-'01 CHEROKEE XJ  
'86-'02 COMANCHE MJ  
2" LIFT 2WD and 4WD

#### KEY FEATURES

- Front Softride® Leaf Springs
- Front and Rear E-coated U-bolts
- 2-Stage Rear Softride® Leaf Springs
- Red Polyurethane Bushings

General Grabber Tires on American Racing Outlaw II Wheels



# '07-'10 TOYOTA TUNDRA

'07-'10 Toyota Tundra Skjacker® has developed two new 3" Suspension lifts for the '07-'10 Tundra, along with the new 2" leveling spacer. The 3" coil-over conversion lift features Platinum Series front coil-over shocks with 2" outside diameter and all the necessary mounting hardware. The 3" Performance Strut lift features new performance series struts and the factory coil is maintained. The rear lift on both kits is achieved using Skjacker® blocks and u-bolts. These are high performance Skjacker® Suspensions complete with all the options and the ease of a simple bolt-on installation.



TU720MS




TU730STK



## STRUT FEATURES

- Larger 14mm Chromed Piston Rod
- 150 PSI Twin Tube Gas Charged Design
- Rear Blocks & U-bolts
- Complete Bolt-On Installation

TU730K

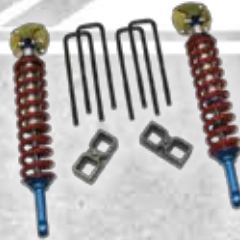

## COIL-OVER FEATURES

- 2" O.D. Platinum Series Coil-Over Shocks
- Rear Blocks & U-bolts
- Complete Bolt-On Installation

TU761PKS



## BENEFITS

- Improved Handling Characteristics
- Quick and Simple Installation
- Improved On and Off-Road Handling

Billy the Exterminator



Skjacker® teams with Vexcon as seen on the A&E hit show Billy The Exterminator





# '07-'10 TOYOTA FJ CRUISER



Wakeboards Courtesy of  
Gus Campbell Watersports.  
guscampbell.com

'07-'10 Toyota FJ Cruiser Skyjacker® has developed a high performance 2.5"-3" suspension lift for the FJ Cruiser. The lift features Platinum Series front coil-overs with 2" outside diameter shocks and Softride® coil springs, along with all the necessary mounting hardware.



Mickey Thompson Tires  
on MKW Wheels

Skyjacker® has developed a new 3" Suspension lifts for the '07-'10 FJ Cruiser. The 3" Performance Strut lift features new performance series struts and the factory coil is maintained. The rear lift on both kits is achieved using Skyjacker® rear Softride® coil springs. These are high performance Skyjacker® Suspensions complete with all the options and the ease of a simple bolt-on installation.




FJ730STK

Skyjacker® has developed a spacer kit that produces optimum results for the amount of money spent. Skyjacker® offers a metal spacer front and polyurethane spacer rear for the new '07-'10 Toyota FJ Cruiser. They include all necessary hardware for an easy bolt-on installation.



FJ20MS

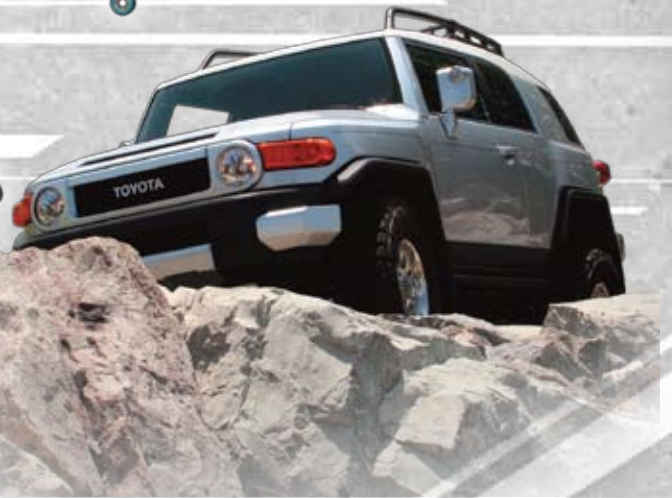

## Options & Accessories

### Spacer Kit

Simple bolt on installation. Retains factory shocks. Improved handling characteristics. Clears 33's.

### Platinum Series Coil-Over

Skyjacker® takes suspension technology to a new level of performance with the Platinum Series Coil-Over. Order the Platinum Series Coil-Over conversion as part of a Skyjacker® lift system or as an upgrade to an already existing kit.

### Skyjacker® Shock Options

Skyjacker® offers three different shock options for you to choose from. Choose your performance level: Hydro, Nitro or our M95 Monotube Series.





## '05-'09 TOYOTA TACOMA

**'05-'09 Tacoma 4WD and 2WD Pre-Runner Skyjacker®** has developed a high performance 2.5"-3" suspension lift for the '05-'09 Tacoma 4WD and 2WD Pre-Runner. The lift features Platinum Series front coil-overs with 2" outside diameter shocks and 15" Softride® coil springs, along with all the necessary mounting hardware. The rear lift is achieved using Skyjacker® rear Leaf Springs or Add-A-Leafs.



BFGoodrich Mud Terrain Tires on American Eagle Wheels

### BENEFITS

- Improved Handling Characteristics
- Quick and Simple Installation
- Improved On and Off-Road Handling

### KEY FEATURES

- 2" O.D. Platinum Series Coil-Over Shocks
- NEW 15" Softride® Coil Springs
- Skyjacker® Rear Leaf Springs or Add-A-Leafs
- Complete Bolt-On Installation

TC530KS

### Options & Accessories

#### 2.5-3" New Performance Strut Kit

'95.5-'04 Toyota Tacoma  
'05-'09 Toyota Tacoma

- Larger 14mm Chromed Piston Rod
- 150 PSI Twin Tube Gas Charged Design
- Bonded Iron Piston
- Self-lubricating spherical bearing for longer life
- Rear lift options include Softride® rear leaf springs or rear Add-a-Leafs.

#### 95.5-09 Tacoma Leveling Kits

Skyjacker® has developed a 2" spacer kit that produces optimum results for the amount of money spent. The metal spacers come with all necessary hardware for an easy bolt-on installation.

## '95.5-'04 TOYOTA TACOMA

**2.5"-3" Platinum Series Tacoma System** This 2.5"-3" Coil-Over Lift fits 1995.5 to '04 Toyota Tacoma models for both 4WD & 2WD 'Pre-Runner' models. The System includes full-height replacement Softride® springs for the rear or choose the Kit with Add-a-Leafs. With either, you have the choice of Hydro or Nitro Series Gas shocks for the rear.

**Toyota... With A 'Twist'** Skyjacker's Platinum Series Coil-Over Conversion 2.5"-3" Toyota lift extends the normal limits and adds a new 'twist' to your Toyota. This patent pending bracket design allows the coil-over to pivot and rotate smoothly through the whole travel cycle. No bangs, No clatters, No clanks and No Breaks!



### KEY FEATURES

- Platinum Series Coil-Overs
- Rear Softride® Leaf Springs
- E-coated U-Bolts
- Grade 8 Hardware

SKTOY30KS



# '00-'06 TOYOTA TUNDRA

**2.5" - 3" Platinum Performance for the Tundra** Skyjacker's Platinum Series Coil-Over Conversion innovative upper mounting bracket design allows the coil-over to pivot or rotate smoothly through the whole travel cycle. This eliminates the inherent problems of the other 'stem-style' shocks... top shaft leverage that leads to coil binds that could bend or even break the shaft.

**Finishing Touch** To finish off the performance of the rear, Skyjacker's Softride® full-height leaf springs are the perfect fit for comfort and longevity. Another option is to use the Add-a-Leaf plus Block & U-Bolt Kit. You pick your performance level.



Firestone Destination MT Tires on American Racing Wheels



## SKTUN30K

**The Platinum Series Coil-Over** is equipped with a 7075-aluminum alloy rod end fitted with Teflon® lined stainless spherical bearings to allow maximum wheel travel without binding. Its big threaded body allows ride height adjustment plus an increased cooling surface to allow better heat dispensation. Each Softride® Coil spring is preset and formed from 5160H alloy ensuring higher tensile strength and longer life.

**The Platinum Series Coil-Over Shock**, a Skyjacker® exclusive, has a heim-style spherical rod end at both the upper & lower mounting positions. This eliminates the inherent problems of the other 'stem-style' shocks with top shaft leverage which leads to coil binds that could bend or even break the shaft.



OURS

THEIRS

### PLATINUM FACTS

The Platinum Series Coil-Over from Skyjacker® features pivot points at the top and bottom of the coil-over. This allows the coil spring to travel without binding.



### KEY FEATURES

- Platinum Series Coil-Overs
- Rear Softride® Leaf Springs
- E-coated U-Bolts
- Grade 8 Hardware

### Options & Accessories

#### Performance Strut Kit

- '00-'06 Toyota Tundra  
2.5" LIFT 2WD and 4WD
- Larger 14mm Chromed Piston Rod
  - 150 PSI Twin Tube Gas Charged Design
  - Bonded Iron Piston
  - Self-lubricating spherical bearing for longer life
  - Rear lift options include Softride® rear leaf springs or rear Add-a-Leafs.

#### Poly Value Kit

- '96-'01 Toyota 4-Runner  
'01-'02 Toyota Sequoia  
'99-'01 Toyota Tundra  
2.5" LIFT 2WD and 4WD
- Front Coil Spacers
  - Front Bump stop Spacers
  - Rear Coil Spacers
  - Rear Poly Bump stops
  - Front Sway Bar Bushings
  - Poly Bump stops
  - Poly Tie Rod Dust Boots
  - Hardware is Included



# '86-'95 TOYOTA PICK-UP & 4RUNNER

**4" Toyota IFS Systems** Skyjacker® offers the newly redesigned 4" lift Kits and Systems for the Toyota IFS. At Skyjacker® we recognize that the '86-'95 Toyota Pick-Ups and '86-'89 4Runners are some of the toughest and most durable vehicles on the road and trails. So we designed one of the strongest lift units to compliment these tough trucks. Front spindles machined from ductile iron relocate the ball joints and steering linkage. The Kit or System both feature two welded control arm drop bracket assemblies.



Courser Radial Tires on American Racing Wheels

## KEY FEATURES

- Front Softride® Springs
- E-coated U-Bolts
- Sway Bar End Link Extensions
- Tapered Lift Blocks (Kits)
- Rear Softride® Leaf Springs (Systems)



T422KS

## Options & Accessories

### Softride® Leaf Springs

Softride® springs by Skyjacker® are constructed as progressive multi-leaf packs so that the gross vehicle weight rating and load carrying capacity will be equal to or greater than those of the vehicles original equipment.

### Stainless Steel Braided Brake Lines

Our brake lines are braided from high quality stainless steel with heavy-duty fittings designed to match your vehicle. They also feature an outer extruded polyurethane coating to keep them from chaffing. They don't just meet the specifications, they are the specification.



# '79-'85 TOYOTA PICK-UP & 4RUNNER

**3"-7" Lifts For The '79-'85 Toyota Pick-Up** Skyjacker® offers a variety of Kit options ranging in heights from 3", 5" and 7" for the '79-'85 Toyota Pick-Ups. Many of these kits feature front Softride® springs, e-coated u-bolts and sway bar end link extensions. The Kit form features tapered rear lift blocks while the System features rear Softride® leaf springs.

## KEY FEATURES

- Front Softride® Springs
- E-coated U-Bolts
- Sway Bar End Link Extensions
- Tapered Lift Blocks (Kits)
- Rear Softride® Leaf Springs (Systems)



T305PK

Super Swamper Tires on American Racing Outlaw Wheels





# '64-'80 TOYOTA LANDCRUISER


**2.5" and 4" Lifts For '64-'80 Toyota LandCruisers** Skyjacker® offers Softride® 2.5" and 4" Systems for Toyota's stout short wheel based vehicles. Skyjacker® also offers a System for Cruisers with an installed front shackle correction kit which raises the front 1.5". This System includes 2.5" front and 4" rear Softride® springs to level the vehicle.



**L40K**

## KEY FEATURES

- Front Softride® Springs
- E-coated U-Bolts
- Sway Bar End Link Extensions
- Tapered Lift Blocks (Kits)
- Rear Softride® Leaf Springs (Systems)

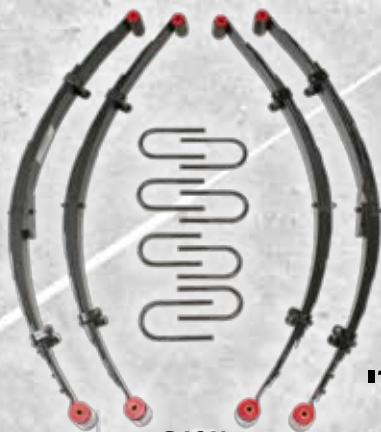

**S40K**



BFGoodrich Mud Terrain Tires on American Eagle Wheels

## Options & Accessories

### Steering Stabilizers

Skyjacker® offers steering stabilizers for virtually every 4x4. These stabilizers are available in heavy-duty replacement, single and dual kits.



### Steering and Pitman Arms

Skyjacker® manufactures a wide array of steering correction components and pitman arms available for many applications.

# '72-'82 INTERNATIONAL SCOUT

**2" and 4" Scout II, Terra and Traveler Lifts** Skyjacker® produces 2" and 4" lifts for the Scout Lover. Skyjacker® utilizes Softride® Technology to produce these lifts and to provide the quality ride you deserve.

## KEY FEATURES

- Front and Rear Softride® Leaf Springs
- Red Poly Spring Eye Bushings
- Front and Rear E-coated U-Bolts

## NOTED ACCESSORIES


- Pitman Arm
- Steering Stabilizers
- D.O.T. Extended Length Stainless Steel Braided Brakelines



Dick Cepek Tires on American Racing Wheels





**The Steering** is a very crucial part of your vehicle. It has to be addressed when lifting the vehicle to ensure proper alignment, handling characteristics, and safety. Skyjacker® addresses these issues with every suspension lift we design. In many cases, there are options and variable combinations depending on the lift height, specific vehicle, price range, etc. to achieve the proper steering geometry. Build it right the first time because improper steering geometry can result in wandering, bump steer, linkage binding, and increased wear on components (i.e. tie rods, ball joints, pitman arms, draglinks, steering arms, etc.).

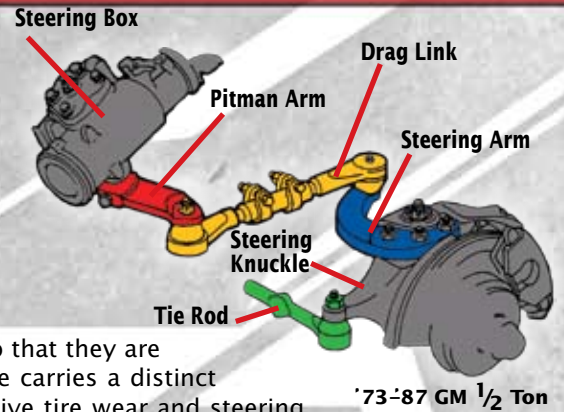



**Wheel Alignment** consists of adjusting the angles of the wheels so that they are perpendicular to the ground and parallel to each other. Each vehicle carries a distinct alignment specification. If the alignment is out, it can cause excessive tire wear and steering (i.e. ball joints, rod ends, etc.) or tracking problems. The purpose of these adjustments (Camber, Caster, Toe, and Tracking) is maximum tire life and a vehicle that tracks straight and true when driving along a straight and level road.

**Camber** is the angle of the wheel, measured in degrees, when viewed from the front of the vehicle. If the top of the wheel is leaning outward of center, then the camber is positive. Leaning inward, then the camber is negative. If the camber is out of adjustment, it will affect the way a vehicle handles & cause tire wear on one side of the tire's tread. If the camber is too far negative, for instance, then the tire will wear on the inside of the tread. Too positive will wear the outside of the tread.

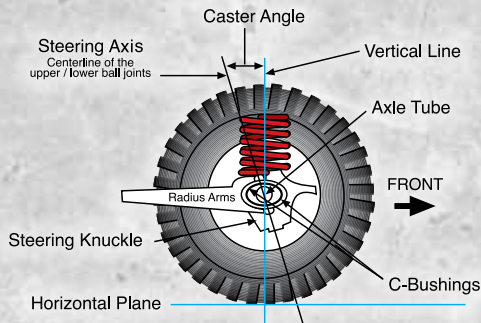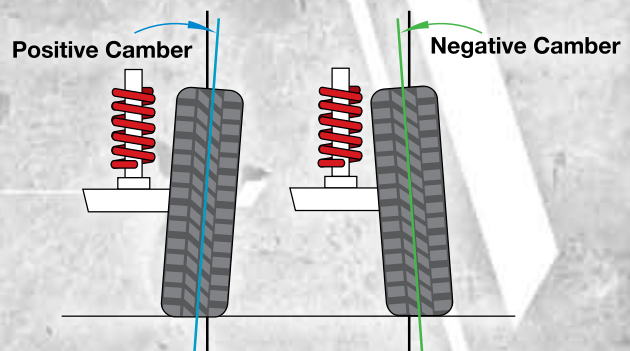

**Caster** is the forward or backward tilt of this steering axis, measured in degrees, when viewed from the side of the vehicle. The steering axis is a line through the upper and lower ball joints. If the top of the axis is leaning toward the rear of the vehicle, then the caster is Positive. Leaning toward the front, the caster is Negative. The diagram shows a 70's model Ford with Positive caster. Positive caster improves straight line tracking because the steering axis intersects the ground ahead of the area where the tire contacts the ground.

**Toe-In or Toe-Out** is the measured difference in the distance between the front of the tires and the back of the tires. It is measured in fractions of an inch in the U.S. and is usually set close to zero that means that the wheels are parallel with each other. When the distance between the front portions of the tires is closer than the rear portion that is known as Toe In. When the distance between the rear portions of the tires is closer than the front portion that is known as Toe Out. Toe is always adjustable on the front wheels and, on some vehicles, is also adjustable for the rear wheels.

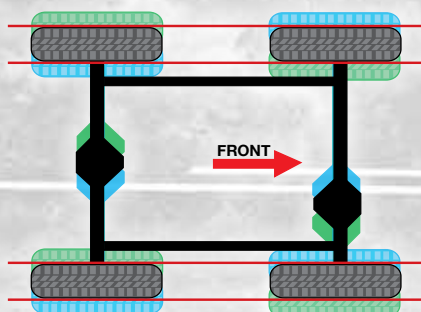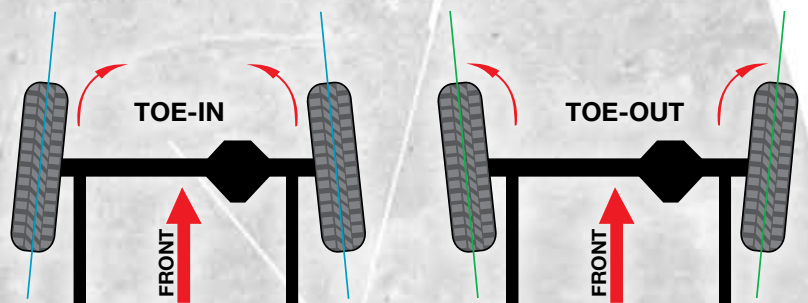

**Tracking** means that each of the rear wheels is an equal distance from the center line of the vehicle; therefore, when the vehicle is moving straightforward the tracks of the rear tires should be parallel to the vehicle's center line. There are two main types of 4-wheel alignments. In the first type, the rear toe and tracking is checked, but all adjustments are made at the front wheels. This is done on vehicles that do not have adjustments on the rear. The second type is a full 4-wheel alignment where the adjustments are first made to true up the rear alignment, and then the front is adjusted. Correct Track Bar alignment is a factor in many solid axle vehicles with coil spring suspensions.



# SKYJACKER® PRODUCT FEATURES

## SOFTRIDE® LEAF SPRINGS Featured in Systems

**Softride® By Skyjacker®** Softride® springs use only American steel and the individual leafs of each spring are shot-peened with hard steel pellets at very high velocities. This shot-peening compresses the surface of the steel thereby increasing the tensile strength of the spring. Without this shot-peening procedure, the maximum wheel travel and ride quality could not be achieved without sacrificing the life of the spring. Softride® springs use 'bolt' style spring clips, eliminating friction. Other spring designs use the 'cinch' style bend clips which bend tightly over the spring leafs causing binding and friction. Skyjacker® Softride® springs taper over the entire length of the leaf creating more flex at the leaf ends. This tapering distributes loads more evenly over a greater area and reduces the tendency for one leaf to dig into the leaf above it.

Rear Softride® springs are used to complete the 'SYSTEM' in a Skyjacker® suspension lift.



## BLOCKS AND U-BOLTS Featured in Kits

**Skyjacker® Blocks & U-Bolts** Skyjacker® utilizes Blocks and U-Bolts in its Kits to provide rear lift. The Skyjacker® U-Bolts are e-coated for corrosion resistance. These U-Bolts are offered in various shapes and sizes such as square, round, and semi-round in lengths ranging from 1.75" - 19". The Blocks used in Skyjacker® Kits are Ductile iron with fixed center pins. They are also tapered to correct pinion angle and prevent driveline vibrations. Available in 1.25, 2, 3.5, 4.5 & 5 inches.

Rear Block & U-Bolt Kits are usually used to make a 'KIT' in a Skyjacker® suspension lift. But a 'KIT' could also be a combination of Blocks & U-Bolts or Add-a-Leafs.

### SKYJACKER® BLOCKS

■ Ductile iron ■ Fixed Center Pin ■ Tapered



## ADD-A-LEAFS SPRINGS Featured in Kits

**Skyjacker® Add-A-Leafs** Skyjacker® offers a diverse selection of front and rear Add-a-Leafs. Skyjacker® Add-A-Leafs insert directly into your factory leaf spring providing lift and added strength. Softride® Add-a-Leafs use only American steel and are shot-peened with hard steel pellets at very high velocities. This shot-peening compresses the surface of the steel thereby increasing the tensile strength of the leaf. Without this shot-peening procedure, the maximum wheel travel and ride quality could not be achieved without sacrificing the life of the leaf. The Skyjacker® Add-a-Leafs are pre-drilled for the center pin. Pin location varies with each application. Most have long tapered ends for a progressive affect and ride comfort.

Rear Add-A-Leafs are sometimes used to make a 'KIT' in a Skyjacker® suspension lift. But it could also be a combination of Blocks & U-Bolts AND Add-a-Leafs.



## SKYJACKER® STEERING COMPONENTS

**Skyjacker® Steering Components** Skyjacker® knows the importance of steering correction after lifting a vehicle and we have an extensive line of steering components to prove it. From drag links to a variety of steering arms, Skyjacker® has the steering components to steer you straight. Check out our complete list of steering components on-line at [skyjacker.com](http://skyjacker.com) to see what Skyjacker® has designed to fit your needs.





## SPACER KITS

**Spacer Kits** are in high demand and produce optimum results for the amount of money spent. Specifically designed for an array of vehicles, these Spacer Kits add 2-2.5" of lift to the struts or coil springs. Skyjacker® offers Poly Value Kits with polyurethane spacers & red powder coated steel fabricated units like for the Honda Ridgeline. They include all the parts & hardware necessary to bolt-on this simple, but effective lift. No cutting or welding is involved and standard tools get the job done.



## ASSORTED POLYURETHANE

**Polyurethane** Skyjacker® carries a very large line of Polyurethane products to fit your vehicle's needs. The list includes Bump Stops, Bushings, Cab Mount Kits, Clearance Kits, and an array of Bushings (Spring Eye, Frame Shackle, Radius Arm, Track Bar, Caster) for various applications, makes and models. Polyurethane is a superior material that has a higher load-bearing capacity and can better resist the dynamic torque-like twisting and turning forces of suspension components as they go through their normal operation/travel movements. It is also an improved sound/vibration dampening material.




## STAINLESS STEEL BRAIDED BRAKELINES

**D.O.T. Certified Stainless Steel Braided Brake Lines** Skyjacker® has gone to 'extended lengths' to accommodate our four wheeling friends and to improve your 4x4s braking performance. All have been tried and tested in some of the most severe conditions four wheeling has to offer in virtually every corner of the world. They all passed the test and are proven in their quality of engineering, workmanship and finish. Skyjacker® brake lines conform to all federal requirements of FMVSS106, making them D.O.T. Certified and T.U.V. Approved in Germany.



## STEERING STABILIZERS

**Skyjacker® Steering Stabilizer** A steering stabilizer is a dampening shock for your steering system. It dampens out the harshness of the highway, the 'shimmy' from running the additional weight of larger tires & wheels and places control back into the driver's hands. Stabilizers also reduce the fatigue of the driver on a personal level by reducing the amount of physical strength it takes to guide those larger tires on and off the road. Changing the weak stock unit for a better performing replacement or adding dual steering stabilizers is an inexpensive but worthy investment.

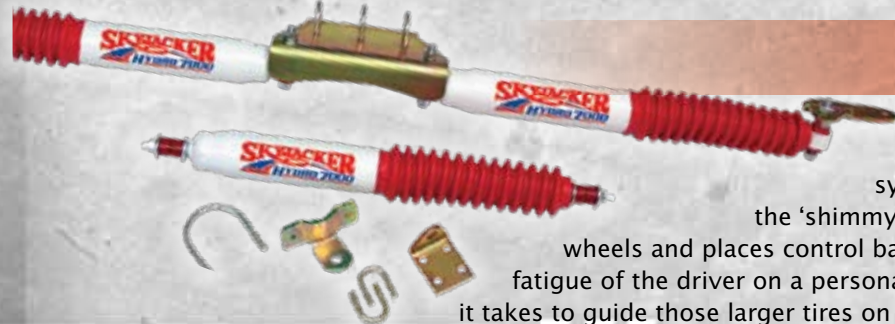

## JEEP CONTROL ARMS \ LINKS

**Standard Link** Control arms are fitted with greaseable polyurethane bushings on both ends of each link end.

**Value Flex** Control arms are fitted with greaseable polyurethane bushings on one end and a NG rebuildable rod end on the other.

**Rock Ready®** Series long arm links are 80% longer than stock, fitted with NG rebuildable rod ends with "Pivot Plus" inserts for maximum rotation.



**Standard**

**Value Flex**

**Rock Ready® Long Arm**



**Proud sponsor of the 2010  
& 2011 JK Experience.**

OFF ROAD EVOLUTION  
**JK** Experience  
PRESENTED BY  
RAMBLER



# SKY JACKER





Since Skyjacker's roots are in trail riding, it makes sense that Moab, Utah is a favorite destination for Skyjacker® every year. Skyjacker® hosts the annual trail run and invites friends, business partners, and sponsors to take on some of the most rugged terrain that the desert has to offer. With trails like "Rubble Trouble", "Hell's Revenge", and the "Tip-Over Challenge" stretching for miles, Skyjacker® conquers Moab Easter Jeep Safari with some of the best Jeeps around. Not only does it put on a show for everyone, it also gives Skyjacker® a chance to test out some of their newest lift kits on some of the harshest terrains. Check out Skyjacker.com for exclusive photos from this event!



# SEMA

SHOW 2010

Skyjacker® Suspensions had a very successful, award winning week at the SEMA show. Some great new products were introduced to lead sales in 2011. Skyjacker® was among an elite group of companies to receive a General Motors Design award during the 2010 SEMA Show. GM's Corporate Design Awards are given annually to the vehicles that make significant contributions to vehicle design and stand apart from others at the SEMA Show. Skyjacker Suspensions was selected to receive the GM Design Award for Best New Accessory for the 7" kit for the new 2011 Chevy 2500HD.





# SKYJACKER® DEALER MERCHANDISE



**Banners** Skyjacker® has indoor & outdoor banners to choose from. The outdoor 3x5' banner is printed on heavy-duty material using UV protected inks and features the Skyjacker® logo and web address in a flame type design. The indoor 2x4' banner also features the Skyjacker® logo and web address in a flame type design which is perfect for your shop.

**BAN2040-G** ..... 2x4' Flame Banner with Grommets

**BAN3050-GHR** ..... 3x5' Flame Banner with Grommets, Hem and Rope

## String Pennants

These string pennants have the Skyjacker® Motor Sports Red & Black flame design alternate the classic checker flag pennant. Perfect for dressing up a show room, sectioning off a display or providing some crowd control for your next outdoor event.

**SP10-R**..... Skyjacker® Motor Sports String Pennant



## Dealer Pack

Do you carry Skyjacker® products? Do you need some promotional materials to help you show it? Ask about our dealer pack that includes catalogs, price sheets, flyers, an authorized dealer decal, a banner, and more. Give us a call at 1866-SKYJACKER.

**DP100** ..... Skyjacker® Dealer Pack

## PWA

As a tool for our jobber/retailers and WDs, Skyjacker® actively participates in PWA University. By Skyjacker® uploading videos and lessons, participants are able to test their knowledge of the Skyjacker® product line. Try it today at [PWAUniversity.com](http://PWAUniversity.com).



**Official Logo Decals** Skyjacker® has logo decals of many sizes and colors to let everyone know you made the right suspension decision.

**D9** .....Skyjacker® .....die cut.....9" ..... blue, black, red, silver, white, yellow  
**D17** .....Skyjacker® .....die cut.....17" ..... blue, black, red, silver, white, yellow  
**WD24** ...Skyjacker® .....die cut.....24" ..... blue, black, red, silver, white, yellow  
**WD30** ...Skyjacker® .....die cut.....30" ..... blue, black, red, silver, white, yellow  
**JRD3**.....Jesus Rocks.....die cut.....3" ..... silver, white  
**JRD6**.....Jesus Rocks.....die cut.....6" ..... silver, white, blue, red & black






Application Guide	
Pallet Kits	66
Pallet Kit Break Down	71
Leveling Kits & Sport Lifts	73
Chevrolet / GM / GMC	80
Dodge	100
Ford (4WD & 2WD)	118
Honda (4WD)	156
International	156
Isuzu	156
Jeep (4WD & 2WD)	158
Mazda (4WD & 2WD)	168
Nissan	170
Toyota (4WD & 2WD)	170
Shock Application Guide	180
Front Leveling Struts	189
Multiple Shock Kits	190
Shock Specifications Guide	192
Steering Stabilizers	195
Chevrolet / GM Accessories	198
Dodge Accessories	198
Ford Accessories	199
Honda Accessories	202
International Accessories	202
Jeep Accessories	202
Mazda Accessories	204
Toyota Accessories	204
Universal Accessories	206
Polyurethane Clearance Kits/Body Lifts	206
Add-A-Leafs, Softride®	207
Brake Lines, Stainless Steel Braided	210
Coil Springs, Softride®	212
Front Leaf Springs, Softride®	213
Rear Leaf Springs, Softride®	214
Steering Components	220
Rear Lift Blocks & U-Bolt Kits	223
U-Bolts	224
Component Box Break Down	226
Tire & Wheel Chart	238
Warranty Information	240
Skyjacker® Sitemap	241

**Skyjacker.com is ALL NEW and your most current avenue for information about Skyjacker® Suspensions and our products. It also features all kinds of cool things you'll want to check out.**

- **Product Search** - Find exactly what you need for your customer's vehicle... quickly and accurately.
- **Skyjacker® Merchandise** - Select from 'official' merchandise... banners, pennants, decals, shirts, caps, and jackets.
- **Dealer Search** - Become a Skyjacker® Authorized Dealer and we'll steer customers to your door.
- **Real Rides** - Expand your 'showroom' to the world. Post your Skyjacker® equipped vehicles on this high traffic area to show-off your expertise and drive new customers into your area.
- **Media Room** - Review Skyjacker's coverage in the media.
- **Projects** - Vehicles your customer's want to duplicate.
- **Calendar of Events** - See where the action is & join the fun.
- **New Product Section** - Find out 'What's New' as it happens. Skyjacker® product line.

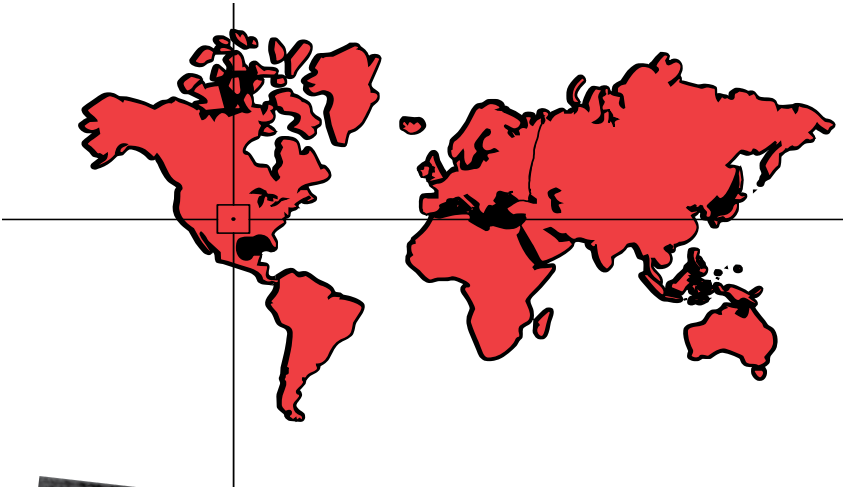



# Pallet Kits

Skyjacker® now makes it simple to order our most popular lift kit applications. Skyjacker's new One part number Pallet Kit provides every required component, nothing left out. These complete pallet kits come with all the pieces boxed together at the factory to insure you receive everything required to complete the installation for your vehicles application. A breakdown is included only as a reference, to order just pick your One easy Pallet Kit number!

<b>07-10 Chevrolet K1500 PU 4WD</b>		
3"	C7361PH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front CV Axle Spacers	
• Adjustable Front Performance Struts	• Front Replacement Longer Sway Bar Endlinks	
• Front & Rear Lower Control Arm Crossmembers	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Differential Drop Brackets	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>07-10 Chevrolet K1500 PU 4WD</b>		
6"	C7660PH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Replacement Longer Sway Bar Endlinks	
• Front & Rear Lower Control Arm Crossmembers	• Anti-Torque Rod For Front Differential	
• Front Strut Spacers	• Stainless Steel Braided Brakelines	
• Front Differential Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front CV Axle Spacers	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>07-10 Chevrolet K1500 PU 4WD</b>		
6"	C7661PH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Replacement Longer Sway Bar Endlinks	
• Front & Rear Lower Control Arm Crossmembers	• Anti-Torque Rod For Front Differential	
• Adjustable Front Performance Struts	• Stainless Steel Braided Brakelines	
• Front Differential Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front CV Axle Spacers	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>99-06 &amp; 07 Classic Chevrolet/GMC K1500 PU 4WD</b>		
3"	C9461PH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Replacement Longer Sway Bar Endlinks	
• Torsion Bar Drop Brackets	• Front Bump Stop Spacers	
• Front & Rear Lower Control Arm Crossmembers	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Differential Drop Brackets	• Front & Rear Hydro Shocks	
• Front CV Axle Spacer		
<b>All Necessary hardware included</b>		
<b>99-06 &amp; 07 Classic Chevrolet/GMC K1500 PU 4WD</b>		
6"	C9661PN	Non Skid Plate Version
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Rear Cast Iron Blocks with U-Bolt Kit	
• Torsion Bar Drop Brackets	• Rear Add-A-Leafs	
• Front & Rear Lower Control Arm Crossmembers	• Front Replacement Longer Sway Bar Endlinks	
• Front Differential Drop Brackets	• Front Replacement Bump Stops	
• Front CV Axle Spacers	• Front & Rear Nitro Shocks	
<b>All Necessary hardware included</b>		
<b>01-10 Chevrolet K2500HD PU 4WD</b>		
3"	C9381PH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Bump Stop Lowering Brackets	
• Torsion Bar Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front & Rear Lower Control Arm Crossmembers	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Front Differential Drop Brackets	• Transmission Spacers	
• Front CV Axle Spacers	• Front & Rear Hydro Shocks	
• Front Replacement Longer Sway Bar Endlinks		
<b>All Necessary hardware included</b>		



<b>01-10 Chevrolet K2500HD PU 4WD</b>		
6"	C9681PN	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Bump Stop Lowering Brackets	
• Torsion Bar Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front & Rear Lower Control Arm Crossmembers	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Front Differential Drop Brackets	• Transmission Spacers	
• Front CV Axle Spacers	• Front & Rear Nitro Shocks	
• Front Replacement Longer Sway Bar Endlinks		
<b>All Necessary hardware included</b>		
<b>09-10 Dodge Ram 1500 4X4</b>		
4"	D940SSPH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Driveshaft Spacer	
• Front & Rear Lower Control Arm Crossmembers	• Front & Rear Sway Bar End Links	
• Front Strut Spacers	• Rear Control Arm Relocation Brackets	
• Differential Relocation Brackets	• Rear Track Bar Relocation Bracket	
• Differential Skid Plate	• Rear Coil Springs	
• Rear Bump Stop Spacers	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>09-10 Dodge Ram 1500 4X4</b>		
6"	D960SSPH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Driveshaft Spacer	
• Front & Rear Lower Control Arm Crossmembers	• Front & Rear Sway Bar End Links	
• Front Strut Spacers	• Rear Control Arm Relocation Brackets	
• Differential Relocation Brackets	• Rear Track Bar Relocation Bracket	
• Differential Skid Plate	• Rear Coil Springs	
• Rear Bump Stop Spacers	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>02-05 Dodge Ram 1500 4X4</b>		
6"	D2601PN	Non Skid Plate Version
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front Bump Stop Extension	
• Front Longer Sway Bar Endlinks	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front & Rear Lower Control Arm Crossmembers	• Transfer Case Indexing Ring with Seal Adaptor	
• Front Differential Drop Brackets	• Front & Rear Nitro Shocks	
• Torsion Bar Crossmember Drop Brackets		
<b>All Necessary hardware included</b>		
<b>10-11 Dodge 3/4, 1 Ton, &amp; MegaCab Models 4X4</b>		
5"	D4510PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Rear Add-A-Leafs with Degree Shims	
• Upper Track Bar Relocation Bracket	• Heavy Duty Replacement Steering Stabilizer	
• Upper & Lower Standard Control Arms	• Rear U-Bolt Kit	
• Sway Bar Lowering Brackets	• Upper Control Arm Relocation Bracket	
• Drop Pitman Arm	• Front & Rear Nitro Shocks	
• Front Replacement Bump Stops		
<b>All Necessary hardware included</b>		
<b>2009 Dodge 3/4, 1 Ton, &amp; MegaCab Models 4X4</b>		
5"	D4519PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Rear Add-A-Leafs with Degree Shims	
• Upper Track Bar Relocation Bracket	• Heavy Duty Replacement Steering Stabilizer	
• Upper & Lower Standard Control Arms	• Rear U-Bolt Kit	
• Sway Bar Lowering Brackets	• Upper Control Arm Relocation Bracket	
• Drop Pitman Arm	• Front & Rear Nitro Shocks	
• Front Replacement Bump Stops		
<b>All Necessary hardware included</b>		



# Pallet Kits

<b>03-08 Dodge 3/4, 1 Ton, &amp; MegaCab Models 4X4</b>		
3"	D2513PH	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Rear Add-A-Leafs	
• Lower Standard Control Arms	• Front & Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>03-08 Dodge 3/4, 1 Ton, &amp; MegaCab Models 4X4</b>		
5"	D4513PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Rear Add-A-Leafs with Degree Shims	
• Upper Track Bar Relocation Bracket	• Heavy Duty Replacement Steering Stabilizer	
• Upper & Lower Standard Control Arms	• Rear U-Bolt Kit	
• Sway Bar Lowering Brackets	• Upper Control Arm Relocation Bracket	
• Drop Pitman Arm	• Front & Rear Nitro Shocks	
• Front Replacement Bump Stops		
<b>All Necessary hardware included</b>		
<b>09-11 Ford F150 4WD</b>		
4-6"	F9461PH	Adjustable Front Struts
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front CV Axle Spacers	
• Replacement Front Performance Struts	• Rear Add-A-Leafs	
• Front & Rear Lower Control Arm Crossmembers	• Sway Bar Lowering Bracket	
• Front Differential Drop Brackets	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>04-08 Ford F150 4WD</b>		
3"	F430STPH	
<b>Pallet kit includes all of the below listed items</b>		
• Replacement Front Performance Struts	• Rear Add-A-Leafs	
• Rear Hydro Shocks		
<b>All Necessary hardware included</b>		
<b>04-08 Ford F150 4WD</b>		
6"	F4601PH	Non Skid Plate Version
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front CV Axle Spacers	
• Replacement Front Performance Struts	• Rear Add-A-Leafs	
• Front & Rear Lower Control Arm Crossmembers	• Sway Bar Lowering Bracket	
• Front Differential Drop Brackets	• Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>97-03 Ford F150 4WD</b>		
6"	F9701PH	Non Skid Plate Version
<b>Pallet kit includes all of the below listed items</b>		
• Replacement CNC Machined Steering Knuckles	• Front CV Axle Spacers	
• Torsion Bar Drop Bracket	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front & Rear Lower Control Arm Crossmembers	• Front Replacement Longer Sway Bar Endlinks	
• Front Differential Drop Brackets	• Front & Rear Hydro Shocks	
<b>All Necessary hardware included</b>		
<b>2011 Ford F250 4WD</b>		
4"	F11451PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Softride Front Coil Springs	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Upper Track Bar Relocation Bracket	• Front Stainless Steel Braided Brakelines	
• Radius Arm Frame Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Sway Bar Endlinks	• Drop Pitman Arm	
• Replacement Heavy Duty Steering Stabilizer	• Front & Rear Nitro Shocks	
• Front Bump Stop Relocation Brackets		
<b>All Necessary hardware included</b>		



<b>2011 Ford F250 4WD</b>		
6"	F11651PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Softride Front Coil Springs	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Upper Track Bar Relocation Bracket	• Front Stainless Steel Braided Brakelines	
• Radius Arm Frame Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Sway Bar Endlinks	• Drop Pitman Arm	
• Replacement Heavy Duty Steering Stabilizer	• Front & Rear Nitro Shocks	
• Front Bump Stop Relocation Brackets		
<b>All Necessary hardware included</b>		
<b>08-10 Ford F250/F350 4WD</b>		
2"	F825PN	Gas or Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Poly Spacers	• Rear Add-A-Leafs	
• Front Track Bar Bracket	• Front Nitro Shocks	
• Rear Nitro Shocks		
<b>All Necessary hardware included</b>		
<b>08-10 Ford F250 4WD</b>		
4"	F8451PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Softride Front Coil Springs	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Upper Track Bar Relocation Bracket	• Front Stainless Steel Braided Brakelines	
• Radius Arm Frame Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Sway Bar Endlinks	• Drop Pitman Arm	
• Replacement Heavy Duty Steering Stabilizer	• Front & Rear Nitro Shocks	
• Front Bump Stop Relocation Brackets		
<b>All Necessary hardware included</b>		
<b>08-10 Ford F250 4WD</b>		
6"	F8651PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Softride Front Coil Springs	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Upper Track Bar Relocation Bracket	• Front Stainless Steel Braided Brakelines	
• Radius Arm Frame Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Sway Bar Endlinks	• Drop Pitman Arm	
• Replacement Heavy Duty Steering Stabilizer	• Front & Rear Nitro Shocks	
• Front Bump Stop Relocation Brackets		
<b>All Necessary hardware included</b>		
<b>05-07 Ford F250/F350 4WD</b>		
2"	F525PN	Gas or Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Poly Spacers	• Rear Add-A-Leafs	
• Front Track Bar Bracket	• Front Nitro Shocks	
• Rear Nitro Shocks		
<b>All Necessary hardware included</b>		
<b>05-07 Ford F250/F350 4WD</b>		
4"	F5451PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Softride Front Coil Springs	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Upper Track Bar Relocation Bracket	• Front Stainless Steel Braided Brakelines	
• Radius Arm Frame Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Sway Bar Endlinks	• Drop Pitman Arm	
• Replacement Heavy Duty Steering Stabilizer	• Front & Rear Nitro Shocks	
• Front Bump Stop Relocation Brackets		
<b>All Necessary hardware included</b>		



# Pallet Kits

## 05-07 Ford F250/F350 4WD

6"	F5651PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Softride Front Coil Springs	• Rear Driveshaft Carrier Bearing Lowering Bracket	
• Upper Track Bar Relocation Bracket	• Front Stainless Steel Braided Brakelines	
• Radius Arm Frame Drop Brackets	• Rear Cast Iron Blocks with U-Bolt Kit	
• Front Sway Bar Endlinks	• Drop Pitman Arm	
• Replacement Heavy Duty Steering Stabilizer	• Front & Rear Nitro Shocks	
• Front Bump Stop Relocation Brackets		

**All Necessary hardware included**

## 00-04 Ford F250 / 350 4WD

4"	F9452PN	Diesel Engine
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Leaf Springs	• Replacement Front U-Bolts	
• Upper Track Bar Relocation Bracket	• Drop Pitman Arm	
• Front Sway Bar Endlinks	• Front & Rear Nitro Shocks	
• Rear Cast Iron Blocks with U-Bolts		

**All Necessary hardware included**

## 07-11 Jeep Wrangler JK 2 & 4 Door 2 / 4WD

2.5"	JK2500PH	
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Rear Sway Bar Endlinks	
• Rear Softride Coil Springs	• Rear Bump Stop Relocation Bracket	
• Rear Track Bar Relocation Bracket with Differential Brace	• Rear Pinion Cams	
• Front Sway Bar Endlink disconnects	• Front & Rear Hydro Shocks	
• Front Bump Stop Spacers		

**All Necessary hardware included**

## 07-11 Jeep Wrangler JK 2 & 4 Door 2 / 4WD

4"	JK401PN	
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Front Sway Bar Endlink Disconnects	
• Rear Softride Coil Springs	• Rear Track Bar Relocation Bracket with Differential Brace	
• Set of 4 Standard Lower Control Arms	• Rear Sway Bar Endlinks	
• Rear Bump Stop Relocation Brackets	• Drop Pitman Arm	
• Front Bump Stop Spacers	• Front & Rear Nitro Shocks	
• Front Track Bar Relocation Bracket		

**All Necessary hardware included**

## 97-06 Jeep TJ Wrangler / Rubicon

2.5"	TJ2513PH	
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Transfer Case Lowering Kit	
• Rear Softride Coil Springs	• Front Sway Bar Endlink Disconnects	
• Set of 4 Longer Standard Lower Control Arms	• Front Replacement Bump Stops	
• Rear Track Bar Relocation Bracket	• Rear Sway Bar Endlinks	
• Front & Rear Replacement Bump Stop Spacers	• Front & Rear Hydro Shocks	

**All Necessary hardware included**

## 97-06 Jeep TJ Wrangler / Rubicon

4"	TJ4013PH	
<b>Pallet kit includes all of the below listed items</b>		
• Front Softride Coil Springs	• Drop Pitman Arm for Power Steering Model	
• Rear Softride Coil Springs	• Transfer Case Lowering Kit	
• Set of 4 Longer Standard Lower Control Arms	• Front Sway Bar Endlink Disconnects	
• Rear Track Bar Relocation Bracket	• Rear Sway Bar Endlinks	
• Front Replacement Bump Stops	• Front & Rear Hydro Shocks	

**All Necessary hardware included**



## 97-06 Jeep TJ Wrangler / Rubicon

6"	TJ676XPN
<b>Pallet kit includes all of the below listed items</b>	
• Front Softride Coil Springs	• Drop Pitman Arm for Power Steering Model
• Rear Softride Coil Springs	• Bolt-on Subframe
• Adjustable Front & Rear Upper Control Arms	• Front Sway Bar Endlink Disconnects
• Adjustable Front & Rear Bent Lower Control Arms	• Rear Sway Bar Endlinks
• Rear Track Bar Relocation Bracket	• Front & Rear Nitro Shocks
• Adjustable Front and Rear Track Bars	• Steering Stabilizer
• Front Replacement Bump Stops	• High Clearance Skid Plate
• Steering Box Skid Plate	
NOTE: For 03-06 Models - Skid Plate Part# SP176 will not work with manual transmission.	
<b>All Necessary hardware included</b>	

## 05-10 Toyota Tacoma 4WD

3"	TC530STPH
<b>Pallet kit includes all of the below listed items</b>	
• Replacement Front Performance Struts	• Rear Add-A-Leafs
• Rear Hydro Shocks	
<b>All Necessary hardware included</b>	

## 07-11 Toyota FJ Cruiser 4WD

2"	FJ20PH
<b>Pallet kit includes all of the below listed items</b>	
• Front CNC Machined Strut Spacers	• Rear Hydro Shocks
• Rear Poly Coil Spring Spacers	
<b>All Necessary hardware included</b>	

## 07-11 Toyota Tundra 4WD

3"	TU730STPH
<b>Pallet kit includes all of the below listed items</b>	
• Replacement Front Performance Struts	• Rear Block Kit
• Rear Hydro Shocks	
<b>All Necessary hardware included</b>	

## 07-11 Toyota Tundra 4WD

6"	TU761PH
<b>Pallet kit includes all of the below listed items</b>	
• Replacement CNC Machined Steering Knuckles	• Replacement Front Performance Struts
• Front and Rear Lower Control Arm Crossmembers	• Rear Block and U-Bolt Kit
• Rear Hydro Shocks	
<b>KIT NOTE: 17" or Larger Wheel Must Be Used with 6" Lift.</b>	
<b>All Necessary hardware included</b>	

## Pallet Kit Breakdown

Part#	Description	QTY	Part#	Description	QTY	Part#	Description	QTY
<b>C7361PH</b>	<b>3" PALLET KIT,07 GM 1500</b>		H7074	HYDRO SHOCK W/RED BOOT	2	D25	2-2.5"CLS,94-08DGE V10/CUMM	1
PK-IFS	PLT KIT IFS 49X39.75X13.75	1	H7017	HYDRO SHOCK W/RED BOOT	2	R332S	ADD-A-LEAF,2003 DGE V10/CUM	2
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	<b>C9461PH</b>	<b>3" PALLET KIT,99-06 GM 1500</b>		H-BOX D2513	HDWR BOX: D2513 COMP BOX	1
C7361A	COMP BOX, 3" 07 GM 1500	1	PK-IFS	PLT KIT IFS 49X39.75X13.75	1	H7092	HYDRO SHOCK W/RED BOOT	2
C7361PR	COM BOX,3"07 1500 P/U REAR	1	PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	H7036	HYDRO SHOCK W/RED BOOT	2
C7361ST	COM BOX, 3" STRUT 07 GM	1	C9331	COM BOX: 3"99-06 GM1500 P/U	1	<b>D2601PN</b>	<b>6" PALLET KIT,02-05 1500</b>	
H7017	HYDRO SHOCK W/RED BOOT	2	BUK2063	2"BLOCK/UBLT KIT W/12"	1	PK-IFS	PLT KIT IFS 49X39.75X13.75	1
<b>C7660PH</b>	<b>6" PALLET KIT, SPACR, 07&gt;GM1500</b>		H7003	HYDRO SHOCK W/RED BOOT	2	PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
PK-IFS	PLT KIT IFS 49X39.75X13.75	1	H7017	HYDRO SHOCK W/RED BOOT	2	D2601A-NSP	COMP BOX, 6" 02 DODGE 1500 4	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	<b>C9661PN</b>	<b>6" PALLET KIT,01-06 GM 1500</b>		D2601B	COMP BOX, 6"02 DODGE 1500 4	1
C7661A	COMP BOX, 6" 07-10 GM 1500	1	PK-IFS	PLT KIT IFS 49X39.75X13.75	1	N8091	NITRO SHOCK W/RED BOOT	2
C7660SP	COM BOX,6"SPCR 07-10 GM1500	1	PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	N8036	NITRO SHOCK W/RED BOOT	2
C7661PR	COM BOX,REAR 07-10 GM1500	1	C9661A-NSP	COM BX,6"99-06GMC,NO SKD PL	1	<b>D4510PN</b>	<b>5" PALLET KIT,10 DODGE 2500</b>	
H7036	HYDRO SHOCK W/RED BOOT	2	C9662B	COMP BOX: 6" 99-06 GM K1500	1	PK-JK/SD	PALLET BOX 39.25X23X13.75	1
<b>C7661PH</b>	<b>6" PALLET KIT,01-05 2500HD</b>		N8074	NITRO SHOCK W/RED BOOT	2	PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
PK-IFS	PLT KIT IFS 49X39.75X13.75	1	N8036	NITRO SHOCK W/RED BOOT	2	D45	4.5"COILS,94-08DGE V10/CUMM	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	<b>C9681PN</b>	<b>6" PALLET KIT,01-07 GM 2500HD</b>		D45510	COM BOX: 5" 10 DGE 2500 4WD	1
C7661A	COMP BOX, 6" 07-10 GM 1500	1	PK-IFS	PLT KIT IFS 49X39.75X13.75	1	H-BOX D4513	HDWR BOX: D4513 COMP BOX	1
C7661PR	COM BOX,REAR 07-10 GM1500	1	PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2
C7661ST	COM BOX, 6" STRUT 07 GM	1	C9681A-NSP	COMP BOX,6" 01-10 GM 2500HD	1	N8094	NITRO SHOCK W/RED BOOT	2
H7036	HYDRO SHOCK W/RED BOOT	2	C9682B	COM BX,6"01-09GM2500/2500HD	1	N8036	NITRO SHOCK W/RED BOOT	2
<b>C9381PH</b>	<b>3" PALLET KIT,01-05 2500HD</b>		N8074	NITRO SHOCK W/RED BOOT	2	<b>D4513PN</b>	<b>5" PALLET KIT,03-07 2500</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1	<b>D2513PH</b>	<b>2.5" PALLET KIT, 2500 4X4</b>		PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1	PK-JK/SD	PALLET BOX 39.25X23X13.75	1	PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
C9381	COM BOX,3" 01-10 GMC 2500HD	1	PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1	D45	4.5"COILS,94-08DGE V10/CUMM	1
BUK2082F	2"BLOCK/U-BOLT KT GM 2500HD	1				D45523	COM BOX,5" 03-08 DODGE 2500	1



# Pallet Kits

Part#	Description	QTY
H-BOX D4513	HDWR BOX: D4513 COMP BOX	1
R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2
N8094	NITRO SHOCK W/RED BOOT	2
N8036	NITRO SHOCK W/RED BOOT	2
<b>D4519PN</b>	<b>5"PALLET KIT,09 DODGE 2500</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
D45	4.5"COILS,94-08DGE V10/CUMM	1
D45529	COM BOX,5" 09 DGE 2500 4WD	1
H-BOX D4513	HDWR BOX: D4513 COMP BOX	1
R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2
N8094	NITRO SHOCK W/RED BOOT	2
N8036	NITRO SHOCK W/RED BOOT	2
<b>D940SSPH</b>	<b>4"PAL KIT,09&gt;DGE1500 W/HYDR</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
D946A	COMP BOX,4-6" 09 DODGE 1500	1
D946B	COMP BOX,4-6" 09 DODGE 1500	1
D940C	COMP BOX: 4" 09 DODGE 1500	1
H7036	HYDRO SHOCK W/RED BOOT	2
<b>D960SSPH</b>	<b>6"PAL KIT,09&gt;DGE1500 W/HYDR</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
D946A	COMP BOX,4-6" 09 DODGE 1500	1
D946B	COMP BOX,4-6" 09 DODGE 1500	1
D960C	COM BOX: 6" 09 DODGE 1500	1
H7036	HYDRO SHOCK W/RED BOOT	2
<b>F11451PN</b>	<b>4" PALLET KIT, 11 F250 DSL</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
F545	4"COILS,05F250 4WD W/DIESEL	1
F11451	COMP BOX,4" KIT 11 F250 4WD	1
FA450	PITMAN ARM, 2005 F250 4WD	1
N8092	NITRO SHOCK W/RED BOOT	2
N8060	NITRO SHOCK W/RED BOOT	2
<b>F11651PN</b>	<b>6" PALLET KIT, 11 F250 DSL</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
F565	6"COILS,05>F250/350,DIESEL	1
F11651	COMP BOX,6" KIT 11 F250 4WD	1
FA450	PITMAN ARM, 2005 F250 4WD	1
N8093	NITRO SHOCK W/RED BOOT	2
N8079	NITRO SHOCK W/RED BOOT	2
<b>F430STPH</b>	<b>3" PALLET KIT, 04-08 F150</b>	
F430ST	2-3"STRUTS,04-08 F150 4WD	1
R3415	ADD-A-LEAFS,1.5" 04>F150	1
H7060	HYDRO SHOCK W/RED BOOT	2
<b>F4601PH</b>	<b>6" PALLET KIT,04-08F150 4WD</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
F4601A-NSP	COMP BOX,6" 04-08 F150 4WD	1
F4601BST	COMP BOX,6" 04-08 F150 4WD	1
H7060	HYDRO SHOCK W/RED BOOT	2
<b>F525PN</b>	<b>2.5"PALLET KIT, 05-07 F250</b>	
F52	COM BOX ,2.5"FRONT POLY,05F	1
R3510	1"REAR ADD-A-LEFS,99-05F250	1
TB520	TRACK BAR BRKT,2"05>F2504WD	1
N8091	NITRO SHOCK W/RED BOOT	2
N8060	NITRO SHOCK W/RED BOOT	2
<b>F5451PN</b>	<b>4"PALLET KIT,05-07 F250 DSL</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
F545	4"COILS,05F250 4WD W/DIESEL	1
F5451	COMP BOX ,4"KIT 2005 F250 4	1
FA450	PITMAN ARM, 2005 F250 4WD	1
N8092	NITRO SHOCK W/RED BOOT	2
N8079	NITRO SHOCK W/RED BOOT	2
<b>F5651PN</b>	<b>6" PAL KIT,05-07 F250,DIESEL</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
F565	6"COILS,05>F250/350,DIESEL	1
F5651	COMP BOX,6"05-07 F250/F350	1
FA450	PITMAN ARM, 2005 F250 4WD	1
N8093	NITRO SHOCK W/RED BOOT	2
N8079	NITRO SHOCK W/RED BOOT	2
<b>F825PN</b>	<b>2.5"PALLET KIT, 08 F250 4WD</b>	
F52	COM BOX ,2.5"FRONT POLY,05F	1
R3815	1.5"REAR ADD-A-LEAFS,08F250	1
TB820	TRACK BAR BRKT,2" 08 F250	1
N8091	NITRO SHOCK W/RED BOOT	2
N8060	NITRO SHOCK W/RED BOOT	2
<b>F8451PN</b>	<b>4" PALLET KIT, 08 F250 DSL</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1

Part#	Description	QTY
F545	4"COILS,05F250 4WD W/DIESEL	1
F8451	COMP BX,4"KIT 08 F250 4WD	1
FA450	PITMAN ARM, 2005 F250 4WD	1
N8092	NITRO SHOCK W/RED BOOT	2
N8079	NITRO SHOCK W/RED BOOT	2
<b>F8651PN</b>	<b>6" PALLET KIT,08 F250 DSL</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
F565	6"COILS,05>F250/350,DIESEL	1
F8651	COMP BOX,6"08-10 F250/350	1
FA450	PITMAN ARM, 2005 F250 4WD	1
N8093	NITRO SHOCK W/RED BOOT	2
N8079	NITRO SHOCK W/RED BOOT	2
<b>F9452PN</b>	<b>4" PALLET KIT,00-04 250 DSL</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
F945S	SOFTTRIDE SPRG 4" SD-DIESEL	2
F9402M	COMP BOX, 4" 00-02 F250/350	1
FA499	PITMAN ARM 3/99-UP SUPERDITY	1
N8041	NITRO SHOCK W/RED BOOT	2
N8079	NITRO SHOCK W/RED BOOT	2
<b>F9461PH</b>	<b>4-6"PAL KIT,09-10F150 W/HYD</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
F9461A	COMP BX,09-10 FORD F150 4WD	1
F9461B	COMP BX,09-10 FORD F150 4WD	1
H7060	HYDRO SHOCK W/RED BOOT	2
<b>F9701PH</b>	<b>6" PALLET KIT,97-03 F150</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
F9701A-NSP	COMP BOX,6" 97-03 F150 4X4	1
F9701B	COMP BOX ,6" 97-03 F150 4X4	1
H7097	HYDRO SHOCK W/RED BOOT	2
H7061	HYDRO SHOCK W/RED BOOT	2
<b>FJ20PH</b>	<b>2" PALLET KIT, FJ CRUSIER</b>	
24X15X8 RSC	DODGE COIL BOX	1
FJ20MS	COM BOX , 2" VALUE KT,FJ CR	1
H7089	HYDRO SHOCK W/RED BOOT	2
<b>JK2500PH</b>	<b>2.5" PALLET KIT, 07 JEEP JK</b>	
PK-JK/SD	PALLET BOX 39.25X23X13.75	1
PK-JK/SD LID	PALLET LID JK/SD 40-23.75X5	1
JK25F	JK 2.5-3.5" FRONT COILS	1
JK25R	JK 2.5-3.5" REAR COILS	1
JK2500	COMP BOX, 2.5" 07 JEEP JK	1
CAM700	CAM BOLTS JK UPR RR/LWR FRT	1
SBE126	DBL DISC END LINKS JEEP JK	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
H7035	HYDRO SHOCK W/RED BOOT	2
H7037	HYDRO SHOCK W/RED BOOT	2
<b>TJ676XPN</b>	<b>6" PALLET KIT,97-06 TJ</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
TJ60F	6"FRONT COILS,97-06 JEEP TJ	1
TJ60R	6" REAR COILS,97-06 JEEP TJ	1
TJ68RRX	COM BOX,6-8"97-06TJ RCK RDY	1
TJ60X2	COM BOX,6"97-06TJ RCK RDY 2	1
RTBA168	REAR TRACK BAR TJ 1 HEIM	1
SP176	HIGH CLEAR SKD PLT 97-06 TJ	1
N8049	NITRO SHOCK W/RED BOOT	2
N8063	NITRO SHOCK W/RED BOOT	2
<b>TU730STPH</b>	<b>3" PALLET KIT, 07-08 TUNDRA</b>	
TU730ST	3" STRUTS, 07 TUNDRA 4X4	1
TU710R	COM BOX: 3" 07 TUNDRA REAR	1
H7062	HYDRO SHOCK W/ RED BOOT	2
<b>TU761PH</b>	<b>6"PALLET KIT, 07-10 TUNDRA</b>	
PK-IFS	PLT KIT IFS 49X39.75X13.75	1
PK-IFS LID	PLT KIT LID IFS 49.75X40X5	1
TU761A	COMP BOX,6" 07 TUNDRA 4X4	1
TU761PR	COM BOX, 6" 07 TUNDRA REAR	1
H7066	HYDRO SHOCK W/RED BOOT	2



# LEVELING KITS & SPORT LIFTS

Part Number	Front Lift Options							Shock Choice				Rear Lift Options		
	Lift	Metal Spacer	Torsion Key	Poly Spacer	New Struts	Coils	Add-A-Leaf*	Front Nitro	Stock Replacement Rear Nitro	Front Hydro	Stock Replacement Rear Hydro	Add-A-Leaf or 1.25" Blocks & 4 U-Bolts or Coil Spacers	Lifted Rear Nitro	Lifted Rear Hydro
Chevrolet/GMC 2007-2011 Silverado/Sierra 1500 2WD/4WD														
C720MS <sup>1</sup>	2"	•						-----	N8027 <sup>N</sup>	-----	H7027 <sup>N</sup>	BUK12563 <sup>B</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 1999-2007 Silverado/Sierra 1500 4WD Classic														
C101KE <sup>1</sup>	2"		•					N8003 <sup>Y</sup>	N8017 <sup>N</sup>	H7003 <sup>Y</sup>	H7017 <sup>N</sup>	BUK12563 <sup>B</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2003-2007 Silverado 1500 AWD														
C101KE <sup>1</sup>	2"		•					N8003 <sup>Y</sup>	N8017 <sup>N</sup>	H7003 <sup>Y</sup>	H7017 <sup>N</sup>	BUK12563 <sup>B</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2002-2007 Yukon/Yukon Denali XL AWD Classic														
C101KE <sup>1</sup>	2"		•					N8003 <sup>Y</sup>	N8017 <sup>N</sup>	H7003 <sup>Y</sup>	H7017 <sup>N</sup>	C12CS <sup>C</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2001-2007 Sierra C3/Denali AWD														
C101KE <sup>1</sup>	2"		•					N8081 <sup>Y</sup>	N8084 <sup>N</sup>	H7081 <sup>Y</sup>	H7084 <sup>N</sup>	BUK12563 <sup>B</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2002-2006 Avalanche 1500/Escalade/EXT/ESV 4WD														
C101KE	2"		•					N8003 <sup>Y</sup>	N8017 <sup>N</sup>	H7003 <sup>Y</sup>	H7017 <sup>N</sup>	C12CS <sup>C</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2000-2006 Tahoe/Suburban/YuKon/Yukon XL 1500 4WD														
C101KE	2"		•					N8003 <sup>Y</sup>	N8017 <sup>N</sup>	H7003 <sup>Y</sup>	H7017 <sup>N</sup>	C12CS <sup>C</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 1988-1998 Sierra 1500 6-Lug 4WD														
C101KE	2"		•					N8081 <sup>Y</sup>	N8072 <sup>N</sup>	H7081 <sup>Y</sup>	H7072 <sup>N</sup>	BUK12563 <sup>B</sup>	N8083 <sup>N</sup>	H7083 <sup>N</sup>
Chevrolet/GMC 1999-2007 Silverado/Sierra 1500 2WD Classic														
C209P	2"			•				-----	N8030 <sup>N</sup>	H7006 <sup>Y</sup>	H7030 <sup>N</sup>	BUK12563 <sup>B</sup>	N8030 <sup>N</sup>	H7030 <sup>N</sup>
Chevrolet/GMC 2011 Silverado/Sierra 2500HD 4WD														
C115KE	2"		•						N8027 <sup>N</sup>		H7027 <sup>N</sup>	BUK2789	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2001-2010 Silverado/Sierra 2500HD 4WD														
C103KE	2"		•					N8019 <sup>N</sup>	N8017 <sup>N</sup>	H7019 <sup>N</sup>	H7017 <sup>N</sup>	BUK12581 <sup>B</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2000-2007 Silverado/Sierra 1500HD 4WD Classic														
C102KE	2"		•					N8019 <sup>N</sup>	N8017 <sup>N</sup>	H7019 <sup>N</sup>	H7017 <sup>N</sup>	BUK12581 <sup>B</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2002-2006 Avalanche 2500 8-Lug 4WD														
C103KE	2"		•					N8019 <sup>N</sup>	N8017 <sup>N</sup>	H7019 <sup>N</sup>	H7017 <sup>N</sup>			
Chevrolet/GMC 2000-2010 Suburban/Yukon XL 2500 8-Lug 4WD														
C103KE	2"		•					N8019 <sup>N</sup>	N8017 <sup>N</sup>	H7019 <sup>N</sup>	H7017 <sup>N</sup>			
Chevrolet/GMC 2003-2009 Hummer H2 8-Lug 4WD														
C103KE	2"		•					N8019 <sup>N</sup>	N8017 <sup>N</sup>	H7019 <sup>N</sup>	H7017 <sup>N</sup>	C12CS <sup>C</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
Chevrolet/GMC 2004-2011 Colorado/Canyon 2WD/4WD														
C104KE	2"		•					-----	-----	-----	-----	BUK12571 <sup>B</sup>	N8084 <sup>N</sup>	H7084 <sup>N</sup>
Chevrolet/GMC 2006-2010 Hummer H3/H3T 4WD														
C104KE	2"		•					N8003 <sup>Y</sup>	N8029 <sup>N</sup>	H7003 <sup>Y</sup>	H7029 <sup>N</sup>			
Dodge 2007-2010 Nitro														
KKN25 <sup>4</sup>	2"			•				-----	N8088 <sup>N</sup>	-----	H7088 <sup>N</sup>			
Dodge 2009-2011 1500 4WD														
D6912ST	1.5-2.5"				•			-----	N8017 <sup>N</sup>	-----	H7017 <sup>N</sup>			
Dodge 2008 1500 4WD														
D6912ST	1-2"					•		-----	N8036 <sup>N</sup>	-----	H7036 <sup>N</sup>			

\*\*The shocks are required in addition to the part number listed when box is checked "Y". If box is checked "N" shocks are not required, but replacements are available. "A" Add-A-Leafs. "B" 1.25" Block & U-bolt kit. "C" 1.25" Coil spring spacers. 1-Shocks Not Intended For Autoride Models. 4-Includes Front and Rear Lift.



# LEVELING KITS & SPORT LIFTS

Part Number	Front Lift Options							Shock Choice				Rear Lift Options		
	Lift	Metal Spacer	Torsion Key	Poly Spacer	New Struts	Coils	Add-A-Leaf*	Front Nitro	Stock Replacement Rear Nitro	Front Hydro	Stock Replacement Rear Hydro	Add-A-Leaf or 1.25" Blocks & 4 U-Bolts or Coil Spacers	Lifted Rear Nitro	Lifted Rear Hydro
<b>Dodge 2003-2010 2500/3500/Mega Cab 4WD</b>														
D20P	2"			•				N8092 <sup>N</sup>	N8017 <sup>N</sup>	H7092 <sup>N</sup>	H7017 <sup>N</sup>	R332 <sup>A</sup>	N8036 <sup>N</sup>	H7036 <sup>N</sup>
<b>Dodge 2002-2005 1500 4WD</b>														
D201KE	2"		•					-----	N8017 <sup>N</sup>	H7010 <sup>Y</sup>	H7017 <sup>N</sup>			
<b>Dodge 1994-2002 2500/3500 4WD</b>														
D20P	2"			•				N8092 <sup>N</sup>	N8017 <sup>N</sup>	H7092 <sup>N</sup>	H7017 <sup>N</sup>	R372 <sup>A</sup>	N8036 <sup>N</sup>	H7036 <sup>N</sup>
<b>Dodge 1994-2001 1500 4WD</b>														
D20	2"					•		N8092 <sup>N</sup>	N8027 <sup>N</sup>	H7092 <sup>N</sup>	H7027 <sup>N</sup>	R222 <sup>A</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
<b>Dodge 1994-2001 1500 4WD</b>														
D20P	2"			•				N8092 <sup>N</sup>	N8027 <sup>N</sup>	H7092 <sup>N</sup>	H7027 <sup>N</sup>	R222 <sup>A</sup>	N8017 <sup>Y</sup>	H7017 <sup>Y</sup>
<b>Ford - 2009-2011 F-150 2WD/4WD</b>														
F920MS	2"	•						-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	BUK3075 <sup>D</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2009-2011 F-150 4WD</b>														
F9125ST	1-2.5"				•			-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	BUK3075 <sup>D</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2009-2011 F-150 2WD</b>														
F9125ST	2-2.5"				•			-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	BUK3075 <sup>D</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2004-2008 F-150 2WD/4WD</b>														
FF25MS	2.5"	•						-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	R3415 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
FF25	2.5"			•				-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	R3415 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2004-2008 F-150 4WD</b>														
F430ST	2-3"				•			-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	R3415 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2004-2008 F-150 2WD</b>														
F432ST	1-3"				•			-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	R3415 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 1997-2003 F-150 4WD Heritage</b>														
F301KE	2"		•					N8054 <sup>Y</sup>	N8059 <sup>N</sup>	H7054 <sup>Y</sup>	H7059 <sup>N</sup>	R2520 <sup>A</sup>	N8061 <sup>Y</sup>	H7061 <sup>Y</sup>
<b>Ford - 1980-1996 F-150 2WD</b>														
182	1.5-2"					•		N8052 <sup>Y</sup>	N8058 <sup>N</sup>	H7052 <sup>Y</sup>	H7058 <sup>N</sup>	R225 <sup>A</sup>	N8058 <sup>Y</sup>	H7058 <sup>Y</sup>
<b>Ford - 1980-1996 F-150 4WD</b>														
182	1.5-2"					•		N8052 <sup>Y</sup>	N8058 <sup>N</sup>	H7052 <sup>Y</sup>	H7058 <sup>N</sup>	R3120 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2008-2011 F-250/F-350 4WD (Diesel)</b>														
F51MS	1"	•						N8091 <sup>Y</sup>	N8060 <sup>N</sup>	H7091 <sup>Y</sup>	H7060 <sup>N</sup>			
F52MS	2-2.5"	•						N8091 <sup>Y</sup>	N8060 <sup>N</sup>	H7091 <sup>Y</sup>	H7060 <sup>N</sup>	R3815 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
F525	2-2.5"					•		N8091 <sup>Y</sup>	N8060 <sup>N</sup>	H7091 <sup>Y</sup>	H7060 <sup>N</sup>	R3815 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
<b>Ford - 2008-2011 F-250/F-350 4WD (Gas)</b>														
F51MS	1"	•						N8091 <sup>Y</sup>	N8060 <sup>N</sup>	H7091 <sup>Y</sup>	H7060 <sup>N</sup>			
F52MS	2-2.5"	•						N8091 <sup>Y</sup>	N8060 <sup>N</sup>	H7091 <sup>Y</sup>	H7060 <sup>N</sup>	R3815 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
F520	2-2.5"					•		N8091 <sup>Y</sup>	N8060 <sup>N</sup>	H7091 <sup>Y</sup>	H7060 <sup>N</sup>	R3815 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>

\*\*The shocks are required in addition to the part number listed when box is checked "Y". If box is checked "N" shocks are not required, but replacements are available. "A" Add-A-Leafs. "D" 3" Block & U-bolt kit replaces stock 1.25" block for a net lift of 1.75".



# LEVELING KITS & SPORT LIFTS

Part Number	Front Lift Options							Shock Choice				Rear Lift Options		
	Lift	Metal Spacer	Torsion Key	Poly Spacer	New Struts	Coils	Add-A-Leaf*	Front Nitro	Stock Replacement Rear Nitro	Front Hydro	Stock Replacement Rear Hydro	Add-A-Leaf or 1.25" Blocks & 4 U-Bolts or Coil Spacers	Lifted Rear Nitro	Lifted Rear Hydro
Ford - 2005-2007 F-250/F-350 (Diesel)														
F51MS	1"	•						N8091	N8060 <sup>N</sup>	H7091	H7060 <sup>N</sup>			
F52MS	2-2.5"	•						N8091	N8060 <sup>N</sup>	H7091	H7060 <sup>N</sup>	R3510 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
F525	2-2.5"					•		N8091	N8060 <sup>N</sup>	H7091	H7060 <sup>N</sup>	R3510 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
Ford - 2005-2007 F-250/F-350 (Gas)														
F51MS	1"	•						N8091	N8060 <sup>N</sup>	H7091	H7060 <sup>N</sup>			
F52MS	2-2.5"	•						N8091	N8060 <sup>N</sup>	H7091	H7060 <sup>N</sup>	R3510 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
F520	2-2.5"					•		N8091	N8060 <sup>N</sup>	H7091	H7060 <sup>N</sup>	R3510 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
Ford - 1997-2000 F-250 Light Duty 7 Lug														
F301KE	2"		•					N8054 <sup>Y</sup>	N8059 <sup>N</sup>	H7054 <sup>Y</sup>	H7059 <sup>N</sup>	R2520 <sup>A</sup>	N8061 <sup>Y</sup>	H7061 <sup>Y</sup>
Ford - 2000-2004 F-250/F-350 4WD														
F9320	2"						•	N8023 <sup>Y</sup>	H7060 <sup>N</sup>	N8023 <sup>Y</sup>	H7060 <sup>N</sup>			
F920 <sup>S</sup>	2"							N8023 <sup>Y</sup>	H7060 <sup>N</sup>	N8023 <sup>Y</sup>	H7060 <sup>N</sup>			
Ford - 1987-1998 F-250/F-350 IFS 4WD (302 & 351)														
F35G	1.5-2"						•	N8023 <sup>Y</sup>	H7058 <sup>N</sup>	N8023 <sup>Y</sup>	H7058 <sup>N</sup>			
Ford - 1987-1998 F-250/F-350 IFS 4WD (460 & Diesel)														
F46D	1.5-2"						•	N8023 <sup>Y</sup>	H7058 <sup>N</sup>	N8023 <sup>Y</sup>	H7058 <sup>N</sup>			
Ford - 1986-1998 F-350														
F35G+F46D <sup>2</sup>	2-2.5"						•	N8023 <sup>Y</sup>	H7060 <sup>N</sup>	N8023 <sup>Y</sup>	H7060 <sup>N</sup>			
Ford - 2003-2008 Expedition 2WD/4WD														
EX20	2"			•				----	----	----	----			
Ford - 1997-2002 Expedition 4WD														
F301KE	2"		•					N8054 <sup>Y</sup>	N8023 <sup>N</sup>	H7054 <sup>Y</sup>	H7023 <sup>N</sup>			
Ford - 1990-1997 Ranger XLT 4WD (6-Cylinder Engine)														
132X	1.5-2"					•		N8052 <sup>Y</sup>	H7041 <sup>N</sup>	N8052 <sup>Y</sup>	H7041 <sup>N</sup>	R3135 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
Ford - 1990-1997 Ranger 4WD (4-Cylinder Engine)														
132	1.5-2"					•		N8052 <sup>Y</sup>	H7041 <sup>N</sup>	N8052 <sup>Y</sup>	H7041 <sup>N</sup>	R3135 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
Ford - 1990-1997 Ranger 2WD (2.3, 2.9 & 3.0 Liter Engine)														
132	1.5-2"					•		N8052 <sup>Y</sup>	H7058 <sup>N</sup>	N8052 <sup>Y</sup>	H7058 <sup>N</sup>	R3135 <sup>A</sup>	N8058 <sup>Y</sup>	H7058 <sup>Y</sup>
Ford - 1990-1997 Ranger 2WD (4.0 Liter Engine)														
132X	1.5-2"					•		N8052 <sup>Y</sup>	H7058 <sup>N</sup>	N8052 <sup>Y</sup>	H7058 <sup>N</sup>	R3135 <sup>A</sup>	N8058 <sup>Y</sup>	H7058 <sup>Y</sup>
Ford - 1987-1989 Ranger STX & SuperCab 4WD														
132X	1.5-2"					•		N8052 <sup>Y</sup>	H7041 <sup>N</sup>	N8052 <sup>Y</sup>	H7041 <sup>N</sup>	R3135 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
Ford - 1983-1989 Ranger 4WD														
132	1.5-2"					•		N8052 <sup>Y</sup>	H7041 <sup>N</sup>	N8052 <sup>Y</sup>	H7041 <sup>N</sup>	R3135 <sup>A</sup>	N8060 <sup>Y</sup>	H7060 <sup>Y</sup>
Ford - 1983-1989 Ranger 2WD														
132	1.5-2"					•		N8052 <sup>Y</sup>	H7058 <sup>N</sup>	N8052 <sup>Y</sup>	H7058 <sup>N</sup>	R3135 <sup>A</sup>	N8058 <sup>Y</sup>	H7058 <sup>Y</sup>
Ford - 1983-1989 Ranger SuperCab 2WD														
132X	1.5-2"					•		N8052 <sup>Y</sup>	H7058 <sup>N</sup>	N8052 <sup>Y</sup>	H7058 <sup>N</sup>	R3135 <sup>A</sup>	N8058 <sup>Y</sup>	H7058 <sup>Y</sup>

\*\*The shocks are required in addition to the part number listed when box is checked "Y". If box is checked "N" shocks are not required, but replacements are available. "A" Add-A-Leafs. "S" New front leaf springs.. 2-Front U-Bolt kit part # UFF is required. 3-Includes Longer sway Bar End Links. 4-Includes Front and Rear Lift.



# LEVELING KITS & SPORT LIFTS

Part Number	Front Lift Options							Shock Choice				Rear Lift Options		
	Lift	Metal Spacer	Torsion Key	Poly Spacer	New Struts	Coils	Add-A-Leaf*	Front Nitro	Stock Replacement Rear Nitro	Front Hydro	Stock Replacement Rear Hydro	Add-A-Leaf or 1.25" Blocks & 4 U-Bolts or Coil Spacers	Lifted Rear Nitro	Lifted Rear Hydro
<b>Honda - 2006-2011 Ridgeline 4WD</b>														
HR20MS <sup>3,4</sup>	2"	•						-----	-----	-----	-----			
<b>Jeep - 2007-2011 JK Wrangler 2WD/4WD</b>														
JKFPS75	3/4"			•				N8035 <sup>N</sup>		H7035 <sup>N</sup>			N8037 <sup>N</sup>	H7037 <sup>N</sup>
JK20 <sup>3,4</sup>	2"			•				N8035 <sup>N</sup>		H7035 <sup>N</sup>		Included	N8037 <sup>N</sup>	H7037 <sup>N</sup>
<b>Jeep - 1997-2006 TJ Wrangler</b>														
SIP275	3/4"			•				N8016 <sup>N</sup>	N8008 <sup>N</sup>	H7016 <sup>N</sup>	H7008 <sup>N</sup>			
TJ20 <sup>4</sup>	2"			•				N8016 <sup>N</sup>		H7016 <sup>N</sup>		Included	N8018 <sup>N</sup>	H7018 <sup>N</sup>
<b>Jeep - 2008-2011 KJ Liberty</b>														
KKN25 <sup>4</sup>	2.5"			•				-----	-----	-----	-----	Included	N8088 <sup>N</sup>	H7088 <sup>N</sup>
<b>Jeep - 2002-2007 KJ Liberty</b>														
KJ25 <sup>4</sup>	2.5"			•				-----		-----		Included	N8088 <sup>N</sup>	H7088 <sup>N</sup>
<b>Jeep - 2011 WK Grand Cherokee</b>														
WK21 <sup>4</sup>	2"			•				-----	-----	-----	-----	Included	N8088 <sup>N</sup>	H7088 <sup>N</sup>
<b>Jeep - 2005-2010 WK Grand Cherokee</b>														
WK20 <sup>4</sup>	2"			•				-----	-----	-----	-----	Included	N8088 <sup>N</sup>	H7088 <sup>N</sup>
<b>Jeep - 1999-2004 WJ Grand Cherokee</b>														
WJ20 <sup>4</sup>	2"			•				N8016 <sup>N</sup>		H7016 <sup>N</sup>		Included	N8044 <sup>N</sup>	H7044 <sup>N</sup>
<b>Jeep - 1993-1998 ZJ Grand Cherokee</b>														
ZJ20 <sup>4</sup>	2"			•				N8016 <sup>N</sup>		H7016 <sup>N</sup>		Included	N8023 <sup>N</sup>	H7023 <sup>N</sup>
<b>Jeep - 1984-2001 XJ Cherokee, MJ Comanche</b>														
XJ20 <sup>4</sup>	2"			•				N8016 <sup>N</sup>		H7016 <sup>N</sup>		Included	N8018 <sup>N</sup>	H7018 <sup>N</sup>
<b>Jeep - 2006-2010 XK Commander</b>														
XK20 <sup>4</sup>	2"			•				-----	-----	-----	-----	Included	N8088 <sup>Y</sup>	H7088 <sup>Y</sup>
<b>Lincoln - 2006-2008 Mark LT 4WD</b>														
F9125ST	2.5"			•				-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>			
<b>Nissan - 2004-2010 Titan 2WD/4WD</b>														
NT42ST	2.25"				•			-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	BUK12562 <sup>B</sup>	N8041 <sup>Y</sup>	H7041 <sup>Y</sup>
NT25	2.5"			•				-----	N8041 <sup>N</sup>		H7041 <sup>N</sup>	BUK12562 <sup>B</sup>	N8041 <sup>Y</sup>	H7041 <sup>Y</sup>
<b>Nissan - 2004-2010 Armada 2WD/4WD</b>														
NT42ST	2.25"				•			-----	N8041 <sup>N</sup>	-----	H7041 <sup>N</sup>	BUK12562 <sup>B</sup>	N8041 <sup>Y</sup>	H7041 <sup>Y</sup>
NT25	2.5"			•				-----	N8041 <sup>N</sup>		H7041 <sup>N</sup>	BUK12562 <sup>B</sup>	N8041 <sup>Y</sup>	H7041 <sup>Y</sup>
<b>Toyota - 2007-2011 FJ Cruiser</b>														
FJ20MS <sup>6</sup>	2"	•						-----					N8089 <sup>Y</sup>	H7089 <sup>Y</sup>
FJ713ST	1-3"				•			-----					N8089 <sup>Y</sup>	H7089 <sup>Y</sup>
<b>Toyota - 2005-2010 Tacoma 2WD 5-Lug/4WD</b>														
TT20MSP <sup>7</sup>	2"	•						-----	N8048 <sup>N</sup>		H7048 <sup>N</sup>	Included	N8045 <sup>Y</sup>	H7045 <sup>Y</sup>
TT20MS	2"	•						-----	N8048 <sup>N</sup>		H7048 <sup>N</sup>	BUK12562 <sup>B</sup>	N8045 <sup>Y</sup>	H7045 <sup>Y</sup>
TC513ST <sup>8</sup>	1-3"				•			-----	N8048 <sup>N</sup>		H7048 <sup>N</sup>	RTC515 <sup>A</sup>	N8045 <sup>Y</sup>	H7045 <sup>Y</sup>

\*\*The shocks are required in addition to the part number listed when box is checked "Y". If box is checked "N" shocks are not required, but replacements are available. "A" Add-A-Leafs. "B" 1.25" Block & U-bolt kit.

4-Includes Front and Rear Lift. 5-Includes Front Struts & 2" Rear poly. 6-Includes 2" front metal spacers & 1.5" rear poly spacers. 7-Includes 1.25" rear block and U-bolts.



# LEVELING KITS & SPORT LIFTS

Part Number	Front Lift Options							Shock Choice				Rear Lift Options		
	Lift	Metal Spacer	Torsion Key	Poly Spacer	New Struts	Coils	Add-A-Leaf*	Front Nitro	Stock Replacement Rear Nitro	Front Hydro	Stock Replacement Rear Hydro	Add-A-Leaf or 1.25" Blocks & 4 U-Bolts or Coil Spacers	Lifted Rear Nitro	Lifted Rear Hydro
<b>Toyota - 1995.5-2004 Tacoma 4WD &amp; Pre Runner 2WD</b>														
TTC20MS	2"	•						-----	N8027 <sup>N</sup>		H7027 <sup>N</sup>	BUK12562 <sup>B</sup>	N8027 <sup>Y</sup>	H7027 <sup>Y</sup>
TTC25	2.5"			•				-----	N8027 <sup>N</sup>		H7027 <sup>N</sup>	BUK12562 <sup>B</sup>	N8027 <sup>Y</sup>	H7027 <sup>Y</sup>
TT413ST	1-3"				•			-----	N8027 <sup>N</sup>		H7027 <sup>N</sup>	RTC20 <sup>A</sup>	N8027 <sup>Y</sup>	H7027 <sup>Y</sup>
<b>Toyota - 2007-2011 Tundra 2WD/4WD</b>														
TU720MS	2"	•						-----	N8062 <sup>N</sup>	-----	H7062 <sup>N</sup>	BUK12562 <sup>B</sup>	N8066 <sup>Y</sup>	H7066 <sup>Y</sup>
TU720MSP <sup>4,7</sup>	2"	•						-----	N8062 <sup>N</sup>	-----	H7062 <sup>N</sup>	Included	N8066 <sup>Y</sup>	H7066 <sup>Y</sup>
TU713ST	1-3"				•			-----	N8062 <sup>N</sup>	-----	H7062 <sup>N</sup>	BUK12562 <sup>B</sup>	N8066 <sup>Y</sup>	H7066 <sup>Y</sup>
<b>Toyota - 2000-2006 Tundra</b>														
TTU20MS	2"	•						-----	N8048 <sup>N</sup>	-----	H7048 <sup>N</sup>	BUK12562 <sup>B</sup>	N8048 <sup>Y</sup>	H7048 <sup>Y</sup>
TTU25	2.5"			•				-----	N8048 <sup>N</sup>	-----	H7048 <sup>N</sup>	BUK12562 <sup>B</sup>	N8048 <sup>Y</sup>	H7048 <sup>Y</sup>
TT413ST	1-3"				•			-----	N8048 <sup>N</sup>	-----	H7048 <sup>N</sup>	RTU20 <sup>A</sup>	N8048 <sup>Y</sup>	H7048 <sup>Y</sup>
<b>Toyota - 1996-2001 4 Runner</b>														
TRU25 <sup>4</sup>	2.5"			•				-----	N8022 <sup>N</sup>	-----	H7022 <sup>N</sup>	Included		

\*\*The shocks are required in addition to the part number listed when box is checked "Y". If box is checked "N" shocks are not required, but replacements are available. "A" Add-A-Leafs. "B" 1.25" Block & U-bolt kit.  
 4-Includes Front and Rear Lift. 7-Includes 1.25" rear block and U-bolts.

## Front Leveling Struts

Year	Make / Model	Height (in.)		Front Strut (single)	Rear Lift	Rear Shocks	
		Front	Rear			Hydro	Nitro
NOTES: Struts Sold Individually. Order (2) for Pair. Shocks Sold Individually. Order (2) for Pair.							
DODGE							
06-11	Dodge Ram 1500 4WD	1.5-2"	----	D6912STS	----	H7017	N8017
FORD							
09-11	F-150 Pickup 4WD	1-2.5"	----	F9125STS	----	H7041	N8041
09-11	F-150 Pickup 2WD	2-2.5"	----	F9125STS	----	H7041	N8041
04-08	F-150 Pickup 4WD	2-3"	----	F423STS	----	H7041	N8041
04-08	F-150 Pickup 2WD	1-3"	----	F223STS	----	H7041	N8041
LINCOLN							
06-08	Mark LT 4WD	2-2.5"	----	F9125STS	----	H7041	N8041
NISSAN							
04-10	Armada 2WD/4WD	2.25"	2"	NT42STS	NA20R	H7012	N8012
NOTES: Not for Armadas equipped with Auto Leveling Rear Suspension.							
04-10	Titan 2WD/4WD	2.25"	2"	NT42STS		H7058	N8058
TOYOTA							
07-11	FJ Cruiser 4WD	1-3"	----	FJ713STS	----	----	----
07-11	Tundra Pickup 4WD	1-3"	----	TU713STS	----	H7062	N8062
07-11	Tundra Pickup 2WD	1-3"	----	TU713STS	----	H7062	N8062
00-06	Tundra Pickup 4WD	1-3"	----	TT413STS	----	----	----
05-10	Tacoma 4WD & Pre-Runner 2WD	1-3"	----	TC513STS	----	H7048	N8048
95.5-04	Tacoma 4WD & Pre-Runner 2WD	1-3"	----	TT413STS	----	H7027	N8027



# HOW TO USE THE CATALOG

1. Lift: Select the amount of lift height desired. The amount listed is the front lift while lifting the rear to be level.

2. Quick way to check pricing on kits or systems. not for ordering purposes.

3. Pallet kit Part # for pricing and ordering. These include all necessary components for a complete lift kit on one pallet.

4. Black Vertical Line: This line separates Quick Kit part numbers from individual part numbers, unless specified in vehicle model description or denoted with "Incl.". All part numbers to the right of the line are listed for ease of reference, and ordered to makeup the Quick Kit part numbers.

5. Essential information that needs to be checked on specific vehicles.

6. Component Box No(s): Items listed in this column are included in the Kit part number you selected. Note that more than one box number may be included in the Kit part number. For a breakdown of individual components included in these Component boxes see Component box breakdown on pages 197-215.

7. Springs: When the part number listed in this column ends with a "S" (1 leaf Spring), quantity of 2 of that part number is included in the Kit. If the part number does not end with "S" then the part number represents 1 "PAIR" of coil springs.

8. Pair Add-A-Leafs: A part number listed in this column is 1 PAIR of add-a-leafs that is included in the Kit part number you selected. If this column has the abbreviation "Incl." Then the add-a-leafs are "Included" inside a Component box.

9. All items to the left of bold black line are included in Quick Kit Reference Pricing. Items to the right of the bold black line are not included in the Quick Kit Reference Pricing unless otherwise noted as INCLUDED.

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
07-11 AVALANCHE 1500 2WD/4WD (Strut Front End)										
07-11 Avalanche 1500 2WD/4WD Kit			Metal Spacers (Front Leveling Kit)							
2"	C720MS			C720MS						
KIT NOTES: Installs above Strut assembly.										
07-11 Avalanche 1500 2WD/4WD Kit			Front Leveling Struts							
1.5-2"	C712ST			C712ST						
07-11 Avalanche 1500 4WD Kit			1/2 ton 6-Lug with Replacement Rear Coils (Non-Autoride)							
3-3.5"	C7361SK		K23	C7361A+C7361ST+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										



# HOW TO USE THE CATALOG

10. Steering Correction: The recommended steering correction part number is listed in this column and ordered separately as needed. If this column has the abbreviation "Incl." or "Included", then the item is "Included" inside a Component box. If there is no listing in this column, then the item is not needed or not available.

11. This section contains brakelines . If this column has a part number shown, Skyjacker® Suspensions recommends longer brakelines . The page number of the brakelines will be listed if there is more than one part number available for this application.

12. This section contains steering stabilizers, OEM Single or Dual. If this column has the abbreviation Incl., than Stabilizers are included inside a component box. If there is no listing in this column, then the item is not needed or not available.

13. The recommended shock application part numbers are listed in this column. Hydraulic shocks always begin with prefix "H70".

14. The recommended shock application part numbers are listed in this column. The Nitrogen gas shocks always begin with prefix "N80".

15. The recommended shock application part numbers are listed in the column. The Monotube shocks always begin with the prefix "M95".

16. This labor guide will serve as a way to give a general idea of labor hours for installation. NOTE: Installation times are approximate & derived from using an ASE certified mechanic.

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
						-----	H7027		-----	N8027		-----	M9527	2
						-----	H7030		-----	N8030		-----	M9530	8



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
07-11 AVALANCHE 1500 2WD/4WD (Strut Front End)										
07-11 Avalanche 1500 2WD/4WD Kit				Metal Spacers (Front Leveling Kit)						
2"	C720MS			C720MS						
KIT NOTES: Installs above Strut assembly.										
07-11 Avalanche 1500 4WD Kit				1/2 ton 6-Lug with Replacement Rear Coils (Non-Autoride)						
3-3.5"	C7361SK		K23	C7361A+C7361ST+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 Avalanche 1500 4WD Kit				1/2 ton 6-Lug with Replacement Rear Coils (Autoride)						
3-3.5"	C7361ARK		K23	C7361A+C7361AR+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 Avalanche 1500 4WD Kit				Front Strut Spacers & Replacement Rear Coils (Non-Autoride)						
6"	C7660SK		K23	C7661A+C7660SP+C7661SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 Avalanche 1500 4WD Kit				1/2 ton 6-Lug with Replacement Rear Coils (Non-Autoride)						
6"	C7661SK		K23	C7661A+C7661ST+C7661SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
02-06 1500 / 2500 Avalanche										
02-06 Avalanche 1500 /2500 (Torsion Bar Front End)				Torsion keys (Front Leveling Kit)						
2"	C101KE			C101KE						
02-06 Avalanche 1500 4WD System				1/2 Ton 6-Lug with Replacement Rear Coils						
3"	C9331K		K16, K23	C9341+C933R						
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K16 Autoride Models Order Part# C93AR. Factory shocks will be retained. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
02-06 Avalanche 1500 4WD System				1/2 Ton 6-Lug with Replacement Rear Coils (Non Autoride)						
6"	C9631K		K27	C9631A+C9631B			1	C50R		
KIT NOTES: K27. Not Designed For Autoride Models										
07-11 CADILLAC ESCALADE, ESCALADE EXT 4WD (Strut Front End)										
07-11 Cadillac Escalade & EXT 4WD System				Metal Spacers (Front Leveling Kit)						
2"	C720MS			C720MS						
KIT NOTES: Installs above Strut assembly.										
07-11 Cadillac Escalade & EXT 4WD System				Rear Coil (Autoride)						
3-3.5"	C7361ARK		K23	C7361A+C7361AR+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
00-06 CADILLAC ESCALADE (Torsion Bar Front End)										
00-06 Escalade (Torsion Bar Front End)				Torsion Keys (Front Leveling Kit)						
2"	C101KE			C101KE						
00-06 CADILLAC ESCALADE, ESCALADE EXT 4WD										
00-06 Cadillac Escalade & EXT 4WD System				1/2 Ton 6-Lug with Replacement Rear Coils						
3"	C933PAK		K17, K23	C933PA+C933PAR						
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K17 Autoride Shock Relocation Brackets Included. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
00-06 Cadillac Escalade ESV 4WD System				1/2 Ton 6-Lug with Replacement Rear Coils						
3"	C934PAK		K17, K23	C933PA+C934PAR						
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K17 Autoride Shock Relocation Brackets Included. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
04-11 COLORADO/CANYON 4WD (Torsion Bar Front End)										
04-11 Colorado / Canyon 4WD				Torsion Keys (Front Leveling Kit)						
2"	C104KE			C104KE						



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		2
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----	H7030		-----	N8030		-----	M9530	8
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		8
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----	H7070		-----	N8070		-----	M9570	8
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----	H7070		-----	N8070		-----	M9570	8
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		2
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7003 H7017		N8003 N8017		M9503 M9517		8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7096 H7036		N8096 N8036		M9596 M9536		10
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		2
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		8
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		2
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>							8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>							8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
						-----			-----			-----		2



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
04-11 COLORADO/CANYON 4WD (Torsion Bar Front End)										
04-11 Colorado/Canyon 4WD Kit				Kit With Rear Add-A-Leafs						
4"	CC409K		K24	CC409					RCC25	
KIT NOTES: K24. Can NOT Re-Use OEM Wheels. REQUIRES 4.75" Back Spacing on Wheels.										
04-11 Colorado/Canyon 4WD System				Kit With Rear Springs						
4"	CC409KS		K24	CC409			2	CCR25S		
KIT NOTES: K24. Can NOT Re-Use OEM Wheels. REQUIRES 4.75" Back Spacing on Wheels.										
04-11 COLORADO/CANYON 2WD (Torsion Bar Front End)										
04-11 Colorado / Canyon 2WD				Torsion Keys (Front Leveling Kit)						
2"	C104KE			C104KE						
04-11 COLORADO/CANYON 2WD (Torsion Bar Front End)										
04-11 Colorado/Canyon 2WD Kit				Kit With Rear Add-A-Leafs						
4"	CC429K		K24, K25	CC429					RCC25	
KIT NOTES: K24. Can NOT Re-Use OEM Wheels. REQUIRES 4.75" Back Spacing on Wheels. K25. Kit designed for 2WD Models.										
04-11 Colorado/Canyon 2WD System				Kit With Rear Springs						
4"	CC429KS		K24, K25	CC429			2	CCR25S		
KIT NOTES: K24. Can NOT Re-Use OEM Wheels. REQUIRES 4.75" Back Spacing on Wheels. K25. Kit designed for 2WD Models.										
07-11 DENALI 2WD/4WD (Strut Front End)										
07-11 Denali 2WD/4WD				Metal Spacers (Front Leveling Kit)						
2"	C720MS			C720MS						
KIT NOTES: Installs above Strut assembly.										
07-11 Denali 4WD				1/2 Ton 6-Lug with Replacement Rear Coils (Autoride)						
3-3.5"	C7361ARK		K23	C7361A+C7361AR+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
00-05 DENALI 4WD										
00-05 Denali (Torsion Bar Front End)				Torsion Keys (Front Leveling Kit)						
2"	C101KE			C101KE						
00-05 Denali 4WD				1/2 Ton 6-Lug with Replacement Rear Coils						
3"	C933PAK		K17, K23	C933PA+C933PAR						
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K17 Autoride Shock Relocation Brackets Included. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
00-05 Denali XL 4WD				1/2 Ton 6-Lug with Replacement Rear Coils						
3"	C934PAK		K17, K23	C933PA+C934PAR						
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K17 Autoride Shock Relocation Brackets Included.K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
06-09 HUMMER H3 4WD (Torsion Bar Front End)										
06-09 Hummer H3 4WD				Torsion Keys (Front Leveling Kit)						
2"	C104KE			C104KE						
02-08 HUMMER H2 4WD										
02-08 Hummer H2 8-Lug (Torsion Bar Front End)				Torsion Keys (Front Leveling Kit)						
2"	C103KE			C103KE						
02-08 Hummer H2 4WD (rear air bag)				Class I						
5.5"	H2681AK-NSP		K12, K20, K29	H2681A-NSP + H2681B + H2681R + H26RA						
KIT NOTES: Designed For Air Bag Rear Suspension Models. K12. CANNOT Re-Use OEM Wheels. REQUIRES 4.5" Back Spacing on Wheels. K20. May Require Part# H2CV1 (C.V. Head for Front Driveshaft assembly) K29. Driveline modifications may be required on some models.										
02-08 Hummer H2 4WD (rear coil)				Class I						
5.5"	H2681CK-NSP		K12, K20, K29	H2681A-NSP + H2681B + H2681R + H26RC						
KIT NOTES: Designed For Coil Spring Rear Suspension Models. K12. CANNOT Re-Use OEM Wheels. REQUIRES 4.5" Back Spacing on Wheels. K20. May Require Part# H2CV1 (C.V. Head for Front Driveshaft assembly) K29. Driveline modifications may be required on some models.										
07-11 K1500 P/U 2WD/4WD (Strut Front End)										
07-11 K1500 P/U 2WD/4WD Kit				Metal Spacers (Front Leveling Kit)						
2"	C720MS			C720MS						
KIT NOTES: Installs above Strut assembly.										



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
		Included				H7040	H7084		N8040	N8084		M9540	M9584	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
		Included				H7040	H7084		N8040	N8084		M9540	M9584	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
		Included				H7040	H7084		N8040	N8084		M9540	M9584	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
		Included				H7040	H7084		N8040	N8084		M9540	M9584	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>							8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>							8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
			7098		7298 <sup>(K)</sup>	H7091	H7036		N8091	N8036		M9591	M9536	12
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
			7098		7298 <sup>(K)</sup>	H7091	H7036		N8091	N8036		M9591	M9536	12
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
07-11 K1500 P/U 4WD Kit				1/2 Ton 6-Lug with Blocks & U-Bolts						
3.5-4"	C7361PK		K23	C7361A+C7361ST+C7361PR						
3.5-4"		C7361PH	K23	Included						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 K1500 P/U 4WD Kit				Front Strut Spacers with Blocks & U-Bolts						
6"	C7660PK		K23	C7661A+C7660SP+C7661PR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 K1500 P/U 4WD Kit				1/2 Ton 6-Lug with Blocks & U-Bolts						
6"	C7661PK		K23	C7661A+C7661ST+C7661PR						
6"		C7661PH	K23	Included						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 K1500 P/U 4WD System				Front Strut Spacers with Replacement Rear Springs						
6"	C7660PKS		K23	C7661A+C7660SP+C7661PRS			2	CR55S		
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 K1500 P/U 4WD System				1/2 Ton 6-Lug with Replacement Rear Springs						
6"	C7661PKS		K23	C7661A+C7661ST+C7661PRS			2	CR55S		
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
99-06 & 2007 CLASSIC K1500 PICKUP 4WD - 1/2 TON 6-LUG (Torsion Bar Front End)										
99-06 K1500 P/U 4WD Kit				1/2 Ton 6-Lug with Blocks & U-Bolts and/or Add-A-Leafs						
3"	C9461K		K19, K23, K27, K30	C9331+BUK2063						
3"		C9461PH	K19, K23, K27, K30	Included						
KIT NOTES: Will also fit 2007 Classic K1500 model. Does NOT Require Removal of the Front Upper Differential Housing Mount. K19. If rear add-a-leafs are preferred for rear lift, Order part# R1115 instead of BUK2063. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing. K27. Not designed for Autoride models. K30. Not designed for 1999 models with "Classic" body style.										
99-06 K1500 Pickup 4WD Kit				1/2 Ton 6-Lug with Blocks & U-Bolts and Add-A-Leafs (Without Skid Plate)						
6"	C9661K-NSP		K27, K30	C9661A-NSP+C9662B					Included	
6"		C9661PN	K27, K30	Included					Included	
KIT NOTES: Will also fit 2007 Classic K1500 model. (NSP- Means NO SKID PLATE.). K27. Not Designed for Autoride Models. K30. Not designed for 1999 models with "Classic" body style.										
99-06 K1500 Pickup 4WD System				1/2 Ton 6-Lug with Replacement Rear Springs (Without Skid Plate)						
6"	C9661KS-NSP		K27, K30	C9661A-NSP+C9662BS			2	CR55S	Included	
KIT NOTES: Will also fit 2007 Classic K1500 model. (NSP- Means NO SKID PLATE.). K27. Not Designed for Autoride Models. K30. Not designed for 1999 models with "Classic" body style.										
01-06 K1500HD 2WD / 4WD										
01-06 K1500HD 2WD / 4WD				Torsion Keys (Front Leveling Kit)						
2"	C102KE			C102KE						
KIT NOTES: C102KE Fits Factory Color Codes: Purple, Blue, Yellow.										
01-06 K1500HD 2WD/ 4WD				Torsion Keys (Front Leveling Kit)						
2"	C103KE			C103KE						
KIT NOTES: C103KE Fits Factory Color Codes: Orange, Green, White, Brown.										
01-06 K1500HD, K2500 PICKUP 4WD - 3/4 ton 8-Lug										
01-06 K1500HD, K2500 4WD Kit				3/4 Ton 8-Lug with Blocks & U-Bolts						
6"	C9651HK		K17, K28	C9651HA+C9682B						
KIT NOTES: K17. CANNOT Re-Use OEM Wheels. REQUIRES 4" Back Spacing on Wheels. K28. Minor modifications required on all Duramax Diesel models.										
01-06 K1500HD, K2500 4WD System				3/4 Ton 8-Lug with Replacement Rear Springs						
6"	C9651HKS		K17, K28	C9651HA+C9682BS			2	CR75S		
KIT NOTES: K17. CANNOT Re-Use OEM Wheels. REQUIRES 4" Back Spacing on Wheels. K28. Minor modifications required on all Duramax Diesel models.										
88-06 K1500 PICKUP 4WD - 1/2 ton 6-Lug										
88-06 K1500 4WD				Torsion Keys (Front Leveling Kit)						
2"	C101KE			C101KE						
88-98 K1500 PICKUP 4WD - 1/2 & 3/4 ton 6-Lug										
97-98 K1500 Pickup 4WD Kit				1/2 & 3/4 Ton 6-Lug with Add-A-Leafs						
2-2.5"	C2567K		K1	C2567					R1120	
KIT NOTES: K1. Includes # FBL97 Front Brake Lines.										



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
						-----	H7017		-----	N8017		-----	M9517	8
							Included							8
						-----	H7036		-----	N8036		-----	M9536	8
						-----	H7036		-----	N8036		-----	M9536	8
							Included							8
						-----	H7036		-----	N8036		-----	M9536	8
						-----	H7036		-----	N8036		-----	M9536	8
						-----	H7036		-----	N8036		-----	M9536	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7003	H7017		N8003	N8017		M9503	M9517	8
							Included	Included						8
				7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7096	H7036		N8096	N8036		M9596	M9536	9
									Included	Included		Included	Included	9
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
				7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7096	H7036		N8096	N8036		M9596	M9536	9
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
NOTE: Includes Front Shock Extension Brackets.														
						-----	-----		-----	-----		-----	-----	2
NOTE: Includes Front Shock Extension Brackets														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7098	7298 <sup>(K)</sup>	H7074	H7036		N8074	N8036		M9574	M9536	10
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
				7098	7298 <sup>(K)</sup>	H7074	H7036		N8074	N8036		M9574	M9536	10
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
		Included		7122		H7081	H7083		N8081	N8083		M9581	M9583	8



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
93-98 K1500 Pickup 4WD Kit				1/2 & 3/4 Ton 6-Lug with Blocks & U-Bolts						
4.5-6"	C4636K		K3, K26	C46+C466+C4636						
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
93-98 K1500 Pickup 4WD System				1/2 & 3/4 Ton 6-Lug with Replacement Rear Springs						
4.5-6"	C4636KS		K3, K26	C46+C466+C4636S			2	CR35S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
88-96 K1500 Pickup 4WD Kit				1/2 & 3/4 Ton 6-Lug with Rear Add-A-Leafs						
2-2.5"	C256K			C256					R1120	
88-92 K1500 Pickup 4WD Kit				1/2 & 3/4 Ton 6-Lug with Blocks & U-Bolts						
4.5-6"	C4626K		K3, K26	C46+C466+C4626						
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
88-92 K1500 Pickup 4WD System				1/2 & 3/4 Ton 6-Lug with Replacement Rear Springs						
4.5-6"	C4626KS		K3, K26	C46+C466+C4626S			2	CR35S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
2011 K2500HD 4WD - 3/4 TON 8-LUG (Torsion Bar Front End)										
2011 K2500HD 4WD				Torsion Keys (Front Leveling Kit)						
2"	C115KE			C115KE						
2011 K2500HD Pickup 4WD Kit				K2500HD 8-Lug with Blocks & U-Bolts						
7"	C11781K			C1178A+C178B+ C1178N+C1178TR						
KIT NOTES: OEM 17"-18" Wheels can be used. DEF/Urea Tank skid plate available. Part# DEFG114SP										
01-10 K2500HD / 3500 2WD / 4WD - 3/4 TON 8-LUG (Torsion Bar Front End)										
01-10 K2500HD, 3500 2WD / 4WD				Torsion Keys (Front Leveling Kit)						
2"	C102KE			C102KE						
KIT NOTES: C102KE Fits Factory Color Codes: Purple, Blue, Yellow.										
01-10 K2500HD, 3500 2WD / 4WD				Torsion Keys (Front Leveling Kit)						
2"	C103KE			C103KE						
KIT NOTES: C103KE Fits Factory Color Codes: Orange, Green, White, Brown.										
01-10 K2500HD PICKUP 4WD - 3/4 TON 8-LUG (Torsion Bar Front End)										
01-10 K2500HD Pickup 4WD Kit				3/4 & 1 Ton 8-Lug with Blocks & U-Bolts						
3"	C9381K		K21, K28	C9381+BUK2082F						
3"		C9381PH	K21, K28	Included						
KIT NOTES: Can Re-Use OEM Wheels by Re-Routing Brake and ABS Line. (3" lift only) K21. 1 Ton Models will Require Custom Rear U-Bolts and modification to knuckles. K28. Minor modifications required on all Duramax Diesel models.										
01-10 K2500/3500 Pickup 4WD Kit				3/4 & 1 Ton 8-Lug with Blocks & U-Bolts (Without Skid Plate)						
6"	C9681K-NSP		K17, K21, K28	C9681A-NSP+C9682B						
6"		C9681PN	K17, K21, K28	Included						
KIT NOTES: (NSP- Means NO SKID PLATE.). K17. CANNOT Re-Use OEM Wheels. REQUIRES 4" Back Spacing on Wheels. K21. 1 Ton Models will Require Custom Rear U-Bolts and modification to knuckles. K28. Minor modifications required on all Duramax Diesel models.										
01-10 K2500HD Pickup 4WD System				3/4 & 1 Ton 8-Lug with Replacement Rear Springs (Without Skid Plate)						
6"	C9681KS-NSP		K15, K17, K28	C9681A-NSP+C9682BS			2	CR75S		
KIT NOTES: (NSP- Means NO SKID PLATE.). K15. Minor Modifications May Be Required on Duramax Models. K17. CANNOT Re-Use OEM Wheels. REQUIRES 4" Back Spacing on Wheels. K21. 1 Ton Models will Require Custom Rear U-Bolts and modification to knuckles. K28. Minor modifications required on all Duramax Diesel models.										
73-87 CHEVY / GMC PICKUP 4WD - 1/2, 3/4 & 1 TON										
73-87 Chevy / GMC Pickup 4WD Kit				1/2 Ton with Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	C125AK			C125A	2	C125S				
4"	C140AK		K6, K22	C140A	2	C140S				
6"	C160AK		K3, K4, K6, K22	C168A	2	C160S				
8"	C180AK		K3, K4, K6, K22	C168A	2	C180S			R1120	
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
		Included				H7085	H7086		N8085	N8086		M9585	M9586	12
		Included				H7085	H7086		N8085	N8086		M9585	M9586	12
				7122		H7081	H7083		N8081	N8083		M9581	M9583	8
		Included				H7085	H7086		N8085	N8086		M9585	M9586	12
		Included				H7085	H7086		N8085	N8086		M9585	M9586	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
									Included	Included				9
NOTE: Includes Front Shock Extension Brackets.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
NOTE: Includes Front Shock Extension Brackets.														
						-----			-----			-----		2
NOTE: Includes Front Shock Extension Brackets.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7098		7298 <sup>(K)</sup>	H7074	H7017		N8074	N8017		M9574	M9517	8
			7098		7298 <sup>(K)</sup>	Included	Included							8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
			7098		7298 <sup>(K)</sup>	H7074	H7036		N8074	N8036		M9574	M9536	9
			7098		7298 <sup>(K)</sup>				Included	Included				10
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
			7098		7298 <sup>(K)</sup>	H7074	H7036		N8074	N8036		M9574	M9536	9
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
73-87 Chevy / GMC Pickup 4WD System				1/2 Ton with Replacement Rear Springs						
2.5"	C125AKS			C124AS	2	C125S	2	CR12S		
4"	C140AKS		K6, K22	C124AS	2	C140S	2	CR14S		
6"	C160AKS		K3, K4, K6, K22	C168AS	2	C160S	2	CR16S		
8"	C180AKS		K3, K4, K6, K22	C168AS	2	C180S	2	CR18S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>73-87 Chevy / GMC Pickup 4WD Kit</b>				<b>3/4 Ton with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	C125BK		K10	C125B	2	C125S				
4"	C140BK		K6, K10, K22	C140B	2	C140S				
6"	C160BK		K3, K4, K6, K10, K22	C168B	2	C160S				
8"	C180BK		K3, K4, K6, K10, K22	C168B	2	C180S			R1120	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K10. Fitted Leafs are Available for Additional Weight Capacity (Heavy Winch Bumper, Big Block or Diesel Engine, Etc.). See Page 213. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

## 73-87 CHEVY / GMC PICKUP 4WD - 1/2, 3/4 & 1 TON

<b>73-87 Chevy / GMC Pickup 4WD System</b>				<b>3/4 Ton with 52-Inch Replacement Rear Springs</b>						
2.5"	C125BKS		K5, K10	C124BS	2	C125S	2	CR12S		
4"	C140BKS		K5, K6, K10, K22	C124BS	2	C140S	2	CR14S		
6"	C160BKS		K5, K3, K4, K6, K10, K22	C168BS	2	C160S	2	CR16S		
8"	C180BKS		K5, K3, K4, K6, K10, K22	C168BS	2	C180S	2	CR18S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle use GMDL4 not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K10. Fitted Leafs are Available for Additional Weight Capacity (Heavy Winch Bumper, Big Block or Diesel Engine, Etc.). See Page 213. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>73-87 Chevy / GMC Pickup 4WD System</b>				<b>3/4 Ton with 56-Inch Replacement Rear Springs</b>						
4"	C140BKSD		K5, K6, K10, K22	C124BS	2	C140S	2	CR24S		
6"	C160BKSD		K5, K3, K4, K6, K10, K22	C168BS	2	C160S	2	CR26S		
8"	C180BKSD		K5, K9	C180BSD	2	C180S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle use GMDL4 not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K10. Fitted Leafs are Available for Additional Weight Capacity (Heavy Winch Bumper, Big Block or Diesel Engine, Etc.). See Page 213. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>77-91 Chevy / GMC Pickup 4WD Kit</b>				<b>1 Ton with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	C125CK		K10	C125C	2	C125S				
4"	C140CK		K6, K10, K22	C140C	2	C140S				
6"	C160CK		K3, K4, K6, K10, K22	C168C	2	C160S				
8"	C180CK		K3, K4, K6, K10, K22	C168C	2	C180S			R1120	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle use GMDL4 not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K10. Fitted Leafs are Available for Additional Weight Capacity (Heavy Winch Bumper, Big Block or Diesel Engine, Etc.). See Page 213. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>77-91 Chevy / GMC Pickup 4WD System</b>				<b>1 Ton with Replacement Rear Springs</b>						
6"	C160CKS		K3, K4, K6, K10, K22	C160CS	2	C160S	2	CR26S		
8"	C180CKS		K9	C180CS	2	C180S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K10. Fitted Leafs are Available for Additional Weight Capacity (Heavy Winch Bumper, Big Block or Diesel Engine, Etc.). See Page 213. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

## 67-72 CHEVY / GMC PICKUP 4WD - 1/2 & 3/4 TON

<b>67-72 Chevy / GMC Pickup 4WD Kit</b>				<b>1/2 &amp; 3/4 Ton with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	C225AK			C225A	2	C225S				
4"	C240AK		K5, K6, K22	C240A	2	C240S				
6"	C260AK		K5, K6, K22	C268A	2	C260S				
8"	C280AK		K3, K5, K6, K22	C268A	2	C280S			R1120	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle use GMDL4 not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA50		7055		7255	H7051	H7073		N8051	N8073		M9551	M9573	4
	CA50		7055		7255	H7051	H7073		N8051	N8073		M9551	M9573	4
	CA50+SB60	See Page 210	7055		7255	H7071	H7078		N8071	N8078		M9571	M9578	6
	CA50+SB60	See Page 210	7055		7255	H7071	H7078		N8071	N8078		M9571	M9578	7

	CA50+SB60	See Page 210	7055		7255	H7071	H7078		N8071	N8078		M9571	M9578	7
	CA50+SB60	See Page 210	7055		7255	H7071	H7078		N8071	N8078		M9571	M9578	7

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	4
	CA100		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	4
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
69-72 Chevy / GMC Pickup 4WD System				1/2 & 3/4 Ton with 52-Inch Replacement Rear Springs						
2.5"	C225AKS			C224AS	2	C225S	2	CR12S		
4"	C240AKS		K5, K6, K22	C224AS	2	C240S	2	CR14S		
6"	C260AKS		K5, K6, K22	C268AS	2	C260S	2	CR16S		
8"	C280AKS		K3, K5, K6, K22	C268AS	2	C280S	2	CR18S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

## 69-72 CHEVY / GMC PICKUP 4WD - 1/2 & 3/4 TON

<b>69-72 Chevy / GMC Pickup 4WD System</b>				<b>3/4 Ton with 56-Inch Replacement Rear Springs</b>						
4"	C240AKSD		K5, K6, K22	C224AS	2	C240S	2	CR24S		
6"	C260AKSD		K5, K6, K22	C268AS	2	C260S	2	CR26S		
8"	C280AKSD		K3, K5, K6, K9, K22	C280ASD	2	C280S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Accessories Section of catalog.

## 07-11 Tahoe / Yukon 4WD (Strut Front End)

<b>07-11 Tahoe / Yukon 1500 4WD KIT</b>				<b>Metal Spacers (Front Leveling Kit)</b>						
2"	C720MS			C720MS						

KIT NOTES: Installs above Strut assembly.

## 07-11 Tahoe / Yukon 1500 4WD KIT 1/2 ton 6-Lug with Replacement Rear Coils

3-3.5"	C7361SK		K23	C7361A+C7361ST+C7361SR						
--------	---------	--	-----	------------------------	--	--	--	--	--	--

K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.

## 07-11 Tahoe / Yukon 1500 4WD KIT 1/2 ton 6-Lug with Replacement Rear Coils (Autoride)

3-3.5"	C7361ARK		K23	C7361A+C7361AR+C7361SR						
--------	----------	--	-----	------------------------	--	--	--	--	--	--

K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.

## 07-11 Tahoe / Yukon 1500 4WD KIT 1/2 ton 6-Lug with Replacement Rear Coils

6"	C7661SK		K23	C7661A+C7661ST+C7661SR						
----	---------	--	-----	------------------------	--	--	--	--	--	--

K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.

## 02-05 TAHOE / YUKON 4WD

<b>02-05 Tahoe / Yukon 4WD (Torsion Bar Front End)</b>				<b>Torsion Keys (Front Leveling Kit)</b>						
2"	C101KE			C101KE						

## 02-05 Tahoe / Yukon 1500 4WD SYSTEM 1/2 Ton 6-Lug with Replacement Rear Coils

3"	C9331K		K16, K23	C9341+C933R						
----	--------	--	----------	-------------	--	--	--	--	--	--

KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K16 Autoride Models Order Part# C93AR. Factory shocks will be retained. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.

## 02-05 Tahoe / Yukon 1500 4WD SYSTEM Not Designed for Autoride Models

6"	C9631K		K27	C9631A+C9631B			1	C50R		
----	--------	--	-----	---------------	--	--	---	------	--	--

KIT NOTES: K27. Not Designed for Autoride Models.

## 02-05 Tahoe / Yukon 2500 4WD KIT Not Designed for Autoride Models

6"	C9671K		K12	C9671A+C9671B						
----	--------	--	-----	---------------	--	--	--	--	--	--

KIT NOTES: K12. CANNOT Re-Use OEM Wheels. REQUIRES 4.5" Back Spacing on Wheels.

## 92-98 TAHOE / YUKON FULL-SIZE 4WD

<b>97-98 Tahoe / Yukon Full-Size 4WD Kit</b>				<b>with Rear Add-A-Leafs</b>						
2-2.5"	C2567K		K1	C2567					R1120	

KIT NOTES: K1. Includes # FBL97 Front Brake Lines.

## 92-96 Tahoe / Yukon Full-Size 4WD Kit with Rear Add-A-Leafs

2-2.5"	C256K			C256					R1120	
--------	-------	--	--	------	--	--	--	--	-------	--

## 93-98 Tahoe / Yukon Full-Size 4WD Kit (2 Door Only) with Blocks & U-Bolts

4.5-6"	C4636K		K3, K11, K26	C46+C466+C4636						
--------	--------	--	--------------	----------------	--	--	--	--	--	--

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K11. 1998-99 4-Door Yukon & Tahoe Extends Strut Arms 2" (4.5-6" Kit - The Strut Arms MUST Be Lengthened 2 Inches). K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.

## 92-98 Blazer (Torsion Bar Front End) Torsion Keys (Front Leveling Kit)

2"	C101KE			C101KE						
----	--------	--	--	--------	--	--	--	--	--	--

## 93-98 Blazer / Yukon Full-Size 4WD System (2 Door Only) with Replacement Rear Springs

4.5-6"	C4636KST		K3, K11, K26	C46+C466+C4636S			2	CR16S		
--------	----------	--	--------------	-----------------	--	--	---	-------	--	--

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K11. 1998-99 4-Door Yukon & Tahoe Extends Strut Arms 2" (4.5-6" Kit - The Strut Arms MUST Be Lengthened 2 Inches). K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	CA100		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

						-----			-----			-----		2
--	--	--	--	--	--	-------	--	--	-------	--	--	-------	--	---

						-----	H7030			N8030			M9530	8
--	--	--	--	--	--	-------	-------	--	--	-------	--	--	-------	---

						-----			-----			-----		8
--	--	--	--	--	--	-------	--	--	-------	--	--	-------	--	---

						-----	H7070		-----	N8070		-----	M9570	8
--	--	--	--	--	--	-------	-------	--	-------	-------	--	-------	-------	---

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

						-----			-----			-----		2
--	--	--	--	--	--	-------	--	--	-------	--	--	-------	--	---

						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7003	H7017		N8003	N8017		M9503	M9517	8
--	--	--	--	--	--	---------------------	---------------------	-------	-------	--	-------	-------	--	-------	-------	---

(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.

						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7096	H7036		N8096	N8036		M9596	M9536	10
--	--	--	--	--	--	---------------------	---------------------	-------	-------	--	-------	-------	--	-------	-------	----

(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.

						7098		7298 <sup>(K)</sup>	H7074	H7036		N8074	N8036		M9574	M9536	8
--	--	--	--	--	--	------	--	---------------------	-------	-------	--	-------	-------	--	-------	-------	---

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

		Included				7122		H7081	H7083		N8081	N8083		M9581	M9583	8
--	--	----------	--	--	--	------	--	-------	-------	--	-------	-------	--	-------	-------	---

						7122		H7081	H7083		N8081	N8083		M9581	M9583	8
--	--	--	--	--	--	------	--	-------	-------	--	-------	-------	--	-------	-------	---

		Included						H7085	H7086		N8085	N8086		M9585	M9586	12
--	--	----------	--	--	--	--	--	-------	-------	--	-------	-------	--	-------	-------	----

						-----			-----			-----		2
--	--	--	--	--	--	-------	--	--	-------	--	--	-------	--	---

		Included						H7085	H7086		N8085	N8086		M9585	M9586	12
--	--	----------	--	--	--	--	--	-------	-------	--	-------	-------	--	-------	-------	----



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
92 Blazer / Yukon Full-Size 4WD Kit				with Blocks & U-Bolts						
4.5-6"	C4626K		K3, K26	C46+C466+C4626						
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
92 Blazer / Yukon Full-Size 4WD System				with Replacement Rear Springs						
4.5-6"	C4626KST		K3, K26	C46+C466+C4626S			2	CR16S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
67-91 BLAZER / JIMMY FULL-SIZE 4WD										
88-91 Blazer / Jimmy Full-Size 4WD Kit				with Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	C125AK8			C125A8	2	C125S				
4"	C140AK8		K4, K6, K22	C140A8	2	C140S				
6"	C160AK8		K3, K4, K6, K22	C168A8	2	C160S				
8"	C180AK8		K3, K4, K6, K22	C168A8	2	C180S			R1120	
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										
88-91 Blazer / Jimmy Full-Size 4WD System				with Replacement Rear Springs						
2.5"	C125AKS8			C124AS8	2	C125S	2	CR12S		
4"	C140AKS8		K4, K6, K22	C124AS8	2	C140S	2	CR14S		
6"	C160AKS8		K3, K4, K6, K22	C168AS8	2	C160S	2	CR16S		
8"	C180AKS8		K3, K4, K6, K22	C168AS8	2	C180S	2	CR18S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										
73-87 Blazer / Jimmy Full-Size 4WD Kit				with Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	C125AK			C125A	2	C125S				
4"	C140AK		K4, K6, K22	C140A	2	C140S				
6"	C160AK		K3, K4, K6, K22	C168A	2	C160S				
8"	C180AK		K3, K4, K6, K22	C168A	2	C180S			R1120	
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										
73-87 Blazer / Jimmy Full-Size 4WD System				with Replacement Rear Springs						
2.5"	C125AKS			C124AS	2	C125S	2	CR12S		
4"	C140AKS		K4, K6, K22	C124AS	2	C140S	2	CR14S		
6"	C160AKS		K3, K4, K6, K22	C168AS	2	C160S	2	CR16S		
8"	C180AKS		K3, K4, K6, K22	C168AS	2	C180S	2	CR18S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										
67-72 Blazer / Jimmy Full-Size 4WD Kit				with Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	C225AK			C225A	2	C225S				
4"	C240AK		K3, K5, K6, K22	C240A	2	C240S				
6"	C260AK		K3, K5, K6, K22	C268A	2	C260S				
8"	C280AK		K3, K5, K6, K22	C268A	2	C280S			R1120	
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										
69-72 Blazer / Jimmy Full-Size 4WD System				with Replacement Rear Springs						
2.5"	C225AJKS			C224AS	2	C225S	2	CR14S		
4"	C240AJKS		K3, K5, K6, K22	C224AS	2	C240S	2	CR16S		
6"	C260AJKS		K3, K5, K6, K22	C268AS	2	C260S	2	CR18S		
8"	C280AJKS		K3, K5, K6, K9, K22	C280ASD	2	C280S	2	CR18S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100). K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..										
07-11 SUBURBAN / YUKON XL 4WD (Strut Front End)										
07-11 Suburban Yukon XL 1500 4WD KIT				Metal Spacers (Front Leveling Kit)						
2"	C720MS			C720MS						
KIT NOTES: Installs above Strut assembly.										
07-11 Suburban Yukon XL 1500 4WD KIT				1/2 ton 6-Lug with Replacement Rear Coils						
3-3.5"	C7361SK		K23	C7361A+C7361ST+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
		Included				H7085	H7086		N8085	N8086		M9585	M9586	12
		Included				H7085	H7086		N8085	N8086		M9585	M9586	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	FBL19/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	FBL19/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	FBL19/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	FBL19/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	FBL18/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	FBL18/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	FBL18/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	FBL18/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	4
	CA100		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	4
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
						-----	H7030		-----	N8030		-----	M9530	8



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
07-11 Suburban Yukon XL 1500 4WD KIT				1/2 ton 6-Lug with Replacement Rear Coils (Autoride)						
3-3.5"	C7361ARK		K23	C7361A+C7361AR+C7361SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
07-11 Suburban Yukon XL 1500 4WD KIT				1/2 ton 6-Lug w/ replacement rear coils (not designed for Autoride models)						
6"	C7661SK		K23	C7661A+C7661ST+C7661SR						
K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
02-05 SUBURBAN / YUKON XL 4WD										
02-05 Suburban / Yukon (Torsion Bar Front End)				Torsion Keys (Front Leveling Kit)						
2"	C101KE			C101KE						
02-05 Suburban Yukon XL 1500 4WD System				1/2 Ton 6-Lug with Replacement Rear Coils						
3"	C9341K		K16, K23	C9341+C934R						
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K16 Autoride Models Order Part# C93AR. Factory shocks will be retained. K23. OEM Tires and Wheels can be used with no more than a 5" backspacing.										
02-05 Suburban Yukon XL 1500 4WD System				Not Designed for Autoride Models						
6"	C9631K		K27	C9631A+C9631B			1	C50R		
KIT NOTES: Does NOT Require Removal of the Front Upper Differential Housing Mount. K27. Not Designed for Autoride Models.										
02-05 Suburban Yukon XL 2500 4WD KIT				Not Designed for Autoride Models						
6"	C9671K		K12	C9671A+C9671B						
KIT NOTES: K12. CANNOT Re-Use OEM Wheels. REQUIRES 4.5" Back Spacing on Wheels.										
92-98 SUBURBAN 4WD - 1/2 & 3/4 TON										
92-98 Suburban (Torsion Bar Front End)				Torsion Keys (Front Leveling Kit)						
2"	C101KE			C101KE						
97-98 Suburban 4WD Kit				1/2 Ton 6-Lug with Rear Add-A-Leafs						
2-2.5"	C2567K		K1	C2567					R1120	
KIT NOTES: K1. Includes # FBL97 Front Brake Lines.										
92-96 Suburban 4WD Kit				1/2 Ton 6-Lug with Rear Add-A-Leafs						
2-2.5"	C256K			C256					R1120	
93-98 Suburban 4WD Kit				1/2 Ton 6-Lug with Blocks & U-Bolts						
4.5-6"	C4636K		K3, K26	C46+C466+C4636						
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K26. On Canadian made vehicle and 98-99 models steering modification will be necessary.										
88-91 SUBURBAN 4WD - 1/2 & 3/4 TON 6-Lug										
88-91 Suburban 4WD Kit				1/2 Ton 6-Lug with Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	C125AK8			C125A8	2	C125S				
4"	C140AK8		K22	C140A8	2	C140S				
6"	C160AK8		K3, K6, K22	C168A8	2	C160S				
8"	C180AK8		K3, K4, K6, K22	C168A8	2	C180S			R225	
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered.See Chevrolet / GM Accessories..										
88-91 Suburban 4WD System				1/2 Ton 6-Lug with 52-Inch Replacement Rear Springs						
2.5"	C125AKSS8			C124AS8	2	C125S	2	CR14S		
4"	C140AKSS8		K22	C124AS8	2	C140S	2	CR16S		
6"	C160AKSS8		K3, K6, K22	C168AS8	2	C160S	2	CR18S		
8"	C180AKSS8		K3, K4, K6, K9, K22	C180ASD8	2	C180S	2	CR18S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered.See Chevrolet / GM Accessories..										
88-91 SUBURBAN 4WD - 1/2 & 3/4 TON										
88-91 Suburban 4WD System				1/2 Ton 6-Lug with 56-Inch Replacement Rear Springs						
4"	C140AKSD8		K22	C124AS8	2	C140S	2	CR24S		
6"	C160AKSD8		K3, K6, K22	C168AS8	2	C160S	2	CR26S		
8"	C180AKSD8		K3, K4, K6, K9, K22	C180ASD8	2	C180S	2	CR26S		
KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered.See Chevrolet / GM Accessories..										



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor		
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours		
						-----			-----			-----		8		
						-----	H7070		-----	N8070		-----	M9570	8		
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																
						-----			-----			-----		2		
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7003	H7017		N8003	N8017	M9503	M9517	8	
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.																
						7196 <sup>(K)</sup>	7296 <sup>(K)</sup>	H7096	H7036		N8096	N8036	M9596	M9536	10	
						7098		7298 <sup>(K)</sup>	H7074	H7036		N8074	N8036	M9574	M9536	8
(K) 'Single' or 'Dual' Steering Stabilizers Can ONLY Be Used with Skyjacker Suspension Lift.																
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																
						-----			-----			-----		2		
		Included				7122		H7081	H7084		N8081	N8084	M9581	M9584	8	
						7122		H7081	H7084		N8081	N8084	M9581	M9584	8	
		Included						H7085	H7086		N8085	N8086	M9585	M9586	12	
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4		
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4		
	CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6		
	CA50+CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7		
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6		
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6		
	CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7		
	CA50+CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7		
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6		
	CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7		
	CA50+CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7		



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
88-91 Suburban 4WD Kit				3/4 Ton 8-Lug with Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	C125BK8		K5	C125B8	2	C125S				
4"	C140BK8		K5, K22	C140B8	2	C140S				
6"	C160BK8		K5, K3, K6, K22	C168B8	2	C160S				
8"	C180BK8		K5, K3, K4, K6, K22	C168B8	2	C180S			R225	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>88-91 Suburban 4WD System</b>				<b>3/4 Ton 8-Lug with 56-Inch Replacement Rear Springs</b>						
8"	C180BKSD8		K5, K3, K4, K6, K9, K22	C180BSD8	2	C180S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

## 73-87 SUBURBAN 4WD - 1/2 & 3/4 TON 6-Lug

<b>73-87 Suburban 4WD Kit</b>				<b>1/2 Ton 6-Lug with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	C125AK			C125A	2	C125S				
4"	C140AK		K22	C140A	2	C140S				
6"	C160AK		K3, K6, K22	C168A	2	C160S				
8"	C180AK		K3, K4, K6, K22	C168A	2	C180S			R225	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>73-87 Suburban 4WD System</b>				<b>1/2 Ton 6-Lug with 52-Inch Replacement Rear Springs</b>						
2.5"	C125AKSS			C124AS	2	C125S	2	CR14S		
4"	C140AKSS		K22	C124AS	2	C140S	2	CR16S		
6"	C160AKSS		K3, K6, K22	C168AS	2	C160S	2	CR18S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>73-87 Suburban 4WD System</b>				<b>1/2 Ton 6-Lug with 56-Inch Replacement Rear Springs</b>						
4"	C140AKSD		K22	C124AS	2	C140S	2	CR24S		
6"	C160AKSD		K3, K6, K22	C168AS	2	C160S	2	CR26S		
8"	C180AKSD		K3, K4, K6, K9, K22	C180ASD	2	C180S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

## 73-87 SUBURBAN 4WD - 1/2 & 3/4 TON

<b>73-87 Suburban 4WD Kit</b>				<b>3/4 Ton 8-Lug with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	C125BK		K5	C125B	2	C125S				
4"	C140BK		K5, K22	C140B	2	C140S				
6"	C160BK		K5, K3, K6, K22	C168B	2	C160S				
8"	C180BK		K5, K3, K4, K6, K22	C168B	2	C180S			R225	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

<b>73-87 Suburban 4WD System</b>				<b>3/4 Ton 8-Lug with 56-Inch Replacement Rear Springs</b>						
4"	C140BKSD		K5, K22	C124BS	2	C140S	2	CR24S		
6"	C160BKSD		K5, K3, K6, K22	C168BS	2	C160S	2	CR26S		
8"	C180BKSD		K5, K3, K4, K6, K9, K22	C180BSD	2	C180S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K4. Transfer Case Lowering Kit # TCL15 May Be Needed. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100) K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..

## 67-72 SUBURBAN 4WD - 1/2 & 3/4 TON

<b>67-72 Suburban 4WD Kit</b>				<b>1/2 &amp; 3/4 Ton with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	C225AK			C225A	2	C225S				
4"	C240AK		K22	C240A	2	C240S				
6"	C260AK		K5, K6, K22	C268A	2	C260S				
8"	C280AK		K3, K5, K6, K22	C268A	2	C280S			R225	

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. (If your vehicle has a 4 bolt closed knuckle, use GMDL4, not CA100). K6. Optional 4" Offset Drag Link Available - # GMDL4. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories..



	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA50+CA100	FBL29/RBL20	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
--	------------	-------------	------	--	------	-------	-------	-------	-------	-------	-------	-------	-------	---

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	4
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

	CA50		7055		7220	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553	6
	CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573	7

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	4
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	4
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	6
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7



# CHEVROLET / GMC

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
67-72 Suburban 4WD System				1/2 & 3/4 Ton with 52-Inch Replacement Rear Springs						
2.5"	C225AKSS			C224AS	2	C225S	2	CR14S		
4"	C240AKSS		K22	C224AS	2	C240S	2	CR16S		
6"	C260AKSS		K5, K6, K22	C268AS	2	C260S	2	CR18S		
8"	C280AKSS		K3, K5, K6, K9, K22	C280ASD	2	C280S	2	CR18S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories.

<b>67-72 Suburban 4WD System</b>				<b>1/2 &amp; 3/4 Ton with 56-Inch Replacement Rear Springs</b>						
4"	C240AKSD		K22	C224AS	2	C240S	2	CR24S		
6"	C260AKSD		K5, K6, K22	C268AS	2	C260S	2	CR26S		
8"	C280AKSD		K3, K5, K6, K9, K22	C280ASD	2	C280S	2	CR26S		

KIT NOTES: K3. Driveline / Exhaust Modifications May Be Necessary. K5. Must Have 3-Bolt Steering Knuckle. K6. Optional 4" Offset Drag Link Available - # GMDL4. K9. This Lift Also Includes 2" Blocks. K22. If Vehicle is equipped with a front Sway Bar, Lowering Brackets must be ordered. See Chevrolet / GM Accessories.

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
	CA50		7055		7220	H7051	H7041		N8051	N8041		M9551	M9541	6
	CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7
	CA50+CA100	See Page 210	7055		7220	H7071	H7060		N8071	N8060		M9571	M9560	7



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs	
<b>07-09 Dodge Nitro</b>								
<b>07-09 Dodge Nitro</b>				<b>Poly Spacers</b>				
2"	KKN25			KKN25				
<b>06-11 Dodge 1500 4X4</b>								
<b>06-11 Dodge 1500 4x4</b>				<b>Front Leveling Struts</b>				
1.5-2"	D6912ST			D6912ST				
<b>09-10 Dodge 1500 4x4</b>				<b>Strut Spacer Kit</b>				
4"	D940SSK			D946A + D946B + D940C				
4"		D940SSPH						
<b>09-10 Dodge 1500 4x4</b>				<b>Strut Spacer Kit</b>				
6"	D960SSK			D946A + D946B + D960C				
6"		D960SSPH						
KIT NOTES: TRX4 Models....Order Part# D960TRX4								
<b>05-07 1500 Mega Cab 4WD</b>								
<b>STANDARD SERIES</b>								
<b>05-07 1500 Mega Cab 4WD Kit</b>				<b>Class I with Add-A-Leafs</b>				
2.5-3.5"	D301MK			D2513	1 D25		Included	
4.5-5.5"	D501MK			D45523 + D4513M	1 D45		Included	
<b>02-05 1500 Ram 4WD IFS</b>								
<b>02-05 1500 Ram 4WD (Torsion Bar Front End)</b>				<b>Torsion Keys (Front Leveling Kit)</b>				
2"	D201KE			D201KE				
<b>02-05 1500 Ram Pickup 4WD IFS Kit</b>				<b>With Blocks &amp; U-Bolts and Add-A-Leafs (Without Skid Plate)</b>				
6"	D2601K-NSP		W18, W20, W21	D2601A-NSP + D2601B				
6"		D2601PN	W18, W20, W21	Included				
KIT NOTES: (NSP- Means NO SKID PLATE.). W18. Kit includes Transfer Case Re-Indexing Ring for front drive shaft angle. Models with only 4 bolts attaching the transfer case to transmission, will require custom front drive shaft. Re-Indexing Ring will not work. W20. New Generation Engines, Seal Adapter Part# DTSA10 must be ordered Separately. W21. Exhaust Cross Over Pipe must be modified to clear drive shaft.								
<b>02-05 1500 Ram Pickup 4WD IFS System</b>				<b>With Replacement Rear Springs (Without Skid Plate)</b>				
6"	D2601KS-NSP		W18, W20, W21	D2601A-NSP + D2601BS		2 DR250S		
KIT NOTES: (NSP- Means NO SKID PLATE.). W18. Kit includes Transfer Case Re-Indexing Ring for front drive shaft angle. Models with only 4 bolts attaching the transfer case to transmission, will require custom front drive shaft. Re-Indexing Ring will not work. W20. New Generation Engines, Seal Adapter Part# DTSA10 must be ordered Separately. W21. Exhaust Cross Over Pipe must be modified to clear drive shaft.								
<b>00-01 1/2 &amp; 3/4 Ton Ram 4WD Equipped with Gas Engine and 2.5" Wide Rear Springs</b>								
<b>POLYURETHANE VALUE KIT</b>								
<b>00-01 1/2 Ton Ram Pickup 4WD Kit</b>				<b>Polyurethane Spacers with rear Add-A-Leafs</b>				
2"	D20PK			D20P			R222	
<b>STANDARD SERIES</b>								
<b>00-01 1/2 Ton Ram Pickup 4WD Kit</b>				<b>Class I with Add-A-Leafs</b>				
2"	D201K				1 D20		R222	
3"	D3012K		W8	D3012	1 D30		Included	
5"	D5012K		W8, W19	D4552 + D501	1 D50		Included	
KIT NOTES: W8. 00-01 Models Equipped with Factory 'OFF-ROAD Package' Will Receive 1" Less Lift. W19. All Wheel Drive models may experience a front driveline vibration. If so, Order Index Ring Part# IXR20, Seal Adapter Part# DTSA10, and Seal Part # TCS2675.								
<b>00-01 1/2 Ton Ram Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs</b>				
5"	D5012KS		W8, W19	D4552 + D501S	1 D50	2 DR54S		
KIT NOTES: W8. 00-01 Models Equipped with Factory 'OFF-ROAD Package' Will Receive 1" Less Lift. W10. The Factory Block is Removed. W19. All Wheel Drive models may experience a front driveline vibration. If so, Order Index Ring Part# IXR20, Seal Adapter Part# DTSA10, and Seal Part # TCS2675.								
<b>00-01 1/2 Ton Ram Pickup 4WD Kit</b>				<b>Class II with Add-A-Leafs</b>				
5"	D5022K		W6, W8, W19	D4552 + D502	1 D50		Included	
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W8. 00-01 Models Equipped with Factory 'OFF-ROAD Package' Will Receive 1" Less Lift. W10. The Factory Block is Removed. W19. All Wheel Drive models may experience a front driveline vibration. If so, Order Index Ring Part# IXR20, Seal Adapter Part# DTSA10, and Seal Part # TCS2675.								
<b>00-01 1/2 Ton Ram Pickup 4WD System</b>				<b>Class II with Replacement Rear Springs</b>				
5"	D5022KS		W6 W8, W19	D4552 + D502S	1 D50	2 DR54S		
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W8. 00-01 Models Equipped with Factory 'OFF-ROAD Package' Will Receive 1" Less Lift. W10. The Factory Block is Removed. W19. All Wheel Drive models may experience a front driveline vibration. If so, Order Index Ring Part# IXR20, Seal Adapter Part# DTSA10, and Seal Part # TCS2675.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		6
						-----	H7036		-----	N8036		-----	M9536	3
						-----	H7036		-----	N8036		-----	M9536	8
						-----	H7036		-----	N8036		-----	M9536	8
						-----	H7036		-----	N8036		-----	M9536	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7013			H7092	H7036		N8092	N8036		M9592	M9536	6
	Included		Included		7213	H7094	H7036		N8094	N8036		M9594	M9536	9
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
						H7091	H7036		N8091	N8036		M9591	M9536	9
									Included	Included				9
						H7091	H7036		N8091	N8036		M9591	M9536	9
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7007			H7092	H7017		N8092	N8017		M9592	M9517	4
			7007		7218	H7092	H7017		N8092	N8017		M9592	M9517	4
			7007		7218	H7092	H7017		N8092	N8017		M9592	M9517	6
	Included	Bracket Included	Included		7218	H7093	H7017		N8093	N8017		M9593	M9517	9
	Included	Bracket Included	Included		7218	H7093	H7017		N8093	N8017		M9593	M9517	9
	Included	Bracket Included	Included		7218	H7093	H7017	H7058	N8093	N8017	N8058	M9593	M9517	10
	Included	Bracket Included	Included		7218	H7093	H7017	H7058	N8093	N8017	N8058	M9593	M9517	10



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
PLATINUM COIL-OVER STANDARD SERIES										
00-01 1/2 Ton Ram Pickup 4WD Kit					Class I with Add-A-Leafs					
3"	DC312K			D3012+SKDGEB1	1	SKDGE30			Included	
5"	DC512K		W19	D4552+D501+SKDGEB1	1	SKDGE50			Included	
W19. All Wheel Drive models may experience a front driveline vibration. If so, Order Index Ring Part# IXR20, Seal Adapter Part# DTSA10, and Seal Part # TCS2675.										
00-01 1/2 Ton Ram 4WD Equipped with Gas Engine and 2.5" Wide Rear Springs - Continued										
LONG ARM SERIES										
00-01 1/2 Ton Ram Pickup 4WD Kit					With Blocks & U-Bolts and Add-A-Leafs					
7"	D702K-DX		W6, W25, W26	D7075-DX + D702	1	D70			Included	
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.										
00-01 1/2 Ton Ram Pickup 4WD System					With Replacement Rear Springs					
7"	D702KS-DX		W6, W25, W26	D7075-DX + D702S	1	D70	2	DR56S		
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.										
PLATINUM COIL-OVER LONG ARM SERIES										
00-01 1/2 Ton Ram Pickup 4WD Kit					With Blocks & U-Bolts and Add-A-Leafs					
7"	DC702K-DX		W25, W26	D7075-DX+D702+SKDGEB1	1	SKDGE70			Included	
KIT NOTES: W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.										
00-01 1/2 Ton Ram Pickup 4WD System					With Replacement Rear Springs					
7"	DC702KS-DX		W25, W26	D7075DX+D702S+SKDGEB1	1	SKDGE70	2	DR56S		
KIT NOTES: W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.										
94-99 1/2 Ton Ram 4WD Equipped with V8 Engine and 2.5" Wide Rear Springs										
POLYURETHANE VALUE KIT										
94-99 1/2 Ton Ram Pickup 4WD Kit					Polyurethane Spacers with rear Add-A-Leafs					
2"	D20PK			D20P					R222	
STANDARD SERIES										
94-99 1/2 Ton Ram Pickup 4WD Kit					Class I with Add-A-Leafs					
2"	D201K				1	D20			R222	
3"	D301K		W13	D301	1	D30			Included	
5"	D501K		W11, W13	D4550 + D501	1	D50			Included	
KIT NOTES: W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud.										
94-99 1/2 Ton Ram Pickup 4WD System					Class I with Replacement Rear Springs					
3"	D301KS		W10, W13	D301S	1	D30	2	DR56S		
5"	D501KS		W11, W13	D4550 + D501S	1	D50	2	DR54S		
KIT NOTES: W10. The Factory Block is Removed. W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud.										
94-99 1/2 Ton Ram Pickup 4WD Kit					Class II with Add-A-Leafs					
5"	D502K		W6, W11, W13	D4550 + D502	1	D50			Included	
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud.										
94-99 1/2 Ton Ram Pickup 4WD System					Class II with Replacement Rear Springs					
3"	D302KS		W6, W10, W13	D302S	1	D30	2	DR56S		
5"	D502KS		W6, W11, W13	D4550 + D502S	1	D50	2	DR54S		
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W10. The Factory Block is Removed. W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud.										
94-99 1/2 Ton Ram 4WD Equipped with V8 Engine and 2.5" Wide Rear Springs - Continued										
PLATINUM COIL-OVER STANDARD SERIES										
94-99 1/2 Ton Ram Pickup 4WD Kit					Class I with Add-A-Leafs					
3"	DC391K		W13	D301+SKDGEB1	1	SKDGE30			Included	
5"	DC591K		W11, W13	D4550+D501+SKDGEB1	1	SKDGE50			Included	
KIT NOTES: W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
			7007		7218	-----	H7017	-----	-----	N8017	-----	-----	M9517	6
	Included	Bracket Included	Included		7218	-----	H7017	-----	-----	N8017	-----	-----	M9517	11
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	DA602	Included	Included		7218	H7038	H7078	H7060	N8038	N8078	N8060	M9538	M9578	12
	DA602	Included	Included		7218	H7038	H7078	H7060	N8038	N8078	N8060	M9538	M9578	12
	DA602	Included	Included		7218	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
	DA602	Included	Included		7218	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7007			H7092	H7017		N8092	N8017		M9592	M9517	4
			7007		(W13)	H7092	H7017		N8092	N8017		M9592	M9517	4
			7007		(W13)	H7092	H7017		N8092	N8017		M9592	M9517	6
	Included	Bracket Included	Included		(W13)	H7093	H7017		N8093	N8017		M9593	M9517	9
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
			7007		(W13)	H7092	H7017		N8092	N8017		M9592	M9517	6
	Included	Bracket Included	Included		(W13)	H7093	H7017		N8093	N8017		M9593	M9517	9
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	Included	Bracket Included	Included		(W13)	H7093	H7017	H7058	N8093	N8017	N8058	M9593	M9517	10
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
			7007		(W13)	H7092	H7017	H7023	N8092	N8017	N8023	M9592	M9517	8
	Included	Bracket Included	Included		(W13)	H7093	H7017	H7058	N8093	N8017	N8058	M9593	M9517	10
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7007		(W13)	-----	H7017	-----	-----	N8017	-----	-----	M9517	6
	Included	Bracket Included	Included		(W13)	-----	H7017	-----	-----	N8017	-----	-----	M9517	11
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	

<b>94-99 1/2 Ton Ram Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs</b>						
3"	DC391KS		W10, W13	D301S+SKDGEB1	1	SKDGE30	2	DR56S		
5"	DC591KS		W11, W13	D4550+D501S+SKDGEB1	1	SKDGE50	2	DR54S		

KIT NOTES: W10. The Factory Block is Removed. W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud.

## 94-99 1/2 Ton Ram 4WD Equipped with V8 Engine and 2.5" Wide Rear Springs

### LONG ARM SERIES

<b>94-99 1/2 Ton Ram Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and Add-A-Leafs</b>						
7"	D702K-DX		W6, W11, W25, W26	D7075-DX+D702	1	D70			Included	

KIT NOTES:W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.

## 94-99 1/2 Ton Ram Pickup 4WD System

				<b>With Replacement Rear Springs</b>						
7"	D702KS-DX		W6, W11, W25, W26	D7075-DX+D702S	1	D70	2	DR56S		

KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.

## 94-99 1/2 Ton Ram 4WD Equipped with V8 Engine and 2.5" Wide Rear Springs

### PLATINUM COIL-OVER LONG ARM SERIES

<b>94-99 1/2 Ton Ram Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and Add-A-Leafs</b>						
7"	DC702K-DX		W11, W13, W25, W26	D7075-DX+D702+SKDGEB1	1	SKDGE70			Included	

KIT NOTES: W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.

## 94-99 1/2 Ton Ram Pickup 4WD System

				<b>With Replacement Rear Springs</b>						
7"	DC702KS-DX		W11, W13, W25, W26	D7075-DX+D702S+SKDGEB1	1	SKDGE70	2	DR56S		

KIT NOTES: W11. 5 & 7" Lift Kits Are Designed to Only Fit Models Manufactured ON or AFTER February 9, 1994 Due to Size of Track Bar Stud. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket.

## 74.5-93 1/2, 3/4 & 1 Ton 4WD Full-Size with Gas Engines

<b>74.5-93 1/2, 3/4 &amp; 1 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts and or Add-A-Leafs</b>						
2-2.5"	D200BK		W14	D240B	2	D200S				
4"	D400BK		W14, W15	D240B	2	D400S				
6"	D600BK		W14, W15, W16	D680B	2	D600S				
8"	D800BK		W2, W5, W15, W16	D680B	2	D800S			R1120	

KIT NOTES: W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). Steering Correction (See Page 220). W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W5. 74.5-77 Models MUST use # DA65 & # DL10 for W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

## 74.5-93 1/2, 3/4 & 1 Ton Pickup 4WD Full-Size Kit

				<b>With Add-A-Leafs</b>						
2.5"	D200BAK		W2, W14	D240BA	2	D200S			R1120	
4"	D400BAK		W1, W2, W14, W15	D240BA	2	D400S			R1120	

KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use DA60 on 4" Lifts). W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section.

## 74.5-93 1/2, 3/4 & 1 Ton Pickup 4WD Full-Size System

				<b>With Replacement Rear Springs</b>						
2.5"	D200BKS		W2, W14	D240BS	2	D200S	2	DR40S		
4"	D400BKS		W2, W10, W14, W15	D240BS	2	D400S	2	DR60S		
6"	D600BKS		W14, W15, W16	D680BS	2	D600S	2	DR40S		
8"	D800BKS		W2, W5, W15, W16	D680BS	2	D800S	2	DR60S		

KIT NOTES: W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). Steering Correction (See Page 220). W10. The Factory Block is Removed. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models.W5. 74.5-77 Models MUST use # DA65 & # DL10 for steering correction. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
			7007		(W13)	-----	H7017	-----	-----	N8017	-----	-----	M9517	6
	Included	Bracket Included	Included		(W13)	-----	H7017	-----	-----	N8017	-----	-----	M9517	11
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	DA600	Included	Included		(W13)	H7038	H7078	H7060	N8038	N8078	N8060	M9538	M9578	12
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	DA600	Included	Included		(W13)	H7038	H7078	H7060	N8038	N8078	N8060	M9538	M9578	12
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	DA600	Included	Included		(W13)	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	DA600	Included	Included		(W13)	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA40 + DA60			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA40 + DA60			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Part #	Rear Springs Qty	Part #	Add-A- Leafs
<b>61-74 1/2 &amp; 3/4 Ton 4WD Full-Size with Gas Engines</b>									
<b>61-74 1/2 &amp; 3/4 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>					
2.5"/2"	D200AK			D240A	2	D200S			
4"	D400AK		W7, W14, W15	D240A	2	D400S			
6"	D600AK		W7, W14, W15, W16	D680A	2	D600S			
KIT NOTES: W7. Must Have 3-Bolt Steering Knuckle. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.									
<b>72-74 1/2 &amp; 3/4 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>					
8"	D800AK		W7, W14, W15, W16	D680A	2	D800S			R1120
KIT NOTES: W7. Must Have 3-Bolt Steering Knuckle. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.									
<b>72-74 1/2 &amp; 3/4 Ton Pickup 4WD Full-Size System</b>				<b>With 52 Inch Replacement Rear Springs</b>					
4"	D400AKS		W7, W10, W14, W15	D240AS	2	D400S	2	DR60S	
6"	D600AKS		W7, W14, W15, W16	D680AS	2	D600S	2	DR40S	
8"	D800AKS		W7, W15, W16	D680AS	2	D800S	2	DR60S	
KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W7. Must Have 3-Bolt Steering Knuckle. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.									
<b>10-11 3/4 &amp; 1 Ton Ram 4WD with Diesel Engines</b>									
<b>10-11 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>Class I with Add-A-Leafs</b>					
5"	D4510K		W22, W23, W24	D45510 + D4513 *	1	D45			Included
5"		D4510PN	W22, W23, W24	Included		Included			Included
KIT NOTES: Part# D4510PN will not work with Sterling Axle. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.									
<b>10-11 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>Class I with Rear Springs</b>					
5"	D4510KS		W22, W23, W24	D45510 + D4513S *	1	D45	2	DR374S	Included
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.									
<b>2009 3/4 &amp; 1 Ton Ram 4WD &amp; Mega Cab with Diesel Engines</b>									
<b>2009 3/4 &amp; 1 Ton Ram Pickup 4WD &amp; Mega Cab Kit</b>				<b>Class I with Add-A-Leafs</b>					
5"	D4519K		W22, W23, W24	D45529 + D4513 *	1	D45			Included
5"		D4519PN	W22, W23, W24	Included		Included			Included
KIT NOTES: Part# D4519PN will not work with Sterling Axle. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.									
<b>2009 3/4 &amp; 1 Ton Ram Pickup 4WD &amp; Mega Cab System</b>				<b>Class I with Rear Springs</b>					
5"	D4519KS		W22, W23, W24	D45529 + D4513S *	1	D45	2	DR374S	Included
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.									
<b>2009 3/4 &amp; 1 Ton Ram Pickup 4WD &amp; Mega Cab Kit</b>				<b>Class II with Add-A-Leafs</b>					
5"	D4529K		W22, W23, W24	D45529 + D4523 *	1	D45			Included
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.									
<b>2009 3/4 &amp; 1 Ton Ram Pickup 4WD &amp; Mega Cab Kit</b>				<b>Class II with Rear Springs</b>					
5"	D4529KS		W22, W23, W24	D45529 + D4523S *	1	D45	2	DR374S	Included
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.									

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA60			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA65 + DL10			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
	DA60			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA65 + DL10			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	Included	Bracket Included	Included		7239	H7094	H7036		N8094	N8036		M9594	M9536	9
	Included	Bracket Included	Included						Included	Included				9
	Included	Bracket Included	Included		7239	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	9
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	Included	Bracket Included	Included		7239	H7094	H7036		N8094	N8036		M9594	M9536	9
	Included	Bracket Included	Included						Included	Included				9
	Included	Bracket Included	Included		7239	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	9
	Included	Bracket Included	Included		7239	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
	Included	Bracket Included	Included		7239	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
03-10 3/4 & 1 Ton Ram 4WD & Mega Cab with Diesel Engines										
POLYURETHANE VALUE KIT										
03-10 3/4 & 1 Ton Ram Pickup 4WD & Mega Cab Kit				Polyurethane Spacers with rear Add-A-Leafs						
2"	D27PK			D20P					R332	
STANDARD SERIES										
03-10 3/4 & 1 Ton Ram Pickup 4WD & Mega Cab Kit				Class I with Add-A-Leafs						
3"	D2513K			D2513	1	D25			Included	
3"		D2513PH		Included		Included			Included	
03-08 3/4 & 1 Ton Ram 4WD & Mega Cab with Diesel Engines										
03-08 3/4 & 1 Ton Ram Pickup 4WD & Mega Cab Kit				Class I with Add-A-Leafs						
5"	D4513K		W22, W23, W24	D45523 + D4513 *	1	D45			Included	
5"		D4513PN	W22, W23, W24	Included		Included			Included	
KIT NOTES: Part# D4513PN will not work with Sterling Axle. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.										
03-08 3/4 & 1 Ton Ram Pickup 4WD & Mega Cab Kit				Class I with Rear Springs						
5"	D4513KS		W22, W23, W24	D45523 + D4513S *	1	D45	2	DR374S	Included	
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.										
03-08 3/4 & 1 Ton Ram Pickup 4WD & Mega Cab Kit				Class II with Add-A-Leafs						
5"	D4523K		W22, W23, W24	D45523 + D4523 *	1	D45			Included	
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.										
03-08 3/4 & 1 Ton Ram Pickup 4WD & Mega Cab Kit				Class II with Rear Springs						
5"	D4523KS		W22, W23, W24	D45523 + D4523S *	1	D45	2	DR374S	Included	
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W23. If vehicle is equipped with a Sterling rear axle, rear U-Bolt kit Part# U9B12R must be ordered separately. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214.										
00-02 3/4 & 1 Ton Ram 4WD For models with V10/Cummins Engine equipped with 3" Wide Rear Springs										
POLYURETHANE VALUE KIT										
00-02 3/4 & 1 Ton Ram Pickup 4WD Kit				Polyurethane Spacers with rear Add-A-Leafs						
2"	D25PK			D20P					R372	
STANDARD SERIES										
00-02 3/4 & 1 Ton Ram Pickup 4WD Kit				Class I with Add-A-Leafs						
2-2.5"	D2512K			D2512	1	D25			Included	
4-4.5"	D4512K		W9, W22, W24	D4552 + D451	1	D45			Included	
KIT NOTES: W9. Models Equipped with a 'Towing Package' REQUIRE Longer U-Bolts. If So Equipped, Order # D451H instead of # D451. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
00-02 3/4 & 1 Ton Ram Pickup 4WD System				Class I with Replacement Rear Springs						
4-4.5"	D4512KS		W22, W24	D4552 + D451S	1	D45	2	DR74S		
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
00-02 3/4 & 1 Ton Ram Pickup 4WD Kit				Class II with Add-A-Leafs						
4-4.5"	D4522K		W6, W12, W22, W24	D4552 + D452	1	D45			Included	
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W12. Models Equipped with a 'Towing Package' REQUIRED Longer U-Bolts. If So Equipped, Order # D452H instead of # D452. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
00-02 3/4 & 1 Ton Ram Pickup 4WD System				Class II with Replacement Rear Springs						
4-4.5"	D4522KS		W6, W22, W24	D4552 + D452S	1	D45	2	DR74S		
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7013			H7092	H7036		N8092	N8036		M9592	M9536	4
			7013			H7092	H7036		N8092	N8036		M9592	M9536	6
						Included	Included							6
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	Included	Bracket Included	Included		7213	H7094	H7036		N8094	N8036		M9594	M9536	9
	Included	Bracket Included	Included						Included	Included				9
	Included	Bracket Included	Included		7213	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	9
	Included	Bracket Included	Included		7213	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
	Included	Bracket Included	Included		7213	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7007			H7092	H7036		N8092	N8036		M9592	M9536	4
			7007		7218	H7092	H7036		N8092	N8036		M9592	M9536	6
	Included	Bracket Included	Included		7218	H7094	H7036		N8094	N8036		M9594	M9536	9
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	Included	Bracket Included	Included		7218	H7094	H7036		N8094	N8036		M9594	M9536	9
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	Included	Bracket Included	Included		7218	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	Included	Bracket Included	Included		7218	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Part #	Rear Springs Qty	Part #	Add-A- Leafs	
<b>PLATINUM COIL-OVER STANDARD SERIES</b>										
<b>00-02 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>Class I with Add-A-Leafs</b>						
4-4.5"	DC4521K		W22, W24	D4552+D451+SKDGEB1	1	SKDGE45			Included	
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
<b>00-02 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs</b>						
4-4.5"	DC4521KS		W22, W24	D4552+D451S+SKDGEB1	1	SKDGE45	2	DR74S		
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
<b>00-02 3/4 &amp; 1 Ton Ram 4WD For models with V10/Cummins Engine equipped with 3" Wide Rear Springs</b>										
<b>LONG ARM SERIES</b>										
<b>00-02 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and Add-A-Leafs</b>						
7"	D752K-DX		W6, W25, W26, W27	D7075-DX+D752	1	D75			Included	
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket. W27. 3/4 and 1 Ton Models with a 360 Engine will sit slightly higher in the front. (Gas engines will receive more lift than diesel)										
<b>00-02 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>With Replacement Rear Springs</b>						
7"	D752KS-DX		W6, W25, W26, W27	D7075-DX+D752S	1	D75	2	DR76S		
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket. W27. 3/4 and 1 Ton Models with a 360 Engine will sit slightly higher in the front. (Gas engines will receive more lift than diesel)										
<b>PLATINUM COIL-OVER LONG ARM SERIES</b>										
<b>00-02 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and Add-A-Leafs</b>						
7"	DC752K-DX		W25, W26, W27	D7075-DX+ D752+SKDGEB1	1	SKDGE75			Included	
KIT NOTES: W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket. W27. 3/4 and 1 Ton Models with a 360 Engine will sit slightly higher in the front. (Gas engines will receive more lift than diesel)										
<b>00-02 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>With Replacement Rear Springs</b>						
7"	DC752KS-DX		W25, W26, W27	D7075-DX+ D752S+SKDGEB1	1	SKDGE75	2	DR76S		
KIT NOTES: W25. Seal Adapter Part# DTSA10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket. W27. 3/4 and 1 Ton Models with a 360 Engine will sit slightly higher in the front. (Gas engines will receive more lift than diesel)										
<b>94-99 3/4 &amp; 1 Ton Ram 4WD For models with V10/Cummins Engine equipped with 3" Wide Rear Springs</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>Polyurethane Spacers with rear Add-A-Leafs</b>						
2"	D25PK			D20P					R372	
<b>STANDARD SERIES</b>										
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>Class I with Add-A-Leafs</b>						
2-2.5"	D251K		W13	D251	1	D25			Included	
4-4.5"	D451K		W9, W13, W22, W24	D4550 + D451	1	D45			Included	
KIT NOTES: W9. Models Equipped with a 'Towing Package' REQUIRE Longer U-Bolts. If So Equipped, Order # D451H instead of # D451. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs</b>						
4-4.5"	D451KS		W13, W22, W24	D4550 + D451S	1	D45	2	DR74S		
KIT NOTES: W10. The Factory Block is Removed. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										
<b>94-99 3/4 &amp; 1 Ton Ram 4WD For models with V10/Cummins Engine equipped with 3" Wide Rear Springs - Continued</b>										
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>Class II with Add-A-Leafs</b>						
4-4.5"	D452K		W6, W12, W13, W22, W24	D4550 + D452	1	D45			Included	
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W12. Models Equipped with a 'Towing Package' REQUIRE Longer U-Bolts. If So Equipped, Order # D452H instead of # D452. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)										

Steering Correction (Order 1 Each)		Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor Hours
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	
	Included	Bracket Included	Included		7218	-----	H7036	-----	-----	N8036	-----	-----	M9536	11
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	Included	Bracket Included	Included		7218	-----	H7036	-----	-----	N8036	-----	-----	M9536	11
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
	DA602	Included	Included		7218	H7038	H7078	H7060	N8038	N8078	N8060	M9538	M9578	12
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	DA602	Included	Included		7218	H7038	H7078	H7060	N8038	N8078	N8060	M9538	M9578	12
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	DA602	Included	Included		7218	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
	DA602	Included	Included		7218	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
DUAL STABILIZER DUAL STABILIZER NOTE: For 00-02 With 3.75" Axle Tube Use Part # 7270. For 00-02 Models Without 3.75" Axle Tube Use Part # 7218.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
			7007			H7092	H7036		N8092	N8036		M9592	M9536	4
			7007		(W13)	H7092	H7036		N8092	N8036		M9592	M9536	6
	Included	Bracket Included	Included		(W13)	H7094	H7036		N8094	N8036		M9594	M9536	9
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	Included	Bracket Included	Included		(W13)	H7094	H7036		N8094	N8036		M9594	M9536	9
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
	Included	Bracket Included	Included		(W13)	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty   Part #	Rear Springs Qty   Part #	Add-A- Leafs	
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>Class II with Replacement Rear Springs</b>				
4-4.5"	D452KS		W6, W13, W22, W24	D4550 + D452S	1   D45	2   DR74S		
KIT NOTES: W6. Class II Includes Front Dual Shock Brackets, Upper Links & Lower Link Skid Plates. Must Order 2 QUAD Shocks Separately. W10. The Factory Block is Removed. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)								
<b>PLATINUM COIL-OVER STANDARD SERIES</b>								
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>Class I with Add-A-Leafs</b>				
4-4.5"	DC4591K		W13, W22, W24	D4550+D451+SKDGEB1 SKDGE45	1		Included	
KIT NOTES: W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)								
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs</b>				
4-4.5"	DC4591KS		W9, W13, W22, W24	D4550+D451+SKDGEB1+ SKDGE45	1	2   DR74S		
KIT NOTES: W9. Models Equipped with a 'Towing Package' REQUIRE Longer U-Bolts. If so Equipped, Order # D451H instead of # D451. W22. Some models may require Indexing Ring Part# IXR20K if a front driveline vibration develops. W24. On models with a rear carrier bearing, If a rear driveline vibration occurs Carrier Bearing drop brackets are available. 1" Drop Part# CBL3401, 2 1/4" Drop Part# CBL214. (Gas engines will receive more lift than diesel)								
<b>94-99 3/4 &amp; 1 Ton Ram 4WD For models with V10/Cummins Engine equipped with 3" Wide Rear Springs</b>								
<b>PLATINUM COIL-OVER LONG ARM SERIES</b>								
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>				
7"	DC752K-DX		W13, W25, W26, W27	D7075-DX+ D752+SKDGEB1	1   SKDGE75		Included	
KIT NOTES: W25. Seal Adapter Part# DTS10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket. W27. 3/4 and 1 Ton Models with a 360 Engine will sit slightly higher in the front. (Gas engines will receive more lift than diesel)								
<b>94-99 3/4 &amp; 1 Ton Ram Pickup 4WD System</b>				<b>With Replacement Rear Springs</b>				
7"	DC752KS-DX		W13, W25, W26, W27	D7075-DX+ D752S+SKDGEB1	1   SKDGE75	2   DR76S		
KIT NOTES: W25. Seal Adapter Part# DTS10 and Seal Part# TCS2675 are included. W26. 6 Speed Models will require modifications to Transmission bracket. W27. 3/4 and 1 Ton Models with a 360 Engine will sit slightly higher in the front. (Gas engines will receive more lift than diesel)								
<b>92-93 3/4 &amp; 1 Ton 4WD Full-Size with Cummins Diesel Engines</b>								
<b>92-93 3/4 &amp; 1 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>				
1"/1"	D100CDK		W1, W14	D240CDA	2   D100CS		R1120	
2.5"/2"	D200CDAK		W1, W14	D240CDA	2   D200CS		R225	
4"/2"	D400CDAK		W1, W14, W15	D240CDA	2   D400CS		R225	
6"/4.5"	D692CDK		W15, W16	D692CD	2   D600CS		R225	
KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.								
<b>92-93 3/4 &amp; 1 Ton Pickup 4WD Full-Size System</b>				<b>With Replacement Rear Springs</b>				
1"/.5"	D192CDKS		W10, W14	D240CDS	2   D100CS	2   DR60S		
2.5"/.5"	D292CDKS		W10, W14	D240CDS	2   D200CS	2   DR60S		
4"/2.5"	D492CDKS		W3, W14, W15	D492CDS	2   D400CS	2   DR60S		
6"/4.5"	D692CDKS		W4, W14, W15, W16	D692CDS	2   D600CS	2   DR60S		
KIT NOTES: W3. The 6" Factory Blocks are Replaced with 2" Blocks. W4. The 6" Factory Blocks are Replaced with 4.5" Blocks. W10. The Factory Block is Removed. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.								
<b>87-91 3/4 &amp; 1 Ton 4WD Full-Size Leaf Spring Front with Cummins Diesel Engines</b>								
<b>87-91 3/4 &amp; 1 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts</b>				
2.5"/2"	D200CDK		W14	D240CD	2   D200CS			
4"/2"	D400CDK		W14, W15	D240CD	2   D400CS			
6"/4.5"	D600CDK		W14, W15, W16	D600CD	2   D600CS			
KIT NOTES: W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.								
<b>87-91 3/4 &amp; 1 Ton Pickup 4WD Full-Size Kit</b>				<b>With Add-A-Leafs</b>				
1"/1"	D100CDK		W1, W14	D240CDA	2   D100CS		R1120	
2.5"/2"	D200CDAK		W1, W14	D240CDA	2   D200CS		R225	
4"/2"	D400CDAK		W1, W14, W15	D240CDA	2   D400CS		R225	
KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	Included	Bracket Included	Included		(W13)	H7094	H7036	H7041	N8094	N8036	N8041	M9594	M9536	10
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	Included	Bracket Included	Included		(W13)	-----	H7036	-----	-----	N8036	-----	-----	M9536	11
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	Included	Bracket Included	Included		(W13)	-----	H7036	-----	-----	N8036	-----	-----	M9536	11
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
	DA600	Included	Included		(W13)	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
	DA600	Included	Included		(W13)	-----	H7078	-----	-----	N8078	-----	-----	M9578	12
W13. On 94-97 Models Use # 7217 Steering Stabilizer. On 98-99 Models Without 3.75" Axle Tube Use # 7218. For 98-99 Models With 3.75" Axle Tube Use # 7270.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
				7110	7220	H7047	H7038		N8047	N8038		M9547	M9538	4
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA20			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA45	FBL60/RBL60		7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
				7110	7220	H7047	H7038		N8047	N8038		M9547	M9538	4
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA20			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA45	FBL60/RBL60		7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA20			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA45	FBL60/RBL60		7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
				7110	7220	H7047	H7038		N8047	N8038		M9547	M9538	4
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA20	FBL60/RBL60		7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
87-91 3/4 & 1 Ton Pickup 4WD Full-Size System				With Replacement Rear Springs						
1"/.5"	D100CDKS		W10, W14	D240CDS	2	D100CS	2	DR40S		
2.5"/.5"	D200CDKS		W10, W14	D240CDS	2	D200CS	2	DR40S		
6"/4.5"	D600CDKS		W15, W16	D600CDS	2	D600CS	2	DR40S		

KIT NOTES: W10. The Factory Block is Removed. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

<b>87-91 3/4 &amp; 1 Ton Pickup 4WD Full-Size System</b>				<b>With FULL-Height Replacement Rear Springs</b>						
2.5"/2.5"	D292CDKS		W10, W14	D240CDS	2	D200CS	2	DR60S		
4"/4"	D400CDKS4		W14, W15	D600CDS	2	D400CS	2	DR40S		
6"/6"	D600CDKS6		W14, W15, W16	D600CDS	2	D600CS	2	DR60S		

KIT NOTES: W10. The Factory Block is Removed. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

## 74.5-93 1 Ton Pickup 4WD Full-Size with Gas Engines

<b>74.5-93 1 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts</b>						
2.5"/2"	D200CK		W2, W14	D240CD	2	D200S				
3-4"	D400CK		W2, W14, W15	D240CD	2	D400S				
5-6"	D600CK		W2, W14, W15, W16	D600CD	2	D600S				

KIT NOTES: W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

<b>74.5-93 1 Ton Pickup 4WD Full-Size Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	D200CAK		W1, W2, W14	D240CDA	2	D200S			R1120	
3-4"	D400CAK		W1, W2, W14, W15	D240CDA	2	D400S			R225	
7-8"	D800CK		W2, W15, W16	D600CD	2	D800S			R225	

KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

<b>74.5-93 1 Ton Pickup 4WD Full-Size System</b>				<b>With Replacement Rear Springs</b>						
3-4"	D400CKS		W2, W10, W14, W15	D240CS	2	D400S	2	DR60S		
5-6"	D600CKS		W2, W14, W15, W16	D600CDS	2	D600S	2	DR40S		
7-8"	D800CKS		W2, W15, W16	D600CDS	2	D800S	2	DR60S		

KIT NOTES: W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). W10. The Factory Block is Removed. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

## 74.5-93 Ramcharger, Trailduster 4WD

<b>74.5-93 Ramcharger, Trailduster 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2.5"	D200BK		W2, W14	D240B	2	D200S				
4"	D400BRK		W2, W14, W15	D400BR	2	D400S				
6"	D600BRK		W14, W15, W16	D680BR	2	D600S				
8"	D800BRK		W2, W5, W15, W16	D680BR	2	D800S			R1120	

KIT NOTES: W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). Steering Correction (See Page 220). W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W5. 74.5-77 Models MUST use # DA65 & # DL10 for W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.

<b>74.5-93 Ramcharger, Trailduster 4WD Kit</b>				<b>With Add-A-Leafs</b>						
2.5"	D200BAK		W1, W2, W14	D240BA	2	D200S			R1120	

KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models.

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
				7110	7220	H7047	H7038		N8047	N8038		M9547	M9538	4
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA45	FBL60/RBL60		7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA20			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	4
	DA45	FBL60/RBL60		7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA40 + SB60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA40 + SB60			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA40 + SB60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA40 + SB60			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA40 + DA60			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
74.5-93 Ramcharger, Trailduster 4WD System				With Replacement Rear Springs						
2.5"	D200BKS		W2, W10, W14	D240BS	2	D200S	2	DR40S		
4"	D400BKS		W2, W10, W14, W15	D240BS	2	D400S	2	DR60S		
6"	D600BKS		W14, W15	D680BS	2	D600S	2	DR40S		
8"	D800BKS		W2, W5, W15, W16	D680BS	2	D800S	2	DR60S		
KIT NOTES: W2. Pitman Arm Fits 78-93 Models Only (74.5-77 Models use Part # DA60 on 4" Lifts). for Steering Correction (See Page 220). W10. Factory Block is Removed. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W5. 74.5-77 Models MUST use # DA65 & # DL10. W15. If Vehicle is equipped with front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.										
61-74 Ramcharger, Trailduster 4WD										
61-74 Ramcharger, Trailduster 4WD Kit				With Blocks & U-Bolts and/or Add-A-Leafs						
2.5"	D200AK			D240A	2	D200S				
72-74 Ramcharger, Trailduster 4WD Kit				With Blocks & U-Bolts and/or Add-A-Leafs						
8"	D800ARK		W7, W14, W15, W16	D680AR	2	D800S			R1120	
KIT NOTES: W7. Must Have 3-Bolt Steering Knuckle. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.										
61-74 Ramcharger, Trailduster 4WD Kit				With Add-A-Leafs						
2.5"	D200AAK		W1, W14	D240AA	2	D200S			R1120	
KIT NOTES: W1. This Kit Uses Add-A-Leafs Instead of Block & U-Bolt Kit for the Rear. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models.										
72-74 Ramcharger, Trailduster 4WD System				With 52 Inch Replacement Rear Springs						
2.5"	D200AKS		W10, W14	D240AS	2	D200S	2	DR40S		
4"	D400AKS		W7, W10, W14, W15	D240AS	2	D400S	2	DR60S		
6"	D600AKS		W7, W14, W15, W16	D680AS	2	D600S	2	DR40S		
8"	D800AKS		W7, W15, W16	D680AS	2	D800S	2	DR60S		
KIT NOTES: W7. Must Have 3-Bolt Steering Knuckle. W14. Adjustable Drag Link # DL10 Recommended To Replace Factory Non-Adjustable Link on 72-93 Models. W15. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Dodge Accessories Section. W16. Brakelines required, See Brakelines Page 210.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	DA20			7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA40			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA40 + DA60			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

	DA65 + DL10			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8
--	-------------	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7110	7220	H7027	H7038		N8027	N8038		M9527	M9538	4
	DA60			7110	7220	H7017	H7038		N8017	N8038		M9517	M9538	4
	DA60			7110	7220	H7017	H7068		N8017	N8068		M9517	M9568	6
	DA65 + DL10			7110	7220	H7036	H7068		N8036	N8068		M9536	M9568	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs
<b>09-11 F-150 Pickup 2WD/4WD</b>							
<b>VALUE KITS</b>							
<b>09-11 F-150 Pickup 2WD/4WD Kit</b>				<b>Metal Spacers (Front Leveling Kit)</b>			
2"	F920MS			F920MS			
<b>PERFORMANCE STRUT SERIES</b>							
<b>09-11 F-150 Pickup 4WD</b>				<b>Front Leveling Struts</b>			
2-2.5"	F9125ST			F9125ST			
<b>09-11 F-150 Pickup 4WD Kit</b>				<b>Adjustable Front Strut Kit</b>			
4-6"	F9461K			F9461A+F9461B			
KIT NOTES: 20 inch Diameter or Larger Wheel must be used.							
<b>09-11 F-150 Pickup 4WD Kit</b>				<b>Adjustable Front Strut Kit</b>			
4-6"		F9461PH		Included			
KIT NOTES: 20 inch Diameter or Larger Wheel must be used.							
<b>09-11 F-150 Pickup 4WD Kit</b>				<b>Adjustable Front Strut System</b>			
4-6"	F9461KS			F9461A+F9461BS		2 FR904S	
KIT NOTES: 20 inch Diameter or Larger Wheel must be used.							
<b>04-08 F-150 Pickup 2WD/4WD</b>							
<b>VALUE KITS</b>							
<b>04-08 F-150 Pickup 2WD/4WD Kit</b>				<b>Metal Spacers (Front Leveling Kit)</b>			
2.5"	FF25MS			FF25MS			
KIT NOTES: Installed above Strut assembly.							
<b>04-08 F-150 Pickup 2WD/4WD Kit</b>				<b>Poly Spacers (Front Leveling Kit)</b>			
2.5"	FF25			FF25			
KIT NOTES: Installed inside Strut assembly.							
<b>PLATINUM SERIES</b>							
<b>04-08 F-150 Pickup 4WD</b>							
<b>04-08 F-150 Pickup 4WD</b>				<b>Front Leveling Struts</b>			
2-3"	F423ST			F423ST			
<b>04-08 F-150 Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>			
1"-3"	F430STK		G34	F430ST			R3415
KIT NOTES: G34. Can still use OEM wheels.							
<b>04-08 F-150 Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs (Without Skid Plate)</b>			
6"	F4601K-NSP			F4601A-NSP+F4602BST			
6"		F4601PH		Included			
KIT NOTES: (NSP- Means NO SKID PLATE.)							
<b>04-08 F-150 Pickup 4WD System</b>				<b>With Replacement Rear Springs (Without Skid Plate)</b>			
6"	F4601KS-NSP			F4601A-NSP+F4602BSST		2 FR44S	
KIT NOTES: (NSP- Means NO SKID PLATE.)							
<b>04-08 F-150 Pickup 2WD</b>							
<b>04-08 F-150 Pickup 2WD</b>				<b>Front Leveling Struts</b>			
2-3"	F223ST			F223ST			
<b>04-08 F-150 Pickup 2WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>			
3"	F432STK		G34	F432ST			R3415
KIT NOTES: G34. Can still use OEM wheels.							
6"	F4621STK			F4621A+F4621BST			
<b>04-08 F-150 Pickup 2WD System</b>				<b>With Replacement Rear Springs</b>			
6"	F4621STKS			F4621A+F4621BSST		2 FR44S	
<b>97-03 F-150 Pickup 4WD</b>							
<b>97-03 F-150 4WD (Torsion Bar Front end)</b>				<b>Torsion Keys (Front Leveling Kit)</b>			
2"	F301KE			F301KE			
<b>97-03 F-150 Pickup 4WD Kit</b>				<b>Class I with Blocks &amp; U-Bolts (Without Skid Plate)</b>			
6"	F9701K-NSP		G29	F9701A-NSP+F9701B			
6"		F9701PH	G29	Included			
KIT NOTES: (NSP- Means NO SKID PLATE.). G29. Regular Cab, Short Bed Models, are equipped with a factory tapered 2" Block. For correct driveline angle, a flat 2" block will be needed. Part# RBF20							

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor			
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7041		----	----	N8041		----	----	M9541	4
						----	----	H7041		----	----	N8041		----	----	M9541	4
						----	----	H7060		----	----	N8060		----	----	M9560	8
						----	-----			----	-----			----	-----		8
						----	----	H7060		----	----	N8060		----	----	M9560	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7041		----	----	N8041		----	----	M9541	2
						----	----	H7041		----	----	N8041		----	----	M9541	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7041		----	----	N8041		----	----	M9541	4
						----	----	H7060		----	----	N8060		----	----	M9560	6
			Bracket Included			----	----	H7060		----	----	N8060		----	----	M9560	7
			Bracket Included				Included										7
			Bracket Included			----	----	H7060		----	----	N8060		----	----	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7041		----	----	N8041		----	----	M9541	4
						----	----	H7060		----	----	N8060		----	----	M9560	6
			Bracket Included			----	----	H7060		----	----	N8060		----	----	M9560	8
			Bracket Included			----	----	H7060		----	----	N8060		----	----	M9560	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						-----	-----			-----	-----			-----	-----		2
			Bracket Included			7297 <sup>(G)</sup>	H7097	H7061		N8097	N8061			M9597	M9561		7
			Bracket Included				Included	Included									7
G. Dual Steering Stabilizer can only be used with Skyjacker® 6" Lift.																	



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Front Springs Part #	Rear Springs Qty	Rear Springs Part #	Add-A- Leafs	
<b>97-03 F-150 Pickup 4WD Kit</b>				<b>Class I with Blocks &amp; U-Bolts (With Skid Plate)</b>						
6"	F9701K		G29	F9701A+F9701B						
KIT NOTES: G29. Regular Cab, Short Bed Models, are equipped with a factory tapered 2" Block. For correct driveline angle, a flat 2" block will be needed. Part# RBF20.										
<b>97-03 F-150 Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs (Without Skid Plate)</b>						
6"	F9701KS-NSP		G29	F9701A-NSP+F9701BS			2	FR15S		
KIT NOTES: (NSP- Means NO SKID PLATE.). G29. Regular Cab, Short Bed Models, are equipped with a factory tapered 2" Block. For correct driveline angle, a flat 2" block will be needed. Part# RBF20										
<b>97-03 F-150 Pickup 4WD System</b>				<b>Class I with Replacement Rear Springs (With Skid Plate)</b>						
6"	F9701KS		G29	F9701A+F9701BS			2	FR15S		
KIT NOTES: G29. Regular Cab, Short Bed Models, are equipped with a factory tapered 2" Block. For correct driveline angle, a flat 2" block will be needed. Part# RBF20.										
<b>80-96 F-150 Pickup 4WD</b>										
<b>80-96 F-150 Pickup 4WD Kit</b>				<b>Standard Brackets with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	182K		G1		1	182			R3120	
4"	184PK		G8, G28	184P	1	184				
6"	186PK		G8, G28	186P	1	186				
8"	188PK-A		G8	188C+188P	1	188			Included	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.										
<b>80-96 F-150 Pickup 4WD System</b>				<b>Standard Brackets with Replacement Rear Springs</b>						
4"	184PKS		G8, G10, G28	184PS	1	184	2	FR54S		
6"	186PKS		G8, G28	186PS	1	186	2	FR54S		
8"	188PKS-A		G8	188C+188PS	1	188	2	FR56S		
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G8. Power Steering Models Only. G10. The Factory Block is Removed. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.										
<b>80-96 F-150 Pickup 4WD Kit</b>				<b>Class II Brackets and Radius Arms with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
6"	286PK-A		G8, G28	286P+RA150	1	186				
KIT NOTES: G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.										
<b>80-96 F-150 Pickup 4WD System</b>				<b>Class II Brackets and Radius Arms with Replacement Rear Springs</b>						
4"	284PKS-A		G8, G10, G28	284PS+RA150	1	184	2	FR54S		
6"	286PKS-A		G8, G28	286PS+RA150	1	186	2	FR54S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.										
<b>80-96 F-150 Pickup 2WD</b>										
<b>80-96 F-150 Pickup 2WD Kit</b>				<b>Standard Brackets with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	182P2K		G1		1	182			R225	
8"	188P2K-A		G8	188C+188P2	1	188			Included	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.										
<b>66-79 F-150 Pickup 4WD</b>										
<b>77-79 F-150 Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	172PK		G11		1	172			R3120	
4"	174PK		G13, G4		1	174			R3120	
6"	176PK		G15, G20, G4	176P	1	176				
9"	179PK		G17, G20, G4	179P	1	179			R3120	
KIT NOTES: G4. Pitman Arm ONLY Fits 76-79 Models with Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" Style. Order # FDL70 and # TRA70. G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models). (for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400. G20. Requires Brake lines # FBL78 + # RBL76.										
<b>77-79 F-150 Pickup 4WD System</b>				<b>With Replacement Rear Springs</b>						
4"	174PKS		G13, G4	174PS	1	174	2	FR52S		
6"	176PKS		G15, G20, G4	176PS	1	176	2	FR54S		
9"	179PKS		G9, G17, G20, G4	179PS	1	179	2	FR56S		
KIT NOTES: G4. Pitman Arm ONLY Fits 76-79 Models with Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" Style. Order # FDL70 and # TRA70. G9. This Lift also includes 2" Blocks. G10. The Factory Block is Removed. G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models). (for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400. G20. Requires Brake lines # FBL78 + # RBL76.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
		Bracket Included			7297 <sup>(G)</sup>	H7097	H7061		N8097	N8061		M9597	M9561	8
G. Dual Steering Stabilizer can only be used with Skyjacker® 6" Lift.														
		Bracket Included			7297 <sup>(G)</sup>	H7097	H7061		N8097	N8061		M9597	M9561	7
G. Dual Steering Stabilizer can only be used with Skyjacker® 6" Lift.														
		Bracket Included			7297 <sup>(G)</sup>	H7097	H7061		N8097	N8061		M9597	M9561	8
G. Dual Steering Stabilizer can only be used with Skyjacker® 6" Lift.														
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
				7140	7240	H7052	H7060	H7055	N8052	N8060	N8055	M9552	M9560	4
	FA400			7140	7240	H7054	H7060	H7057	N8054	N8060	N8057	M9554	M9560	6
	FA400	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	6
	Included	See Page 210		7140	7240	H7055	H7079	H7057	N8055	N8079	N8057	M9555	M9579	7
	FA400			7140	7240	H7054	H7060	H7057	N8054	N8060	N8057	M9554	M9560	6
	FA400	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	6
	Included	See Page 210		7140	7240	H7055	H7079	H7057	N8055	N8079	N8057	M9555	M9579	7
	Included	See Page 210		7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	8
	Included	See Page 210		7140	7240	H7054	H7060		N8054	N8060		M9554	M9560	8
	Included	See Page 210		7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	8
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
				7140	7240	H7052	H7058	H7055	N8052	N8058	N8055	M9552	M9558	4
	Included	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	7
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
			7030		7210	H7054	H7055	H7055	N8054	N8055	N8055	M9554	M9555	4
	FA300		7030		7210	H7055	H7056	H7056	N8055	N8056	N8056	M9555	M9556	6
	FA300	FBL78/RBL76	7030		7210	H7056	H7059	H7059	N8056	N8059	N8059	M9556	M9559	6
	FA500	FBL78/RBL76	7030		7210	H7059	H7061	H7061	N8059	N8061	N8061	M9559	M9561	8
	FA300		7030		7210	H7055	H7056	H7056	N8055	N8056	N8056	M9555	M9556	6
	FA300	FBL78/RBL76	7030		7210	H7056	H7059	H7059	N8056	N8059	N8059	M9556	M9559	6
	FA500	FBL78/RBL76	7030		7210	H7059	H7061	H7061	N8059	N8061	N8061	M9559	M9561	8



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
73-76 F-150 Pickup 4WD Kit				With Blocks & U-Bolts and/or Add-A-Leafs						
1.5-2"	172PK		G11		1	172			R3120	
4"	174PK		G4, G13		1	174			R3120	
6"	176PK		G4, G15	176P	1	176				
9"	179PK		G4, G17	179P	1	179			R3120	

KIT NOTES: G4. Pitman Arm ONLY Fits 76-79 Models with Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" Style. Order # FDL70 and # TRA70. G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models). (for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400.

<b>73-76 F-150 Pickup 4WD System</b>				<b>With Replacement Rear Springs</b>						
4"	174PKS		G4, G13	174PS	1	174	2	FR52S		
6"	176PKS		G4, G15	176PS	1	176	2	FR54S		
9"	179PKS		G4, G9, G17	179PS	1	179	2	FR56S		

KIT NOTES: G4. Pitman Arm ONLY Fits 76-79 Models with Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" Style. Order # FDL70 and # TRA70. G9. This Lift also includes 2" Blocks. G10. The Factory Block is Removed. G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models). (for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400.

<b>70-72 F-100 Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2"	172EPK		G11		1	172	1		R225	
4"	174EPK		G13		1	174	1		R225	
6"	176PK		G15	176P	1	176				
9"	179PK		G17	179P	1	179	1		R225	

KIT NOTES: G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models). (for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400.

<b>66-69 F-150 Pickup 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5"/2"	172EPK		G11		1	172			R225	
4"	174EPK		G13		1	174			R225	
6"	176PK		G15	176P	1	176				
9"	179PK		G17	179P	1	179			R225	

KIT NOTES: G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models). (for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400.

## 80-96 BRONCO 4WD

<b>80-96 BRONCO 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	182K		G1		1	182			R3120	
4"	184BK		G8, G28	184B	1	184				
6"	186BK		G8, G28	186B	1	186				
8"	188BK-A		G8	188C+188B	1	188				

KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.

<b>80-96 BRONCO 4WD System</b>				<b>With Replacement Rear Springs</b>						
1.5-2"	182BKS		G1	182BS	1	182	2	FR51S		
4"	184BKS		G8, G28	184BS	1	184	2	FR52S		
6"	186BKS		G8, G28	186BS	1	186	2	FR54S		
8"	188BKS-A		G8	188C+188BS	1	188	2	FR56S		

KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.

<b>80-96 BRONCO 4WD Kit</b>				<b>Class II Brackets and Radius Arms with Blocks &amp; U-Bolts</b>						
6"	286BK-A		G8, G28	286B+RA150	1	186				

KIT NOTES: G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.

<b>80-96 BRONCO 4WD System</b>				<b>Class II Brackets and Radius Arms with Replacement Rear Springs</b>						
4"	284BKS-A		G8, G28	284BS+RA150	1	184	2	FR52S		
6"	286BKS-A		G8, G28	286BS+RA150	1	186	2	FR54S		

KIT NOTES: G8. Power Steering Models Only. G28. If Vehicle is equipped with a front Sway Bar. Lowering Brackets must be ordered. See Ford Accessories Section.

	Steering Correction	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)		OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
			7030	7110	7240	H7023	H7056	H7055	N8023	N8056	N8055	M9523	M9556	4
	FA300		7030	7110	7240	H7023	H7056	H7056	N8023	N8056	N8056	M9523	M9556	6
	FA300	See Page 210	7030	7110	7240	H7058	H7059	H7059	N8058	N8059	N8059	M9558	M9559	6
	FA500	See Page 210	7030	7110	7240	H7060	H7061	H7061	N8060	N8061	N8061	M9560	M9561	8

	FA300		7030	7110	7240	H7023	H7056	H7056	N8023	N8056	N8056	M9523	M9556	6
	FA300	See Page 210	7030	7110	7240	H7058	H7059	H7059	N8058	N8059	N8059	M9558	M9559	6
	FA500	See Page 210	7030	7110	7240	H7060	H7061	H7061	N8060	N8061	N8061	M9560	M9561	8

					7210	H7023	H7056		N8023	N8056		M9523	M9556	4
					7210	H7023	H7056		N8023	N8056		M9523	M9556	6
		See Page 210			7210	H7058	H7059		N8058	N8059		M9558	M9559	6
		See Page 210			7210	H7060	H7061		N8060	N8061		M9560	M9561	8

						H7023	H7058		N8023	N8058		M9523	M9558	4
						H7023	H7058		N8023	N8058		M9523	M9558	6
		See Page 210				H7058	H7041		N8058	N8041		M9558	M9541	6
		See Page 210				H7060	H7060		N8060	N8060		M9560	M9560	8

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

				7140	7240	H7052	H7058	H7055	N8052	N8058	N8055	M9552	M9558	4
	FA400			7140	7240	H7054	H7058	H7057	N8054	N8058	N8057	M9554	M9558	6
	FA400	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	6
	Included	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	7

				7140	7240	H7052	H7058	H7055	N8052	N8058	N8055	M9552	M9558	4
	FA400			7140	7240	H7054	H7058	H7057	N8054	N8058	N8057	M9554	M9558	6
	FA400	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	6
	Included	See Page 210		7140	7240	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560	7

	Included	See Page 210		7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	8
--	----------	--------------	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

	Included			7140	7240	H7054	H7058		N8054	N8058		M9554	M9558	8
	Included	See Page 210		7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Front Springs Part #	Rear Springs Qty	Rear Springs Part #	Add-A-Leafs	
<b>67-79 BRONCO 4WD</b>										
<b>78-79 BRONCO 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	172BK		G11		1	172			R3120	
4"	174BK		G8, G13		1	174			R300	
6"	176BK		G8, G15, G20	176B	1	176				
9"	179BK		G8, G17, G20	179B	1	179			R300	
KIT NOTES: G8. Power Steering Models Only. G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models).(for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400. G20. Requires Brake lines # FBL78 + # RBL76.										
<b>78-79 BRONCO 4WD System</b>				<b>With Replacement Rear Springs</b>						
4"	174BKS		G8, G13	174BS	1	174	2	FR52S		
6"	176BKS		G8, G15, G20	176BS	1	176	2	FR54S		
9"	179BKS		G8, G17, G20	179BS	1	179	2	FR56S		
KIT NOTES: G8. Power Steering Models Only. G11. Caster Correction REQUIRED: Use # CB400. G13. Caster Correction REQUIRED: Use # RAB27 or #CB700 (# CB477 on 76-77 Models).(for Best Correction, Use RAB27 & CB200.) G15. Caster Correction REQUIRED: Use # RAB47 or # CB700 (for Best Correction, Use RAB47 & CB200.) G17. Caster Correction REQUIRED: Use BOTH # RAB47 and # CB400. G20. Requires Brake lines # FBL78 + # RBL76.										
<b>67-77 BRONCO 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
3"	172EBK		G12		1	172			R225	
5"	174EBK		G5, G14	174EB	1	174				
KIT NOTES: G5. Pitman Arm Fits Manual and Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" Style. Order # FDL67 and # TRA60. G12. Caster Correction REQUIRED: Use # CB400 (# CB477 on 76-77 Models). G14. Caster Correction REQUIRED: Use # RAB40 or # CB700 (# CB700 on 76-77 Models). G16. Caster Correction REQUIRED: Use BOTH # RAB40 and # CB400 ( # RAB40 and # CB477 on 76-77 Models).										
<b>67-77 BRONCO 4WD System</b>				<b>With Replacement Rear Springs</b>						
5"	174EBKS		G5, G14	174EBS	1	174	2	FR64S		
7"	176EBKS		G5, G9, G16	176EBS	1	176	2	FR64S		
KIT NOTES: G5. Pitman Arm Fits Manual and Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" Style. Order # FDL67 and # TRA60. G9. This Lift also includes 2" Blocks. G14. Caster Correction REQUIRED: Use # RAB40 or # CB700 (# CB700 on 76-77 Models). G16. Caster Correction REQUIRED: Use BOTH # RAB40 and # CB400 ( # RAB40 and # CB477 on 76-77 Models).										
<b>97-08 EXPEDITION 2WD &amp; 4WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>03-08 EXPEDITION 2WD &amp; 4WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	EX20			EX20						
<b>97-02 Expedition 4WD (Torsion Bar Front End)</b>				<b>Torsion Keys (Front Leveling Kit)</b>						
2"	F301KE			F301KE						
<b>00-05 EXCURSION 4WD (Front Leaf Spring)</b>										
<b>00-05 EXCURSION 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>						
4"	FE40MK		G8	F9402M	2	F920S				
6"	FE60MK		G8, G25	F9602M	2	F940S				
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.										
<b>00-05 EXCURSION 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>						
4"	FE40MKS		G8	F9402MS	2	F920S	2	FR94S		
6"	FE60MKS		G8, G25	F9602MS	2	F940S	2	FR96S		
8"	FE80MKS-A		G8	F9802MS	2	F960S	2	FR98S		
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.										
<b>00-05 EXCURSION 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>						
6"	FE65MK		G8, G25	F9602M	2	F945S				
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.										
<b>00-05 EXCURSION 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>						
6"	FE65MKS		G8, G25	F9602MS	2	F945S	2	FR96S		
8"	FE85MKS-A		G8	F9802MS	2	F965S	2	FR98S		
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7030		7210	H7055 <sup>(A)</sup>	H7023	H7055 <sup>(A)</sup>	N8055 <sup>(A)</sup>	N8023	N8055 <sup>(A)</sup>	M9555 <sup>(A)</sup>	M9523	4
						H7054 <sup>(B)</sup>		H7054 <sup>(B)</sup>	N8054 <sup>(B)</sup>		N8054 <sup>(B)</sup>	M9554 <sup>(B)</sup>		
	FA300		7030		7210	H7056 <sup>(A)</sup>	H7058	H7056 <sup>(A)</sup>	N8056 <sup>(A)</sup>	N8058	N8056 <sup>(A)</sup>	M9556 <sup>(A)</sup>	M9558	6
						H7055 <sup>(B)</sup>		H7055 <sup>(B)</sup>	N8055 <sup>(B)</sup>		N8055 <sup>(B)</sup>	M9555 <sup>(B)</sup>		
	FA300	FBL78/RBL76	7030		7210	H7059 <sup>(A)</sup>	H7058	H7059 <sup>(A)</sup>	N8059 <sup>(A)</sup>	N8058	N8059 <sup>(A)</sup>	M9559 <sup>(A)</sup>	M9558	6
						H7056 <sup>(B)</sup>		H7056 <sup>(B)</sup>	N8056 <sup>(B)</sup>		N8056 <sup>(B)</sup>	M9556 <sup>(B)</sup>		
	FA500	FBL78/RBL76	7030		7210	H7061 <sup>(A)</sup>	H7060	H7061 <sup>(A)</sup>	N8061 <sup>(A)</sup>	N8060	N8061 <sup>(A)</sup>	M9561 <sup>(A)</sup>	M9560	8
						H7059 <sup>(B)</sup>		H7059 <sup>(B)</sup>	N8059 <sup>(B)</sup>		N8059 <sup>(B)</sup>	M9559 <sup>(B)</sup>		

(A). Ahead of Axle. (B). Behind Axle.

	FA300		7030		7210	H7056 <sup>(A)</sup>	H7058	H7056 <sup>(A)</sup>	N8056 <sup>(A)</sup>	N8058	N8056 <sup>(A)</sup>	M9556 <sup>(A)</sup>	M9558	6
						H7055 <sup>(B)</sup>		H7055 <sup>(B)</sup>	N8055 <sup>(B)</sup>		N8055 <sup>(B)</sup>	M9555 <sup>(B)</sup>		
	FA300	FBL78/RBL76	7030		7210	H7059 <sup>(A)</sup>	H7058	H7059 <sup>(A)</sup>	N8059 <sup>(A)</sup>	N8058	N8059 <sup>(A)</sup>	M9559 <sup>(A)</sup>	M9558	6
						H7056 <sup>(B)</sup>		H7056 <sup>(B)</sup>	N8056 <sup>(B)</sup>		N8056 <sup>(B)</sup>	M9556 <sup>(B)</sup>		
	FA500	FBL78/RBL76	7030		7210	H7061 <sup>(A)</sup>	H7060	H7061 <sup>(A)</sup>	N8061 <sup>(A)</sup>	N8060	N8061 <sup>(A)</sup>	M9561 <sup>(A)</sup>	M9560	8
						H7059 <sup>(B)</sup>		H7059 <sup>(B)</sup>	N8059 <sup>(B)</sup>		N8059 <sup>(B)</sup>	M9559 <sup>(B)</sup>		

(A). Ahead of Axle. (B). Behind Axle.

	FA300	FBL77/RBL77	7030			H7055	H7023		N8055	N8023		M9555	M9523	4
			7030			H7055	H7058		N8055	N8058		M9555	M9558	6

	FA300	FBL77/RBL77	7030			H7055	H7058		N8055	N8058		M9555	M9558	6
	FA500	FBL77/RBL77	7030			H7056	H7060		N8056	N8060		M9556	M9560	6

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

														6
--	--	--	--	--	--	--	--	--	--	--	--	--	--	---

						-----		-----		-----		-----		2
--	--	--	--	--	--	-------	--	-------	--	-------	--	-------	--	---

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	FA499		7099	7199	7299	H7058	H7034		N8058	N8034		M9558	M9534	8
	FA499	FBL92/RBL99	7099	7199	7299	H7041	H7077		N8041	N8077		M9541	M9577	8

	FA499		7099	7199	7299	H7058	H7034		N8058	N8034		M9558	M9534	8
	FA499	FBL92/RBL99	7099	7199	7299	H7041	H7077		N8041	N8077		M9541	M9577	8
	Included	Included	7099	7199	7299	H7060	H7077		N8060	N8077		M9560	M9577	8

	FA499	FBL92/RBL99	7099	7199	7299	H7041	H7077		N8041	N8077		M9541	M9577	8
--	-------	-------------	------	------	------	-------	-------	--	-------	-------	--	-------	-------	---

	FA499	FBL92/RBL99	7099	7199	7299	H7041	H7077		N8041	N8077		M9541	M9577	8
	Included	Included	7099	7199	7299	H7060	H7077		N8060	N8077		M9560	M9577	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs	
<b>2011 F-250 Super Duty 4WD Gas Engine</b>								
<b>2011 F-250 Super Duty 4WD Front Metal Spacer</b>								
1"	F51MS			F51MS				
<b>2011 F-250 Super Duty 4WD Poly Value Kit</b>								
2.5"	F82MK		G33	F52MS			R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB1120								
<b>2011 F-250 Super Duty (Gas Engine) 4WD Kit</b>								
2"	F820K		G33		1 F520		R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB1120								
<b>2011 F-250 Super Duty (Gas Engine) 4WD Kit</b>								
4"	F11401K		G31, G32, G36	F11451	1 F540			
6"	F11601K		G31, G32, G36	F11651	1 F560			
KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.								
<b>2011 F-250 Super Duty (Gas Engine) 4WD System</b>								
4"	F11401KS		G31, G32, G36	F11451S	1 F540	2 FR84S		
6"	F11601KS		G31, G32, G36	F11651S	1 F560	2 FR86S		
KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.								
<b>CLASS II</b>								
<b>2011 F-250 Super Duty (Gas Engine) 4WD Class II Kit</b>								
4"	F114024K		G31, G32, G36	F11451 + F58484LU	1 F540			
6"	F116024K		G31, G32, G36	F11651 + F58484LU	1 F560			
<b>2011 F-250 Super Duty (Gas Engine) 4WD System</b>								
4"	F114024KS		G31, G32, G36	F11451S + F58484LU	1 F540	2 FR84S		
6"	F116024KS		G31, G32, G36	F11651S + F58484LU	1 F560	2 FR86S		
<b>2011 F-250 Super Duty (Gas Engine) 4WD Class II Kit</b>								
8.5"	F11802K		G31, G32, G36	F11852 + F58484LU	1 F580		R3815	
<b>2011 F-250 Super Duty (Gas Engine) 4WD System</b>								
8.5"	F11802KS		G31, G32, G36	F11852S + F58484LU	1 F580	2 FR88S		
KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. * Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.								
<b>2011 F-250 Super Duty 4WD Diesel Engine</b>								
<b>2011 F-250 Super Duty 4WD Front Metal Spacer</b>								
1"	F51MS			F51MS				
<b>2011 F-250 Super Duty 4WD Poly Value Kit</b>								
2.5"	F82MK			F52MS			R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB1120								
<b>2011 F-250 Super Duty (Diesel Engine) 4WD Kit</b>								
2"	F825K				1 F525		R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB1120								
<b>2011 F-250 Super Duty (Diesel Engine) 4WD Kit</b>								
4"	F11451K		G31, G32, G36	F11451	1 F545			
4"		F11451PN	G31, G32, G36	Included	Included			
6"	F11651K		G31, G32, G36	F11651	1 F565			
6"		F11651PN	G31, G32, G36	Included	Included			
KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included	Brkt. Incl.	7254		H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included	Brkt. Incl.	7254		H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included	Brkt. Incl.	7254		H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included	Brkt. Incl.	7254		H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included	Brkt. Incl.	7254		H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included	Brkt. Incl.	7254		H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included	Brkt. Incl.	7254		H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included	Brkt. Incl.	7254		H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included	Brkt. Incl.	7254		H7092	H7060		N8092	N8060		M9592	M9560	6
	Included	Included	Brkt. Incl.						Included	Included				6
	FA450	Included	Brkt. Incl.	7254		H7093	H7079		N8093	N8079		M9593	M9579	6
	Included	Included	Brkt. Incl.						Included	Included				6



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
2011 F-250 Super Duty (Diesel Engine) 4WD System				Diesel Engines with Rear Springs						
4"	F11451KS		G31, G32, G36	F11451S	1	F545	2	FR84S		
6"	F11651KS		G31, G32, G36	F11651S	1	F565	2	FR86S		

KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.

## CLASS II

<b>2011 F-250 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
4"	F114524K		G31, G32, G36	F11451 + F58484LU	1	F545				
6"	F116524K		G31, G32, G36	F11651 + F58484LU	1	F565				

<b>2011 F-250 Super Duty (Diesel Engine) 4WD Class II System</b>				<b>Diesel Engines with Rear Springs</b>						
4"	F114524KS		G31, G32, G36	F11451S + F58484LU	1	F545	2	FR84S		
6"	F116524KS		G31, G32, G36	F11651S + F58484LU	1	F565	2	FR86S		

<b>2011 F-250 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
8.5"	F11852K		G31, G32, G36	F11852 + F58484LU	1	F585			R3815	

<b>2011 F-250 Super Duty (Diesel Engine) 4WD Class II System</b>				<b>Diesel Engines with Rear Springs</b>						
8.5"	F11852KS		G31, G32, G36	F11852S + F58484LU	1	F585	2	FR88S		

KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. \* Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.

## 08-10 F-250 Super Duty 4WD Gas Engine

<b>08-10 F-250 Super Duty 4WD Front Poly Spacer</b>										
1"	F51MS			F51MS						

<b>08-10 F-250 Super Duty 4WD Poly Value Kit</b>				<b>With Rear Add-A-Leafs</b>						
2.5"	F82MK		G33	F52MS					R3815	

KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB820

<b>08-10 F-250 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Add-A-Leafs</b>						
2"	F820K		G33		1	F520			R3815	

KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB820

<b>08-10 F-250 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Blocks and U-Bolts</b>						
4"	F8401K		G31, G32, G36, G37, G41	F8451	1	F540				
6"	F8601K		G31, G32, G36, G37, G41	F8651	1	F560				

KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G41. 4, 6, & 8.5" Lifts require minor exhaust modifications.

<b>08-10 F-250 Super Duty (Gas Engine) 4WD System</b>				<b>Gas Engines with Rear Springs</b>						
4"	F8401KS		G31, G32, G36, G37, G41	F8451S	1	F540	2	FR84S		
6"	F8601KS		G31, G32, G36, G37, G41	F8651S	1	F560	2	FR86S		

KIT NOTES: Upgrade available for 4 & 6" system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G41. 4, 6, & 8.5" Lifts require minor exhaust modifications

## CLASS II

<b>08-10 F-250 Super Duty (Gas Engine) 4WD Class II Kit</b>				<b>Class II Gas Engines with Blocks &amp; U-Bolts</b>						
4"	F84024K		G31, G32, G36, G37, G41	F8451 + F58484LU	1	F540				
6"	F86024K		G31, G32, G36, G37, G41	F8651 + F58484LU	1	F560				

<b>08-10 F-250 Super Duty (Gas Engine) 4WD System</b>				<b>Class II Gas Engines with Rear Springs</b>						
4"	F84024KS		G31, G32, G36, G37, G41	F8451S + F58484LU	1	F540	2	FR84S		
6"	F86024KS		G31, G32, G36, G37, G41	F8651S + F58484LU	1	F560	2	FR86S		

<b>08-10 F-250 Super Duty (Gas Engine) 4WD Class II Kit</b>				<b>Class II Gas Engines with Blocks &amp; U-Bolts</b>						
8.5"	F8802K		G31, G32, G36, G37, G41	F8852A + F58484LU	1	F580			R3815	

	Steering Correction	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)		OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	FA450	Included		Brkt. Incl.	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Brkt. Incl.	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Brkt. Incl.	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Brkt. Incl.	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Brkt. Incl.	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Brkt. Incl.	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
08-10 F-250 Super Duty (Gas Engine) 4WD System				Class II Gas Engines with Rear Springs						
8.5"	F8802KS		G31, G32, G36, G37, G41	F8852S + F58484LU	1	F580	2	FR88S		
KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. * Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406 G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R. G41. 4, 6, & 8.5" Lifts require minor exhaust modifications										
08-10 F-250 Super Duty 4WD Diesel Engine										
08-10 F-250 Super Duty 4WD Front Poly Spacer										
1"	F51MS			F51MS						
08-10 F-250 Super Duty 4WD Poly Value Kit				With Rear Add-A-Leafs						
2.5"	F82MK		G33	F52MS					R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB820										
08-10 F-250 Super Duty (Diesel Engine) 4WD Kit				Diesel Engines with Add-A-Leafs						
2"	F825K		G33		1	F525			R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB820										
08-10 F-250 Super Duty (Diesel Engine) 4WD Kit				Diesel Engines with Blocks and U-Bolts						
4"	F8451K		G31, G32, G36, G37	F8451	1	F545				
4"		F8451PN	G31, G32, G36, G37	Included		Included				
6"	F8651K		G31, G32, G36, G37	F8651	1	F565				
6"		F8651PN	G31, G32, G36, G37	Included		Included				
KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R										
08-10 F-250 Super Duty (Diesel Engine) 4WD System				Diesel Engines with Rear Springs						
4"	F8451KS		G31, G32, G36, G37	F8451S	1	F545	2	FR84S		
6"	F8651KS		G31, G32, G36, G37	F8651S	1	F565	2	FR86S		
KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R										
CLASS II										
08-10 F-250 Super Duty (Diesel Engine) 4WD Class II Kit				Diesel Engines with Blocks and U-Bolts						
4"	F84524K		G31, G32, G36, G37	F8451 + F58484LU	1	F545				
6"	F86524K		G31, G32, G36, G37	F8651 + F58484LU	1	F565				
08-10 F-250 Super Duty (Diesel Engine) 4WD Class II System				Diesel Engines with Rear Springs						
4"	F84524KS		G31, G32, G36, G37	F8451S + F58484LU	1	F545	2	FR84S		
6"	F86524KS		G31, G32, G36, G37	F8651S + F58484LU	1	F565	2	FR86S		
08-10 F-250 Super Duty (Diesel Engine) 4WD Class II Kit				Diesel Engines with Blocks and U-Bolts						
8.5"	F8852K		G31, G32, G36, G39	F8852A + F58484LU	1	F585			R3815	
08-10 F-250 Super Duty (Diesel Engine) 4WD Class II System				Diesel Engines with Rear Springs						
8.5"	F8852KS		G31, G32, G36, G39	F8852S + F58484LU	1	F585	2	FR88S		
KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. * Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406 G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R										
05-07 F-250 Super Duty 4WD Gas Engine										
05-07 F-250 Super Duty 4WD Front Poly Spacer										
1"	F51MS		G30	F51MS						
KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550.										
05-07 F-250 Super Duty 4WD Poly Value Kit				Gas Engine with Rear Add-A-Leafs						
2.5"	F52MK		G30, G33	F52MS					R3510	
KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G33. Optional Track Bar relocation bracket may be required. Part# TB520										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	Included	Included		Included					Included	Included				6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	Included	Included		Included					Included	Included				6
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
05-07 F-250 Super Duty (Gas Engine) 4WD Kit				Gas Engines with Blocks and U-Bolts						
2-2.5"	F520K				1	F520			R3510	
4"	F5401K		G30, G31, G32, G36, G37	F5451	1	F540				
6"	F5601K		G30, G31, G32, G36, G37	F5651	1	F560				
KIT NOTES: Upgrade available for 4 & 6 " kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Kfits order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R										
05-07 F-250 Super Duty (Gas Engine) 4WD Kit				Class II Gas Engines with Blocks and Add-A-Leafs						
8.5"	F5802K		G30, G31, G32, G38, G39	F5852A + F5852B	1	F580			R300	
KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406 G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R										
05-07 F-250 Super Duty (Gas Engine) 4WD System				Gas Engines with Rear Springs						
4"	F5401KS		G30, G31, G32, G36, G37	F5451S	1	F540	2	FR94S		
6"	F5601KS		G30, G31, G32, G36, G37	F5651S	1	F560	2	FR96S		
KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Kfits order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R										
CLASS II										
05-07 F-250 Super Duty (Gas Engine) 4WD Class II Kit				Gas Engines with Blocks and Add-A-Leafs						
4"	F54024K		G30, G31, G32, G36, G37	F5451 + F58484LU	1	F540				
6"	F56024K		G30, G31, G32	F5651 + F58484LU	1	F560				
05-07 F-250 Super Duty (Gas Engine) 4WD Class II System				Gas Engines with Rear Springs						
4"	F54024KS		G30, G31, G32, G36, G37	F5451S + F58484LU	1	F540	2	FR94S		
6"	F56024KS		G30, G31, G32, G36, G37	F5651S + F58484LU	1	F560	2	FR96S		
05-07 F-250 Super Duty (Gas Engine) 4WD Class II Kit				Gas Engines with Blocks and Add-A-Leafs						
8.5"	F5802K		G30, G31, G32, G38, G39	F5852A + F5852B	1	F580			R300	
05-07 F-250 Super Duty (Gas Engine) 4WD Class II System				Gas Engines with Rear Springs						
8.5"	F5802KS		G30, G31, G32, G38, G39	F5852AS + F5852B	1	F580	2	FR98S		
KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Kfits order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406 G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R										
05-07 F-250 Super Duty 4WD Diesel Engine										
05-07 F-250 Super Duty 4WD Front Poly Spacer										
1"	F51MS		G30	F51MS						
KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550.										
05-07 F-250 Super Duty 4WD Poly Value Kit				Diesel Engine with Rear Add-A-Leafs						
2.5"	F52MK		G30, G33	F52MS					R3510	
KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G33. Optional Track Bar relocation bracket may be required. Part# TB520										

	Steering Correction	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)		OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
05-07 F-250 Super Duty (Diesel Engine) 4WD Kit				Diesel Engines with Blocks and U-Bolts						
2-2.5"	F525K		G30, G31, G32,		1	F525			R3510	
4"	F5451K		G30, G31, G32, G36, G37	F5451	1	F545				
4"		F5451PN	G30, G31, G32, G36, G37	Included		Included				
6"	F5651K		G30, G31, G32, G36, G37	F5651	1	F565				
6"		F5651PN	G30, G31, G32, G36, G37	Included		Included				

KIT NOTES: Upgrade available for 4 & 6 " kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Kifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R

<b>05-07 F-250 Super Duty (Diesel Engine) 4WD System</b>				<b>Diesel Engines with Rear Springs</b>						
4"	F5451KS		G30, G31, G32, G36, G37	F5451S	1	F545	2	FR94S		
6"	F5651KS		G30, G31, G32, G36, G37	F5651S	1	F565	2	FR96S		

KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Kifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R

## CLASS II

<b>05-07 F-250 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
4"	F54524K		G30, G31, G32, G36, G37	F5451 + F58484LU	1	F545				
6"	F56524K		G30, G31, G32	F5651 + F58484LU	1	F565				

<b>05-07 F-250 Super Duty (Diesel Engine) 4WD Class II System</b>				<b>Diesel Engines with Rear Springs</b>						
4"	F54524KS		G30, G31, G32, G36, G37	F5451S + F58484LU	1	F545	2	FR94S		
6"	F56524KS		G30, G31, G32, G36, G37	F5651S + F58484LU	1	F565	2	FR96S		

<b>05-07 F-250 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
8.5"	F5852K		G30, G31, G32, G38, G39	F5852A + F5852B	1	F585			R300	

<b>05-07 F-250 Super Duty (Diesel Engine) 4WD Class II System</b>				<b>Diesel Engines with Rear Springs</b>						
8.5"	F5852KS		G30, G31, G32, G38, G39	F5852AS + F5852B	1	F585	2	FR98S		

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Kifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406 G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R

## 00-04 F-250 Super Duty 4WD

### PLATINUM SERIES Z-LINK® (Coil-Over Conversion)

<b>00-04 F-250 Super Duty 4WD Kit</b>				<b>All Engines with Blocks &amp; U-Bolts</b>						
6"	FCO9652MK		G40	COF65+FZ968+FZ962						

KIT NOTES: G40. Depending on tire and wheel size, Steering may need to be limited to allow for clearance of the lower control arm.

<b>00-04 F-250 Super Duty 4WD System</b>				<b>All Engines with Replacement Rear Springs</b>						
6"	FCO9652MKS		G40	COF65+FZ968+FZ962S			2	FR96S		
8"	FCO9852MKS		G40	COF85+FZ988+FZ982S			2	FR98S		

KIT NOTES: G40. Depending on tire and wheel size, Steering may need to be limited to allow for clearance of the lower control arm.

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	Included	Included		Included					Included	Included				8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	Included	Included		Included					Included	Included				8

	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8

	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8

	FA450	Included		Included	7254	H7092	H7060		N8092	N8060		M9592	M9560	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8

	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	FA699	FBL92/RBL99	7099	7199	7299	----	----	H7079	----	----	N8079	----	----	M9579	12
	FA699	FBL92/RBL99	7099	7199	7299	----	----	H7079	----	----	N8079	----	----	M9579	12
	FA699	Included	7099	7199	7299	----	----	H7079	----	----	N8079	----	----	M9579	12



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs	
<b>SOFTTRIDE® LIFT SYSTEMS</b>								
<b>00-04 F-250 Super Duty 4WD Kit</b>				<b>All Engines with Front Add-A-Leafs Kit</b>				
2-2.5"	F93203K			TB9203	1 F9320			
<b>00-04 F-250 Super Duty 4WD Kit</b>				<b>All Engines with Replacement Front Springs</b>				
1.5-2"	F9202K			F9202M	2 F920S			
<b>00-04 F-250 Super Duty 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>				
4"	F9402MK		G7, G8	F9402M	2 F940S			
6"	F9602MK		G7, G8, G25	F9602M	2 F960S			
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>00-04 F-250 Super Duty 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>				
4"	F9402MKS		G7, G8	F9402MS	2 F940S	2 FR94S		
6"	F9602MKS		G7, G8, G25	F9602MS	2 F960S	2 FR96S		
8"	F9802MKS-A		G7, G8	F9802MS	2 F965S	2 FR98S		
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>00-04 F-250 Super Duty 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>				
4"	F9452MK		G7, G8	F9402M	2 F945S			
6"	F9652MK		G7, G8, G25	F9602M	2 F965S			
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>00-04 F-250 Super Duty 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>				
4"	F9452MKS		G7, G8	F9402MS	2 F945S	2 FR94S		
6"	F9652MKS		G7, G8, G25	F9602MS	2 F965S	2 FR96S		
8"	F9852MKS-A		G7, G8	F9802MS	2 F985S	2 FR98S		
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-250 Super Duty 4WD (Built After March '99 - With Square Front U-Bolts)</b>								
<b>SOFTTRIDE® LIFT SYSTEMS</b>								
<b>3/99-99 F-250 Super Duty 4WD Kit</b>				<b>ALL Engines with Front Add-A-Leafs</b>				
2-2.5"	F93203K			TB9203	1 F9320			
<b>3/99-99 F-250 Super Duty 4WD Kit</b>				<b>ALL Engines with Replacement Front Springs</b>				
1.5-2"	F9203K			F9203M	2 F920S			
<b>3/99-99 F-250 Super Duty 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>				
4"	F9403MK		G7, G8	F9403M	2 F940S			
6"	F9603MK		G7, G8, G25	F9603M	2 F960S			
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-250 Super Duty 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>				
4"	F9403MKS		G7, G8	F9403MS	2 F940S	2 FR94S		
6"	F9603MKS		G7, G8, G25	F9603MS	2 F960S	2 FR96S		
8"	F9803MKS-A		G7, G8	F9803MS	2 F965S	2 FR98S		
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-250 Super Duty 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>				
4"	F9453MK		G7, G8	F9403M	2 F945S			
6"	F9653MK		G7, G8, G25	F9603M	2 F965S			
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-250 Super Duty 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>				
4"	F9453MKS		G7, G8	F9403MS	2 F945S	2 FR94S		
6"	F9653MKS		G7, G8, G25	F9603MS	2 F965S	2 FR96S		
8"	F9853MKS-A		G7, G8	F9803MS	2 F985S	2 FR98S		
KIT NOTES: G7. 3/99-03 Ford Super Duty - If Equipped with a Factory 1.875" Rear Block, the Vehicle Will Sit Level. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Front Springs Part #	Rear Springs Qty	Rear Springs Part #	Add-A- Leafs
<b>97-00 F-250 Light Duty only - 7 Lug (Torsion Bar Front End)</b>									
<b>97-00 F250, Light Duty Only - 7 Lug</b>				<b>Torsion Keys (Front Leveling Kit)</b>					
2"	F301KE			F301KE					
<b>99-2/99 F-250 Super Duty 4WD (Built Before March '99)</b>									
<b>99-2/99 F-250 Super Duty 4WD Kit</b>				<b>ALL Engines with Front Add-A-Leafs</b>					
2-2.5"	F9320K			TB920	1	F9320			
<b>99-2/99 F-250 Super Duty 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>					
4"	F940MK		G8	F940M	2	F940S			
6"	F960MK		G8, G25	F960M	2	F960S			
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.									
<b>99-2/99 F-250 Super Duty 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>					
4"	F940MKS		G8, G10	F940MS	2	F940S	2	FR96S	
6"	F960MKS		G8, G25	F960MS	2	F960S	2	FR94S	
8"	F980MKS-A		G8	F980MS	2	F965S	2	FR96S	
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.									
<b>99-2/99 F-250 Super Duty 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>					
4"	F945MK		G8	F940M	2	F945S			
6"	F965MK		G8, G25	F960M	2	F965S			
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.									
<b>99-2/99 F-250 Super Duty 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>					
4"	F945MKS		G8, G10	F940MS	2	F945S	2	FR96S	
6"	F965MKS		G8, G25	F960MS	2	F965S	2	FR94S	
8"	F985MKS-A		G8	F980MS	2	F985S	2	FR96S	
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.									
<b>87-98 F-250 Independent Front Suspension 4WD (IFS)</b>									
<b>87-98 F-250 (IFS) 4WD Kit</b>				<b>302 or 351 Engine with Replacement Front Springs</b>					
1.5-2"	F35G		G1		1	F35G			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>87-98 F-250 (IFS) 4WD Kit</b>				<b>460 or Diesel Engine with Replacement Front Springs</b>					
1.5-2"	F46D		G1		1	F46D			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>87-98 F-250 (IFS) 4WD Kit</b>				<b>Standard Brackets with Blocks &amp; U-Bolts</b>					
4"	F840TK		G8, G22, G23	F840T	2	F840S			
6"	F860TK		G8, G22, G23	F860T	2	F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>87-98 F-250 (IFS) 4WD Kit</b>				<b>For Rear Towing Package with Blocks &amp; U-Bolts</b>					
4"	F840TKH		G8, G22, G23	F840TH	2	F840S			
6"	F860TKH		G8, G22, G23	F860TH	2	F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>87-98 F-250 (IFS) 4WD System</b>				<b>Standard Brackets with Replacement Rear Springs</b>					
4"	F840TKS		G8, G22, G23	F840TS	2	F840S	2	FR54S	
6"	F860TKS		G8, G22, G23	F860TS	2	F860S	2	FR56S	
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>80-86 F-250 Independent Front Suspension 4WD (IFS)</b>									
<b>80-86 F-250 (IFS) 4WD Kit</b>				<b>302 or 351 Engine with Replacement Front Springs</b>					
1.5-2"	F35G		G1		1	F35G			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>80-86 F-250 (IFS) 4WD Kit</b>				<b>460 or Diesel Engine with Replacement Front Springs</b>					
1.5-2"	F46D		G1		1	F46D			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>80-86 F-250 (IFS) 4WD Kit</b>				<b>Standard Brackets with Blocks &amp; U-Bolts</b>					
4"	F840TK		G8, G22, G23	F840T	2	F840S			
6"	F860TK		G8, G22, G23	F860T	2	F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7140	7240	H7023	H7058		N8023	N8058		M9523	M9558	4
				7140	7240	H7023	H7058		N8023	N8058		M9523	M9558	4
	FA400			7140	7240	H7041	H7060		N8041	N8060		M9541	M9560	6
	FA400	See Page 210		7140	7240	H7041	H7060		N8041	N8060		M9541	M9560	8
	FA400			7140	7240	H7041	H7060		N8041	N8060		M9541	M9560	6
	FA400	See Page 210		7140	7240	H7041	H7060		N8041	N8060		M9541	M9560	8
	FA400			7140	7240	H7041	H7060		N8041	N8060		M9541	M9560	6
	FA400	See Page 210		7140	7240	H7041	H7060		N8041	N8060		M9541	M9560	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7140	7240	H7054	H7058		N8054	N8058		M9554	M9558	4
				7140	7240	H7054	H7058		N8054	N8058		M9554	M9558	4
	FA400	FBL90/RBL90		7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400			7140	7240	H7056	H7060		N8056	N8060		M9556	M9560	8



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
80-86 F-250 (IFS) 4WD Kit				For Rear Towing Package with Blocks & U-Bolts						
4"	F840TKH		G8, G22, G23	F840TH	2	F840S				
6"	F860TKH		G8, G22, G23	F860TH	2	F860S				

KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.

<b>80-86 F-250 (IFS) 4WD System</b>				<b>Standard Brackets with Replacement Rear Springs</b>						
4"	F840TKS		G8, G22, G23	F840TS	2	F840S	2	FR54S		
6"	F860TKS		G8, G22, G23	F860TS	2	F860S	2	FR56S		

KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.

<b>80-96 F-250 2WD (Except 460 &amp; Diesel Engines)</b>										
<b>80-96 F-250 2WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
1.5-2"	182P2K		G1		1	182			R225	
4"	184F2K		G8	184F2	1	184				
6"	186F2K		G8	186F2	1	186				

KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).

<b>77.5-79 F-250 Low Boy 4WD with 3" wide rear springs</b>										
<b>77.5-79 F-250 Low Boy 4WD Kit</b>				<b>With Front Add-A-Leafs</b>						
1.5-2"	F46D				1	F46D				

<b>77.5-79 F-250 Low Boy 4WD Kit</b>				<b>With Blocks &amp; U-Bolts</b>						
4"	F749K			F749	2	F724S				
6"	F760K			F760	2	F746S				

<b>77.5-79 F-250 Low Boy 4WD System</b>				<b>With Replacement Rear Springs</b>						
4"	F749KS			F749S	2	F724S	2	FR54S		
6"	F760KS			F760S	2	F746S	2	FR56S		

<b>67-77 F-250 High Boy 4WD with 2 1/4" wide rear springs</b>										
<b>67-77 F-250 High Boy 4WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
2"	F720K			F7240	2	F724S			R5005	
4"	F740K			F7240	2	F746S			R225	

<b>67-77 F-250 High Boy 4WD System</b>				<b>With Replacement Rear Springs</b>						
2"	F720KS		G6, G10	F720S	2	F724S	2	FR74S		
4"	F740KS			F740S	2	F746S	2	FR74S		

KIT NOTES: G6. The Factory Blocks are Replaced with Included 2" Blocks. G10. The Factory Block is Removed.

<b>2011 F-350 Super Duty 4WD Diesel Engine</b>										
<b>2011 F-350 Super Duty 4WD Front Metal Spacer</b>				F51MS						
1"	F51MS									

<b>2011 F-350 Super Duty 4WD Poly Value Kit</b>				<b>With Rear Add-A-Leafs</b>						
2.5"	F82MK		G33	F52MS					R3815	

KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB1120

<b>2011 F-350 Super Duty (Diesel Engine) 4WD Kit</b>				<b>Diesel Engines with Add-A-Leafs</b>						
2"	F825K		G33		1	F525			R3815	

KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB1120

<b>2011 F-350 Super Duty (Diesel Engine) 4WD Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
4"	F11451KH		G32, G36	F11451 + F114H	1	F545				
6"	F11651KH		G32, G36	F11651 + F116H	1	F565				

KIT NOTES: Upgrade available for 4 & 6" kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.

## CLASS II

<b>2011 F-350 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
4"	F11452KH		G32, G36	F11451 + F114H + F58484LU	1	F545				
6"	F11652KH		G32, G36	F11651 + F116H + F58484LU	1	F565				

<b>2011 F-350 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
8.5"	F11852KH		G32, G36	F11852 + F118H + F58484LU	1	F585			R3815	

KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. \* Recommend CV joint at transfer case for some models. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405, 8.5" Lifts order Part# SBE406.

	Steering Correction (Order 1 Each)	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor Hours
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	
	FA400			7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400	FBL90/RBL90		7140	7240	H7056	H7060		N8056	N8060		M9556	M9560	8

	FA400			7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400	FBL90/RBL90		7140	7240	H7056	H7060		N8056	N8060		M9556	M9560	8

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

				7140	7240	H7052	H7058		N8052	N8058		M9552	M9558	4
	FA400			7140	7240	H7054	H7058		N8054	N8058		M9554	M9558	6
	FA400	See Page 210		7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

			7110	7220					4					
	SDL250		7110	7220	-----	-----	H7056		N8014	N8056		M9514	M9556	4
	SDL250 + FA325	FBL93/RBL93	7110	7220	-----	-----	H7059		N8014	N8059		M9514	M9559	6

	SDL250			7110	7220	-----	-----	H7056		N8014	N8056		M9514	M9556	4
	SDL250 + FA325	FBL93/RBL93		7110	7220	-----	-----	H7059		N8014	N8059		M9514	M9559	6

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

				7110	7220	-----	-----	H7058		N8014	N8058		M9514	M9558	4
		See Page 210		7110	7220	-----	-----	H7058		N8014	N8058		M9514	M9558	4

				7110	7220	-----	-----	H7058		N8014	N8058		M9514	M9558	4
		See Page 210		7110	7220	-----	-----	H7058		N8014	N8058		M9514	M9558	4

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

														2
--	--	--	--	--	--	--	--	--	--	--	--	--	--	---

						H7091	H7060		N8091	N8060		M9591	M9560	4
--	--	--	--	--	--	-------	-------	--	-------	-------	--	-------	-------	---

						H7091	H7060		N8091	N8060		M9591	M9560	4
--	--	--	--	--	--	-------	-------	--	-------	-------	--	-------	-------	---

	FA450	Included		Brkt. Incl.	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Brkt. Incl.	7254	H7093	H7079		N8093	N8079		M9593	M9579	6

	FA450	Included		Brkt. Incl.	7254	H7092	H7060		N8092	N8060		M9592	M9560	6
	FA450	Included		Brkt. Incl.	7254	H7093	H7079		N8093	N8079		M9593	M9579	6

	FA450	Included				H7094	H7099		N8094	N8099		M9594	M9599	12
--	-------	----------	--	--	--	-------	-------	--	-------	-------	--	-------	-------	----



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs	
<b>08-10 F-350 Super Duty 4WD Gas Engine</b>								
<b>08-10 F-350 Super Duty 4WD Front Poly Spacer</b>				<b>All Engines</b>				
1"	F51MS			F51MS				
<b>08-10 F-350 Super Duty 4WD Poly Value Kit</b>				<b>All Engines with Rear Add-A-Leafs</b>				
2"	F82MK		G33	F52MS			R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB820								
<b>08-10 F-350 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Add-A-Leafs</b>				
2"	F820K		G33		1 F520		R3815	
KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB820								
<b>08-10 F-350 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Blocks and U-Bolts</b>				
4"	F8401KH		G31, G32, G36, G41	F8451H	1 F540			
6"	F8601KH		G31, G32, G36, G41	F8651H	1 F560			
KIT NOTES: Upgrade available for 4 & 6 " kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G33. Optional Track Bar relocation bracket may be required. Part# TB820 G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G41. 4, 6, & 8.5" Lifts require minor exhaust modifications								
<b>08-10 F-350 Super Duty (Gas Engine) 4WD System</b>				<b>Gas Engines with Rear Springs</b>				
4"	F8401KSH		G31, G32, G36, G41	F8451SH	1 F540	2 FR84S		
6"	F8601KSH		G31, G32, G36, G41	F8651SH	1 F560	2 FR86S		
KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G41. 4, 6, & 8.5" Lifts require minor exhaust modifications								
<b>CLASS II</b>								
<b>08-10 F-350 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Blocks and U-Bolts</b>				
4"	F84024KH		G31, G32, G36, G37, G41	F8451H + F58484LU	1 F540			
6"	F86024KH		G31, G32, G41	F8651H + F58484LU	1 F560			
<b>08-10 F-350 Super Duty (Gas Engine) 4WD System</b>				<b>Class II Gas Engines with Rear Springs</b>				
4"	F84024KSH		G31, G32, G36, G37, G41	F8451SH + F58484LU	1 F540	2 FR84S		
6"	F86024KSH		G31, G32, G36, G37, G41	F8651SH + F58484LU	1 F560	2 FR86S		
<b>08-10 F-350 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Blocks and U-Bolts</b>				
8.5"	F8802KH		G31, G32, G38, G39, G41	F8852H + F58484LU	1 F580		R300	
<b>08-10 F-350 Super Duty (Gas Engine) 4WD System</b>				<b>Class II Gas Engines with Rear Springs</b>				
8.5"	F8802KSH		G31, G32, G38, G41	F8852SH + F58484LU	1 F580	2 FR88S		
KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. * Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406. G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R. G41. 4, 6, & 8.5" Lifts require minor exhaust modifications								
<b>08-10 F-350 Super Duty 4WD Diesel Engine</b>								
<b>08-10 F-350 Super Duty (Diesel Engine) 4WD Kit</b>				<b>Diesel Engines with Add-A-Leafs</b>				
2"	F825K		G31, G32, G33		1 F525		R3815	
<b>08-10 F-350 Super Duty (Diesel Engine) 4WD Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>				
4"	F8451KH		G31, G32, G36	F8451H	1 F545			
6"	F8651KH		G31, G32, G36	F8651H	1 F565			
KIT NOTES: Upgrade available for 4 & 6 " kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G33. Optional Track Bar relocation bracket may be required. Part# TB820 G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405.								
<b>08-10 F-350 Super Duty (Diesel Engine) 4WD System</b>				<b>Class II Diesel Engines with Blocks and Add-A-Leafs</b>				
8.5"	F8852KH		G31, G32, G38	F8852H + F58484LU	1 F585		R3815	
KIT NOTES: Front and Rear driveline modifications necessary. Call for details. * Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
08-10 F-350 Super Duty (Diesel Engine) 4WD System				Diesel Engines with Rear Springs						
4"	F8451KSH		G31, G32, G36	F8451SH	1	F545	2	FR84S		
6"	F8651KSH		G31, G32, G36	F8651SH	1	F565	2	FR86S		

KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405.

## CLASS II

<b>08-10 F-350 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
4"	F84524KH		G31, G32, G36, G37	F8451H + F58484LU	1	F545				
6"	F86524KH		G31, G32	F8651H + F58484LU	1	F565				

<b>08-10 F-350 Super Duty (Diesel Engine) 4WD Class II System</b>				<b>Diesel Engines with Rear Springs</b>						
4"	F84524KSH		G31, G32, G36, G37	F8451SH + F58484LU	1	F545	2	FR84S		
6"	F86524KSH		G31, G32, G36, G37	F8651SH + F58484LU	1	F565	2	FR86S		

<b>08-10 F-350 Super Duty (Diesel Engine) 4WD Class II Kit</b>				<b>Diesel Engines with Blocks and U-Bolts</b>						
8.5"	F8802KH		G31, G32, G38, G39	F8852H + F58484LU	1	F580			R300	

<b>08-10 F-350 Super Duty (Diesel Engine) 4WD Class II System</b>				<b>Diesel Engines with Rear Springs</b>						
8.5"	F8852KSH		G31, G32, G38	F8852SH + F58484LU	1	F585	2	FR88S		

KIT NOTES: 8.5" Lifts - Front and Rear driveline modifications necessary. Call for details. \* Recommend CV joint at transfer case for some models. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405. G37. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 4" Lifts order Part# U9B16R, 4" Systems order Part# U9B12R, 6" Kits order Part# U9B18R, 6" Systems order Part# U9B12R. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406, G39. Models equipped with a Sterling rear axle will need wider rear U-Bolts. 8.5" Kits order Part# U9B18R, 8.5" Systems order Part# U9B12R

## 05-07 F-350 Super Duty 4WD

<b>05-07 F-350 Super Duty 4WD Front Poly Spacer</b>				<b>All Engines</b>						
1"	F51MS		G30	F51MS						

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550.

<b>05-07 F-350 Super Duty 4WD Poly Value Kit</b>				<b>All Engines with Rear Add-A-Leafs</b>						
2.5"	F52MK		G30, G33	F52MS					R3510	

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G33. Optional Track Bar relocation bracket may be required. Part# TB520

<b>05-07 F-350 Super Duty (Gas Engine) 4WD Kit</b>				<b>Gas Engines with Blocks and U-Bolts</b>						
2-2.5"	F520K		G33		1	F520			R3510	

KIT NOTES: G33. Optional Track Bar relocation bracket may be required. Part# TB520

4"	F5401KH		G30, G31, G32, G36	F5451H	1	F540				
6"	F5601KH		G30, G31, G32, G36	F5651H	1	F560				

KIT NOTES: Upgrade available for 4 & 6 " kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G33. Optional Track Bar relocation bracket may be required. Part# TB520 G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405.

<b>05-07 F-350 Super Duty (Gas Engine) 4WD System</b>				<b>Class II Gas Engines with Blocks and Add-A-Leafs</b>						
8"	F5802KH		G30, G31, G32, G38	F5852AH + F5852B	1	F580			R300	

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406.

<b>05-07 F-350 Super Duty (Gas Engine) 4WD System</b>				<b>Gas Engines with Rear Springs</b>						
4"	F5401KSH		G30, G31, G32, G36	F5451SH	1	F540	2	FR94S		
6"	F5601KSH		G30, G31, G32, G36	F5651SH	1	F560	2	FR96S		

KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405.

<b>05-07 F-350 Super Duty (Gas Engine) 4WD System</b>				<b>Class II Gas Engines with Rear Springs</b>						
8.5"	F5802KSH		G30, G31, G32, G38	F5852ASH + F5852B	1	F580	2	FR98S		

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406.

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	6
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	6
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														2
						H7091	H7060		N8091	N8060		M9591	M9560	4
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8
	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
05-07 F-350 Super Duty (Diesel Engine) 4WD Kit				Diesel Engines with Blocks and U-Bolts						
2-2.5"	F525K		G33		1	F525			R3510	
4"	F5451KH		G30, G31, G32, G36	F5451H	1	F545				
6"	F5651KH		G30, G31, G32, G36	F5651H	1	F565				

KIT NOTES: Upgrade available for 4 & 6 " kit. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G33. Optional Track Bar relocation bracket may be required. Part# TB520 G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405.

<b>05-07 F-350 Super Duty (Diesel Engine) 4WD System</b>				<b>Class II Diesel Engines with Blocks and Add-A-Leafs</b>						
8.5"	F5852KH		G30, G31, G32, G38	F5852AH + F5852B	1	F585			R300	

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406.

<b>05-07 F-350 Super Duty (Diesel Engine) 4WD System</b>				<b>Diesel Engines with Rear Springs</b>						
4"	F5451KSH		G30, G31, G32, G36	F5451SH	1	F545	2	FR94S		
6"	F5651KSH		G30, G31, G32, G36	F5651SH	1	F565	2	FR96S		

KIT NOTES: Upgrade available for 4 & 6 " system. Part # F58484LU. Radius arm conversion to upper and lower control arms. G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G36. Model with rear sway bar must order extended rear sway bar end links. 4" Lifts order Part# SBE404, 6" Lifts order Part# SBE405.

<b>05-07 F-350 Super Duty (Diesel Engine) 4WD System</b>				<b>Class II Diesel Engines with Rear Springs</b>						
8.5"	F5852KSH		G30, G31, G32, G38	F5852ASH + F5852B	1	F585	2	FR98S		

KIT NOTES: G30. Heavy-Duty Replacement front sway bar is recommended for improved handling. Part# FSB550. G31. Lift is designed to level models with factory 1 7/8" rear blocks. Models with optional factory 3 7/8" rear blocks will have a higher rake angle in the rear. G32. Lift Heights will vary depending on factory package options. G38. Model with rear sway bar must order extended rear sway bar end links. 8.5" Lifts order Part# SBE406.

## 00-04 F-350 Super Duty 4WD

### PLATINUM SERIES Z-LINK® (Coil-Over Conversion)

<b>00-04 F-350 Super Duty 4WD Kit</b>				<b>All Engines with Blocks &amp; U-Bolts</b>						
6"	FCO9652MK		G40	COF65+FZ968+FZ962						

KIT NOTES: G40. Depending on tire and wheel size, Steering may need to be limited to allow for clearance of the lower control arm.

<b>00-04 F-350 Super Duty 4WD System</b>				<b>All Engines with Replacement Rear Springs</b>						
6"	FCO9652MKS		G40	COF65+FZ968+FZ962S			2	FR96S		
8"	FCO9852MKS		G40	COF85+FZ988+FZ982S			2	FR98S		

KIT NOTES: G40. Depending on tire and wheel size, Steering may need to be limited to allow for clearance of the lower control arm.

## SOFTTRIDE® LIFT SYSTEMS

<b>00-04 F-350 Super Duty 4WD Kit</b>				<b>ALL Engines with Front Add-A-Leafs</b>						
2-2.5"	F93203K			TB9203	1	F9320				

<b>00-04 F-350 Super Duty 4WD Kit</b>				<b>ALL Engines with Replacement Front Springs</b>						
1.5-2"	F9202K			F9202M	2	F920S				

<b>00-04 F-350 Super Duty 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>						
4"	F9402MK		G8	F9402M	2	F940S				
6"	F9602MK		G8, G25	F9602M	2	F960S				

KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.

<b>00-04 F-350 Super Duty 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>						
4"	F9402MKS		G8	F9402MS	2	F940S	2	FR94S		
6"	F9602MKS		G8, G25	F9602MS	2	F960S	2	FR96S		
8"	F9802MKS-A		G8	F9802MS	2	F965S	2	FR98S		

KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.

<b>00-04 F-350 Super Duty 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>						
4"		F9452PN	G8	Included		Included				
4"	F9452MK		G8	F9402M	2	F945S				
6"	F9652MK		G8, G25	F9602M	2	F965S				

KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.

<b>00-04 F-350 Super Duty 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>						
4"	F9452MKS		G8	F9402MS	2	F945S	2	FR94S		
6"	F9652MKS		G8, G25	F9602MS	2	F965S	2	FR96S		
8"	F9852MKS-A		G8	F9802MS	2	F985S	2	FR98S		

KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.

	Steering Correction (Order 1 Each)	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor Hours
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	
						H7091	H7060		N8091	N8060		M9591	M9560	4
	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8

	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
--	-------	----------	--	--	------	-------	-------	--	-------	-------	--	-------	-------	----

	FA450	Included		Included	7254	H7092	H7079		N8092	N8079		M9592	M9579	8
	FA450	Included		Included	7254	H7093	H7079		N8093	N8079		M9593	M9579	8

	FA450	Included			7254	H7094	H7079		N8094	N8079		M9594	M9579	12
--	-------	----------	--	--	------	-------	-------	--	-------	-------	--	-------	-------	----

**NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY**

	FA699	FBL92/RBL99	7099	7199	7299	----	----	H7079	----	----	N8079	----	----	M9579	12
	FA699	FBL92/RBL99	7099	7199	7299	----	----	H7079	----	----	N8079	----	----	M9579	12
	FA699	Included	7099	7199	7299	----	----	H7079	----	----	N8079	----	----	M9579	12

			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4

	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8

	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8

	Included								Included	Included				8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8

	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL92/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs	
<b>3/99-99 F-350 Super Duty 4WD (Built After March '99 - With Square Front U-Bolts)</b>								
<b>SOFTTRIDE® LIFT SYSTEMS</b>								
<b>3/99-99 F-350 Super Duty 4WD Kit</b>				<b>ALL Engines with Front Add-A-Leafs</b>				
2-2.5"	F93203K			TB9203	1 F9320			
<b>3/99-99 F-350 Super Duty 4WD Kit</b>				<b>ALL Engines with Replacement Front Springs</b>				
1.5-2"	F9203K			F9203M	2 F920S			
<b>3/99-99 F-350 Super Duty 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>				
4"	F9403MK		G8	F9403M	2 F940S			
6"	F9603MK		G8, G25	F9603M	2 F960S			
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-350 Super Duty 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>				
4"	F9403MKS		G8	F9403MS	2 F940S	2 FR94S		
6"	F9603MKS		G8, G25	F9603MS	2 F960S	2 FR96S		
8"	F9803MKS-A		G8	F9803MS	2 F965S	2 FR98S		
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-350 Super Duty 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>				
4"	F9453MK		G8	F9403M	2 F945S			
6"	F9653MK		G8, G25	F9603M	2 F965S			
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar. G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>3/99-99 F-350 Super Duty 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>				
4"	F9453MKS		G8	F9403MS	2 F945S	2 FR94S		
6"	F9653MKS		G8, G25	F9603MS	2 F965S	2 FR96S		
8"	F9853MKS-A		G8	F9803MS	2 F985S	2 FR98S		
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>99-2/99 F-350 Super Duty 4WD (Built Before March '99)</b>								
<b>99-2/99 F-350 Super Duty 4WD Kit</b>				<b>ALL Engines with Front Add-A-Leafs</b>				
2-2.5"	F9320K			TB920	1 F9320			
<b>99-2/99 F-350 Super Duty 4WD Kit</b>				<b>Gas V8 or V10 Engine with Blocks &amp; U-Bolts</b>				
4"	F940MK		G8	F940M	2 F940S			
6"	F960MK		G8, G25	F960M	2 F960S			
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>99-2/99 F-350 Super Duty 4WD System</b>				<b>Gas V8 or V10 Engine with Replacement Rear Springs</b>				
4"	F940MKS		G8, G10	F940MS	2 F940S	2 FR96S		
6"	F960MKS		G8, G25	F960MS	2 F960S	2 FR94S		
8"	F980MKS-A		G8	F980MS	2 F965S	2 FR96S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>99-2/99 F-350 Super Duty 4WD Kit</b>				<b>Diesel Engine with Blocks &amp; U-Bolts</b>				
4"	F945MK		G8	F940M	2 F945S			
6"	F965MK		G8, G25	F960M	2 F965S			
KIT NOTES: G8. Power Steering Models Only. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>99-2/99 F-350 Super Duty 4WD System</b>				<b>Diesel Engine with Replacement Rear Springs</b>				
4"	F945MKS		G8, G10	F940MS	2 F945S	2 FR96S		
6"	F965MKS		G8, G25	F960MS	2 F965S	2 FR94S		
8"	F985MKS-A		G8	F980MS	2 F985S	2 FR96S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G25. # SBE405 May Be Required On Models Equipped With Factory Rear Sway Bar.								
<b>86-98 F-350 Straight Axle / Mono-Beam 4WD</b>								
<b>86-98 F-350 4WD (Mono-Beam) Kit</b>				<b>ALL Except Crew Cabs with Front Add-A-Leafs</b>				
1.5-2"	F35G				1 F35G			
<b>86-98 F-350 4WD (Mono-Beam) Kit</b>				<b>Crew Cabs with Front Add-A-Leafs</b>				
2-2.5"	F3546K			UFF	1 F35G + F46D			
<b>86-98 F-350 4WD (Mono-Beam) Kit</b>				<b>With Blocks &amp; U-Bolts</b>				
3-4"	F840MK		G8, G22, G23	F840M	2 F840S			
5-6"	F860MK		G8, G22, G23	F860M	2 F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA499		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA499	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7099	7199	7299	H7023	H7060		N8023	N8060		M9523	M9560	4
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA400	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	FA400		7099	7199	7299	H7041	H7079		N8041	N8079		M9541	M9579	8
	FA400	FBL99/RBL99	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
	Included	Included	7099	7199	7299	H7060	H7079		N8060	N8079		M9560	M9579	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7110	7240		H7023	H7060		N8023	N8060		M9523	M9560	4
			7110	7240		H7023	H7060		N8023	N8060		M9523	M9560	4
	FA400		7110	7240		H7041	H7060		N8041	N8060		M9541	M9560	6
	FA400	See Page 210	7110	7240		H7060	H7060		N8060	N8060		M9560	M9560	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Part #	Rear Springs Qty	Part #	Add-A- Leafs
<b>86-98 F-350 4WD (Mono-Beam) Kit</b>				<b>For Rear Towing Package with Blocks &amp; U-Bolts</b>					
3-4"	F840MKH		G8, G22, G23	F840MH	2	F840S			
5-6"	F860MKH		G8, G22, G23	F860MH	2	F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>86-98 F-350 4WD (Mono-Beam) System</b>				<b>With Replacement Rear Springs</b>					
3-4"	F840MKS		G8, G22, G23	F840MS	2	F840S	2	FR54S	
5-6"	F860MKS		G8, G22, G23	F860MS	2	F860S	2	FR56S	
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>80-85 F-350 Independent Front Suspension 4WD (IFS)</b>									
<b>80-85 F-350 (IFS) 4WD Kit</b>				<b>302 or 351 Engine with Front Add-A-Leafs</b>					
1.5-2"	F35G		G1		1	F35G			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>80-85 F-350 (IFS) 4WD Kit</b>				<b>460 or Diesel Engine with Front Add-A-Leafs</b>					
1.5-2"	F46D		G1		1	F46D			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>80-85 F-350 (IFS) 4WD Kit</b>				<b>Standard Brackets with Blocks &amp; U-Bolts</b>					
4"	F840TK		G8, G22, G23	F840T	2	F840S			
6"	F860TK		G8, G22, G23	F860T	2	F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>80-85 F-350 (IFS) 4WD Kit</b>				<b>For Rear Towing Package with Blocks &amp; U-Bolts</b>					
4"	F840TKH		G8, G22, G23	F840TH	2	F840S			
6"	F860TKH		G8, G22, G23	F860TH	2	F860S			
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>80-85 F-350 (IFS) 4WD System</b>				<b>Standard Brackets with Replacement Rear Springs</b>					
4"	F840TKS		G8, G22, G23	F840TS	2	F840S	2	FR54S	
6"	F860TKS		G8, G22, G23	F860TS	2	F860S	2	FR56S	
KIT NOTES: G8. Power Steering Models Only. G22. May Require End Links On Models Equipped With Factory Sway Bars. See Ford Accessories. G23. Vehicles with Diesel Engine Will Require Front Fitted Leafs. Vehicles with Extra Weight May require Fitted Leafs. See Page 213.									
<b>80-96 F-350 2WD (Except 460 &amp; Diesel Engines)</b>									
<b>80-96 F-350 2WD Kit</b>				<b>With Blocks &amp; U-Bolts and/or Add-A-Leafs</b>					
1.5-2"	182P2K		G1		1	182			R225
4"	184F2K		G8	184F2		184			
6"	186F2K		G8	186F2	1	186			
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G8. Power Steering Models Only.									
<b>79 F-350 Low Boy 4WD</b>									
<b>79 F-350 Low Boy 4WD Kit</b>				<b>With Front Add-A-Leafs</b>					
1.5-2"	F46D				1	F46D			
<b>83-97 RANGER 4WD</b>									
<b>90-97 Ranger XLT 4WD Kit</b>				<b>6-Cylinder Engine with Add-A-Leafs</b>					
1.5-2"	132XK		G1, G27		1	132X			R3135
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G27. May Require # HS25 for Alignment and Leveling Aid.									
<b>90-97 Ranger XLT 4WD System</b>				<b>6-Cylinder Engine with Replacement Rear Springs</b>					
1.5-2"	132XKS		G1, G10, G27	132XRS	1	132X	2	FR34S	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G10. The Factory Block is Removed. G27. May Require # HS25 for Alignment and Leveling Aid.									
<b>90-97 Ranger 4WD Kit</b>				<b>4-Cylinder Engine with Add-A-Leafs</b>					
1.5-2"	132K		G1		1	132			R3135
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>87-89 Ranger STX 4WD Kit</b>				<b>With Add-A-Leafs</b>					
1.5-2"	132XK		G1		1	132X			R3135
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).									
<b>87-89 Ranger STX 4WD System</b>				<b>With Replacement Rear Springs</b>					
1.5-2"	132XKS		G1, G10	132XRS	1	132X	2	FR34S	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G10. The Factory Block is Removed.									

	Steering Correction	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)		OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	FA400			7110	7240	H7041	H7060		N8041	N8060		M9541	M9560	6
	FA400	See Page 210		7110	7240	H7060	H7060		N8060	N8060		M9560	M9560	8

	FA400			7110	7240	H7041	H7060		N8041	N8060		M9541	M9560	6
	FA400	See Page 210		7110	7240	H7060	H7060		N8060	N8060		M9560	M9560	8

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

				7140	7240	H7054	H7058		N8054	N8058		M9554	M9558	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7140	7240	H7054	H7058		N8054	N8058		M9554	M9558	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

	FA400			7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400	See Page 210		7140	7240	H7056	H7060		N8056	N8060		M9556	M9560	8

	FA400			7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400	FBL90/RBL90		7140	7240	H7056	H7060		N8056	N8060		M9556	M9560	8

	FA400			7140	7240	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400	FBL90/RBL90		7140	7240	H7056	H7060		N8056	N8060		M9556	M9560	8

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

	FA400					H7054	H7058		N8054	N8058		M9554	M9558	4
						H7054	H7058		N8054	N8058		M9554	M9558	6
	FA400	See Page 210				H7055	H7060		N8055	N8060		M9555	M9560	6

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

	-----			7110	7220									4
--	-------	--	--	------	------	--	--	--	--	--	--	--	--	---

## NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY

				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---

				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
--	--	--	--	------	------	-------	-------	--	-------	-------	--	-------	-------	---



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
83-89 Ranger 4WD Kit				ALL (Except SuperCab with 2.9 Liter) with Add-A-Leafs						
1.5-2"	132K		G1		1	132			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										
83-89 Ranger 4WD System				ALL (Except SuperCab with 2.9 Liter) with Replacement Rear Springs						
1.5-2"	132KS		G1, G10	132RS	1	132	2	FR34S		
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G10. The Factory Block is Removed.										
83-89 Ranger SuperCab 4WD Kit				2.9L with Add-A-Leafs						
1.5-2"	132XK		G1		1	132X			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										
83-89 Ranger SuperCab 4WD System				2.9 Liter with Replacement Rear Springs						
1.5-2"	132XKS		G1, G10	132XRS	1	132X	2	FR34S		
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G10. The Factory Block is Removed.										
83-97 Ranger 4WD Kit				Heavy-Duty Brackets with Blocks & U-Bolts and/or Add-A-Leafs						
4"	134RHK		G8, G27	134RH	1	134				
6"	136RHK		G8, G27	136RH	1	136				
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
83-97 Ranger 4WD System				Heavy-Duty Brackets with Replacement Rear Springs						
4"	134RHKS		G8, G10, G27	134RHS	1	134	2	FR34S		
6"	136RHKS		G8, G27	136RHS	1	136	2	FR34S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
83-97 Ranger 4WD Kit				Class II Brackets and Radius Arms with Blocks & U-Bolts						
4"	234RHK-A		G8, G27	234RH+RA135	1	134				
6"	236RHK-A		G8, G27	236RH+RA135	1	136				
KIT NOTES: G8. Power Steering Models Only. G26. # HS25 May Be Required for Models with 4.0 Liter Engines.										
83-97 Ranger 4WD System				Class II Brackets and Radius Arms with Replacement Rear Springs						
4"	234RHKS-A		G8, G10, G27	234RHS+RA135	1	134	2	FR34S		
6"	236RHKS-A		G8, G27	236RHS+RA135	1	136	2	FR34S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G27. May Require # HS25 for Alignment and Leveling Aid.										
83-97 RANGER 2WD										
90-97 RANGER 2WD Kit				2.3, 2.9 & 3.0 Liter Engines with Add-A-Leafs						
1.5-2"	132K		G1		1	132			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										
90-97 RANGER 2WD Kit				4.0 Liter Engines with Add-A-Leafs						
1.5-2"	132XK		G1		1	132X			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										
83-89 RANGER 2WD Kit				ALL (Except SuperCab with 2.9 Liter) with Add-A-Leafs						
1.5-2"	132K		G1		1	132			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										
83-89 Ranger SuperCab 2WD Kit				2.9L with Add-A-Leafs						
1.5-2"	132XK		G1		1	132X			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										
83-97 RANGER 2WD Kit				With Blocks & U-Bolts						
6"	136R2K		G8, G27	136R2	1	136				
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
83-97 RANGER 2WD Kit				Class II Brackets and Radius Arms with Blocks & U-Bolts						
6"	236R2K-A		G8, G27	236R2+RA235	1	136				
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid.										
83-97 RANGER 2WD System				Class II Brackets and Radius Arms with Replacement Rear Springs						
6"	236R2KS-A		G8, G27	236R2S+RA235	1	136	2	FR34S		
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid.										
84-90 BRONCO II 4WD										
83-90 BRONCO II 4WD Kit				Heavy-Duty Brackets Blocks & U-Bolts and/or Add-A-Leafs						
1.5-2"	132K		G1, G2		1	132			R3135	
6"	136BHK		G2, G8, G27	136BH	1	136				
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section). G2. On 1985-90 Bronco II's Equipped with a 'Tulip-Type' Rear Drive Shaft, the Drive Shaft MUST Be Changed When Lifted 2" or more. G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
	FA400			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	6
	FA400	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	6
	FA400	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	Included			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	7
	Included	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
	Included			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	7
	Included	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
	FA400	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	Included	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
	Included	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
	FA400	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6



LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
84-90 BRONCO II 4WD System				Heavy-Duty Brackets with Replacement Rear Springs						
6"	136BHKS		G2, G8, G27	136BHS	1	136	2	FR36S		
KIT NOTES: G2. On 1985-90 Bronco II's Equipped with a 'Tulip-Type' Rear Drive Shaft, the Drive Shaft MUST Be Changed When Lifted 2" or more. G8. Power Steering Models Only. G9. This Lift also includes 2" Blocks. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
84-90 BRONCO II 4WD Kit				Class II Brackets and Radius Arms with Blocks & U-Bolts						
6"	236BHK-A		G2, G8, G27	236BH+RA135	1	136				
KIT NOTES: G2. On 1985-90 Bronco II's Equipped with a 'Tulip-Type' Rear Drive Shaft, the Drive Shaft MUST Be Changed When Lifted 2" or more. G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
84-90 BRONCO II 4WD System				Class II Brackets and Radius Arms with Replacement Rear Springs						
4"	234BHKS-A		G2, G8, G27	234BHS+RA135	1	134	2	FR34S		
6"	236BHKS-A		G2, G8, G27	236BHS+RA135	1	136	2	FR36S		
KIT NOTES: G2. On 1985-90 Bronco II's Equipped with a 'Tulip-Type' Rear Drive Shaft, the Drive Shaft MUST Be Changed When Lifted 2" or more. G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
90-94 EXPLORER 4WD (2 Door & 4 Door)										
90-94 EXPLORER 4WD (2 Door & 4 Door) Kit				With Add-A-Leafs						
1.5-2"	132EXK		G1		1	132X			R225	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Ford Accessories Section).										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	FA400	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	Included	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
	Included			7150	7250	H7054	H7058		N8054	N8058		M9554	M9558	7
	Included	See Page 210		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7150	7250	H7052	H7039		N8052	N8039		M9552	M9539	4



# HONDA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
06-11 HONDA RIDGELINE 4WD										
06-11 HONDA RIDGELINE 4WD Kit				Front and Rear Metal Strut Spacers (Includes Front Swar Bar End Links)						
2"	HR20MS			HR20MS						
KIT NOTES: Installs Above Strut Assembly. HR20MS Includes Sway Bar End Links.										

# INTERNATIONAL

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
72-82 Scout 4WD										
72-82 Scout II, Terra, Traveler 4WD System				With FULL-Height Replacement Rear Springs						
2"	S20K		I3	S24	2	S20FS	2	S20RS		
4"	S40K		I3	S24	2	S40FS	2	S40RS		
KIT NOTES: I3. Power Steering Models Only.										

# ISUZU

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
05-08 Isuzu i-Series 4WD (Torsion Bar)										
05-08 Isuzu i-Series 4WD Kit				Kit with rear Add-A-Leafs						
4"	CC401K		K24	CC401					RCC25	
KIT NOTES: K24. Can NOT Re-Use OEM Wheels. REQUIRES 4.75" Back Spacing on Wheels.										
05-08 Isuzu i-Series 4WD System				Kit with rear springs						
4"	CC401KS		K24	CC401			2	CCR25S		
KIT NOTES: K24. Can NOT Re-Use OEM Wheels. REQUIRES 4.75" Back Spacing on Wheels.										

	Steering Correction (Order 1 Each)	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														4

## INTERNATIONAL

	Steering Correction (Order 1 Each)	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	SA40			7110		H7055	H7058		N8055	N8058		M9555	M9558	6
	SA40			7110		H7055	H7058		N8055	N8058		M9555	M9558	6

## ISUZU

	Steering Correction (Order 1 Each)	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
		Included				H7040	H7084		N8040	N8084		M9540	M9584	8
		Included				H7040	H7084		N8040	N8084		M9540	M9584	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 2WD / 4WD</b>							
<b>LOWERING COILS</b>							
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 4WD</b>				<b>Includes Front &amp; Rear Lowering Coil Springs</b>			
(-2)-(-2.5)	LOWJK024			LOWJK024	1 Included	1 Included	
NOTE: These coil springs will lower the vehicle's center of gravity 2-2.5".							
<b>POLYURETHANE VALUE KIT</b>							
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 2WD / 4WD</b>				<b>Polyurethane Spacers</b>			
3/4"	JKFPS75			JKFPS75			
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 2WD / 4WD</b>				<b>Front &amp; Rear Leveling Kit - Polyurethane Spacers</b>			
2"	JK20			JK20			
<b>STANDARD SERIES - Standard Links With Poly Bushings</b>							
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 4WD</b>				<b>Includes Front &amp; Rear Coil Springs</b>			
2.5-3.5"	JK250BK		E24	JK250B	1 JK25F	1 JK25R	
2.5-3.5"	JK250BPH		E24	JK250BPH	Included	Included	
NOTE: Kit # JK250BK Includes Rear Track Bar Brace. Part# <b>JKBRC15</b> .							
2.5-3.5"	JK2501K		E24	JK2501	1 JK25F	1 JK25R	
2.5-3.5"	JK2501KCR		E24, E25	JK2501CR + JK25FRCCR *	1 Included	1 Included	
NOTE: Kit # JK2501K & JK2501KCR Includes Rear Track Bar Brace & Lower Control Arms.							
2.5-3.5"		JK2500PH	E24	Included	1 Included	1 Included	
4-5"	JK40BK		E24, E26	JK40B	1 JK40F	1 JK40R	
NOTE: Kit # JK40BK Includes Front & Rear Track Bar Brace, Front & Rear Track Bar Bracket, and Front & Rear Cam Bolts Instead of lower links.							
4-5"	JK40BPH		E24, E26	JK40BPH	Included	Included	
NOTE: Kit # JK40BPH Includes Front & Rear Track Bar Brace, Front & Rear Track Bar Bracket, and Front & Rear Cam Bolts Instead of lower links.							
4-5"	JK401KHx		E24, E26	JK40BPH + JK24LLX	Included	Included	
NOTE: Kit # JK401KHx Includes Front & Rear Track Bar Brace, Front & Rear Track Bar Bracket, Front & Rear Cam Bolts, and Front & Rear Lower Links.							
4-5"	JK401K		E24, E26	JK401	1 JK40F	1 JK40R	
4-5"	JK401KCR		E24, E25, E26	JK401CR + JK40FRCCR *	1 Included	1 Included	
NOTE: Kit # JK401K & JK401KCR Includes Front & Rear Track Bar Brace, Front & Rear Track Bar Bracket, and lower links.							
4-5"		JK401PN	E24, E26	Included	1 Included	1 Included	
KIT NOTES: E24. Due to weight differences 2-door models may receive an additional 1" of lift over 4-door models. To make level order part # JKFPS75 - 3/4" front poly spacers. Upgrade available for 2 & 4-Door 2.5" only. Part # JK2500U includes 4 lower control arms and front and rear sway bar end links. E25. Part numbers ending in 'CR' are powdercoated in Skyjacker® Classic Red. E26. 2-Door Models will require rear cv driveshaft. Part# CAM700 highly recommended for 2-Door models for optimum pinion adjustment. * JK25FRCCR and JK40FRCCR includes front and rear coils in Classic Red.							
<b>VALUE FLEX SERIES - Short Arms With Lower Links Only</b>							
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 4WD</b>				<b>Includes Front &amp; Rear Coil Springs</b>			
2.5-3.5"	JK2501K-SVX		E24	JK2501-SVX	1 JK25F	1 JK25R	
4-5"	JK401K-SVX		E24, E26	JK401-SVX	1 JK40F	1 JK40R	
KIT NOTES: E24. Due to weight differences 2-door models may receive an additional 1" of lift over 4-door models Optional upper value flex control arms available. Front - part# JKULF26-SX & Rear - part# JKULR26-SX . E26. 2-Door Models will require rear cv driveshaft. Part# CAM700 highly recommended for 2-Door models for optimum pinion adjustment.							
<b>LONG ARM SERIES - With Upper and Lower Links</b>							
<b>07-11 Wrangler JK / Rubicon 2 &amp; 4-Door 4WD</b>				<b>Includes Front &amp; Rear Coil Springs</b>			
4-5"	JK40LAK-SX		E24, E26	JK46LA-SX + JK40LA	1 JK40F	1 JK40R	
6-7"	JK60LAK-SX		E24	JK46LA-SX + JK60LA	1 JK60F	1 JK60R	
NOTE: Factory Skid Plates Can Not Be Re-Used with Long Arm Series. E24. Due to weight differences 2-door models may receive an additional 1" of lift over 4-door models With the 6-7" kit - new front & rear drive shaft is required. OEM Wheel Can Be Used. E26. 2-Door Models will require rear cv driveshaft. Part# CAM700 highly recommended for 2-Door models for optimum pinion adjustment.							
<b>04-06 Wrangler TJ Unlimited / Rubicon Unlimited 4WD</b>							
<b>POLYURETHANE VALUE KIT</b>							
<b>04-06 Wrangler TJ Unlimited / Rubicon Unl. 4WD</b>				<b>Polyurethane Spacers</b>			
2"	TJ20			TJ20			
<b>STANDARD SERIES</b>							
<b>04-06 Wrangler TJ Unlimited / Rubicon Unl. 4WD</b>				<b>Includes Front &amp; Rear Coil Springs</b>			
2.5"	TJ253KU		E8, E22	TJ253	1 TJ25F	1 TJ25RU	
4"	TJ403KU		E8, E22	TJ403	1 TJ40F	1 TJ40RU	
<b>VALUE FLEX SERIES - Short Arms With Lower Links Only</b>							
<b>04-06 Wrangler TJ Unlimited / Rubicon Unl. 4WD</b>				<b>Includes Front &amp; Rear Coil Springs (Includes NG Rebuildable Rod Ends)</b>			
2.5"	TJ253KU-SVX		E8, E22	TJ253-SVX	1 TJ25F	1 TJ25RU	
4"	TJ403KU-SVX		E8, E22	TJ403-SVX	1 TJ40F	1 TJ40RU	

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
			7003		7203				N8005	N8007				6
			7003		7203	-----	-----		-----	-----		-----	-----	2
			7003		7203	H7035	H7037		N8035	N8037		M9535	M9537	5
			7003		7203	H7035	H7037		N8035	N8037		M9535	M9537	6
			7003		7203	Included	Included							6
			7003		7203	H7035	H7037		N8035	N8037		M9535	M9537	6
			7003		7203	H7035	H7037		N8035	N8037		M9535	M9537	6
	JA770	Bracket Included	7003		7203	Included	Included							6
			7003		7203	H7065	H7067		N8065	N8067		M9565	M9567	8
	JA770	Bracket Included	7003		7203	Included	Included							8
	JA770	Bracket Included	7003		7203	Included	Included							8
	JA770	Bracket Included	7003		7203	H7065	H7067		N8065	N8067		M9565	M9567	8
	JA770	Bracket Included	7003		7203	H7065	H7067		N8065	N8067		M9565	M9567	8
	Included								Included	Included		Included	Included	8
			7003		7203	H7035	H7037		N8035	N8037		M9535	M9537	8
	JA770	Bracket Included	7003		7203	H7065	H7067		N8065	N8067		M9565	M9567	8
			7003		7203	H7065	H7067		N8065	N8067		M9565	M9567	8
	JA770	Bracket Included	7003		7203	H7065	H7067		N8065	N8067		M9565	M9567	10
	JA770	Included	7003		7203	H7075	H7087		N8075	N8087		M9575	M9587	10
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>														
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	4
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	6
	Included (E10)	FBL44/RBL98	7009		7219	H7025	H7028		N8025	N8028		M9525	M9528	6
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	8
	Included (E10)	FBL44/RBL98	7009		7219	H7025	H7028		N8025	N8028		M9525	M9528	8



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Front Springs Part #	Rear Springs Qty	Rear Springs Part #	Add-A-Leafs	
<b>ROCK READY® 1 SERIES - Long Arms With Lower Links Only</b>										
<b>04-06 Wrangler TJ Unlimited / Rubicon Unl. 4WD</b>				<b>Includes Front &amp; Rear Coil Springs (Includes NG Rebuildable Rod Ends)</b>						
6"	TJ60URR1K		E8, E14, E15, E16, E22	TJ60URRX+TJ60RR1	1	TJ60F	1	TJ60RU		
KIT NOTE: E8. Vehicles with 4 Cylinder Engines and/or Soft Tops Will Sit a Little Higher Due to the Weight Difference. E10. # JA750 Included for Power Steering - Order #JA850 for Manual Steering. E14. 'Non Rubicons' REQUIRE Slip Yoke Eliminator Kit# RR231 & Replacement C.V. Driveshaft. Available Direct From Skyjacker®. Rubicons REQUIRE C.V. Yoke Part # CVR680 & Replacement C.V. Driveshaft. E15. Automatic transmission models must remove front skid plate for driveshaft clearance. E16. Modifications to the factory exhaust cross-over pipe will be necessary. E22. 6 Speed models may require additional modification. Contact Skyjacker® for more information.										
<b>03-06 Wrangler TJ &amp; Rubicon 4WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>03-06 Wrangler TJ/ Rubicon 4WD System</b>				<b>Polyurethane Spacers</b>						
2"	TJ20			TJ20						
<b>STANDARD SERIES - Standard Links With Poly Bushings</b>										
<b>03-06 Wrangler TJ/ Rubicon 4WD System</b>				<b>Includes Front &amp; Rear Coil Springs</b>						
2.5"	TJ250K			TJ250	1	TJ25F	1	TJ25R		
NOTE: Kit # TJ250K includes rear track bar bracket & rear cam bolts. Optional Lower control arms Part # TJLL24. Optional Transfer case Lowering Kit Part # TCL103.										
2.5"	TJ253K		E8, E22	TJ253	1	TJ25F	1	TJ25R		
2.5"	TJ253KCR		E8, E22, E26	TJ253CR + TJ25FRCR *	1	Included	1	Included		
2.5"		TJ2513PH	E8	Included	1	Included	1	Included		
4"	TJ403K		E10, E8, E22	TJ403	1	TJ40F	1	TJ40R		
4"	TJ403BPH		E10, E8, E22	TJ40BPH		Included		Included		
NOTE: Kit # TJ403BPH includes Front & Rear Lower Links, Rear Track Bar Bracket, Drop Pitman Arm, Transfer Case Lowering Kit, Front and Rear Extended End Links.										
4"	TJ403BPHX		E10, E8, E22	TJ403BPHX		Included		Included		
NOTE: Kit # TJ403BPHX includes Front & Rear Single Flex Lower Links, Rear Track Bar Bracket, Drop Pitman Arm, Transfer Case Lowering Kit, Front and Rear Extended End Links.										
4"	TJ403KCR		E10, E8, E22, E26	TJ403CR + TJ40FRCR *	1	Included	1	Included		
4"		TJ4013PH	E8, E10	Included	1	Included	1	Included		
<b>VALUE FLEX SERIES - Short Arms With Lower Links Only</b>										
<b>03-06 Wrangler TJ/ Rubicon 4WD System</b>				<b>Includes Front &amp; Rear Coil Springs (Includes NG Rebuildable Rod Ends)</b>						
2.5"	TJ253K-SVX		E8, E22	TJ253-SVX	1	TJ25F	1	TJ25R		
4"	TJ403K-SVX		E8, E22	TJ403-SVX	1	TJ40F	1	TJ40R		
<b>ROCK READY® 1 SERIES - Long Arms With Lower Links Only</b>										
<b>03-06 Wrangler TJ/ Rubicon 4WD System</b>				<b>Rock Ready® Kit (Includes NG Rebuildable Rod Ends)</b>						
4"	TJ40RR1K		E10, E8, E22, E23	TJ40RRX+TJ40XRR1	1	TJ40F	1	TJ40R		
6"	TJ60RR1K		E10, E5, E8, E16, E23	TJ68RRX+TJ60RR1	1	TJ60F	1	TJ60R		
<b>ROCK READY® 2 SERIES - Long Arms With Upper and Lower Links</b>										
<b>03-06 Wrangler TJ/ Rubicon 4WD System</b>				<b>Rock Ready® Kit (Includes NG Rebuildable Rod Ends)</b>						
6"	TJ60RR2K		E5, E8, E10, E16	TJ68RRX+TJ60X2	1	TJ60F	1	TJ60R		
6"		TJ676XPN	E5, E8, E10, E16	Included	1	Included	1	Included		
NOTE: Kit# TJ676XPN - Skid Plate SP176 will not work with manual transmission.										
8"	TJ80RR2K		E5, E8, E10, E16	TJ68RRX+TJ80X2	1	TJ80F	1	TJ80R		
KIT NOTE: E5. Slip Yoke Eliminator Kit # RR231 & Replacement C.V. Driveshaft is REQUIRED. Available Direct from Skyjacker®. E8. Vehicles with 4 Cylinder Engines and/or Soft Tops Will Sit a Little Higher Due to the Weight Difference. E10. # JA750 Included for Power Steering - Order #JA850 for Manual Steering. E16. Modifications to the factory exhaust cross-over pipe will be necessary. E22. 6 Speed models may require additional modification. Contact Skyjacker® for more information. E23. Order part # JUL48SFX to make Rock Ready 2, which includes upper front and rear links. E26. Part numbers ending in 'CR' are powdercoated in Skyjacker® Classic Red. * TJ25FRCR and TJ40FRCR includes front and rear coils in Classic Red.										
<b>97-02 Wrangler TJ 4WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>97-02 Wrangler TJ 4WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	TJ20			TJ20						

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	Included (E10)	Included	Included		7112	H7049	H7063		N8049	N8063				8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	4
						H7016	H7018		N8016	N8018		M9516	M9518	6
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	6
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	6
						Included	Included							6
	Included (E10)	FBL44/RBL98	7009		7219	H7025	H7028		N8025	N8028		M9525	M9528	6
	Included (E10)	FBL44/RBL98	7009		7219	Included	Included							6
	Included (E10)	FBL44/RBL98	7009		7219	Included	Included							6
	Included (E10)	FBL44/RBL98	7009		7219	H7025	H7028		N8025	N8028		M9525	M9528	6
	Included (E10)	FBL44/RBL98	7009		7219	Included	Included							6
			7009		7219	H7016	H7018		N8016	N8018		M9516	M9518	8
	Included (E10)	FBL44/RBL98	7009		7219	H7025	H7028		N8025	N8028		M9525	M9528	8
	Included (E10)	Included	Included		7112	H7025	H7028		N8025	N8028		M9525	M9528	10
	Included (E10)	Included	Included		7112	H7049	H7063		N8049	N8063		M9549	M9563	12
	Included (E10)	Included	Included		7112	H7049	H7063		N8049	N8063		M9549	M9563	12
	Included (E10)	Included	Included		7112				Included	Included		Included	Included	12
	Included	Included	Included		7112	H7049	H7063		N8049	N8063		M9549	M9563	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7009	7119	7219	H7016	H7018		N8016	N8018		M9516	M9518	4



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs
<b>STANDARD SERIES - Standard Links With Poly Bushings</b>							
<b>97-02 Wrangler TJ 4WD System</b>				<b>Includes Front &amp; Rear Springs</b>			
2.5"	TJ250K			TJ250	1 TJ25F	1 TJ25R	
NOTE: Kit # TJ250K includes rear track bar bracket & rear cam bolts. Optional Lower control arms Part # TJLL24. Optional Transfer case Lowering Kit Part # TCL101.							
2.5"	TJ251K		E8	TJ251	1 TJ25F	1 TJ25R	
2.5"	TJ251KCR		E8, E26	TJ251CR + TJ25FRCR *	1 Included	1 Included	
2.5"		TJ2513PH	E8	Included	1 Included	1 included	
4"	TJ401K		E8, E10	TJ401	1 TJ40F	1 TJ40R	
4"	TJ401BPH		E8, E10	TJ401BPH	Included	Included	
NOTE: Kit # TJ401BPH includes Front & Rear Lower Links, Rear Track Bar Bracket, Drop Pitman Arm, Transfer Case Lowering Kit, Front and Rear Extended End Links.							
4"	TJ401BPHX		E8, E10	TJ401BPHX	Included	Included	
NOTE: Kit # TJ401BPHX includes Front & Rear Single Flex Lower Links, Rear Track Bar Bracket, Drop Pitman Arm, Transfer Case Lowering Kit, Front and Rear Extended End Links.							
4"	TJ401KCR		E8, E10, E26	TJ401CR + TJ40FRCR *	1 Included	1 Included	
4"		TJ4013PH	E8, E10	Included	1 Included	1 Included	
<b>VALUE FLEX SERIES - Short Arms With Lower Links Only</b>							
<b>97-02 Wrangler TJ 4WD System</b>				<b>Includes Front &amp; Rear Springs (Includes NG Rebuildable Rod Ends)</b>			
2.5"	TJ251K-SVX		E8	TJ251-SVX	1 TJ25F	1 TJ25R	
4"	TJ401K-SVX		E8, E10	TJ401-SVX	1 TJ40F	1 TJ40R	
<b>ROCK READY® 1 SERIES - Long Arms With Lower Links Only</b>							
<b>97-02 Wrangler TJ/ Rubicon 4WD System</b>				<b>Rock Ready® Kit (Includes NG Rebuildable Rod Ends)</b>			
4"	TJ40RR1K		E10, E8, E22, E23	TJ40RRX+TJ40XRR1	1 TJ40F	1 TJ40R	
6"	TJ60RR1K		E10, E5, E8, E16, E23	TJ68RRX+TJ60RR1	1 TJ60F	1 TJ60R	
KIT NOTE: E5. Slip Yoke Eliminator Kit # RR231 & Replacement C.V. Driveshaft is REQUIRED. Available Direct from Skyjacker®. E8. Vehicles with 4 Cylinder Engines and/or Soft Tops Will Sit a Little Higher Due to the Weight Difference. E10. # JA750 Included for Power Steering - Order #JA850 for Manual Steering. E16. Modifications to the factory exhaust cross-over pipe will be necessary. E22. 6 Speed models may require additional modification. Contact Skyjacker® for more information. E23. Order part # JUL48SFX to make Rock Ready 2, which includes upper front and rear links. E26. Part numbers ending in 'CR' are powdercoated in Skyjacker® Classic Red. * TJ25FRCR and TJ40FRCR includes front and rear coils in Classic Red.							
<b>ROCK READY® 2 SERIES - Long Arms With Upper and Lower Links</b>							
<b>97-02 Wrangler TJ/ Rubicon 4WD System</b>				<b>Rock Ready® Kit (Includes NG Rebuildable Rod Ends)</b>			
6"	TJ60RR2K		E5, E8, E10, E16	TJ68RRX+TJ60X2	1 TJ60F	1 TJ60R	
6"		TJ676XPN	E5, E8, E10, E16	Included	1 Included	1 Included	
8"	TJ80RR2K		E5, E8, E10, E16	TJ68RRX+TJ80X2	1 TJ80F	1 TJ80R	
KIT NOTE: E5. Slip Yoke Eliminator Kit # RR231 & Replacement C.V. Driveshaft is REQUIRED. Available Direct from Skyjacker®. E8. Vehicles with 4 Cylinder Engines and/or Soft Tops Will Sit a Little Higher Due to the Weight Difference. E10. # JA750 Included for Power Steering - Order #JA850 for Manual Steering. E16. Modifications to the factory exhaust cross-over pipe will be necessary.							
<b>87-96 Wrangler YJ 4WD</b>							
<b>SOFTTRIDE® LEAF SPRING SYSTEMS</b>							
<b>87-96 Wrangler YJ 4WD System</b>				<b>With Power Steering</b>			
2-2.5"	YJ20K			YJ20	2 YJ20FS	2 YJ20RS	
3.5-4"	YJ40K		E17, E18	YJ40	2 YJ40FS	2 YJ40RS	
E17. Front Sway Bar Links (Disconnects) will be needed. Part# SBE425. E18. Transfer Case Lowering Kit required. Part# TCL25 *For Manual Steering Order JA850							
<b>ROCK READY® DOUBLE MILITARY WRAP</b>							
<b>87-96 Wrangler YJ 4WD System</b>				<b>With Power Steering</b>			
2.5"	YJ25K		E6, E7	YJ25	2 YJ25FS	2 YJ25RS	
4"	YJ45K		E6, E17, E18	YJ45	2 YJ45FS	2 YJ45RS	
KIT NOTES: E6. # YJ5LK - 5th Link Traction Bar is Highly Recommended - See Jeep Accessories. E7. Can Be Used As Spring-Over Axle Application. E17. Front Sway Bar Links (Disconnects) will be needed. Part# SBE425. E18. Transfer Case Lowering Kit required. Part# TCL25 *For Manual Steering Order JA850							
<b>ROCK READY® MONOLINEAR (SINGLE LEAF SPRING)</b>							
<b>87-96 Wrangler YJ 4WD System</b>				<b>With Power Steering</b>			
6"	YJ60MK		E4, E5, E6	YJ60M			
KIT NOTES: E4. This Component Box Includes the 4 Monolinear Leaves. E5. Slip Yoke Eliminator Kit # RR231 & Replacement C.V. Driveshaft is REQUIRED. Available Direct from Skyjacker®. E6. # YJ5LK - 5th Link Traction Bar is Highly Recommended - See Jeep Accessories. Manual steering use pitman arm part # JA850.							
<b>72-86 CJ5, CJ7, CJ8 4WD</b>							
<b>76-86 CJ5, CJ7, CJ8 4WD System</b>				<b>With Power Steering</b>			
2-2.5"	J20K		E2	J24	2 J20FS	2 J20RS	
3.5-4"	J40K		E2	J24	2 J40FS	2 J40RS	
KIT NOTES: E2. Scrambler Models May Require an Additional Rear "Fitted" Leaf (Ordered Separately - See Page 214).							

	Steering Correction	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor Hours
	(Order 1 Each)		OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	
						H7016	H7018		N8016	N8018		M9516	M9518	6
			7009	7119	7219	H7016	H7018		N8016	N8018		M9516	M9518	6
			7009	7119	7219	H7016	H7018		N8016	N8018		M9516	M9518	6
						Included	Included							6
	Included (E10)	FBL44/RBL98	7009	7119	7219	H7025	H7028		N8025	N8028		M9525	M9528	6
	Included (E10)	FBL44/RBL98	7009	7119	7219	Included	Included							6
	Included (E10)	FBL44/RBL98	7009		7219	Included	Included							6
	Included (E10)	FBL44/RBL98	7009	7119	7219	H7025	H7028		N8025	N8028		M9525	M9528	6
						Included	Included							6
			7009	7119	7219	H7016	H7018		N8016	N8018		M9516	M9518	8
	Included (E10)	FBL44/RBL98	7009	7119	7219	H7025	H7028		N8025	N8028		M9525	M9528	8
	Included (E10)	Included	Included		7112	H7025	H7028		N8025	N8028		M9525	M9528	10
	Included (E10)	Included	Included		7112	H7049	H7063		N8049	N8063		M9549	M9563	12
	Included (E10)	Included	Included		7112	H7049	H7063		N8049	N8063		M9549	M9563	12
	Included (E10)	Included	Included		7112	H7049	H7063		N8049	N8063		M9549	M9563	12
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7009	7109	7200	H7056	H7023		N8056	N8023		M9556	M9523	4
	JA750*	FBL47/RBL47	7009	7109	7200	H7059	H7088		N8059	N8088		M9559	M9558	6
			7009	7109	7200	H7056	H7023		N8056	N8023		M9556	M9523	4
	JA750*	FBL47/RBL47	7009	7109	7200	H7059	H7088		N8059	N8088		M9559	M9558	6
	JA750	Included	7009	7109	7200	H7061	H7088		N8061	N8088		M9561	M9558	10
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7001	7100	7200	H7012	H7023		N8012	N8023		M9512	M9523	4
	JA250	See Page 210	7001	7100	7200	H7023	H7058		N8023	N8058		M9523	M9558	4



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty Part #	Rear Springs Qty Part #	Add-A- Leafs	
<b>76-86 CJ5, CJ7, CJ8 4WD System</b>				<b>With Manual Steering</b>				
2-2.5"	J20K		E2	J24	2 J20FS	2 J20RS		
3.5-4"	J40K		E2	J24	2 J40FS	2 J40RS		
KIT NOTES: E2. Scrambler Models May Require an Additional Rear "Fitted" Leaf (Ordered Separately - See Page 214).								
<b>72-75 CJ5, CJ6 4WD System</b>				<b>With Power Steering</b>				
2-2.5"	J32K			J34	2 J32FS	2 J32RS		
3.5-4"	J34K			J34	2 J34FS	2 J34RS		
<b>72-75 CJ5, CJ6 4WD System</b>				<b>With Manual Steering</b>				
2-2.5"	J32K			J34	2 J32FS	2 J32RS		
3.5-4"	J34K			J34	2 J34FS	2 J34RS		
<b>55-71 CJ5, CJ6 4WD</b>								
<b>55-71 CJ5, CJ6 4WD System</b>				<b>Includes Front &amp; Rear Springs</b>				
2-2.5"	J32K			J34	2 J32FS	2 J32RS		
3.5-4"	J34K			J34	2 J34FS	2 J34RS		
<b>74-91 Cherokee / Wagoneer 4WD - Full-Size</b>								
<b>84-91 Cherokee \ Wagoneer 4WD Kit</b>				<b>With Rear Blocks</b>				
3.5-4"	JP45K		E9	JP45	2 JP40FS			
KIT NOTES: E9. Power Steering Models Only.								
<b>84-91 Cherokee \ Wagoneer 4WD System</b>				<b>Includes Front &amp; Rear Full Height Replacement Springs</b>				
3.5-4"	JP45KS		E9	JP45S	2 JP40FS	2 JP40RS		
KIT NOTES: E9. Power Steering Models Only.								
<b>74-83 Cherokee \ Wagoneer 4WD Kit</b>				<b>With Rear Blocks</b>				
3.5-4"	JP40K		E9	JP40	2 JP40FS			
KIT NOTES: E9. Power Steering Models Only.								
<b>76-83 Cherokee \ Wagoneer 4WD System</b>				<b>Includes Front &amp; Rear Full Height Replacement Springs</b>				
3.5-4"	JP40KS		E9	JP40S	2 JP40FS	2 JP40RS		
KIT NOTES: E9. Power Steering Models Only.								
<b>74-88 J10, J20 Pickup 4WD - Full-Size</b>								
<b>74-88 J10, J20 Pickup 4WD Kit</b>				<b>With Rear Blocks</b>				
3.5-4"	JP40K		E9	JP40	2 JP40FS			
KIT NOTES: E9. Power Steering Models Only.								
<b>74-88 J10, J20 Pickup 4WD System</b>				<b>Includes Front &amp; Rear Full Height Replacement Springs</b>				
3.5-4"	JP40KS		E1, E9	JP40S	2 JP40FS	2 JP40RS		
KIT NOTES: E1. 74-75 Models MUST Have 131" Wheel Base & 7,200 lb. GVWR or More for Rear Springs to Fit. E9. Power Steering Models Only.								
<b>84-01 Cherokee XJ 4WD, 2WD</b>								
<b>POLYURETHANE VALUE KIT</b>								
<b>84-01 Cherokee XJ 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>				
2"	XJ20			XJ20				
KIT NOTES: Includes Rear Lift Shackles								
<b>STANDARD SERIES</b>								
<b>84-01 Cherokee XJ 4WD, 2WD Kit</b>				<b>With Rear Add-A-Leafs</b>				
3"	JC301K			JC30	1 JC30F		R3136	
<b>84-01 Cherokee XJ 4WD, 2WD System</b>				<b>With Replacement Rear Springs</b>				
3"	JC301KS			JC30S	1 JC30F	2 JC25RS		
<b>VALUE FLEX SERIES</b>								
<b>84-01 Cherokee XJ 4WD, 2WD Kit</b>				<b>With Rear Add-A-Leafs (Includes NG Rebuildable Rod Ends)</b>				
3"	JC301K-SVX			JC30-SVX	1 JC30F		R3136	
<b>84-01 Cherokee XJ 4WD, 2WD System</b>				<b>With Replacement Rear Springs (Includes NG Rebuildable Rod Ends)</b>				
3"	JC301KS-SVX			JC30S-SVX	1 JC30F	2 JC25RS		
<b>89-01 Cherokee XJ 4WD, 2WD</b>								
<b>ROCK READY® SERIES</b>								
<b>89-01 Cherokee XJ 4WD, 2WD System</b>				<b>With Automatic &amp; 5-Speed Transmission &amp; 4.0 Liter Engine (Includes NG Rebuildable Rod Ends)</b>				
6"	JC601KS-DX		E3, E5	JC68-DX+JC60	1 JC60F	2 JC55RS		
8"	JC801KS-DX		E3, E5	JC68-DX+JC80	1 JC80F	2 JC75RS		
KIT NOTES: E3. Skyjacker® Shackles # SH130 are Required & Included in # JC68-DX Box. E5. Slip Yoke Eliminator Kit # RR231 (See Jeep Accessories) & Replacement C.V. Driveshaft is REQUIRED. Fits 99'-01' models with high pinion front differential.								

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
			7001	7100	7200	H7012	H7023		N8012	N8023		M9512	M9523	4
	JA150	See Page 210	7001	7100	7200	H7023	H7058		N8023	N8058		M9523	M9558	4
	JA552			7100	7200	H7023	H7023		N8023	N8023		M9523	M9523	4
	JA550	See Page 210		7100	7200	H7058	H7058		N8058	N8058		M9558	M9558	4
	JA652			7100	7200	H7023	H7023		N8023	N8023		M9523	M9523	4
	JA650	See Page 210		7100	7200	H7058	H7058		N8058	N8058		M9558	M9558	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7100	7200	H7023	H7023		N8023	N8023		M9523	M9523	4
		See Page 210		7100	7200	H7058	H7058		N8058	N8058		M9558	M9558	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	JA350	FBL40/RBL41	7009			H7088	H7088		N8088	N8088		M9558	M9558	4
	JA350	FBL40/RBL41	7009			H7088	H7088		N8088	N8088		M9558	M9558	4
	JA350	See Page 210	7005			H7088	H7088		N8088	N8088		M9558	M9558	4
	JA350	See Page 210	7005			H7088	H7088		N8088	N8088		M9558	M9558	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	JA350	See Page 210	7005			H7088	H7088		N8088	N8088		M9558	M9558	4
	JA350	See Page 210	7005			H7088	H7088		N8088	N8088		M9558	M9558	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
			7009			H7016	H7018		N8016	N8018		M9516	M9518	4
			7009			H7016	H7018		N8016	N8018		M9516	M9518	6
			7009			H7016	H7018		N8016	N8018		M9516	M9518	6
			7009			H7016	H7018		N8016	N8018		M9516	M9518	6
			7009			H7016	H7018		N8016	N8018		M9516	M9518	6
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
	Included	Included	Included			H7049	H7063		N8049	N8063		M9549	M9563	10
	Included	Included	Included			H7049	H7063		N8049	N8063		M9549	M9563	12



LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs		Rear Springs		Add-A- Leafs	
Qty	Part #	Qty	Part #							
<b>86-92 Comanche Pickup MJ 4WD, 2WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>86-92 Comanche Pickup MJ 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	XJ20			XJ20						
KIT NOTES: Includes Rear Lift Shackles										
<b>STANDARD SERIES</b>										
<b>86-92 Comanche Pickup MJ 4WD, 2WD Kit</b>				<b>With Rear Add-A-Leafs</b>						
3"	JC301K			JC30	1	JC30F			R3136	
<b>VALUE FLEX SERIES</b>										
<b>86-92 Comanche Pickup MJ 4WD, 2WD Kit</b>				<b>With Rear Add-A-Leafs (Includes NG Rebuildable Rod Ends)</b>						
3"	JC301K-SVX			JC30-SVX	1	JC30F			R3136	
<b>06-10 Commander XK 4WD, 2WD</b>										
<b>POLYURETHANE VALUE KITS</b>										
<b>06-10 Commander XK 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	XK20			XK20						
<b>08-11 Liberty KJ 4WD, 2WD</b>										
<b>08-11 Liberty KJ 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	KKN25			KKN25						
<b>02-07 Liberty KJ 4WD, 2WD</b>										
<b>VALUE KITS</b>										
<b>02-07 Liberty KJ 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2.5"	KJ25			KJ25						
KIT NOTES: Installs inside Strut assembly.										
<b>PLATINUM SCOIL-OVER® SERIES</b>										
<b>02-07 Liberty KJ 4WD, 2WD System</b>				<b>With Rear Coil Springs</b>						
2.5"	LIB250K		E21	LIB250			1	LIB25R		
KIT NOTES: E21. Skyjacker® Limiting Straps recommended. Diesel engines will sit lower in front.										
<b>2011 Grand Cherokee WK</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>2011 Grand Cherokee WK</b>				<b>Polyurethane Spacers</b>						
2"	WK21			WK21						
<b>05-10 Grand Cherokee WK 4WD, 2WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>05-10 Grand Cherokee WK 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	WK20			WK20						
<b>99-04 Grand Cherokee WJ 4WD, 2WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>99-04 Grand Cherokee WJ 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	WJ20			WJ20						
<b>93-98 Grand Cherokee ZJ 4WD, 2WD</b>										
<b>POLYURETHANE VALUE KIT</b>										
<b>93-98 Grand Cherokee ZJ 4WD, 2WD Kit</b>				<b>Polyurethane Spacers</b>						
2"	ZJ20			ZJ20						
<b>STANDARD SERIES</b>										
<b>93-98 Grand Cherokee ZJ 4WD, 2WD System</b>				<b>With Rear Coil Springs</b>						
3"	GC301K			GC30	1	JC30F	1	GC20R		

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor			
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
			7009			H7016	H7018		N8016	N8018		M9516	M9518	4			
			7009			H7016	H7023		N8016	N8023		M9516	M9523	6			
			7009			H7016	H7018		N8016	N8018		M9516	M9518	6			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
														6			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----		----	----		----	----	6			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7088		----	----	N8088		----	----	M9558	6
						----	----	H7088		----	----	N8088		----	----	8	
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
														4			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
														4			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						H7016	H7044		N8016	N8044		M9516	M9544	4			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
			7009			H7016	H7023		N8016	N8023		M9516	M9523	4			
			7009			H7016	H7023		N8016	N8023		M9516	M9523	8			



# MAZDA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
94-97 MAZDA B4000 4WD										
94-97 MAZDA B4000 4WD Kit				6-Cylinder Engine with Add-A-Leafs						
1.5-2"	132XK		G1, G27		1	132X			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories). G27. May Require # HS25 for Alignment and Leveling Aid.										
94-97 MAZDA B4000 4WD Kit				4-Cylinder Engine with Add-A-Leafs						
1.5-2"	132K		G1, G27		1	132			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories). G27. May Require # HS25 for Alignment and Leveling Aid.										
94-97 MAZDA B4000 4WD System				6-Cylinder Engine with Replacement Rear Springs						
1.5-2"	132XKS		G1, G10	132XRS	1	132X	2	FR34S		
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories). G10. The Factory Block is Removed.										
94-97 MAZDA B4000 4WD System				4-Cylinder Engine with Replacement Rear Springs						
1.5-2"	132KS		G1, G10	132RS	1	132	2	FR34S		
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories). G10. The Factory Block is Removed.										
94-97 MAZDA B4000 4WD Kit				Heavy-Duty Brackets with Blocks & U-Bolts and/or Add-A-Leafs						
4"	134RHK		G8, G27	134RH	1	134				
6"	136RHK		G8, G27	136RH	1	136				
8"	138RHK-A		G8, G27	138C+138RH	1	138			R3135	
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
94-97 MAZDA B4000 4WD System				Heavy-Duty Brackets with Replacement Rear Springs						
4"	134RHKS		G8, G10, G27	134RHS	1	134	2	FR34S		
6"	136RHKS		G8, G27	136RHS	1	136	2	FR34S		
8"	138RHKS-A		G8, G27	138C+138RHS	1	138	2	FR36S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
94-97 MAZDA B4000 4WD Kit				Class II Brackets and Radius Arms with Blocks & U-Bolts						
4"	234RHK-A		G8, G27	234RH+RA135	1	134				
6"	236RHK-A		G8, G27	236RH+RA135	1	136				
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid.										
94-97 MAZDA B4000 4WD System				Class II Brackets and Radius Arms with Replacement Rear Springs						
4"	234RHKS-A		G8, G10, G27	234RHS+RA135	1	134	2	FR34S		
6"	236RHKS-A		G8, G27	236RHS+RA135	1	136	2	FR34S		
KIT NOTES: G8. Power Steering Models Only. G10. The Factory Block is Removed. G27. May Require # HS25 for Alignment and Leveling Aid.										
94-97 MAZDA B Series (B2300, B3000, B4000) 2WD										
94-97 MAZDA B Series 2WD Kit				2.3, 2.9 & 3.0 Liter Engines with Add-A-Leafs						
1.5-2"	132K		G1		1	132			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories).										
94-97 MAZDA B Series 2WD Kit				4.0 Liter Engines with Add-A-Leafs						
1.5-2"	132XK		G1, G27		1	132X			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories). G27. May Require # HS25 for Alignment and Leveling Aid. 4.0 model may sit lower in front.										
94-97 MAZDA B Series 2WD Kit				2.3 Liter Engine SuperCab with Add-A-Leafs						
1.5-2"	132K		G1		1	132			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories).										
94-97 MAZDA B Series 2WD Kit				2.9 Liter Engine SuperCab with Add-A-Leafs						
1.5-2"	132XK		G1		1	132X			R3135	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories).										
94-97 MAZDA B Series 2WD Kit				Standard Brackets with Blocks & U-Bolts						
4"	134R2K		G8, G27	134R2	1	134				
6"	136R2K		G8, G27	136R2	1	136				
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										
94-97 MAZDA B Series 2WD System				Standard Brackets with Replacement Rear Springs						
4"	134R2KS		G8, G27	134R2S	1	134	2	FR34S		
6"	136R2KS		G8, G27	136R2S	1	136	2	FR34S		
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid. May Require End Links.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
				7150	7250	H7052	H7060		N8052	N8060		M9552	M9560	4
	FA400			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	6
	FA400			7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	Included			7150	7250	H7055	H7079		N8055	N8079		M9555	M9579	7
	FA400			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	6
	FA400	FBL36/RBL35		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	Included	Included		7150	7250	H7055	H7079		N8055	N8079		M9555	M9579	7
	Included			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	7
	Included	FBL36/RBL35		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
	Included			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	7
	Included	FBL36/RBL35		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
				7150	7250	H7052	H7058		N8052	N8058		M9552	M9558	4
	FA400			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	6
	FA400	FBL36/RBL35		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6
	FA400			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	6
	FA400	FBL36/RBL35		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	6



# MAZDA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
94-97 MAZDA B Series 2WD Kit				Class II Brackets and Radius Arms with Blocks & U-Bolts						
4"	234R2K-A		G8, G27	234R2+RA235	1	134				
6"	236R2K-A		G8, G27	236R2+RA235	1	136				
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid.										
94-97 MAZDA B Series 2WD System				Class II Brackets and Radius Arms with Replacement Rear springs						
4"	234R2KS-A		G8, G27	234R2S+RA235	1	134	2	FR34S		
6"	236R2KS-A		G8, G27	236R2S+RA235	1	136	2	FR34S		
KIT NOTES: G8. Power Steering Models Only. G27. May Require # HS25 for Alignment and Leveling Aid.										
90-94 NAVAJO 4WD (2 Door & 4 Door)										
90-94 NAVAJO 4WD (2 Door & 4 Door) Kit				With Add-A-Leafs						
1.5-2"	132EXK		G1		1	132X			R225	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories).										
90-94 NAVAJO 2WD (2 Door & 4 Door)										
90-94 NAVAJO 2WD (2 Door & 4 Door) Kit				With Add-A-Leafs						
1.5-2"	132EXK		G1		1	132X			R225	
KIT NOTES: G1. Oversized Camber / Caster Shims are REQUIRED (See Mazda Accessories).										

# NISSAN

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
04-09 Nissan Armada 2WD, 4WD										
04-09 Nissan Armada 2WD, 4WD				Front Leveling Struts						
2.25"	NT42ST			NT42ST+NA20R						
KIT NOTES: Not for Armada Equipped with Auto Leveling Rear Suspension.										
POLYURETHANE VALUE KIT										
04-09 Nissan Armada 2WD, 4WD				Polyurethane Spacers						
2.5"	NA25			NA25						
04-09 Nissan Armada 2WD, 4WD				Front Leveling Struts - Poly Rear						
2.25"	NA25ST			NA25ST						
04-09 Nissan Titan 2WD, 4WD										
04-09 Nissan Titan 2WD, 4WD				Front Leveling Struts						
2.25"	NT42ST			NT42ST						
POLYURETHANE VALUE KIT										
04-09 Nissan Titan 2WD, 4WD				Front Leveling Kit - Polyurethane Spacers						
2.5"	NT25			NT25						

# TOYOTA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
05-10 Tacoma 4WD & Pre-Runner 2WD										
Value Kit										
05-10 Tacoma 4WD & Pre-Runner 2WD System				Metal Spacer (Leveling Kit)						
2"	TT20MS			TT20MS						
KIT NOTES: Installs above Strut assembly.										
05-10 Tacoma 4WD & Pre-Runner 2WD System				Metal Spacers w/Rear Block & U-Bolts						
2"	TT20MSP			TT20MSP						
PERFORMANCE STRUT SERIES										
05-10 Tacoma 4WD & Pre-Runner 2WD Kit				Adjustable Front Struts						
1-3"	TC513ST			TC513ST						
05-10 Tacoma 4WD & Pre-Runner 2WD Kit				With Add-A-Leafs						
1-3"	TC530STK			TC530ST					RTC515	
2.5-3"		TC530STPH		Included					Included	
05-10 Tacoma 4WD & Pre-Runner 2WD System				With Replacement Rear Springs						
2.5-3"	TC530STKS			TC530ST			2	TCR515S		

# MAZDA

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
	Included			7150	7250	H7054	H7060		N8054	N8060		M9554	M9560	7
	Included	FBL36/RBL35		7150	7250	H7055	H7060		N8055	N8060		M9555	M9560	7
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7150	7250	H7052	H7039		N8052	N8039		M9552	M9539	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7140	7240	H7052	H7029		N8052	N8029		M9552	M9529	4

# NISSAN

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor			
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours			
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7012		----	----	N8012		----	----	M9512	2
						----	----	H7012		----	----	N8012		----	----	M9512	2
						----	----	H7012		----	----	N8012		----	----	M9512	2
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																	
						----	----	H7058		----	----	N8058		----	----	M9558	2
						----	----	H7041		----	----	N8041		----	----	M9541	2

# TOYOTA

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
						-----			-----			-----		2
						-----	H7048		-----	N8048		-----	M9548	2
						-----	H7045		-----	N8045		-----	M9545	6
						-----	Included		-----			-----		6
						-----	H7045		-----	N8045		-----	M9545	4



# TOYOTA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A- Leafs	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #		
PLATINUM COIL-OVER SERIES										
05-10 Tacoma 4WD & Pre-Runner 2WD Kit				With Add-A-Leafs						
2.5-3"	TC530K			TC530					RTC515	
05-10 Tacoma 4WD & Pre-Runner 2WD System				With Replacement Rear Springs						
2.5-3"	TC530KS			TC530			2	TCR515S		
98-04 Tacoma 4WD & Pre-Runner 2WD										
95.5-04 Tacoma 4WD & Pre-Runner 2WD Value Kit				Metal Spacers (Leveling Kit)						
2"	TTC20MS			TTC20MS						
KIT NOTES: Installs above Strut assembly.										
95.5-04 Tacoma 4WD & Pre-Runner 2WD Value Kit				Polyurethane Value Kit						
2.5"	TTC25			TTC25						
KIT NOTES: Installs above Strut assembly.										
PERFORMANCE STRUT SERIES										
95.5-04 Tacoma 4WD & Pre-Runner 2WD Kit				Adjustable Front Struts						
1-3"	TT413ST			TT413ST						
95.5-04 Tacoma 4WD & Pre-Runner 2WD Kit				With Add-A-Leafs						
3"	TTC30STK			TT430ST					RTC20	
KIT NOTES: Recommend use with manual hub models.										
98-04 Tacoma 4WD & Pre-Runner 2WD System				With Replacement Rear Springs						
3"	TTC30STKS			TT430ST			2	TCR25S		
KIT NOTES: Recommend use with manual hub models.										
PLATINUM COIL-OVER SERIES										
95.5-04 Tacoma 4WD & Pre-Runner 2WD Kit				With Blocks & U-Bolts and/or Add-A-Leafs						
2.5-3"	SKTOY30K			SKTOY30					RTC20	
KIT NOTES: Recommend use with manual hub models.										
98-04 Tacoma 4WD & Pre-Runner 2WD System				With Replacement Rear Springs						
2.5-3"	SKTOY30KS			SKTOY30+UTWR			2	TCR25S		
KIT NOTES: Recommend use with manual hub models.										
07-11 Tundra Pickup										
07-11 Tundra Pickup 2WD/4WD Value Kit				Front Leveling Spacers						
2"	TU720MS			TU720MS						
KIT NOTES: Installs above Strut Assembly. OEM Wheels and Tires can be used.										
07-11 Tundra Pickup 2WD/4WD Value Kit				Front Leveling Spacers w/Rear Blocks & U-Bolts						
2"	TU720MSP			TU720MSP						
PERFORMANCE STRUT SERIES										
07-11 Tundra Pickup 2WD				Adjustable Front Struts						
1-3"	TU713ST			TU713ST						
07-11 Tundra Pickup 4WD				Adjustable Front Struts						
1-3"	TU713ST			TU713ST						
07-11 Tundra Pickup 2WD Kit				Performance Strut Lift						
3"	TU730STK			TU730ST+TU710R						
3"		TU730STPH		Included						
KIT NOTES: OEM Wheels and Tires can be used.										
07-11 Tundra Pickup 4WD Kit				Performance Strut Lift						
3"	TU730STK			TU730ST+TU710R						
3"		TU730STPH		Included						
KIT NOTES: OEM Wheels and Tires can be used.										
07-11 Tundra Pickup 2WD Kit				Performance Strut Lift with Rear Blocks & U-Bolts						
6"	TU761PK			TU761A+TU761PR						
6"		TU761PH		Included						
07-11 Tundra Pickup 4WD Kit				Performance Strut Lift with Rear Blocks & U-Bolts						
6"	TU761PK			TU761A+TU761PR						
6"		TU761PH		Included						
07-11 Tundra Pickup 4WD Kit				Performance Strut Lift with Replacement Rear Springs						
6"	TU761PKS			TU761A+TU761PRS			2	TUR47S		
KIT NOTES: 17" or Larger Wheels Must Be Used for 6" Lifts.										

	Steering Correction (Order 1 Each)	Optional Brake Lines	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor		
			OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours		
						----	----	H7045		----	----	N8045		----	M9545	4
						----	----	H7045		----	----	N8045		----	M9545	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																
						----	----	H7027		----	----	N8027		----	M9527	2
						----	----	H7027		----	----	N8027		----	M9527	4
						----	----	H7027		----	----	N8027		----	M9527	4
						----	----	H7027		----	----	N8027		----	M9527	8
						----	----	H7027		----	----	N8027		----	M9527	10
						----	----	H7027		----	----	N8027		----	M9527	4
						----	----	H7027		----	----	N8027		----	M9527	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY																
						-----	-----			-----	-----			-----	-----	2
						----	----	H7062		----	----	N8062		----	M9562	2
						----	----	H7062		----	----	N8062		----	M9562	4
						----	----	H7062		----	----	N8062		----	M9562	4
						----	----	H7062		----	----	N8062		----	M9562	4
						-----	-----			-----	-----			-----	-----	4
						----	----	H7062		----	----	N8062		----	M9562	4
						----	----	H7066		----	----	N8066		----	M9566	10
						----	----	Included		----	----			----		10
						----	----	H7066		----	----	N8066		----	M9566	10
						----	----	Included		----	----			----		10
						----	----	H7066		----	----	N8066		----	M9566	10



# TOYOTA

LIFT	Quick Kit Reference	Pallet Kit #	KIT NOTES	Component Box (Requires 1 of Each)	Front Springs Qty	Part #	Rear Springs Qty	Part #	Add-A- Leafs	
<b>PLATINUM COIL-OVER SERIES</b>										
<b>07-11 Tundra Pickup 4WD Value Kit</b>				<b>Coil-Over Lift Kit</b>						
2-3"	TU730K			TU730+TU710R						
KIT NOTES: OEM Wheels and Tires can be used.										
<b>00-06 Tundra Pickup 4WD</b>										
<b>00-06 Tundra Pickup 4WD Value Kit</b>				<b>Metal Spacers (Front Leveling Kit)</b>						
2"	TTU20MS			TTU20MS						
KIT NOTES: Installs above Strut assembly.										
<b>POLY VALUE KITS</b>										
<b>00-06 Tundra Pickup 4WD Value Kit</b>				<b>Polyurethane Value Kit With Rear Add-A-Leafs</b>						
2.5"	TTU25			TTU25					RTU20	
KIT NOTES: Installs above Strut assembly.										
<b>PERFORMANCE STRUT SERIES</b>										
<b>00-06 Tundra Pickup 4WD Kit</b>				<b>Adjustable Front Struts</b>						
1-3"	TT413ST			TT413ST						
<b>00-06 Tundra Pickup 4WD Kit</b>				<b>With Add-A-Leafs</b>						
2.5-3"	TTU30STK			TT430ST					RTU20	
<b>PLATINUM COIL-OVER SERIES</b>										
<b>00-06 Tundra Pickup 4WD Kit</b>				<b>With Add-A-Leafs</b>						
2.5-3"	SKTUN30K			SKTUN30					RTU20	
<b>86-95 Pickup Standard &amp; Extended Cab 4WD</b>										
<b>89-95 Pickup Standard Cab 4WD Kit</b>				<b>Class II with Blocks &amp; U-Bolts</b>						
4"	T432K			T422 & T431R						
<b>86-95 Pickup Extended Cab 4WD Kit</b>				<b>Class II with Blocks &amp; U-Bolts</b>						
4"	T422K			T422 & T421R						
<b>86-88 Pickup Standard &amp; Extended Cab 4WD Kit</b>				<b>Class II with Blocks &amp; U-Bolts</b>						
4"	T422K			T422 & T421R						
<b>89-95 Pickup Standard Cab 4WD System</b>				<b>Class II with Replacement Rear Springs</b>						
4"	T432KS			T422 & T431RS			2	TR49S		
<b>89-95 Pickup Extended Cab 4WD System</b>				<b>Class II with Replacement Rear Springs</b>						
4"	T422KS			T422 & T421RS			2	TR49S		
<b>86-88 Pickup Standard &amp; Extended Cab 4WD System</b>				<b>Class II with Replacement Rear Springs</b>						
4"	T422KS			T422 & T421RS			2	TR40S		
<b>84-85 Pickup 4WD</b>										
<b>84-85 Pickup 4WD Kit</b>				<b>Front Leafs with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
3"	T303PK			T303P	2	T303S			R5005	
5"	T305PK			T305P	2	T305S				
7"	T307PK		I1	T307P	2	T307S			R5005	
NOTES: I1: 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).										
<b>84-85 Pickup 4WD System</b>				<b>Front Leafs with Replacement Rear Springs</b>						
3"	T303PKS			T303PS	2	T303S	2	TR20S		
5"	T305PKS			T305PS	2	T305S	2	TR40S		
7"	T307PKS		I1	T307PS	2	T307S	2	TR60S		
NOTES: I1: 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).										
<b>79-83 Pickup 4WD</b>										
<b>79-83 Pickup 4WD Kit</b>				<b>Front Leafs with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
3"	T303PK			T303P	2	T303S			R5005	
5"	T305PK			T305P	2	T305S				
7"	T307PK		I1	T307P	2	T307S			R5005	
NOTES: I1: 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
						-----			-----			-----		4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----			-----			-----		2
						-----			-----			-----		
						-----	H7048		-----	N8048		-----	M9548	4
						-----	H7048		-----	H7048		-----	H7048	4
						-----	H7048		-----	N8048		-----	M9548	8
						-----	H7048		-----	N8048		-----	M9548	4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7175	7276 <sup>(P)</sup>	H7055	H7027		N8055	N8027		M9555	M9527	4
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7055	H7036		N8055	N8036		M9555	M9536	6
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7056	H7036		N8056	N8036		M9556	M9536	7
(P) Parallel Mount														
				7175	7276 <sup>(P)</sup>	H7055	H7027		N8055	N8027		M9555	M9527	4
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7055	H7036		N8055	N8036		M9555	M9536	6
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7056	H7036		N8056	N8036		M9556	M9536	7
(P) Parallel Mount														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7175	7275 <sup>(P)</sup>	H7055	H7058		N8055	N8058		M9555	M9558	4
	TDL5	FBL30/RBL30		7175	7275 <sup>(P)</sup>	H7055	H7060		N8055	N8060		M9555	M9560	6
	TDL5	FBL30/RBL30		7175	7275 <sup>(P)</sup>	H7056	H7060		N8056	N8060		M9556	M9560	7
(P) Parallel Mount														



# TOYOTA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
79-83 Pickup 4WD System				Front Leafs with Replacement Rear Springs						
3"	T303PKS			T303PS	2	T303S	2	TR20S		
5"	T305PKS			T305PS	2	T305S	2	TR40S		
7"	T307PKS		11	T307PS	2	T307S	2	TR60S		

NOTES: I1. 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).

## 01-06 Sequoia 4WD

### POLYURETHANE VALUE KIT

<b>01-06 Sequoia 4WD Value Kit</b>				<b>Polyurethane Spacers</b>						
2.5"	TSQ25			TSQ25						

## 86-01 4Runner 4WD

### POLYURETHANE VALUE KIT

<b>96-02 4 Runner 4WD (Old Body Style)</b>				<b>Polyurethane Spacers</b>						
2.5"	TRU25			TRU25						

KIT NOTES: Installs inside Strut assembly.

<b>86-89 4Runner 4WD Kit</b>				<b>Class II with 3.25" Wide Rear U-Bolts &amp; Blocks &amp; U-Bolts</b>						
4"	T423K			T422 & T431R						

<b>86-89 4Runner 4WD System</b>				<b>Class II with 3.25" Wide Rear U-Bolts &amp; Replacement Rear Springs</b>						
4"	T432RKS			T422 & T431RS			2	TR60S		

<b>86-89 4Runner 4WD Kit</b>				<b>Class II with 2.5" Wide Rear U-Bolts &amp; Blocks &amp; U-Bolts</b>						
4"	T422K			T422 & T421R						

<b>86-89 4Runner 4WD System</b>				<b>Class II with 2.5" Wide Rear U-Bolts &amp; Replacement Rear Springs</b>						
4"	T422RKS			T422 & T421RS			2	TR60S		

## 84-85 4Runner 4WD

<b>84-85 4Runner 4WD Kit</b>				<b>Front Leafs with Blocks &amp; U-Bolts and/or Add-A-Leafs</b>						
3"	T303PK			T303P	2	T303S			R5005	
5"	T305PK			T305P	2	T305S				
7"	T307PK		I1	T307P	2	T307S			R5005	

NOTES: I1. 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).

<b>84-85 4Runner 4WD System</b>				<b>Front Leafs with Replacement Rear Springs</b>						
3"	T303RKS			T303PS	2	T303S	2	TR40S		
5"	T305RKS			T305PS	2	T305S	2	TR60S		
7"	T307RKS		I1, I4	T307RS	2	T307S	2	TR60S		

NOTES: I4. This Lift also includes 2" Blocks. I1. 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).

## 07-11 FJ Cruiser 4WD

### VALUE KIT

<b>07-11 FJ Cruiser 4WD KIT</b>				<b>Metal Spacers (Front Leveling Kit)</b>						
2"	TT20MS			TT20MS						

KIT NOTES: Installs above Strut assembly.

<b>07-11 FJ Cruiser 4WD KIT</b>				<b>Spacer Kit (Metal Front &amp; Poly Rear)</b>						
2"		FJ20PH		Included						
2"	FJ20MS			FJ20MS						

## PERFORMANCE STRUT SERIES

<b>07-11 FJ Cruiser 4WD KIT</b>				<b>Adjustable Front Struts</b>						
1-3"	FJ713ST			FJ713ST						

<b>07-11 FJ Cruiser 4WD KIT</b>				<b>With Rear Coil Springs</b>						
3"	FJ730STK			FJ730ST						

## PLATINUM COIL-OVER SERIES

<b>07-11 FJ Cruiser 4WD KIT</b>				<b>With Rear Coil Springs</b>						
3"	FJ730K			FJ730						

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
				7175	7275 <sup>(P)</sup>	H7055	H7058		N8055	N8058		M9555	M9558	4
	TDL5	FBL30/RBL30		7175	7275 <sup>(P)</sup>	H7055	H7060		N8055	N8060		M9555	M9560	6
	TDL5	FBL30/RBL30		7175	7275 <sup>(P)</sup>	H7056	H7060		N8056	N8060		M9556	M9560	7
(P) Parallel Mount														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
														4
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	H7022		-----	N8022		-----	M9522	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
				7186		H7004	H7027		N8004	N8027		M9504	M9527	8
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7175	7276 <sup>(P)</sup>	H7055	H7027		N8055	N8027		M9555	M9527	4
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7055	H7036		N8055	N8036		M9555	M9536	6
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7056	H7036		N8056	N8036		M9556	M9536	7
(P) Parallel Mount														
				7175	7276 <sup>(P)</sup>	H7055	H7027		N8055	N8027		M9555	M9527	6
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7055	H7036		N8055	N8036		M9555	M9536	6
	TDL5	FBL30/RBL30		7175	7276 <sup>(P)</sup>	H7056	H7036		N8056	N8036		M9556	M9536	8
(P) Parallel Mount														
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
						-----	-----		-----	-----		-----	-----	2
						-----	Included		-----	-----		-----	-----	4
						-----	H7089		-----	N8089		-----	M9589	4
						-----	-----		-----	-----		-----	-----	6
						-----	H7098		-----	N8098		-----	M9598	6
						-----	H7098		-----	N8098		-----	M9598	6



# TOYOTA

LIFT	Quick Kit	Pallet Kit #	KIT NOTES	Component Box	Front Springs		Rear Springs		Add-A-	
	Reference			(Requires 1 of Each)	Qty	Part #	Qty	Part #	Leafs	
64-80 FJ40 LandCruiser 4WD										
64-80 FJ40 LandCruiser 4WD System				Front Leafs with Replacement Rear Springs						
2.5"	L20KS			L24S	2	L20FS	2	L20RS		
4"	L40KS			L24S	2	L40FS	2	L40RS		
64-80 LandCruiser 4WD System				Shackle Reversal Front Leafs with Replacement Rear Springs						
2.5"/4"	L24KS		I2	L24S	2	L20FS	2	L40RS		
NOTES: I2. This System is for Applications That HAVE Installed a Front Shackle Correction Kit which has Increased the Front 1.5". This System Adds 2.5" Front & 4" Rear to be Level.										

	Steering Correction	Optional	Steering Stabilizers			HYDRO Shocks			NITRO Shocks			Monotube Shocks		Labor
	(Order 1 Each)	Brake Lines	OEM	Single	Dual	Front	Rear	Quad	Front	Rear	Quad	Front	Rear	Hours
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY														
				7160		H7012	H7023		N8012	N8023		M9512	M9523	4
				7160		H7023	H7041		N8023	N8041		M9523	M9541	6
				7160		H7023	H7041		N8023	N8041		M9523	M9541	4



# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>CADILLAC</b>									
<b>99-01 Escalade 4WD</b>									
0"	0"	H7081 <sup>(A10)</sup>	H7084 <sup>(A10)</sup>	-----	N8081 <sup>(A10)</sup>	N8084 <sup>(A10)</sup>	-----	M9581 <sup>(A10)</sup>	M9584 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>CHEVROLET \ GMC</b>									
<b>06-09 Avalanche 1500 4WD (Strut Front End)</b>									
-----	2-3"	-----	H7030	-----	-----	N8030	-----	-----	M9530
-----	4-6"	-----	H7070	-----	-----	N8070	-----	-----	M9570
<b>02-06 Avalanche 1500 4WD</b>									
0-1"	0-3"	H7009 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8009 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9509 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
3-4"	0-3"	H7003 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8003 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9503 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	4-6"	H7096 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8096 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9596 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>02-06 Avalanche 2500 4WD</b>									
0-1"	0-2"	H7074 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8074 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9574 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	3-6"	H7074 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8074 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9574 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>04-11 Colorado/Canyon 4WD/2WD</b>									
3-5"	3-4"	H7040 <sup>(A10)</sup>	H7084 <sup>(A10)</sup>	-----	N8040 <sup>(A10)</sup>	N8084 <sup>(A10)</sup>	-----	M9540 <sup>(A10)</sup>	M9584 <sup>(A10)</sup>
<b>07-11 1500 Pickup 4WD (Strut Front End)</b>									
-----	0"	-----	H7027	-----	-----	N8027	-----	-----	M9527
-----	1.5-3"	-----	H7017	-----	-----	N8017	-----	-----	M9517
-----	4-6"	-----	H7036	-----	-----	N8036	-----	-----	M9536
<b>88-98 1500 Pickup 2WD</b>									
0-2"	0-2"	H7006	H7072	-----	-----	N8072	-----	-----	M9572
<b>99-06 1500 Pickup 2WD</b>									
0-2"	0-2"	H7006	H7030	-----	-----	N8030	-----	-----	M9530
<b>99-06 K1500 Pickup 4WD</b>									
0-1"	0-2"	H7009 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8009 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9509 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
2-3"	0-2"	H7003 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8003 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9503 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	3-6"	H7096 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8096 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9596 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>01-06 1500HD Pickup 4WD</b>									
0"	0-3"	H7019 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8019 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9519 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	4-6"	H7074 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8074 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9574 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>2011 2500HD Pickup 4WD</b>									
7"	4.5-6"				N8095	N8064			
<b>01-10 2500HD Pickup 4WD</b>									
0"	0-2"	H7019 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8019 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9519 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
3-6"	3-6"	H7074 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8074 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9574 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>02-10 Hummer H2 4WD</b>									
0"	0-2"	H7019	H7017	-----	N8019	N8017	-----	M9519	M9517
5-6"	3-6"	H7091	H7036	-----	N8091	N8036	-----	M9591	M9536
<b>07-11 Suburban/Yukon XL 1500 4WD (Strut Front End)</b>									
-----	2-3"	-----	H7030	-----	-----	N8030	-----	-----	M9530
-----	4-6"	-----	H7070	-----	-----	N8070	-----	-----	M9570
<b>00-06 Suburban 1500 4WD</b>									
0-1"	0-3"	H7009 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8009 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9509 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
3-4"	0-3"	H7003 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8003 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9503 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	4-6"	H7096 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8096 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9596 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>07-11 Tahoe/Yukon (Strut Front End)</b>									
-----	2-3"	-----	H7030	-----	-----	N8030	-----	-----	M9530
-----	4-6"	-----	H7070	-----	-----	N8070	-----	-----	M9570
<b>00-06 Tahoe/Yukon 1500 4WD</b>									
0-1"	0-3"	H7009 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8009 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9509 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
3-4"	0-3"	H7003 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	-----	N8003 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	-----	M9503 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	4-6"	H7096 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	-----	N8096 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	-----	M9596 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>07-11 Yukon XL 1500 4WD (Strut Front End)</b>									
----	2-3"	----	H7030	----	----	N8030	----	----	M9530
----	4-6"	----	H7070	----	----	N8070	----	----	M9570
<b>00-06 Yukon XL 1500 4WD</b>									
0-1"	0-3"	H7009 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	----	N8009 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	----	M9509 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
3-4"	0-3"	H7003 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	----	N8003 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	----	M9503 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	4-6"	H7096 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	----	N8096 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	----	M9596 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>00-06 Tahoe/Yukon 2500 4WD</b>									
0"	0-2"	H7019 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	----	N8019 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	----	M9519 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	3-6"	H7074 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	----	N8074 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	----	M9574 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>88-98 1/2, 3/4 &amp; 1 Ton Pickup 4WD with IFS</b>									
0-3"	0-2"	H7081	H7083	----	N8081	N8083	----	M9581	M9583
4-6"	3-5.5"	H7085	H7086	----	N8085	N8086	----	M9585	M9586
<b>73-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>									
0-1.5"	0-1.5"	H7021	H7043	H7023	N8021	N8043	N8023	M9521	M9543
2-5"	2-4"	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553
<b>73-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>									
6-8"	4.5-8"	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573
9-12"	9-12"	H7032	H7078	H7079	N8032	N8078	N8079	M9532	M9578
<b>67-72 1/2 &amp; 3/4 Ton Pickup, Blazer, Jimmy 4WD</b>									
0-1.5"	0-1.5"	H7021	H7023	----	N8021	N8023	----	M9521	M9523
2-5"	2-4"	H7051	H7041	----	N8051	N8041	----	M9551	M9541
6-8"	4.5-8"	H7071	H7060	----	N8071	N8060	----	M9571	M9560
<b>77-87 1 Ton Pickup 4WD</b>									
0-1.5"	0-1.5"	H7021	H7053	H7023	N8021	N8053	N8023	M9521	M9553
2-5"	2-4"	H7051	H7073	H7058	N8051	N8073	N8058	M9551	M9573
6-8"	4.5-10"	H7071	H7078	H7060	N8071	N8078	N8060	M9571	M9578
9-12"	4.5-10"	H7032	H7078	H7079	N8032	N8078	N8079	M9532	M9578
<b>87-91 R-30 / R-3500 1 Ton Pickup 2WD - Includes Crew Cab</b>									
0"	0"	H7080	H7023	----	----	N8023	----	----	M9523
<b>73-87 1/2, 3/4 &amp; 1 Ton C10, C20 &amp; C30 Pickup 2WD</b>									
0-1"	0-2"	H7080	H7043	----	----	N8043	----	----	M9543
1.5-3"	3-4"	H7011	H7083	----	N8011	N8083	----	M9511	M9583
<b>63-72 1/2, 3/4 &amp; 1 Ton C10, C20 &amp; C30 Pickup 2WD</b>									
0-1"	0"	H7080	H7012	----	----	N8012	----	----	M9512
1.5-3"	1-3"	H7011	H7023	----	N8011	N8023	----	M9511	M9523
<b>02-06 Suburban 1500 4WD</b>									
0-1"	0-2"	H7009 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	----	N8009 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	----	M9509 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
3-4"	0-2"	H7003 <sup>(A10)</sup>	H7017 <sup>(A10)</sup>	----	N8003 <sup>(A10)</sup>	N8017 <sup>(A10)</sup>	----	M9503 <sup>(A10)</sup>	M9517 <sup>(A10)</sup>
5-6"	3-6"	H7096 <sup>(A10)</sup>	H7036 <sup>(A10)</sup>	----	N8096 <sup>(A10)</sup>	N8036 <sup>(A10)</sup>	----	M9596 <sup>(A10)</sup>	M9536 <sup>(A10)</sup>
SHOCK NOTES: A10. Shocks not intended for Auto Ride Models.									
<b>02-06 Suburban 2500 4WD</b>									
0"	0-2"	H7019	H7017	----	N8019	N8017	----	M9519	M9517
5-6"	3-6"	H7074	H7036	----	N8074	N8036	----	M9574	M9536
<b>92-99 Blazer, Yukon 4WD</b>									
0-3"	0-2"	H7081	H7083	----	N8081	N8083	----	M9581	M9583
4-6"	3-5.5"	H7085	H7086	----	N8085	N8086	----	M9585	M9586
<b>92-99 Suburban 4WD</b>									
0-3"	0-2.5"	H7081	H7084	----	N8081	N8084	----	M9581	M9584
4-6"	3-5.5"	H7085	H7086	----	N8085	N8086	----	M9585	M9586
<b>73-91 Blazer, Jimmy, Suburban 4WD</b>									
0-1.5"	0-1.5"	H7021	H7043	H7023	N8021	N8043	N8023	M9521	M9543
2-5"	2-4"	H7051	H7053	H7058	N8051	N8053	N8058	M9551	M9553
6-8"	4.5-8"	H7071	H7073	H7060	N8071	N8073	N8060	M9571	M9573
9-12"	9-12"	H7032	H7078	H7079	N8032	N8078	N8079	M9532	M9578
<b>73-84 Blazer, Jimmy 2WD - Full-Size</b>									
0-1"	0-2"	H7080	H7043	----	----	N8043	----	----	M9543
1.5-3"	3-4"	H7011	H7083	----	N8011	N8083	----	M9511	M9583
<b>67-72 Blazer, Jimmy 2WD</b>									
0-1"	0"	H7080	H7012	----	----	N8012	----	----	M9512
1.5-3"	1-3"	H7011	H7023	----	N8011	N8023	----	M9511	M9523

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>69-91 Suburban 2WD</b>									
0-1"	0-2"	H7080	H7043	-----	-----	N8043	-----	-----	M9543
1.5-3"	3-4"	H7011	H7083	-----	N8011	N8083	-----	M9511	M9583
<b>94-98 S10 / S15 Series Pickup 4WD with ZR2 Package</b>									
0-2"	0-2"	H7082	H7072	-----	N8082	N8072	-----	M9582	M9572
0-3"	0-3"	H7082	H7083	-----	N8082	N8083	-----	M9582	M9583
<b>DAIHATSU</b>									
<b>74-82 Taft 4WD</b>									
0-1"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
<b>82-90 Rocky 4WD</b>									
0-1"	0"	H7054	H7054	-----	N8054	N8054	-----	M9554	M9554
<b>DODGE</b>									
<b>06-07 Ram 1500 Pickup 4WD</b>									
-----	0"	-----	H7070	-----	-----	N8070	-----	-----	M9570
<b>2008 Ram 1500 Pickup 4WD</b>									
-----	0"	-----	H7036	-----	-----	N8036	-----	-----	M9536
<b>09-10 Ram 1500 Pickup 4WD</b>									
-----	0"	-----	H7017	-----	-----	N8017	-----	-----	M9517
-----	4-6"	-----	H7036	-----	-----	N8036	-----	-----	M9536
<b>03-11 Ram 2500/3500 Pickup 4WD</b>									
0"	0"	H7091	H7017	-----	N8091	N8017	-----	M9591	M9517
1-2.5"	0-4.5"	H7092	H7036	-----	N8092	N8036	-----	M9592	M9536
4-4.5"	0-4.5"	H7094	H7036	-----	N8094	N8036	-----	M9594	M9536
<b>02-05 Ram 1500 Pickup 2WD</b>									
1-2"	-----	H7020	-----	-----	-----	-----	-----	-----	-----
<b>02-05 Ram 1500 Pickup 4WD</b>									
0"	0"	H7019	H7017	-----	N8019	N8017	-----	M9519	M9517
5-6"	3-6"	H7091	H7036	-----	N8091	N8036	-----	M9591	M9536
<b>94-01 1/2 Ton Ram Pickup 2WD</b>									
1-2"	-----	H7010	-----	-----	-----	-----	-----	-----	-----
<b>94-01 1/2 Ton Ram Pickup 4WD</b>									
0-1"	0"	H7091	H7027	-----	N8091	N8027	-----	M9591	M9527
2-3"	1-5"	H7092	H7017	-----	N8092	N8017	-----	M9592	M9517
4-5"	1-5"	H7093	H7017	-----	N8093	N8017	-----	M9593	M9517
<b>94-02 3/4 &amp; 1 Ton Ram Pickup 4WD with V10/Cummins Engine</b>									
0-1"	0-1"	H7091	H7017	-----	N8091	N8017	-----	M9591	M9517
1.5-3"	1.5-4.5"	H7092	H7036	-----	N8092	N8036	-----	M9592	M9536
4-5"	1.5-4.5	H7094	H7036	-----	N8094	N8036	-----	M9594	M9536
<b>61-93 1/2, 3/4 &amp; 1 Ton Pickup 4WD</b>									
0-1"	0-3.5"	H7047	H7038	-----	N8047	N8038	-----	M9547	M9538
1.5-3"	0-3.5"	H7027	H7038	-----	N8027	N8038	-----	M9527	M9538
4"	0-3.5"	H7017	H7038	-----	N8017	N8038	-----	M9517	M9538
5-6"	4-7"	H7017	H7068	-----	N8017	N8068	-----	M9517	M9568
7-8"	4-7"	H7036	H7068	-----	N8036	N8068	-----	M9536	M9568
<b>61-93 Ramcharger, Trailduster 4WD</b>									
0-1"	0-3.5"	H7047	H7038	-----	N8047	N8038	-----	M9547	M9538
1.5-3"	0-3.5"	H7027	H7038	-----	N8027	N8038	-----	M9527	M9538
4"	0-3.5"	H7017	H7038	-----	N8017	N8038	-----	M9517	M9538
5-6"	4-7"	H7017	H7068	-----	N8017	N8068	-----	M9517	M9568
7-8"	4-7"	H7036	H7068	-----	N8036	N8068	-----	M9536	M9568
<b>61-71 D200 3/4 Ton Pickup 2WD</b>									
0-2"	0-2"	H7017	H7058	-----	N8017	N8058	-----	M9517	M9558
<b>61-71 D300 1 Ton Pickup 2WD</b>									
0"	0"	H7017	H7012	-----	N8017	N8012	-----	M9517	M9512
<b>97-99 Dakota 4WD</b>									
0"	0"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	3-4"	H7054	H7017	-----	N8054	N8017	-----	M9554	M9517
<b>86-96 Dakota 4WD</b>									
0-1.5"	0"	H7052	H7029	-----	N8052	N8029	-----	M9552	M9529
2-4"	1-3"	H7054	H7039	-----	N8054	N8039	-----	M9554	M9539
<b>82-91 Ram D50 Mini 4WD</b>									
1-2"	0-2"	H7013	H7058	-----	N8013	N8058	-----	M9513	M9558



# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>79-92 Ram D50 Mini 2WD</b>									
1-2"	0-2"	H7013	H7012	-----	N8013	N8012	-----	M9513	M9512
<b>89-91 Raider 4WD with V6 Engine</b>									
1-2"	0-2"	H7013	H7012	-----	N8013	N8012	-----	M9513	M9512
<b>87-89 Raider 4WD with 4 CYL. Engine</b>									
1-2"	0-2"	H7013	H7023	-----	N8013	N8023	-----	M9513	M9523
<b>79-82 Plymouth Arrow 4WD</b>									
1-2"	0-2"	H7013	H7023	-----	N8013	N8023	-----	M9513	M9523
<b>FORD</b>									
<b>04-11 F-150 4WD / 2WD</b>									
-----	0-2.5"	-----	H7041	-----	-----	N8041	-----	-----	M9541
-----	3-6"	-----	H7060	-----	-----	N8060	-----	-----	M9560
<b>97-03 F-150 &amp; SuperCrew 4WD</b>									
0-1"	0"	H7052	H7059	-----	N8052	N8059	-----	M9552	M9559
5-6"	1-5"	H7097	H7061	-----	N8097	N8061	-----	M9597	M9561
<b>80-96 F-150 4WD</b>									
0-2"	0-1"	H7052	H7058	H7054	N8052	N8058	N8054	M9552	M9558
3"	1.5-5"	H7054	H7060	H7055	N8054	N8060	N8055	M9554	M9560
4"	1.5-5"	H7054	H7060	H7057	N8054	N8060	N8057	M9554	M9560
5-6"	1.5-5"	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560
7-8"	6-9"	H7055	H7079	H7057	N8055	N8079	N8057	M9555	M9579
<b>77-79 F-100, F-150 4WD</b>									
0-2"	0-1"	H7054 (A)	H7055	H7055 (B)	N8054 (A)	N8055	N8055 (B)	M9554 (A)	M9555
3-4"	1.5-2"	H7055 (A)	H7056	H7056 (B)	N8055 (A)	N8056	N8056 (B)	M9555 (A)	M9556
5-6"	3.5-4"	H7056 (A)	H7059	H7059 (B)	N8056 (A)	N8059	N8059 (B)	M9556 (A)	M9559
7-9"	5-8"	H7059 (A)	H7061	H7061 (B)	N8059 (A)	N8061	N8061 (B)	M9559 (A)	M9561
<b>70-76 F-100, F-150 4WD</b>									
0-1"	0-1"	H7012	H7055	H7055	N8012	N8055	N8055	M9512	M9555
1.5-4"	1.5-2"	H7023	H7056	H7056	N8023	N8056	N8056	M9523	M9556
5-6"	3.5-4"	H7058	H7059	H7059	N8058	N8059	N8059	M9558	M9559
7-9"	5-8"	H7060	H7061	H7061	N8060	N8061	N8061	M9560	M9561
<b>66-69 F-100, F-150 4WD</b>									
0-1"	0"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
1.5-4"	1-3"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
5-6"	3.5-4.5"	H7058	H7041	-----	N8058	N8041	-----	M9558	M9541
7-9"	5-8"	H7060	H7060	-----	N8060	N8060	-----	M9560	M9560
<b>97-03 F-150 2WD</b>									
0-1"	0"	H7013	H7056		N8013	N8056		M9513	M9556
<b>80-96 F-150 2WD</b>									
0-2"	0-3.5"	H7052	H7058	H7054	N8052	N8058	N8054	M9552	M9558
3"	0-3.5"	H7054	H7058	H7055	N8054	N8058	N8055	M9554	M9558
4"	0-3.5"	H7054	H7058	H7057	N8054	N8058	N8057	M9554	M9558
5-8"	4-8"	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560
<b>70-79 F-100, F-150 2WD Except Crew Cab</b>									
0-1"	0-1"	H7052	H7054	-----	N8052	N8054	-----	M9552	M9554
2-3"	2-3"	H7054	H7055	-----	N8054	N8055	-----	M9554	M9555
<b>80-96 Bronco 4WD, 2WD</b>									
0-2"	0-3.5"	H7052	H7058	H7055	N8052	N8058	N8055	M9552	M9558
3"	0-3.5"	H7054	H7058	H7055	N8054	N8058	N8055	M9554	M9558
4"	0-3.5"	H7054	H7058	H7057	N8054	N8058	N8057	M9554	M9558
5-8"	4-8"	H7055	H7060	H7057	N8055	N8060	N8057	M9555	M9560
<b>78-79 Bronco 4WD</b>									
0-1"	0"	H7054 (A)	H7012	H7055 (B)	N8054 (A)	N8012	N8055 (B)	M9554 (A)	M9512
1.5-2"	1-2"	H7054 (A)	H7023	H7055 (B)	N8055 (A)	N8023	N8055 (B)	M9555 (A)	M9523
3.5-4"	3-5"	H7055 (A)	H7058	H7056 (B)	N8056 (A)	N8058	N8056 (B)	M9556 (A)	M9558
5-6"	3-5"	H7056 (A)	H7058	H7059 (B)	N8059 (A)	N8058	N8059 (B)	M9559 (A)	M9558
7-9"	6-10"	H7059 (A)	H7060	H7061 (B)	N8061 (A)	N8060	N8061 (B)	M9561 (A)	M9560
<b>67-77 Bronco 4WD</b>									
0-1"	0"	H7054	H7012	-----	N8054	N8012	-----	M9554	M9512
2-3"	1-2.5"	H7055	H7023	-----	N8055	N8023	-----	M9555	M9523
4-6"	3.5-5"	H7055	H7058	-----	N8055	N8058	-----	M9555	M9558
6.5-8"	5.5-10"	H7056	H7060	-----	N8056	N8060	-----	M9556	M9560

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>00-04 Excursion 4WD (Leaf Spring Front End)</b>									
0-3"	0"	H7023	H7034	-----	N8023	N8034	-----	M9523	M9534
4-6"	1-4.5"	H7041	H7034	-----	N8041	N8034	-----	M9541	M9534
7-8"	5.5-8"	H7060	H7077	-----	N8060	N8077	-----	M9560	M9577
<b>05-11 F-250 Super Duty 4WD</b>									
0-3"	0-3"	H7091	H7060	-----	N8091	N8060	-----	M9591	M9560
3.5-5"	3.5-5"	H7092	H7060	-----	N8092	N8060	-----	M9592	M9560
6-7"	6-7"	H7093	H7079	-----	N8093	N8079	-----	M9593	M9579
8.5"	8.5"	H7094	H7099	-----	N8094	N8099	-----	M9594	M9599
<b>99-04 F-250 Super Duty 4WD</b>									
0-3"	0-1"	H7023	H7060	-----	N8023	N8060	-----	M9523	M9560
4-5"	2-7"	H7041	H7079	-----	N8041	N8079	-----	M9541	M9579
6-8"	2-7"	H7060	H7079	-----	N8060	N8079	-----	M9560	M9579
(A) Ahead of Axle. (B) Behind Axle.									
<b>97-98 F-250 HD 4WD with IFS Leaf Spring Front</b>									
0-2"	0-1"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>87-97 F-250 4WD with IFS</b>									
0-2"	0-1"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
3-6"	1.5-5"	H7041	H7060	-----	N8041	N8060	-----	M9541	M9560
<b>80-86 F-250 4WD with IFS</b>									
0-2"	0-1"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
3-4"	1.5-5"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
5-6"	1.5-5"	H7056	H7060	-----	N8056	N8060	-----	M9556	M9560
5-8"	6-8"	H7056	H7079	-----	N8056	N8079	-----	M9556	M9579
<b>77.5-79 F-250 4WD High Boy</b>									
0"	0"	-----	H7055	-----	-----	N8055	-----	-----	M9555
1-3"	1-3"	-----	H7056	-----	-----	N8056	-----	-----	M9556
3.5-4"	1-3"	-----	H7056	-----	N8014	N8056	-----	M9514	M9556
5-7"	3.5-6"	-----	H7059	-----	N8014	N8059	-----	M9514	M9559
<b>66-77 F-250 4WD Low Boy</b>									
-----	0-4"	-----	H7058	-----	-----	N8058	-----	-----	M9558
2-4"	0-4"	-----	H7058	-----	N8014	N8058	-----	M9514	M9558
<b>97-98 F-250 Light Duty 2WD</b>									
3-6"	1.5-5"	H7041	H7060	-----	N8041	N8060	-----	M9541	M9560
<b>80-96 F-250 2WD</b>									
0-2"	0-3"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	3.5-6"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>05-11 F-350 Super Duty 4WD</b>									
0-3"	0-3"	H7091	H7060	-----	N8091	N8060	-----	M9591	M9560
3.5-5"	3.5-5"	H7092	H7060	-----	N8092	N8060	-----	M9592	M9560
6-7"	6-7"	H7093	H7079	-----	N8093	N8079	-----	M9593	M9579
8.5"	8.5"	H7094	H7099	-----	N8094	N8099	-----	M9594	M9599
<b>99-04 F-350 Super Duty 4WD</b>									
0-3"	0-1"	H7023	H7060	-----	N8023	N8060	-----	M9523	M9560
4-5"	2-7"	H7041	H7079	-----	N8041	N8079	-----	M9541	M9579
6-8"	2-7"	H7060	H7079	-----	N8060	N8079	-----	M9560	M9579
<b>86-98 F-350 4WD with Straight Axle</b>									
0-2"	0-4"	H7023	H7060	-----	N8023	N8060	-----	M9523	M9560
3-4"	0-4"	H7041	H7060	-----	N8041	N8060	-----	M9541	M9560
5-6"	0-4"	H7060	H7060	-----	N8060	N8060	-----	M9560	M9560
<b>80-85 F-350 4WD with IFS</b>									
0-2"	0-1"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
3-6"	1.5-5"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>79 F-350 4WD</b>									
1-2"	1-3"	-----	H7056	-----	-----	N8056	-----	-----	M9556
3-4"	1-3"	-----	H7056	-----	N8014	N8056	-----	M9514	M9556
5-7"	3.5-6"	-----	H7059	-----	N8014	N8059	-----	M9514	M9559
<b>80-96 F-350 2WD</b>									
0-2"	0-3"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	3.5-6"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>83-97 Ranger &amp; Splash 4WD</b>									
0-2"	0-1"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3"	0-1"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
4"	1.5-4.5"	H7054	H7060	-----	N8054	N8060	-----	M9554	M9560
5-6"	1.5-4.5"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
7-8"	5-6"	H7055	H7079	-----	N8055	N8079	-----	M9555	M9579
<b>83-97 Ranger 2WD &amp; Bronco II 4WD, 2WD</b>									
0-2"	0-3.5"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3.5"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	4-8"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>90-94 Explorer 4WD, 2WD</b>									
0-2"	0-2"	H7052	H7029	-----	N8052	N8029	-----	M9552	M9529
3-4"	3-6"	H7054	H7039	-----	N8054	N8039	-----	M9554	M9539
5-6"	3-6"	H7055	H7039	-----	N8055	N8039	-----	M9555	M9539
<b>HONDA</b>									
<b>94-95 Passport 4WD</b>									
0"	0"	H7052	H7055	-----	N8052	N8055	-----	M9552	M9555
<b>ISUZU</b>									
<b>05-08 Isuzu I-Series 4WD</b>									
3-5"	3-4"	H7040	H7084	-----	N8040	N8074	-----	M9540	M9574
<b>89-95 Amigo 4WD, 2WD</b>									
0-1"	0"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>87-91 Trooper II 4WD</b>									
0-1"	0"	H7052	H7055	-----	N8052	N8055	-----	M9552	M9555
<b>84-86 Trooper II 4WD</b>									
0-1"	0"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>81-92 Pickup 4WD</b>									
1-2"	0-1"	H7052	H7012	-----	N8052	N8012	-----	M9552	M9512
<b>91-95 Pickup 2WD</b>									
0"	0"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>JEEP</b>									
<b>07-11 Wrangler JK 2-Door &amp; 4-Door 4WD</b>									
(-2)-(-2.5)"	(-2)-(-2.5)"	-----	-----	-----	N8005	N8007	-----	-----	-----
1-3.5"	2-3.5"	H7035	H7037	-----	N8035	N8037	-----	M9535	M9537
4-5"	4-5"	H7065	H7067	-----	N8065	N8067	-----	M9565	M9567
6-7"	6-7"	H7075	H7087	-----	N8075	N8087	-----	M9575	M9587
<b>97-06 Wrangler TJ/Unlimited/Rubicon 4WD (TJ Rear Shock Relocation Brackets Available, Part# TJRSB10)</b>									
0"	0"	H7015	H7008	-----	N8015	N8008	-----	M9515	M9508
1-3"	1-3"	H7016	H7018	-----	N8016	N8018	-----	M9516	M9518
3.5-4"	3.5-4"	H7025	H7028	-----	N8025	N8028	-----	M9525	M9528
6-9"	6-8"	H7049	H7063	-----	N8049	N8063	-----	M9549	M9563
<b>87-96 Wrangler YJ 4WD</b>									
0-1"	0"	H7055	H7012	-----	N8055	N8012	-----	M9555	M9512
2-2.5"	1-2.5"	H7056	H7023	-----	N8056	N8023	-----	M9556	M9523
3.5-4"	3-6"	H7059	H7088	-----	N8059	N8088	-----	M9559	M9558
5-6"	3-6"	H7061	H7088	-----	N8061	N8088	-----	M9561	M9558
<b>82-86 CJ5, CJ7 &amp; Scrambler 4WD</b>									
0-2.5"	0-2.5"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
3-5"	3-5"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>76-81 CJ5, CJ7 &amp; Scrambler 4WD</b>									
0-2.5"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
0-2.5"	1-3"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
3-5"	1-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
3-5"	3.5-5.5"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>55-75 CJ5, CJ6, 3B &amp; M38A1 4WD</b>									
0-1"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
1.5-2.5"	1-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
3-5"	3.5-5.5"	H7058	H7058	-----	N8058	N8058	-----	M9558	M9558
<b>41-63 MB, M38, CJ2A, CJ3A &amp; CJ3B 4WD</b>									
0-1"	0-1"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512



# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>All U.S. Post Office Jeep FJ8A &amp; FJ9 2WD</b>									
0"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
<b>02-11 Liberty KJ 4WD, 2WD</b>									
-----	2.5"	-----	H7088	-----	-----	N8088	-----	-----	-----
<b>84-01 Cherokee XJ 4WD, 2WD</b>									
0-3"	0"	H7016	H7008	-----	N8016	N8008	-----	M9516	M9508
0-3"	1-3"	H7016	H7018	-----	N8016	N8018	-----	M9516	M9518
4-5"	4-5"	H7025	H7028	-----	N8025	N8028	-----	M9525	M9528
6-8"	5-8"	H7049	H7063	-----	N8049	N8063	-----	M9549	M9563
<b>99-04 Grand Cherokee WJ 4WD, 2WD</b>									
0"	0"	H7016	H7042	-----	N8015	N8042	-----	M9515	M9542
2-3"	2-3"	H7016	H7044	-----	N8016	N8044	-----	M9516	M9544
<b>93-98 Grand Cherokee ZJ 4WD, 2WD</b>									
0-3"	0-3"	H7016	H7023	-----	N8016	N8023	-----	M9516	M9523
4-5"	4-5"	H7025	H7058	-----	N8025	N8058	-----	M9525	M9558
<b>84-91 Grand Wagoneer 4WD - Full-Size</b>									
0-1"	0-1"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
2-3"	2-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
4-5"	4-5"	H7088	H7088	-----	N8088	N8088	-----	M9558	M9558
<b>74-83 Cherokee, Wagoneer 4WD - Full-Size</b>									
0-1"	0-1"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
2-3"	2-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
4-5"	4-5"	H7088	H7088	-----	N8088	N8088	-----	M9558	M9558
<b>86-92 Comanche MJ 4WD, 2WD</b>									
0-3"	0-3"	H7016	H7023	-----	N8016	N8023	-----	M9516	M9523
4-5"	4-5"	H7025	H7058	-----	N8025	N8058	-----	M9525	M9558
<b>74-88 J10, J20 Pickup 4WD</b>									
0-1"	0-1"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
2-3"	2-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
<b>74-88 J10, J20 Pickup 4WD</b>									
4-5"	4-5"	H7088	H7088	-----	N8088	N8088	-----	M9558	M9558
<b>63-73 Wagoneer 4WD</b>									
2-3"	2-4"	H7058	H7023	-----	N8058	N8023	-----	M9558	M9523
<b>69-73 Jeepster, C101 &amp; Commando 4WD</b>									
0-2"	0-2"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
3-4"	3-4"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>47-62 Utility Wagon 4WD</b>									
2-4"	2-4"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
<b>63-73 Gladiator 4WD</b>									
0-1"	0-1"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
2-3"	2-3"	H7058	H7023	-----	N8058	N8023	-----	M9558	M9523
<b>47-62 Utility Truck 4WD</b>									
1.5-2"	1.5-2"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
<b>LINCOLN</b>									
<b>Mark LT 4WD</b>									
-----	0-2.5"	-----	H7041	-----	-----	N8041	-----	-----	M9541
<b>MAZDA</b>									
<b>94-97 B4000 4WD</b>									
0-2"	0-4"	H7052	H7060	-----	N8052	N8060	-----	M9552	M9560
3-4"	0-4"	H7054	H7060	-----	N8054	N8060	-----	M9554	M9560
5-6"	0-4"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>87-93 B2600 4WD</b>									
0-2"	0-1"	H7052	H7027	-----	N8052	N8027	-----	M9552	M9527
<b>90-94 Navajo 4WD</b>									
0-2"	0-2"	H7052	H7029	-----	N8052	N8029	-----	M9552	M9529
3-4"	3-8"	H7054	H7039	-----	N8054	N8039	-----	M9554	M9539
5-8"	3-8"	H7055	H7039	-----	N8055	N8039	-----	M9555	M9539
<b>94-97 B Series 2WD</b>									
0-2"	0-3.5"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3.5"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	4-8"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>86-93 B-2000 &amp; B-2200 2WD</b>									
0-2"	0"	H7052	H7012	-----	N8052	N8012	-----	M9552	M9512
<b>MAZDA</b>									
<b>85-89 Montero 4WD with 4 Cylinder Engine</b>									
1-2"	1-2"	H7013	H7023	-----	N8013	N8023	-----	M9513	M9523
<b>83-84 Montero 4WD</b>									
1-2"	1-2"	H7013	H7023	-----	N8013	N8023	-----	M9513	M9523
<b>83-91 Pickup 4WD</b>									
1-2"	1-2"	H7013	H7058	-----	N8013	N8058	-----	M9513	M9558
<b>NISSAN</b>									
<b>04-09 Nissan Armada 4WD, 2WD</b>									
-----	0-2.5"	-----	H7012	-----	-----	N8012	-----	-----	M9512
<b>04-09 Nissan Titan 2WD/4WD</b>									
-----	0-1"	-----	H7012	-----	-----	N8012	-----	-----	M9512
<b>86.5-93 Pathfinder &amp; Terrano 4WD, 2WD</b>									
0-1"	0-1"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
2-4"	2-4"	H7054	H7041	-----	N8054	N8041	-----	M9554	M9541
<b>86.5-92 Hardbody 4WD</b>									
2-3"	1-2"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
4-5"	3-4"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
<b>83.5-86 Pickup 4WD</b>									
1-2"	0-1"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>87-93 Pickup 2WD</b>									
1-2"	0-1"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>SCOUT</b>									
<b>72-82 Scout II, Terra &amp; Traveler 4WD</b>									
0-1"	0-1"	H7054	H7012	-----	N8054	N8012	-----	M9554	M9512
2-4"	2-4"	H7055	H7058	-----	N8055	N8058	-----	M9555	M9558
<b>61-71 Scout 80 &amp; 800 4WD</b>									
0-1"	0-1"	H7012	H7054	-----	N8012	N8054	-----	M9512	M9554
<b>SUZUKI</b>									
<b>85-92 Samurai / Santana 4WD</b>									
0-2"	0-2"	H7052	H7012	-----	N8052	N8012	-----	M9552	M9512
3-4"	3-4"	H7054	H7023	-----	N8054	N8023	-----	M9554	M9523
<b>85-88 LJ10, SJ10 &amp; LJ413 4WD</b>									
0-1"	0-1"	H7054	H7012	-----	N8054	N8012	-----	M9554	M9512
<b>82-85 LJ413 4WD</b>									
0-1"	0-1"	H7052	H7012	-----	N8052	N8012	-----	M9552	M9512
<b>TOYOTA</b>									
<b>07-11 Tundra 4WD</b>									
-----	0-2"	-----	H7062	-----	-----	N8062	-----	-----	-----
-----	4-5"	-----	H7066	-----	-----	N8066	-----	-----	M9566
<b>00-06 Tundra 4WD</b>									
-----	2.5"	-----	H7048	-----	-----	N8048	-----	-----	M9548
<b>05-10 Tacoma 4WD &amp; Pre-Runner 2WD</b>									
-----	0-1"	-----	H7048	-----	-----	N8048	-----	-----	M9548
-----	1.5"	-----	H7045	-----	-----	N8045	-----	-----	M9545
<b>95.5-04 Tacoma 4WD &amp; Pre-Runner 2WD</b>									
-----	0-3"	-----	H7027	-----	-----	N8027	-----	-----	M9527
<b>93-98 T100 4WD</b>									
0-2"	0-1"	H7002	H7058	-----	N8002	N8058	-----	M9502	M9558
3-4"	2-4"	H7004	H7060	-----	N8004	N8060	-----	M9504	M9560
<b>86-95 Pickup 4WD</b>									
0-2"	0-2"	H7002	H7047	-----	N8002	N8047	-----	M9502	M9547
3-4"	3-4"	H7004	H7027	-----	N8004	N8027	-----	M9504	M9527

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>84-85 Pickup 4WD</b>									
0-1"	0-1"	H7052	H7047	-----	N8052	N8047	-----	M9552	M9547
1.5-2.5"	0-1"	H7054	H7047	-----	N8054	N8047	-----	M9554	M9547
3-4"	1.5-3.5"	H7055	H7027	-----	N8055	N8027	-----	M9555	M9527
5-6"	4-8.5"	H7055	H7036	-----	N8055	N8036	-----	M9555	M9536
7-8"	4-8.5"	H7056	H7036	-----	N8056	N8036	-----	M9556	M9536
<b>79-83 Pickup 4WD</b>									
0-1"	0-2"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
1.5-2.5"	0-2"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
3-4"	0-2"	H7055	H7058	-----	N8055	N8058	-----	M9555	M9558
5-6"	3-7"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
7-8"	3-7"	H7056	H7060	-----	N8056	N8060	-----	M9556	M9560
<b>96-01 4Runner 4WD</b>									
-----	0-2.5"	-----	H7022	-----	-----	N8022	-----	-----	M9522
<b>90-95 4Runner 4WD, 2WD</b>									
0-2"	0-2"	H7052	H7022	-----	N8052	N8022	-----	M9552	M9522
3-4"	3-4"	H7054	H7024	-----	N8054	N8024	-----	M9554	M9524
<b>86-89 4Runner 4WD</b>									
0-2"	0-2"	H7002	H7047	-----	N8002	N8047	-----	M9502	M9547
3-4"	3-4"	H7004	H7027	-----	N8004	N8027	-----	M9504	M9527
<b>84-85 4Runner 4WD</b>									
0-1"	0-1"	H7052	H7047	-----	N8052	N8047	-----	M9552	M9547
1.5-2.5"	0-1"	H7054	H7047	-----	N8054	N8047	-----	M9554	M9547
3-4"	1.5-3.5"	H7055	H7027	-----	N8055	N8027	-----	M9555	M9527
5-6"	4-8.5"	H7055	H7036	-----	N8055	N8036	-----	M9555	M9536
7-8"	4-8.5"	H7056	H7036	-----	N8056	N8036	-----	M9556	M9536
<b>07-11 FJ Cruiser 4WD</b>									
-----	1.5"	-----	H7089	-----	-----	N8089	-----	-----	
-----	2.5"	-----	H7098	-----	-----	N8098	-----	-----	
<b>84-87 LandCruiser 60 Series 4WD (Model FJ60)</b>									
0"	0"	H7091	H7047	-----	N8091	N8047	-----	M9591	M9547
<b>81-83 LandCruiser 60 Series 4WD (Model FJ60)</b>									
0"	0"	H7091	H7023	-----	N8091	N8023	-----	M9591	M9523
<b>84-89 LandCruiser BJ70, BJ71, BJ73 &amp; BJ75 4WD</b>									
0-1"	0-1"	H7091	H7047	-----	N8091	N8047	-----	M9591	M9547
<b>91-97 LandCruiser FJ80 4WD</b>									
-----	0-2"	-----	H7024	-----	-----	N8024	-----	-----	M9524
<b>86-89 LandCruiser FJ60 4WD</b>									
0-2"	0-2"	H7022	H7047	-----	N8022	N8047	-----	M9522	M9547
<b>88-89 LandCruiser HJ40 4WD</b>									
0"	0"	H7091	H7047	-----	N8091	N8047	-----	M9591	M9547
<b>64-84 LandCruiser FJ40, BJ40 &amp; BJ42 4WD</b>									
0-2"	0-2"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
3-4"	3-4"	H7023	H7041	-----	N8023	N8041	-----	M9523	M9541
5-6"	5-6"	H7023	H7060	-----	N8023	N8060	-----	M9523	M9560
<b>94-95 LandCruiser KZJ70 &amp; KZJ73 4WD</b>									
0"	0"	H7091	H7047	-----	N8091	N8047	-----	M9591	M9547
<b>90-93 LandCruiser LJ70 &amp; LJ73 4WD</b>									
0"	0"	H7091	H7047	-----	N8091	N8047	-----	M9591	M9547
<b>64-81 Wagon FJ43 &amp; FJ45 4WD</b>									
0-1.5"	0-1.5"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523




# FRONT LEVELING STRUTS

Year	Make / Model	Height (in.)		Front Strut (single)	Rear Lift	Rear Shocks	
		Front	Rear			Hydro	Nitro
NOTES: Struts Sold Individually. Order (2) for Pair. Shocks Sold Individually. Order (2) for Pair.							
DODGE							
06-11	Dodge Ram 1500 4WD	1-2"	----	D6912STS	----	H7036	N8036
FORD							
04-08	F-150 Pickup 2WD	2-3"	----	F223STS	----	H7041	N8041
04-08	F-150 Pickup 4WD	2-3"	----	F423STS	----	H7041	N8041
09-11	F-150 Pickup 2WD	2-2.5"	----	F9125STS	----	H7041	N8041
09-11	F-150 Pickup 4WD	1-2.5"	----	F9125STS	----	H7041	N8041
LINCOLN							
06-08	Mark LT 4WD	2-2.5"	----	F9125STS	----	H7041	N8041
NISSAN							
04-10	Armada 2WD/4WD	2.25"	2"	NT42STS	NA20R	H7012	N8012
NOTES: Not for Armadas equipped with Auto Leveling Rear Suspension.							
04-10	Titan 2WD/4WD	2.25"	2"	NT42STS		H7058	N8058
TOYOTA							
95.5-04	Tacoma 4WD & Pre-Runner 2WD	1-3"	----	TT413STS	----	H7027	N8027
05-10	Tacoma 4WD & Pre-Runner 2WD	1-3"	----	TC513STS	----	H7048	N8048
00-06	Tundra Pickup 4WD	1-3"	----	TT413STS	----	----	----
07-11	Tundra Pickup 2WD	1-3"	----	TU713STS	----	H7062	N8062
07-11	Tundra Pickup 4WD	1-3"	----	TU713STS	----	H7062	N8062
07-11	FJ Cruiser 4WD	1-3"	----	FJ713STS	----	----	----



**09-11 F-150**

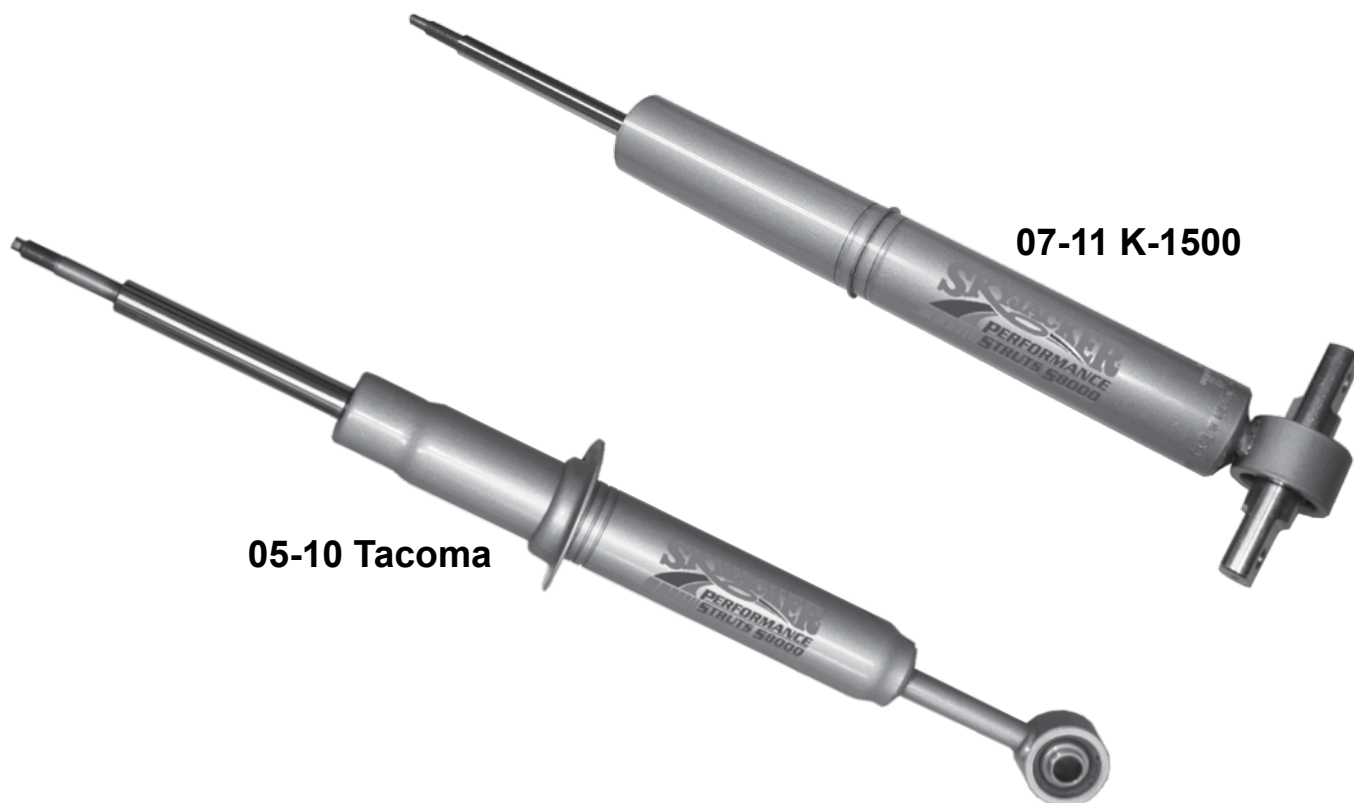

**05-10 Tacoma**

**07-11 K-1500**

# FRONT MULTIPLE SHOCK APPLICATION GUIDE

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>					
<b>CHEVROLET/GMC</b>					
<b>67-91 Blazer, Jimmy &amp; Suburban 4WD</b>					
0-1.5"	Dual Front	DS250	2	H7021	
2-5"	Dual Front	DS250	2	H7051	
6-8"	Dual Front	DS250	2	H7071	
9-12"	Dual Front	DS250	2	H7032	
<b>DODGE</b>					
<b>03-11 2500/3500 Ram Pickup 4WD</b>					
2.5"	Dual Front	DS393	2	H7058	
4.5-5"	Dual Front	DS393	2	H7041	
<b>94-01 1/2 &amp; 3/4 Ton Ram Pickup 4WD</b>					
0-1"	Dual Front	DS390	2	H7023	
2-3"	Dual Front	DS390	2	H7023	
4-6"	Dual Front	DS390	2	H7058	
<b>94-01 3/4 HD &amp; 1 Ton Ram Pickup</b>					
0-1"	Dual Front	DS390	2	H7023	
1.5-3"	Dual Front	DS390	2	H7058	
4-5"	Dual Front	DS390	2	H7041	
<b>74.5-93 1/2, 3/4 &amp; 1 Ton Pickup, 74.5-93 Ramcharger / Trailduster 4WD</b>					
0-1"	Dual Front	DS350	2	H7023	
1.5-3"	Dual Front	DS350	2	H7058	
4-6"	Dual Front	DS350	2	H7041	
7-8"	Dual Front	DS350	2	H7060	
<b>FORD</b>					
<b>80-96 F-100, F-150 &amp; Bronco 4WD</b>					
0-2"	Dual Front	DS280	2	H7052	
3-4"	Dual Front	DS280	2	H7054	
5-8"	Dual Front	DS280	2	H7055	
<b>77-79 F-100, F-150 4WD</b>					
0-2"	Dual Front	DS260	2	H7054	
3-4"	Dual Front	DS260	2	H7055	
5-6"	Dual Front	DS260	2	H7056	
7-9"	Dual Front	DS260	2	H7059	
<b>70-76 F-100, F-150 4WD</b>					
0-1"	Dual Front	DS260	2	H7052	
1.5-2"	Dual Front	DS260	2	H7054	
2.5-4"	Dual Front	DS260	2	H7055	
5-6"	Dual Front	DS260	2	H7055	
7-9"	Dual Front	DS260	2	H7061	
<b>00-03 Excursion 4WD &amp; 99-04 F-250 &amp; F-350 Super Duty 4WD</b>					
0-3"	Triple Front	TS950	4	H7012	A9
4-5"	Triple Front	TS950	4	H7058	A9
6-8"	Triple Front	TS950	4	H7041	A9
KIT NOTES: A9. This Kit Adds 2 Shocks Per Side & Requires the Use of OEM Position Front Shock.					
<b>87-98 F-250 4WD - IFS</b>					
0-2"	Triple Front	TS450	4	H7012	
3-6"	Triple Front	TS450	4	H7058	
<b>80-86 F-250 4WD - IFS</b>					
0-2"	Triple Front	TS450	4	H7012	
3-6"	Triple Front	TS450	4	H7023	
<b>77.5-79 F-250 4WD</b>					
4-7"	Dual Front	DS300	2	N8014	

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
<b>66-77 F-250 High Boy 4WD</b>					
2-4"	Dual Front	DS310	2	N8014	
<b>80-96 F-250 &amp; F-350 2WD</b>					
0-2"	Dual Front	DS280	2	H7052	
3-4"	Dual Front	DS280	2	H7054	
5-8"	Dual Front	DS280	2	H7055	
<b>86-98 F-350 4WD with Straight Axle</b>					
0-2"	Triple Front	TS450	4	H7012	
3-4"	Triple Front	TS450	4	H7058	
5-6"	Triple Front	TS450	4	H7041	
<b>80-85 F-350 4WD - IFS</b>					
0-2"	Triple Front	TS450	4	H7012	
3-6"	Triple Front	TS450	4	H7023	
<b>83-97 Ranger &amp; Bronco II 4WD, 2WD, 94-97 Mazda B4000 4WD, 2WD</b>					
0-2"	Dual Front	DS220	2	H7052	
3-4"	Dual Front	DS220	2	H7054	
5-8"	Dual Front	DS220	2	H7055	
0-2"	Triple Front	TS240	4	H7052	
3-4"	Triple Front	TS240	4	H7054	
5-8"	Triple Front	TS240	4	H7055	
<b>90-94 Explorer 4WD, 2WD, 90-94 Mazda Navajo 4WD, 2WD</b>					
0-2"	Dual Front	DS220	2	H7052	
3-4"	Dual Front	DS220	2	H7054	
5-8"	Dual Front	DS220	2	H7055	
<b>TOYOTA</b>					
<b>79-85 Pickup &amp; 4Runner 4WD</b>					
0-1"	Dual Front	-----	2	H7052	
1.5-2.5"	Dual Front	-----	2	H7054	
3-6"	Dual Front	-----	2	H7055	
7-8"	Dual Front	-----	2	H7056	

# REAR MULTIPLE SHOCK APPLICATION GUIDE

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>					
<b>CHEVROLET/GMC</b>					
<b>73-87 1/2 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS440	2	H7043	
2-4"	Dual Rear	DS440	2	H7053	
4.5-8"	Dual Rear	DS440	2	H7073	
<b>73-87 3/4 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS445	2	H7043	
2-4"	Dual Rear	DS445	2	H7053	
4.5-8"	Dual Rear	DS445	2	H7073	
<b>77-87 1 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS445	2	H7053	
2-4"	Dual Rear	DS445	2	H7073	
4.5-10"	Dual Rear	DS445	2	H7078	
<b>67-72 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS442	2	H7043	
2-4"	Dual Rear	DS442	2	H7053	
4.5-8"	Dual Rear	DS442	2	H7073	
<b>73-87 Blazer, Jimmy Full-Size 4WD</b>					
0-1.5"	Dual Rear	DS440	2	H7043	
2-4"	Dual Rear	DS440	2	H7053	
4.5-8"	Dual Rear	DS440	2	H7073	
<b>67-72 Blazer, Jimmy Full-Size 4WD</b>					
0-1.5"	Dual Rear	DS442	2	H7043	
2-4"	Dual Rear	DS442	2	H7053	
4.5-8"	Dual Rear	DS442	2	H7073	
<b>73-91 Suburban 4WD - 1/2 Ton</b>					
0-1.5"	Dual Rear	DS440	2	H7043	
2-4"	Dual Rear	DS440	2	H7053	
4.5-8"	Dual Rear	DS440	2	H7073	
<b>73-91 Suburban 4WD - 3/4 Ton</b>					
0-1.5"	Dual Rear	DS445	2	H7043	
2-4"	Dual Rear	DS445	2	H7053	
4.5-8"	Dual Rear	DS445	2	H7073	
<b>67-72 Suburban 4WD</b>					
0-1.5"	Dual Rear	DS442	2	H7043	
2-4"	Dual Rear	DS442	2	H7053	
4.5-8"	Dual Rear	DS442	2	H7073	
<b>DODGE</b>					
<b>69-93 1/2, 3/4 &amp; 1 Ton Pickup, 69-93 Ramcharger / Trailduster 4WD</b>					
0-3.5"	Dual Rear	DS360	2	H7060	
4-8"	Dual Rear	DS360	2	H7079	
<b>FORD</b>					
<b>80-96 F-100, F-150 4WD - Except with Dual Gas Tanks</b>					
0-1"	Dual Rear	DS360	2	H7058	
1.5-5"	Dual Rear	DS360	2	H7060	
6-9"	Dual Rear	DS360	2	H7079	
<b>70-79 F-100, F-150 4WD</b>					
0-1"	Dual Rear	DS360	2	H7023	
1.5-2"	Dual Rear	DS360	2	H7041	
3.5-4"	Dual Rear	DS360	2	H7041	
5-8"	Dual Rear	DS360	2	H7060	
<b>80-96 F-150 2WD</b>					
0-3.5"	Dual Rear	DS360	2	H7058	
4-8"	Dual Rear	DS360	2	H7060	
<b>80-96 Bronco 4WD, 2WD</b>					
0-3.5"	Dual Rear	DS360	2	H7058	
4-8"	Dual Rear	DS360	2	H7060	

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
<b>78-79 Bronco 4WD</b>					
0"	Dual Rear	DS360	2	H7012	
1-2"	Dual Rear	DS360	2	H7023	
3-5"	Dual Rear	DS360	2	H7058	
6-10"	Dual Rear	DS360	2	H7060	
<b>67-77 Bronco 4WD</b>					
0"	Dual Rear	-----	2	H7012	
1-2.5"	Dual Rear	-----	2	H7023	
3.5-5"	Dual Rear	-----	2	H7058	
5.5-10"	Dual Rear	-----	2	H7060	
<b>80-96 F-250 4WD - Except with Dual Gas Tanks</b>					
0-1"	Dual Rear	DS360	2	H7058	
1.5-5"	Dual Rear	DS360	2	H7060	
5.5-8"	Dual Rear	DS360	2	H7079	
<b>77.5-79 F-250 4WD - Except with Dual Gas Tanks</b>					
0"	Dual Rear	DS360	2	H7058	
1-3"	Dual Rear	DS360	2	H7041	
3.5-6"	Dual Rear	DS360	2	H7060	
<b>66-77 F-250 High Boy 4WD - Except with Dual Gas Tanks</b>					
0-4"	Dual Rear	DS360	2	H7041	
<b>80-96 F-250 &amp; F-350 2WD</b>					
0-3.5"	Dual Rear	DS360	2	H7058	
4-8"	Dual Rear	DS360	2	H7060	
<b>80-98 F-350 High Boy 4WD - Except with Dual Gas Tanks</b>					
0-4"	Dual Rear	DS360	2	H7060	
4.5-8"	Dual Rear	DS360	2	H7079	
<b>83-97 Ranger 4WD</b>					
0-1"	Dual Rear	-----	2	H7058	
1.5-4"	Dual Rear	-----	2	H7060	
4.5-8"	Dual Rear	-----	2	H7079	
<b>83-97 Ranger 2WD</b>					
0-3.5"	Dual Rear	-----	2	H7058	
4-8"	Dual Rear	-----	2	H7060	
<b>83-90 Bronco II 4WD, 2WD</b>					
0-3.5"	Dual Rear	-----	2	H7058	
4-8"	Dual Rear	-----	2	H7060	



# SHOCK SPECIFICATIONS GUIDE


SHOCKS SERIES			LENGTHS		MOUNTING CODES		OPTION	NOTES
HYDRO	NITRO	Monotube	EXTENDED	COLLAPSED	UPPER	LOWER		
H7002	N8002	M9502	15.69	10.02	S1	ES113	EB4	
H7003	N8003	M9503	18.5	12.25	S1	Clevis		
H7004	N8004	M9504	18.66	11.52	S1	ES113	EB4	
	N8005		21	13.125	S1	ES25	EB1	
H7006	-----	-----	16.14	10.15	S1	BP4	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
	N8007							
H7008	N8008	M9508	19.07	12.07	BP18	ES24	EB1, EB1	
H7009	N8009	M9509	15.35	10.33	S1	Clevis		
H7010	-----	-----	16.14	10.15	S1	ES34	EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7011	N8011	M9511	19.07	12.07	EB7	ES24	EB1, EB1	
H7012	N8012	M9512	19.07	12.07	ES25	ES25	EB1, EB1	
H7013	N8013	M9513	15.69	10.02	S1	BP4	EB1	
-----	N8014	M9514	27.01	15.06	S1	S1		
H7015	N8015	M9515	18.66	11.52	S1	BP4	EB1	
H7016	N8016	M9516	22.75	13.54	S1	BP4	EB1	
H7017	N8017	M9517	27.07	15.94	ES34	ES34	EB4, EB4	
H7018	N8018	M9518	22.58	13.71	BP18	ES24	EB1, EB1	
H7019	N8019	M9519	15.69	10.02	S1	ES60	EB4	
H7020	-----	-----	16.14	10.15	S1	BP13	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7021	N8021	M9521	19.07	12.07	ES31	ES24	EB1	
H7022	N8022	M9522	22.75	13.54	S1	EB4		
H7023	N8023	M9523	22.58	13.71	ES25	ES25	EB1, EB1	
H7024	N8024	M9524	24.75	14.54	S1	EB4		
H7025	N8025	M9525	24.75	14.54	S1	BP4	EB1	
H7027	N8027	M9527	24.84	14.82	ES34	ES34	EB4, EB4	
H7028	N8028	M9528	24.84	14.82	BP18	ES24	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7029	N8029	M9529	24.84	14.82	BP8	ES25	EB1, EB1	
H7030	N8030	M9530	26.57	15.69	ES34	ES34	EB4, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7032	N8032	M9532	29.83	17.32	ES31	ES24	EB1	
H7034	N8034	M9534	29.83	17.32	BP8	ES25	EB1, EB1	
H7035	N8035	M9535	22.75	13.54	S1	ES25	EB1	
H7036	N8036	M9536	29.83	17.32	ES34	ES34	EB4, EB4	
H7037	N8037	M9537	25.35	15.05	BP12	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7038	N8038	M9538	29.83	17.32	ES27	EB4	EB1	
H7039	N8039	M9539	29.83	17.32	BP8	ES25	EB1, EB1	
H7040	N8040	M9540	18.12	11.28	S1	ES37		A1
SHOCK NOTE: A1. Slim Body - 1.86"								
H7041	N8041	M9541	26.07	15.57	ES25	ES25	EB1, EB1	
H7042	N8042	M9542	22.58	13.71	ES82	ES24	EB1, EB1	
H7043	N8043	M9543	24.84	14.82	EB7	ES34	EB1, EB4	
H7044	N8044	M9544	24.84	14.82	ES82	ES24	EB1, EB4	
H7045	N8045	M9545	24.75	14.54	S1	ES22		
H7047	N8047	M9547	22.58	13.71	EB4	EB4		
H7048	N8048	M9548	22.75	13.54	S1	ES22		
H7049	N8049	M9549	28.75	16.56	S1	BP4	EB1	
H7051	N8051	M9551	22.58	13.71	ES31	ES24	EB1	
H7052	N8052	M9552	15.69	10.02	S1	ES25	EB1	
H7053	N8053	M9553	27.07	15.94	EB7	ES34	EB1, EB4	
H7054	N8054	M9554	18.66	11.52	S1	ES25	EB1	
H7055	N8055	M9555	22.75	13.54	S1	ES25	EB1	
H7056	N8056	M9556	24.75	14.54	S1	ES25	EB1	
H7057	N8057	M9557	26.79	15.56	S1	ES25	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7058	N8058	M9558	24.84	14.82	ES25	ES25	EB1, EB1	
H7059	N8059	M9559	28.75	16.56	S1	ES25	EB1	
H7060	N8060	M9560	29.83	17.32	ES25	ES25	EB1, EB1	
H7061	N8061	M9561	30.46	17.42	S1	ES25	EB1	

# SHOCK SPECIFICATIONS GUIDE

SHOCKS SERIES			LENGTHS		MOUNTING CODES		OPTION	NOTES
HYDRO	NITRO	Monotube	EXTENDED	COLLAPSED	UPPER	LOWER		
H7062	N8062		25.75	15.44	S38	ES25	EB1	
H7063	N8063	M9563	27.07	15.94	BP18	ES24	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
	N8064		31.5	18.25	ES34	ES34	EB4, EB4	
H7065	N8065	M9565	24.79	14.56	S1	ES25	EB1	
H7066	N8066	M9566	28.75	16.50	S38	ES25	EB1	
H7067	H7067	H7067	26.80	15.91	BP12	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7068	N8068	M9568	34	20.27	ES27	EB4	EB1	
H7070	N8070	M9570	28.59	16.70	ES34	ES34	EB4, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7071	N8071	M9571	26.07	15.57	ES31	ES24	EB1	
H7072	N8072	M9572	26.07	15.57	BP8	ES34	EB1, EB1	
H7073	N8073	M9573	29.83	17.32	EB7	ES34	EB1, EB4	
H7074	N8074	M9574	22.25	13.47	S38	ES34	ES60	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7075	N8075	M9575	26.75	15.56	S1	ES25	EB1	
H7077	N8077	M9577	34	20.27	BP8	ES25	EB1, EB1	
H7078	N8078	M9578	34	20.27	EB7	ES34	EB1, EB4	
H7079	N8079	M9579	34	20.27	ES25	ES25	EB1, EB1	
H7080	-----	-----	14.5	9.68	EB7	ES24	EB1, EB1	
H7081	N8081	M9581	19.07	12.07	ES33	ES82	EB1	
H7082	N8082	M9582	19.07	12.07	ES82	ES82	EB1, EB1	
H7083	N8083	M9583	27.07	15.94	BP8	ES34	EB1, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7084	N8084	M9584	24.84	14.82	BP8	ES34	EB1, EB4	
H7085	N8085	M9585	22.58	13.92	ES33	ES82	EB4	
H7086	N8086	M9586	29.83	17.32	BP8	ES34	EB1, EB4	
H7087	N8087	M9587	28.59	16.70	BP12	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7088	N8088	M9558	24.84	14.82	ES25	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7089	N8089		23.75	14.84	S40	ES36		A2
SHOCK NOTE: A2. Slim Body - 2"								
H7091	N8091	M9591	22.63	13.75	S38	ES34	ES60	
H7092	N8092	M9592	24.63	14.75	S38	ES34	EB4	
H7093	N8093	M9593	26.63	15.75	S38	ES34	EB4	
H7094	N8094	M9594	28.75	16.5	S38	ES34	EB4	
	N8095		24.28	19.75				
H7096	N8096	M9596	21.5	13.76	S1	Clevis		
H7097	N8097	M9597	23.5	13.92	S1	ES25	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7098	N8098		24.75	15.84	S40	ES36		
H7099	N8099	M9599	34	18.375	ES25	ES25	EB1, EB1	
<b>STEERING STABILIZERS</b>								
STABILIZER SERIES			LENGTHS		MOUNTING CODES		OPTION	NOTES
WHITE		Silver	EXTENDED	COLLAPSED	UPPER	LOWER		
7000	-----	9000	23.9	14.35	EB1	EB1		
7202	-----	9200	20.62	12.62	EB1	EB1		A1
7400	-----	9400	19.38	12.11	EB1	EB1		
7500	-----	9500	17.06	10.48	S1	EB1		A1
7800	-----	9800	21.65	12.77	S1	S1		
7900	-----	9900	20.21	12.05	S1	S1		
SHOCK NOTE: A1. Slim Body - 1.86"								


# SHOCK SPECIFICATIONS GUIDE

## LENGTH CHART

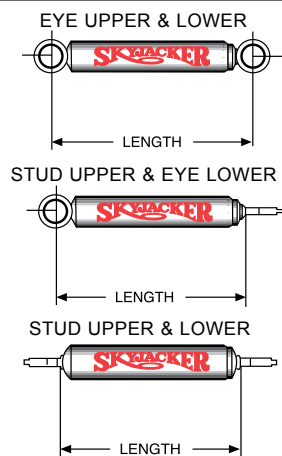


## 'BP' MOUNTING CODE

EYE RING \ BUSHING \ BAR PIN				
CODE	A	B	C	D
BP4	3.19	2.38	.33	—
BP8	3.50	2.87	.35	.42
BP12	3.75	3.14	.45	—
BP18	3.75	3.14	.39	—

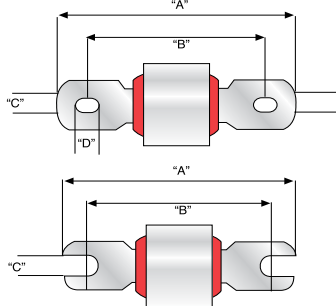

## 'ES' MOUNTING CODE

EYE RING \ BUSHING \ SLEEVE		
CODE	A	B
ES2	10MM	1.42
ES22	1/2	1.25
ES24	1/2	1.38
ES25	1/2	1.50
ES27	1/2	1.62
ES31	1/2	2.25
ES33	1/2	2.5
ES34	9/16	1.67
ES36	3/4	1.75
ES37	12MM	1.01
ES60	14MM	1.5
ES82	1/2	1.67
ES113	16MM	1.49

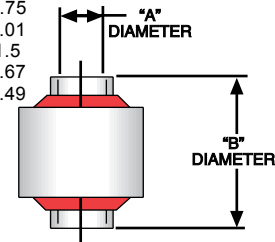


## 'EB' MOUNTING CODE

### EYE RING \ BUSHING

CODE	A	B	C
EB1	5/8	1.44	1.25
EB2	3/4	1.75	1.50
EB4	11/16	1.72	1.55
EB7	5/8	1.44	1.25


NOTE: EB7 Includes 5/8 Shock Stud.

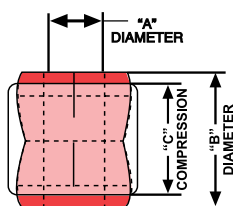

## 'S' MOUNTING CODE

### STUD MOUNT

CODE	A	B	C	D
S1	2.37	1.00	3/8	3/8-24
S10	2.37	1.33	7/16	3/8-24
S38	2.75	1.70	14MM	12MM
S40	3.00	1.68	12MM	10MM

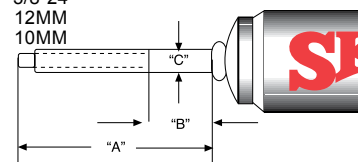

To order replacement hardware, please use mounting code part numbers listed under appropriate shock in Shock Specifications Guide.

For example:

ES25 = (1) Hourglass 5/8" bushing + (1) sleeve for (1) shock end

BP4 = (1) Hourglass 5/8" bushing + (1) bar pin for (1) shock end

Note: All mounting code hardware contains (1) bushing.

## SHOCK & STABILIZER BOOTS

Color	EACH	Color	EACH	Color	EACH
Blue	B10B	Hunter Green	B10HG	Red	B10R
Clear	B10CL	Black	B10K	Raspberry	B10RB
Hot Green	B10FG	Light Blue	B10LB	Teal	B10TL
Hot Pink	B10FP	Lavender	B10LV	White	B10WH
Orange	B10OG	Purple	B10PR	Yellow	B10Y
Gray	B10GY				



## OEM REPLACEMENT, SINGLE & DUAL KITS

	HEAVY DUTY OEM		SINGLE STABILIZER		DUAL STABILIZER		Single Cylinder used in kit without hardware	
	White	Silver	White	Silver	White	Silver	White	Silver
<b>KIT NOTES: (S1). Slim Body - 1.86" (I). In-Line Mounting. (P). Parallel Mounting.</b>								
<b>CADILLAC</b>								
<b>00-05 1500 Cadillac Escalade, EXT, ESV 4WD</b>								
00-05 1500 Cadillac Escalade, EXT, ESV 4WD w/ Skyjacker® 3" Lift			7196	9196	7296	9296	7500	9500
<b>CHEVROLET / GMC</b>								
<b>02-06 1500 Avalanche 4WD</b>								
02-06 Avalanche 1500 4WD with Skyjacker® 3" or 6" Lift			7196	9196				
02-06 Avalanche 1500 4WD with Skyjacker® 3" or 6" Lift					7296	9296	7500	9500
<b>01-06 1500 Tahoe/Yukon 4WD</b>								
01-06 1500 Tahoe/Yukon 4WD with Skyjacker® 3" or 6" Lift			7196	9196	7296	9296	7500	9500
<b>00-06 1500 Denali, Denali XL 4WD</b>								
00-06 1500 Denali, Denali XL 4WD with Skyjacker® 3" Lift			7196	9196				
00-06 1500 Denali, Denali XL 4WD with Skyjacker® 3" Lift					7296	9296	7500	9500
<b>02-06 2500 Avalanche 4WD</b>								
02-06 Avalanche 2500 4WD	7098	9098					7202 (S1)	9202 (S1)
02-06 Avalanche 2500 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500
<b>02-05 2500 Tahoe/Yukon 4WD</b>								
02-05 2500 Tahoe/Yukon 4WD	7098	9098					7202 (S1)	
02-05 2500 Tahoe/Yukon 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500
<b>01-10 2500 HD Pickup 4WD</b>								
01-10 2500 HD Pickup 4WD	7098	9098					7202 (S1)	9202 (S1)
01-10 2500 HD Pickup 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500
<b>02-08 Hummer H2 4WD</b>								
02-08 Hummer H2 4WD	7098	9098					7202 (S1)	9202 (S1)
02-08 Hummer H2 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500
<b>99-06 K1500 6-Lug Pickup 4WD</b>								
99-06 K1500 6-Lug Pickup 4WD with Skyjacker® 3" or 6" Lift			7196	9196	7296	9296	7500	9500
<b>88-98 1/2 &amp; 3/4 Ton 6-Lug Pickup 4WD</b>								
88-98 1/2 & 3/4 Ton 6-Lug Pickup 4WD with 0-2.5" Lift			7122	9122			7800	9800
<b>67-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>								
67-87 1/2 & 3/4 Ton Pickup 4WD	7055	9055			7220 (I)	9220 (I)	7000	9000
77-87 1 Ton Pickup 4WD	7055	9055			7255 (P)	9255 (P)	7000	9000
77-87 1 Ton Pickup 4WD*	7055	9055			7255 (P)	9255 (P)	7000	9000
*Check Stabilizer body to confirm replacement cylinder 4-digit number								
<b>92-98 Blazer\Tahoe, Jimmy\Yukon 4WD</b>								
92-98 Blazer\Tahoe, Jimmy\Yukon 4WD with 0-2.5" Lift			7122	9122			7800	9800
<b>67-91 Blazer, Jimmy 4WD, 2WD</b>								
67-91 Blazer, Jimmy 4WD	7055	9055			7220 (I)	9220 (I)	7000	9000
69-72 Blazer, Jimmy 4WD			7110	9110			7800	9800
69-91 Blazer, Jimmy 2WD			7185	9185			7800	9800
<b>02-05 2500 Suburban 4WD</b>								
02-05 2500 Tahoe/Yukon 4WD	7098	9098					7202 (S1)	9202 (S1)
02-05 2500 Tahoe/Yukon 4WD with Skyjacker® 3" or 6" Lift					7298	9298	7500	9500
<b>02-05 1500 Suburban 4WD</b>								
02-05 Suburban 1500 4WD			7196	9196			7500	9500
02-05 Suburban 1500 4WD with Skyjacker® 6" Lift					7296	9296	7500	9500
<b>92-98 Suburban 4WD, 6-Lug</b>								
92-98 Suburban 4WD, 6-Lug with 0-2.5" Lift			7122	9122			7800	9800
<b>67-91 Suburban 4WD, 2WD</b>								
67-91 Suburban 1/2 & 3/4 Ton 4WD	7055	9055			7220 (I)	9220 (I)	7000	9000
69-91 Suburban 2WD			7185	9185			7800	9800
<b>57-73 1/2, 3/4 &amp; 1 Ton Pickup 4WD</b>								
58-72 1/2, 3/4 & 1 Ton Pickup 4WD - Up to 3" Diameter Axle			7110	9110			7800	9800
57-73 Dana 60 Axles 4WD - Up to 3" O.D.			7110	9110			7800	9800
<b>50-87 1/2, 3/4 &amp; 1 Ton Pickup 2WD</b>								
67-87 1/2, 3/4 & 1 Ton Pickup 2WD - C10, 20 and 30 series			7185	9185			7800	9800
50-59 1/2, 3/4 & 1 Ton Pickup 2WD - Straight Axle			7100	9100			7900	9900

# STEERING STABILIZERS

## OEM REPLACEMENT, SINGLE & DUAL KITS

	HEAVY DUTY OEM		SINGLE STABILIZER		DUAL STABILIZER		Single Cylinder used in kit without hardware	
	White	Silver	White	Silver	White	Silver	White	Silver

### DANA AXLES

#### All Dana Axles 2.75-3.5" Axle Tubes

All Dana 30 Axles - Up to 2.75" Axle Tube			7100	9100			7900	9900
All Dana 44 Axles - Up to 3" Axle Tube			7110	9110			7800	9800
All Dana 60 Axles - Up to 3" Diameter			7110	9110			7800	9800

### DODGE

#### 03-11 3/4 & 1 Ton Ram 4WD

09-11 3/4 & 1 Ton Ram 4WD					7239	9239		
03-08 3/4 & 1 Ton Ram 4WD	7013				7213 (I)	9213 (I)	7000	9000
03-08 3/4 & 1 Ton Ram 4WD (Update Kit)					7213UP	9213UP	7000	9000

NOTES: Part# 7213UP is to be used when customer has replaced their 03-08 Dodge OEM drag link with the new OEM Heavy Duty Dodge drag link.

#### 98-02 1/2, 3/4 & 1 Ton Ram 4WD

98-01 1/2, 98-02 3/4 & 1 Ton Ram 4WD	7007	9009			7218 (I)	9218 (I)	7000	9000
98-01 1/2, 98-02 3/4 & 1 Ton Ram 4WD w/ Drop Pitman Arm	7017	9019			7218 (I)	9218 (I)	7000	9000
98-02 3/4 & 1 Ton Ram 4wd with 3 3/4 Axle Tube					7270	9290	7000	9000

#### 94-97 1/2, 3/4 & 1 Ton Ram 4WD

94-97 1/2, 3/4 & 1 Ton Ram 4WD	7007	9009			7217 (P)	9219 (P)	7000	9000
94-97 1/2, 3/4 & 1 Ton Ram 4WD with Drop Pitman Arm	7017	9019			7217 (P)	9219 (P)	7000	9000

#### 60-93 1/2, 3/4 & 1 Ton Pickup & Ramcharger 4WD

60-93 1/2, 3/4 & 1 Ton Pickup & Ramcharger 4WD			7110	9110	7220 (I)	9220 (I)	7000	9000
------------------------------------------------	--	--	------	------	----------	----------	------	------

#### 45-93 Power Wagon 4WD

45-93 Power Wagon 4WD with Larger than 3" Front Axle			7110	9110			7800	9800
------------------------------------------------------	--	--	------	------	--	--	------	------

#### 86-89 Raider 4WD

86-89 Raider 4WD			7100	9100			7900	9900
------------------	--	--	------	------	--	--	------	------

#### 54-71 1/2, 3/4 & 1 Ton Pickup 2WD

54-71 1/2, 3/4 & 1 Ton Pickup 2WD with Straight Front Axle			7100	9100			7900	9900
------------------------------------------------------------	--	--	------	------	--	--	------	------

### FORD

#### 70-03 F-100, F-150 Pickup 4WD

97-03 F-150 Pickup 4WD with Skyjacker® 6" Lift					7297	9299	7500	9500
80-96 F-150 Pickup 4WD			7140	9140	7240 (P)	9240 (P)	7800	9800
70-79 F-100, F-150 Pickup 4WD	7030	9030					7800	9800
71-76 F-150 Pickup 4WD with No OEM Location			7110	9110	7240 (P)	9240 (P)	7800	9800
70-77 F-150 Pickup 4WD with OEM Location					7210	9210	7800	9800
77-79 F-100, F-150 Pickup 4WD					7210 (P)	9210 (P)	7800	9800

#### 50-96 F-100, F-150 Pickup 2WD

80-96 F-100, F-150 Pickup 2WD			7140	9140	7240 (P)	9240 (P)	7800	9800
50-64 1/2 Ton Pickup 2WD with Straight Axle			7100	9100			7900	9900

#### 59-11 F-250 & F-350 Pickup 4WD

2011 F-250 & F-350 Super Duty 4WD					7254 (I)	9254 (I)		
05-10 F-250 & F-350 Super Duty 4WD with 4" Lift			7154	9154	7254 (I)	9254 (I)	7000	9000
05-10 F-250 & F-350 Super Duty 4WD with 6" Lift			7156	9156	7254 (I)	9254 (I)	7000	9000
99-04 F-250 & F-350 Super Duty 4WD	7099	9099	7199	9199	7299 (I)	9299 (I)	7000	9000
80-98 F-250 & F-350 IFS Pickup 4WD			7140	9140	7240 (P)A3	9240 (P)A3	7800	9800
86-98 F-350 Straight Axle Pickup 4WD			7110	9110	7240 (P)A3	9240 (P)A3	7800	9800
59-79 F-250 & F-350 Pickup 4WD (Except with Slave Cylinder PS)			7110	9110	7220 (I)A3	9220 (I)A3	7000	9000

KIT NOTE: A3. Must Have a Minimum of 3" Lift.

#### 00-05 Excursion 4WD

00-05 Excursion 4WD	7099	9099	7199	9199	7299 (I)	9299 (I)	7000	9000
---------------------	------	------	------	------	----------	----------	------	------

#### 83-97 Ranger 4WD, 2WD

83-97 Ranger 4WD, 2WD			7150	9150	7250 (P)	9250 (P)	7900	9900
-----------------------	--	--	------	------	----------	----------	------	------

#### 83-90 Bronco II 4WD

83-90 Bronco II 4WD			7150	9150	7250 (P)	9250 (P)	7900	9900
---------------------	--	--	------	------	----------	----------	------	------

#### 83-90 Bronco II 2WD

83-90 Bronco II 2WD			7140	9140	7240 (P)	9240 (P)	7800	9800
---------------------	--	--	------	------	----------	----------	------	------

#### 90-94 Explorer 4WD

90-94 Explorer 4WD			7150	9150	7250 (P)	9250 (P)	7900	9900
--------------------	--	--	------	------	----------	----------	------	------

#### 90-94 Explorer 2WD

90-94 Explorer 2WD			7140	9140	7240 (P)	9240 (P)	7800	9800
--------------------	--	--	------	------	----------	----------	------	------

#### 66-96 Bronco 4WD

80-96 Bronco 4WD			7140	9140	7240 (P)	9240 (P)	7800	9800
------------------	--	--	------	------	----------	----------	------	------

78-79 Bronco 4WD	7030	9030			7210	9210	7800	9800
------------------	------	------	--	--	------	------	------	------

# STEERING STABILIZERS

## OEM REPLACEMENT, SINGLE & DUAL KITS

	HEAVY DUTY OEM		SINGLE STABILIZER		DUAL STABILIZER		Single Cylinder used in kit without hardware	
	White	Silver	White	Silver	White	Silver	White	Silver
70-77 Bronco 4WD	7030	9030					7800	9800
66-75 Bronco 4WD			7110	9110			7800	9800

## INTERNATIONAL

### 61-82 Scout 4WD, 2WD

69-82 Scout II, Terra & Traveler 4WD, 2WD			7110	9110			7800	9800
67-75 Scout 4, 6 & 8 Cylinder, 4WD, 2WD Includes Scout II			7110	9110			7800	9800
61-68 Scout 80 & 800 Series 4WD, 2WD (Except V8)			7100	9100			7900	9900

### 60-75 Pickup, Travelall & Metros 4WD, 2WD

60-75 1/2 & 3/4 Ton PU & Travelall 4WD, 2WD with Straight Axle			7110	9110			7800	9800
60-75 1/2 & 3/4 Ton Metros 4WD with Straight Axle			7110	9110			7800	9800
60-74 1/2 & 3/4 Ton Metros 2WD with Straight Axle			7100	9100			7900	9900

## ISUZU

### 84-92 Pickup, Amigo, Rodeo, Trooper & Trooper II 4WD

89-95 Amigo & Rodeo 4WD			7100	9100			7900	9900
89-91 Pickup 4WD			7100	9100			7900	9900
84-90 Trooper & Trooper II 4WD			7100	9100			7900	9900

## MITSUBISHI

### 86-90 Montero 4WD

86-90 Montero 4WD			7100	9100			7900	9900
-------------------	--	--	------	------	--	--	------	------

## JEEP

### 41-11 TJ, YJ, CJ 4WD

07-11 Wrangler JK, Rubicon 4WD	7003	9003			7203	9203	7202	9202
97-06 Wrangler TJ, Rubicon, Unlimited, Unlimited Rubicon 4WD	7009	9009	7119	9119	7219	9219	7400	9400
with Skyjacker Adjustable Track Bar and Stabilizer Assembly					7112	9112	7400	9400

\*Check Stabilizer body to confirm replacement cylinder 4-digit number

87-96 Wrangler YJ 4WD*	7009	9009	7109	9109	7200 (P)	9200 (P)	7400	9400
							7900	9900

\*Check Stabilizer body to confirm replacement cylinder 4-digit number

76-86 CJ's 4WD*	7001	9001	7100	9100	7200 (P)	9200 (P)	7500	9500
							7900	9900

\*Check Stabilizer body to confirm replacement cylinder 4-digit number

41-86 All CJ's (Except CJ's with Slave Cylinder Power Steering)			7100	9100	7200 (P)	9200 (P)	7900	9900
-----------------------------------------------------------------	--	--	------	------	----------	----------	------	------

### 47-01 Jeep SUVs 4WD, 2WD

84-01 Cherokee XJ Midsize 4WD, 2WD	7009	9009					7400	9400
74-83 Cherokee Full-Size 4WD	7005	9005					7000	9000
93-98 Grand Cherokee ZJ 4WD, 2WD	7009	9009					7400	9400
84-91 Grand Wagoneer Full-Size 4WD	7005	9005					7000	9000
84-90 Wagoneer XJ 4WD, 2WD	7009	9009					7400	9400
74-83 Wagoneer Full-Size 4WD	7005	9005					7000	9000
66-73 Jeepster/Commando 4WD			7100	9100			7900	9900
86-92 Comanche Pickup 4WD, 2WD	7009	9009					7400	9400
74-88 J10, J20 Pickup 4WD	7005	9005					7000	9000
63-73 Gladiator Series			7110	9110			7800	9800
47-63 Utility Series and Wagons			7110	9110			7800	9800

## PLYMOUTH

### 54-93 B100, B200, B300, Trailduster 4WD

74-93 Trailduster 4WD			7110	9110	7220 (I)	9220 (I)	7000	9000
54-71 B100, B200, B300 4WD with Straight I-Beam Axle			7100	9100			7900	9900

## TOYOTA

### 61-95 Pickup & SUVs 4WD

86-95 Pickup & 4Runner 4WD			7186	9186			7900	9900
79-85 Pickup & 4Runner 4WD	7070	9090					7900	9900
84-85 Pickup & 4Runner 4WD			7175	9195	7276 (P)	9296 (P)	7900	9900
79-83 Pickup 4WD			7175	9195	7275 (P)	9295 (P)	7900	9900
61-82 LandCruiser 4WD			7160	9160			7900	9900

## SUZUKI

### 79-91 Samurai, Santana, LJ10, SJ10, LJ413 4WD

79-91 Samurai, Santana, LJ10, SJ10LJ413 4WD			7100	9100			7900	9900
---------------------------------------------	--	--	------	------	--	--	------	------

**KIT NOTES: (S1). Slim Body - 1.86" (I). In-Line Mounting. (P). Parallel Mounting.**



# ACCESSORIES

## CHEVROLET / GMC - Accessories

### ALIGNMENT SHIMS

Description	DEGREE	Part #
<b>88-98 1/2, 3/4 Ton Pickups 4WD</b>		
Eccentric Cam Bolt Kit	0-2	1088H
<b>92-98 Blazer, Tahoe, Jimmy, Yukon, Suburban 4WD</b>		
Eccentric Cam Bolt Kit	0-2	1088H

### DRAG LINK & TIE ROD ASSEMBLIES

Description	LIFT	Part #	NOTES
<b>67-87 1/2, 3/4 Ton Pickup 4WD (4" Offset)</b>			
Offset & Adjustable Drag Link	4-6"	GMDL4	
<b>67-91 1 Ton Pickup 4WD</b>			
Offset & Adjustable Drag Link	4-6"	GMDL4	
<b>67-91 Blazer, Jimmy, Suburban 4WD</b>			
Offset & Adjustable Drag Link	4-6"	GMDL4	
Replacement End for GMDL4		GMDL4-1	

### DRIVE TRAIN

Description	LIFT	Part #	NOTES
<b>02-08 Hummer H2</b>			
CV Head Driveshaft Assembly		H2CV1	

### FRAME SHACKLE BUSHING KITS

Description	FRONT	REAR	NOTES
<b>Original Equipment</b>			
69-87 1/2, 3/4 & 1 Ton Pickups 4WD with 52" Rear Springs		SE13C	
71-87 1/2, 3/4 & 1 Ton Pickups 4WD	SE12C		
67-87 Blazer, Jimmy, Suburban 4WD	SE12C	SE13C	Z1
69-91 Blazer, Jimmy, Suburban 4WD with 52" Rear Springs	SE12C	SE13C	Z1

KIT NOTES: Z1. Front Upper Shackle Mounts Will NOT Fit 67-70 Models.

### POLY BUMP STOPS - Pair

LIFT	FRONT	REAR	NOTES
<b>67-87 1/2, 3/4 &amp; 1 Ton Pickups 4WD</b>			
4.5"	BP45	BP45	
<b>67-87 Blazer, Jimmy, Suburban 4WD</b>			
4.5"	BP45	BP45	

### SHOCK RELOCATION BRACKETS

Description	LIFT	Part #
<b>99-06 1500 GM Models with Autoride</b>		
Front and Rear Brackets (Rear Coil Vehicles)	3"	C93AR

### SKID PLATES, OIL PANS & SHIFTER BRACKET

Description	LIFT	Part #	NOTES
<b>04-11 GM Colorado/Canyon 4WD/2WD</b>			
Front Skid Plate	4"	SPCC4042	K31

KIT NOTE: K31. Only works with Skyjacker® 4" Suspension Lift.

### 2011 GM 2500HD 4WD DEF/Urea Tank Skid Plate

DEF/Urea Tank Skid Plate		DEFG114SP
--------------------------	--	-----------

### SPRING EYE BUSHING KITS

Description	FRONT	REAR	NOTES
<b>Original Equipment</b>			
69-87 1/2, 3/4 & 1 Ton Pickups 4WD with 52" Rear Springs		SE15C	
88-91 Blazer, Jimmy, Suburban 4WD	SE18C		
69-91 Blazer, Jimmy, Suburban 4WD with 52" Rear Springs		SE15C	
<b>Skyjacker® Softride®</b>			
67-87 1/2, 3/4 & 1 Ton Pickups 4WD	SE11C		
69-87 1/2, 3/4 & 1 Ton Pickups 4WD with 52" Rear Springs		SE15C	
88-91 Blazer, Jimmy, Suburban 4WD	SE17C		
67-87 Blazer, Jimmy, Suburban 4WD	SE11C		
69-91 Blazer, Jimmy, Suburban 4WD with 52" Rear Springs		SE15C	

### SWAY BAR BUSHING KITS

Description	FRONT	REAR
80-87 1/2, 3/4 & 1 Ton Pickups 4WD	CSB148	
80-91 Blazer, Jimmy, Suburban 4WD	CSB148	

### SWAY BAR EXTENDED END LINKS

End Links Include Polyurethane Bushings

Description	LIFT	FRONT	REAR
<b>07-10 GM 1500 4WD</b>			
	3-6"	C766SBL	
<b>01-10 GM 2500HD 4WD</b>			
	3"	C766SBL	
<b>01-10 GM 2500HD 4WD</b>			
	6"	C966SBL	
<b>99-06 &amp; 07 Classic GM 1500 4WD</b>			
	6"	C966SBL	
<b>02-06 Avalanche / Tahoe GM 1500 4WD</b>			
	6"	C966SBL	
<b>02-08 Hummer H2 4WD</b>			
	6"	C966SBL	

### SWAY BAR LOWERING KITS

ALL 1/2, 3/4 & 1 Ton Pickup, Blazer, Jimmy, Suburban 4WD with Front Leaf Springs

	4"	SBL20
	6-8"	SBL40

### TRANSFER CASE LOWERING KITS

Description	LIFT	Part #
<b>73-91 Pickup, Blazer, Jimmy, Yukon, Tahoe &amp; Suburban 4WD - Full-Size with Leaf Spring Front</b>		
	4-8"	TCL15

## DODGE - Accessories

### DRAG LINK & TIE ROD ASSEMBLIES

Description	LIFT	Part #	NOTES
<b>72-93 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD - Full-Size</b>			
Adjustable Drag Link	2-8"	DL10	

## FRAME SHACKLE BUSHING KITS

Description	FRONT	REAR	NOTES
<b>Original Equipment</b>			
61-93 1/2, 3/4 & 1 Ton Pickup, Ramcharger, Trailduster 4WD	SE14D		

## POLY BUMP STOPS - Pair

LIFT	FRONT	REAR	NOTES
<b>94-01 1/2, 3/4 &amp; 1 Ton Ram Pickup 4WD</b>			
6"	BP60		

## ROD ENDS

### Heavy-Duty Kevlar®/Teflon® lined self-lubricating Rod Ends

Description	Part #
Heavy-Duty - Non Teflon Lined (Right Hand Thread) Used on 94-01 Dodge Adjustable Track Bar	HD34X34DTB

## SPRING EYE BUSHING KITS

Description	FRONT	REAR	NOTES
<b>Original Equipment</b>			
61-93 1/2, 3/4 & 1 Ton Pickup, Ramcharger, Trailduster 4WD	SE12D		
<b>Skyjacker® Softride®</b>			
61-93 1/2, 3/4 & 1 Ton Pickup, Ramcharger, Trailduster 4WD	SE12D		
72-93 3/4, 1 Ton Pickups with 3/4" Main Eye Bolt		SE17D	

## SWAY BAR BUSHING KITS

Description	FRONT	REAR
94-01 1/2, 3/4 & 1 Ton Pickup 4WD	DSB94	

## SWAY BAR LOWERING KITS

Description	Lift	Part #
94-01 1/2 Ton Pickup 4WD	4-5"	SBL20
94-08 3/4 & 1 Ton 4WD	4-5"	SBL20

## ALL 1/2, 3/4 & 1 Ton Pickup, Ramcharger, Trailduster 4WD with Front Leaf Springs

	4"	SBL20
	6-8"	SBL40

## TRACK BAR COMPONENTS

Description	LIFT	Part #	NOTES
<b>94-01 Dodge 1/2, 3/4 and 1 Ton</b>			
Adjustable Replacement Front Track Bar Kit			
	4-7"	DTBA27	

## Transfer Case Re-Indexing Ring & Seal Adapter (6 Bolt Transfer Case Only)

Description	LIFT	Part #	NOTES
94-01 Ram 1/2, 3/4, 1 Ton 4WD	7" & Above	IXR10	K19
94-01 Ram 1/2, 3/4, 1 Ton 4WD		IXR20	K19

KIT NOTE: K19. Seal Part# TCS2675 and Seal Adapter Required, Part # DTSA10 (2.57") or DTSA269 (2.69") Seal Adapter which will only work on models with 6 bolts attaching transmission to transfer case.



02-05 Ram 1/2 Ton 4WD		IXR20K	K20, K21
03-05 Ram 3/4, 1 Ton 4WD		IXR20K	K20, K21

KIT NOTE: K20. Designed for Custom Applications Only - Includes 2.69" Seal. K21. Seal Adapter DTSA10 may be required on some models.

## FORD - Accessories

### ALIGNMENT SHIMS

Description	DEGREE	Part #	
<b>09-11 F-150 4WD</b>			
Caster / Camber Alignment Shims		F900CAK	
<b>04-08 F-150 4WD</b>			
Caster / Camber Alignment Shims		F462-AK	
<b>80-96 F-150, Bronco, F-250 4WD</b>			
Caster / Camber Shims	0-2.75	1032H	
<b>87-96 F-150, Bronco, F-250 2WD</b>			
Caster / Camber Shims	0-2	1029H	
<b>82-86 F-100, F-150, Bronco, F-250 2WD</b>			
Caster / Camber Shims	0-2	1043H	
<b>80-85 F-350 4WD</b>			
Caster / Camber Shims	0-2.75	1032H	
<b>90-97 Ranger 4WD</b>			
Caster / Camber Shims	0-2	1039H	
<b>83-89 Ranger 4WD</b>			
Caster / Camber Shims	0-3.125	1035H	
<b>83-90 Bronco II 4WD</b>			
Caster / Camber Shims	0-3.125	1035H	
<b>89-97 Ranger, Bronco II 2WD</b>			
Caster / Camber Shims	0-2	1029H	
<b>83-88 Ranger, Bronco II 2WD</b>			
Caster / Camber Shims	0-2	1043H	
<b>90-94 Explorer 4WD</b>			
Caster / Camber Shims	0-2	1039H	
<b>90-94 Explorer 2WD</b>			
Caster / Camber Shims	0-2	1029H	
<b>C' BUSHING KITS - 4 PIECE ONLY</b>			
Description	LIFT	DEGREE	Part #
<b>66-79 F-100, F-150 4WD</b>			
<b>78-79 Bronco 4WD</b>	0-1	2	CB20
	2-3	4	CB40
	4-5	7	CB70
<b>66-77 Bronco 4WD</b>	0-1	2	CB20
	2-3	4	CB40
	4-5	7	CB70
<b>C' BUSHING KITS (COMPLETE) - 14 PIECE</b>			
C' Bushings, Radius Arm & Track Bar Bushings			
<b>66-79 F-100, F-150 4WD</b>	0-1"	2	CB200
	2-3"	4	CB400
	4-5"	7	CB700
<b>78-79 Bronco 4WD</b>	0-1"	2	CB200
	2-3"	4	CB400
	4-5"	7	CB700
<b>76-77 Bronco 4WD</b>	2-3"	4	CB477
	4-5"	7	CB777
<b>66-75 Bronco 4WD</b>	0-1"	2	CB200
	2-3"	4	CB400
	4-5"	7	CB700
<b>CENTER HINGE DROP BRACKETS - Pair</b>			
Description	LIFT	Part #	
<b>80-96 F-150, Bronco 4WD, 2WD</b>			
Class I	4-6"	CHB54	
Class	8"	CHB58	

# ACCESSORIES

<b>80-98 F-250 IFS 4WD</b>			
Class I		4-6"	CHB75
<b>80-85 F-350 IFS</b>			
Class I		4-6"	CHB75
<b>83-97 Ranger, Bronco II 4WD</b>			
Heavy-Duty - Class I		4-6"	CHB35
Heavy-Duty - Class II		4-6"	CHB352
<b>83-97 Ranger, Bronco II 2WD</b>			
Class I		4-6"	CHB324
Class II		4-6"	CHB326
<b>90-94 Explorer 4WD</b>			
Heavy-Duty - Class I		4-6"	CHB35
Heavy-Duty - Class II		4-6"	CHB352
<b>CENTER HINGE PIVOT BUSHINGS</b>			
Re-Uses Existing OEM Metal Outer Shells			Part #
<b>80-96 F-150, Bronco 4WD, 2WD</b>			CHB80
<b>80-85 F-350 IFS 4WD</b>			CHB80
<b>80-98 F-250 IFS 4WD</b>			CHB80
<b>83-97 Ranger 4WD</b>			CHB80
<b>83-90 Bronco II 4WD</b>			CHB80
<b>90-94 Explorer 4WD</b>			CHB80
<b>COIL SPRING ISOLATORS</b>			
Description		SIZE	
<b>05-10 Ford F-250, F-350 4x4</b>			
Coil Spring Isolator Pads - Pair		1"	F51
Coil Spring Isolator Pads - Pair		2"	F52
<b>DRAG LINK &amp; TIE ROD ASSEMBLIES</b>			
Description	LIFT	Part #	NOTES
<b>76-79 F-100, F-150 4WD</b>			
Adjustable Drag Link	0-9"	FDL70	V1
Adjustable Tie Rod	0-9"	TRA70	
KIT NOTES: V1. On 76-77 Models, Must Be Used in Conjunction with a Pitman Arm for 78-79 Ford Power Steering Boxes (Such as Skyjacker® Drop Pitman Arm # FA300).			
<b>78-79 Bronco 4WD</b>			
Adjustable Drag Link	0-9"	FDL70	
Adjustable Tie Rod	0-9"	TRA70	
<b>77.5-79 F-250, F-350 4WD</b>			
Offset Adjustable Drag Link			
	3-4"	SDL250	
Offset Adjustable Drag Link + FA325 Drop Pitman Arm			
	5-6"	SDL250 + FA325	
Replacement End for SDL250			
		TRE250	
<b>DRIVE TRAIN</b>			
Description	LIFT	Part #	NOTES
<b>05-10 F-250, F-350, Super Duty</b>			
Carrier Bearing Lowering Kit - 2 Inch Drop			
		CBL206	
<b>80-04 F-250, F-350, Super Duty</b>			
Carrier Bearing Lowering Kit - 1 Inch Drop			
		CBL3401	
Carrier Bearing Lowering Kit - 2-2.25 Inch Drop			
		CBL214	
<b>FRAME SHACKLE BUSHING KITS</b>			
Description	FRONT	REAR	NOTES
<b>Original Equipment</b>			
<b>80-98 F-250, F-350 4WD</b>	SE85F		

RADIUS ARM DROP BRACKETS			
Description		LIFT	Part #
REPLACEMENT Drop Brackets			
80-96 F-150 4WD, 2WD		4-6"	RAB54
80-96 F-150 4WD, 2WD		8"	RAB58
80-96 Bronco 4WD, 2WD		4-6"	RAB54
80-96 Bronco 4WD, 2WD		8"	RAB58
83-97 Ranger 4WD, 2WD		4-6"	RABE30
83-97 Ranger 4WD		8"	RAB38
83-90 Bronco II 4WD, 2WD		4-6"	RABE30
91-94 Explorer 4WD, 2WD		4-6"	RABE30
RELOCATING Drop Brackets			
66-79 F-150 4WD	2.75" Drop	3.5-4"	RAB27
	4.75" Drop	5-6"	RAB47
78-79 Bronco 4WD	2.75" Drop	3.5-4"	RAB27
	4.75" Drop	5-6"	RAB47
66-77 Bronco 4WD	4" Drop	5"	RAB40
FRAME Support Bar			
80-96 F-150, Bronco 4WD		4-8"	FSB80
RADIUS/STRUT ARM BUSHINGS			
Description			Part #
2 Degree Adjustable Caster			
80-83 F-150 2WD			SAB20
80-96 Bronco 4WD			SAB20
87-02 F-250, F-350 2WD			SAB20
83-88 Ranger 2WD			SAB20
86-88 Bronco II 2WD			SAB20
OEM Replacement			
80-96 F-150 4WD, 2WD			SAB85
66-79 F-100, F-150 4WD, 2WD			SAB75
80-96 Bronco 4WD			SAB85
66-79 Bronco 4WD			SAB75
80-96 F-250 2WD			SAB85
83-97 Ranger 4WD, 2WD			SAB83
83-90 Bronco II 4WD, 2WD			SAB83
91-94 Explorer 4WD, 2WD			SAB83
REPLACEMENT TUBULAR RADIUS ARMS - Class II			
Description		LIFT	Part #
80-96 F-150, Bronco 4WD, 2WD - Stock + 15 Inches Includes Poly Bushings			
		4-6"	RA150
83-97 Ranger, Bronco II, Explorer 4WD - Stock + 15 Inches Includes Mounting Brackets & Bushings			
		4-6"	RA135
83-97 Ranger, Bronco II 2WD - Stock + 15 Inches Includes Mounting Brackets & Bushings			
		4-6"	RA235
ROD ENDS			
Heavy-Duty Kevlar®/Teflon® lined self-lubricating Rod Ends			
Description			Part #
Heavy-Duty - Non Teflon Lined (Right Hand Thread) Used on 05-08 F-250/350 Adjustable 4-Link(F58484LU)			HDRB114X1R
SKID PLATES, OIL PANS & SHIFTER BRACKET			
Description	LIFT	Part #	NOTES
97-03 F-150 4x4 6" Skid Plate			
Front Skid Plate	6"	F970FSP	
KIT NOTE: Works With Skyjacker® 6" Lift ONLY.			



05-07 F-250, F-350 4x4			
Front Skid Plate	2.5"-8.5"	SP5250	
SPRING EYE BUSHING KITS			
Description	FRONT	REAR	NOTES
Skyjacker® Softride®			
99-03 F-250, F-350 4WD	SE90F		
80-98 F-250, F-350 4WD	SE80F	SE84R	
67-79 F-250, F-350 4WD	SE70F		
SPRING SPACER PLATES			
Description	SIZE	Part #	
80-96 F-150, Bronco 4WD, 2WD - No More Than 2 Per Coil Spring Can Be Used			
Coil Spring Spacer Plates - Each	.375"	HS25	
83-97 Ranger 4WD, 2WD - No More Than 2 Per Coil Spring Can Be Used			
Coil Spring Spacer Plates - Each	.375"	HS25	
83-90 Bronco II 4WD - No More Than 2 Per Coil Spring Can Be Used			
Coil Spring Spacer Plates - Each	.375"	HS25	
90-94 Explorer, Madza Navajo 4WD, 2WD - No More Than 2 Per Coil Spring Can Be Used			
Coil Spring Spacer Plates - Each	.375"	HS25	
SWAY BAR EXTENDED END LINKS			
End Links Include Polyurethane Bushings			
		LOCATION	
Description	LIFT	FRONT	REAR
97-03 F-150 4WD			
	6"	C966SBL	
77-79 F-150 4WD			
	3-4"	SBE204	
	6-9"	SBE205	
78-79 Bronco 4WD			
	3-4"	SBE204	
	6-9"	SBE205	
00-04 Excursion 4WD			
	4-8"	SBE408	
05-07 F-250, F-350 Super Duty 4WD			
	3-4"	SBE5054	SBE404
	5-8"	SBE5056	SBE405
	7-8"	SBE5058	SBE406
00-04 F-250, F-350 Super Duty 4WD			
	3-4"	SBE407	SBE404
	5-8"	SBE408	SBE405
	7-8"	SBE408	SBE406
03/99-99 F-250, F-350 Super Duty 4WD - Built After March '99			
	3-4"	SBE402	SBE404
	5-6"	SBE403	SBE405
	7-8"	SBE403	SBE406
99 F-250 Super Duty 4WD - Built Before March '99			
	3-4"	SBE402	
	5-6"	SBE403	
	7-8"	SBE403	
80-98 F-250 IFS 4WD			
	3-4"	SBE302	
	5-6"	SBE303	
	2-3"		SBE304
	3.5-5"		SBE305
86-98 F-350 4WD			
	3-4"	SBE304	

	5-6"	SBE305	
80-85 F-350 IFS 4WD			
	3-4"	SBE302	
	5-6"	SBE303	
80-97 F-350 4WD			
	2-3"		SBE304
	3.5-5"		SBE305
87-97 Ranger, Bronco II 4WD			
	3-4"	SBE638	
	5-6"	SBE734	
87-97 Ranger 2WD			
	4-6"	SBE638	
90-94 Explorer 4WD, 2WD			
	3-4"	SBE734	
Sway Bars - Heavy-Duty Replacement			
Description		Location	Part #
05-07 F-250, F-350 4WD		Front	FSB550
SWAY BAR LOWERING KITS			
Description		Lift	Part #
80-96 F-100, F-150 4WD, 2WD		4-6"	SBL20
80-96 Bronco 4WD, 2WD		4-6"	SBL20
77.5-98 F-250, F-350 4WD		4-6"	SBL20
80-85 F-250, F-350 4WD		4-6"	SBL20
83-97 Ranger 4WD, 2WD		4-6"	SBL20
83-90 Bronco II 4WD, 2WD		4-6"	SBL20
90-94 Explorer 4WD, 2WD		4-6"	SBL20
SWAY BAR BUSHING KITS			
Description			Part #
66-79 F-100, F-150 4WD			TAB75
66-75 Bronco 4WD			TAB75
78-79 Bronco 4WD			TAB75
76-77 Bronco 4WD			TAB75
TRACK BAR COMPONENTS			
Description	LIFT	Part #	NOTES
08-10 F-250, F-350, Super Duty 4WD			
Front Track Bar Bracket			
	2-2.5"	TB820	
05-07 F-250, F-350, Super Duty 4WD			
Front Track Bar Bracket			
	2"	TB520	
03/99-04 Excursion, F-250, F-350, Super Duty 4WD			
Adjustable Replacement Front Track Bar			
	2-8"	FTBA99	V9
KIT NOTE: V9. Requires Use of Aftermarket Differential Track Bar Bracket.			
03/99-04 Excursion, F-250, F-350, Super Duty 4WD - Built After March '99			
Front Track Bar Bracket - Lower (at Differential)			
	2"	TB9203	
Front Track Bar Bracket - Upper (at Frame)			
	4-8"	TB9483	
99 F-250, F-350, Super Duty 4WD - Built Before March '99			
Front Track Bar Bracket - Lower (at Differential)			
	2"	TB920	
Front Track Bar Bracket - Upper (at Frame)			
	4-8"	TB948	

# ACCESSORIES

## 86-97 F-350 4WD

Front OEM Track Bar Drop Bracket

4-6" TB35

## HONDA - Accessories

### SWAY BAR EXTENDED END LINKS

End Links Include Polyurethane Bushings

	LOCATION		
Description	LIFT	FRONT	REAR

### 06-11 Honda Ridgeline 4WD

2" HR20SBL

## INTERNATIONAL - Accessories

### FRAME SHACKLE BUSHING KITS

72-81 SCOUT II, Terra, Traveler 4WD	SE40S		Z2
-------------------------------------	-------	--	----

KIT NOTES: Z2. Shackle Kit Includes Enough Bushings for BOTH Front & Rear.

### SPRING EYE BUSHING KITS

Description	FRONT	REAR	NOTES
-------------	-------	------	-------

**Skyjacker® Softride®**

72-81 SCOUT II, Terra, Traveler 4WD	SE40S	SE40S	
-------------------------------------	-------	-------	--

## JEEP - Accessories

### UNIVERSAL BODY LIFT BLOCKS

Description	SIZE	
2" Universal Body Lift Block	2"	BPS227B
3" Universal Body Lift Block	3"	BPS237B

### COIL SPRING ISOLATORS

Description	SIZE	
<b>07-10 JK 2&amp; 4-Door 2WD / 4WD</b>		
Front Coil Spring Isolator Pads - Pair	.75"	JKFPS75
Front Coil Spring Isolator Pads - Pair	2"	JK20PSF
Rear Coil Spring Isolator Pads - Pair	2"	JK20PSR

### 97-06 Wrangler TJ 4WD - Front or Rear

Coil Spring Isolator Pads - Pair	.75"	SIP275
Coil Spring Poly Spacer - Pair	2"	JPS20

### All Years Cherokee XJ, Grand Cherokee ZJ & Comanche MJ 4WD - Front Only

Coil Spring Isolator Pads - Pair	.75"	SIP275
Coil Spring Poly Spacer - Pair	2"	JPS20

### CAM BOLT KITS

Description	SIZE	
-------------	------	--

**Pair (Order 1 Per Vehicle)**

<b>97-06 Wrangler TJ</b>		
Rear Pinion Cam Bolt Kit	0-4	CAM500

### 93-98 Grand Cherokee ZJ 4WD, 2WD

Rear Pinion Cam Bolt Kit	0-4	CAM500
--------------------------	-----	--------

### 07-11 Wrangler JK 2 & 4 Door

Front & Rear Upper Cam Bolt Kit	0-2	CAM700
---------------------------------	-----	--------

### DRAG LINK & TIE ROD ASSEMBLIES

Description	LIFT	Part #	NOTES
-------------	------	--------	-------

### 97-06 Wrangler TJ 4WD

Replacement Heavy-Duty Tie Rod 1.250" HD DOM Swedged Tubular			
	ALL	TR300	

### 91-95 Wrangler YJ 4WD

Replacement Heavy-Duty Drag Link 1.250" HD DOM Swedged Tubular			
	ALL	DL200	

## 82-86 CJ7 4WD

Replacement Heavy-Duty Tie Rod

1.250" HD DOM Swedged Tubular

ALL TR150

## 82-83 CJ5 4WD

Replacement Heavy-Duty Tie Rod

1.250" HD DOM Swedged Tubular

ALL TR150

## 72-81 CJ7, CJ5 4WD

Replacement Heavy-Duty Tie Rod

1.250" HD DOM Swedged Tubular

ALL TR100

## 91-01 Cherokee XJ 4WD, 2WD

Replacement Heavy-Duty Tie Rod

1.250" HD DOM Swedged Tubular

ALL TR300

## 93-98 Grand Cherokee ZJ 4WD, 2WD

Replacement Heavy-Duty Tie Rod

1.250" HD DOM Swedged Tubular

ALL TR300

## 91-92 Comanche MJ 4WD, 2WD

Replacement Heavy-Duty Tie Rod

1.250" HD DOM Swedged Tubular

ALL TR300

## DRIVE TRAIN

Description	LIFT	Part #	NOTES
-------------	------	--------	-------

### 03-06 Wrangler TJ 4WD - Automatic & 6 Cylinder Engine with Dana 35 Rear Differential & OEM Skid Plate

Rear Drive Shaft	6-8"	TJRS	E6
------------------	------	------	----

KIT NOTES: E6. Slip Yoke Eliminator kit is required. Use Part # RR231 Available Direct from Skyjacker®.

### 97-03 Wrangler TJ 4WD - 5 Speed & 6 Cylinder Engine with Dana 35 Rear Differential & OEM Skid Plate

Rear Drive Shaft	6-8"	TJRS	E6
------------------	------	------	----

KIT NOTES: E6. Slip Yoke Eliminator kit is required. Use Part # RR231 Available Direct from Skyjacker®.

### 03-06 Wrangler TJ Rubicon 4WD

Rear C.V. Yoke	6-10"	CVR680	
----------------	-------	--------	--

### 94-96 YJ 4WD with 1330 Series 5-Speed Manual Transmission & 6 Cylinder Engine Only

Rear Drive Shaft	6"	YJRSL	E6
------------------	----	-------	----

KIT NOTES: E6. Slip Yoke Eliminator kit is required. Use Part # RR31 Available Direct from Skyjacker®.

### 87-93 YJ 4WD - 1310 Series 5-Speed Manual Transmission & 6 Cylinder Engine Only

Rear Drive Shaft	6"	YJRSE	E6
------------------	----	-------	----

KIT NOTES: E6. Slip Yoke Eliminator kit is required. Use Part # RR231 Available Direct from Skyjacker®.

### 80-86 CJ 4WD - Dana 300 Transfer Case w/ 26 Fine Spline

Front or Rear CV Yoke	ALL	CV300	E13
-----------------------	-----	-------	-----

KIT NOTES: E13. Replacement C.V. Driveshaft is REQUIRED. Available Direct from Skyjacker®.

### 97-06 Wrangler / Unlimited

Rock Ready Slip Yoke Eliminator Kit	ALL	RR231	E13
-------------------------------------	-----	-------	-----

KIT NOTES: E13. Replacement C.V. Driveshaft is REQUIRED. Available Direct from Skyjacker®.


FRAME SHACKLE BUSHING KITS			
Description	FRONT	REAR	NOTES
Original Equipment			
87-96 Wrangler YJ 4WD	SE3YJ		Z2
76-86 CJ5, CJ7 & Scrambler 4WD	SE4CJ		Z2
55-75 CJ5, CJ6 4WD	SE3CJ		Z2
KIT NOTES: Z2. Shackle Kit Includes Enough Bushings for BOTH Front & Rear.			
LINKS / CONTROL ARMS			
Description	LIFT	Part #	
07-11 JK 2 & 4-Door 4WD (Standard Front Lower Links)	2-5"	JKLL24F	
07-11 JK 2 & 4-Door 4WD (Single Flex Front Lower Links)	2-5"	JKLL24F-SX	
07-11 JK 2 & 4-Door 4WD (Single Flex Front Upper Links)	2-7"	JKULF26-SX	
07-11 JK 2 & 4-Door 4WD (Standard Rear Lower Links)	2-5"	JKLL24R	
07-11 JK 2 & 4-Door 4WD (Single Flex Rear Lower Links)	2-5"	JKLL24R-SX	
07-11 JK 2 & 4-Door 4WD (Single Flex Rear Upper Links)	2-7"	JKULR26-SX	
97-06 Jeep TJ (Standard Links)	0"	JLL01	
97-06 Jeep TJ (Standard Links)	2-4"	JLL01	
97-06 Jeep TJ (Single & Value Flex Links)	0"	JLL24-SX	
97-06 Jeep TJ (Double Flex Links)	0"	TJLL24-DX	
POLY BUMP STOPS - Pair			
LIFT	FRONT	REAR	NOTES
97-06 Wrangler TJ			
2.5"	BP50	BP50	
2"	BPS20	BPS20	Z4
3"	BPS30	BPS30	Z4
KIT NOTES: Z4. Not a Poly Bump Stop. They are Bump Stop SPACERS.			
76-86 CJ & Scrambler 4WD			
3"	BP30	BP30	Z3
KIT NOTES: Z3. # BP30 is Not a Polyurethane Bump Stop. They are Bump Stop BRACKETS that Mount on the Axle.			
76-86 CJ & Scrambler 4WD			
3"	BP30	BP30	Z3
KIT NOTES: Z3. # BP30 is Not a Polyurethane Bump Stop. They are Bump Stop BRACKETS that Mount on the Axle.			
SHACKLES - GREASEABLE			
Description	LIFT	Part #	
84-01 Jeep Cherokee XJ			
Rear Shackles, Pair	1/2"	SH130	
87-95 Jeep YJ			
Front Shackles, Pair	1"	SH2545F	
87-95 Jeep YJ			
Rear Shackles, Pair	1"	SH2545R	
SHOCK RELOCATION BRACKETS			
Description	LIFT	Part #	
97-06 Jeep Wrangler Models			
Rear Brackets (Rear Coil Vehicles)	ALL"	TJR5B10	
SKID PLATES, OIL PANS & SHIFTER BRACKET			
Description	LIFT	Part #	NOTES
04-06 Wrangler TJ Unlimited, Including Rubicon Package 4WD			
Skid Plate	ALL	SP284	
KIT NOTE: Will not work with manual transmission.			
97-06 Wrangler TJ 4WD			
Steering Box Skid Plate	ALL	RRSP20	
High Clearance Transfer Case Skid Plate - Auto & Manual Transmission			
97-02	ALL	SP28	E12

KIT NOTE: E12. Manual Trans REQUIRES # SPS28M Transmission Mount.			
03-06	ALL	SP283	E20
KIT NOTE: E20. Will Work If Lower Control Arm Mount Is Not Removed. Will not work with manual transmission.			
High Capacity Transmission Oil Pan - Auto Only			
(Holds 2 Extra Quarts)	87-02	OPA999	
KIT NOTE: YJ Models Must Modify Factory Skid Plate To Allow for Installation.			
Jeep Wrangler TJ Shifter Relocation Bracket 97-06 Models			
	ALL	JSRB231A	E11
KIT NOTE: E11. Manual AX15 Transmission REQUIRES Modification to Bracket & Stock Linkage.			
SPRING EYE BUSHING KITS			
Description	FRONT	REAR	NOTES
Original Equipment			
76-86 CJ5, CJ7 & Scrambler 4WD	SE40J	SE45J	
55-75 CJ5, CJ6 4WD	SE34J	SE34J	
Skyjacker® Softride®			
87-96 Wrangler YJ 4WD	SE4YJ	SE4YJ	
76-86 CJ5, CJ7 & Scrambler 4WD	SE40J	SE45J	
55-75 CJ5, CJ6 4WD	SE34J	SE34J	
SWAY BAR BUSHING KITS			
Description		FRONT	REAR
76-86 CJs & Scrambler		JSB15	
SWAY BAR EXTENDED END LINKS			
End Links Include Polyurethane Bushings			
		LOCATION	
Description	LIFT	FRONT	REAR
07-11 JK 2-Door & 4-Door 4WD			
	2.5-5"	SBE126	
	2-3.5"		SBE502
	4-5"		SBE504
97-06 Wrangler TJ 4WD			
	2.5-4"	SBE120	
	8-9"	SBE228	
	6"	SBE226	
	2-4"		SBE500
	6-9"		SBE606
87-96 Wrangler YJ 4WD			
	2-2.5"	SBE424	
	3.5-6"	SBE425	
76-86 CJs			
	2-2.5"	SBE524	
	3.5-4"	SBE525	
93-98 Grand Cherokee ZJ 4WD, 2WD			
	3-4"	SBE124	
84-01 Cherokee XJ 4WD, 2WD			
	3-4"	SBE320	
	6"	SBE326	
	8"	SBE328	
Sway Bars - Heavy-Duty Replacement			
Description		Location	Part #
1997-2006 (Adjustable)		Rear	RSBA410
1997-2006 (Adjustable)		Front	JFSBA10
SWAY BAR LOWERING KITS			
Description		Lift	Part #
76-86 CJs & Scrambler 4WD		3-4"	SBL20



# ACCESSORIES

## TRACK BAR COMPONENTS

Description	LIFT	Part #	NOTES
<b>07-11 JK 2-Door &amp; 4-Door 4WD</b>			
Adjustable Front Track Bar Assembly			
	4-6"	FTBA45	
Adjustable Rear Track Bar Assembly			
	4-6"	RTBA45	
Front Track Bar Bracket			
	2.5-5"	JKFTB	
Front Track Bar Brace (Dana 30 & 44 Front Axle)			
	2.5-6"	JKBRC34	
Rear Track Bar Bracket			
	3.5-5"	JK24RTB	
KIT NOTE: Must have Skyjacker® Relocation Bracket.			
Rear Track Bar Brace (Dana 44 Rear Axle)			
	2.5-6"	JKBRC15	
KIT NOTE: Must have Skyjacker® Relocation Bracket.			
<b>97-06 Wrangler TJ FRONT</b>			
Adjustable Front Track Bar Assembly			
	4"	TBA10	
	6"	TBA60	
	8-9"	TBA80	
<b>97-06 Wrangler TJ REAR</b>			
Rear Track Bar Relocation Bracket			
	2-4"	TJRTB	
Option for the 6" Skyjacker® Kit			
For Use on Vehicles NOT Equipped with Skyjacker® Kit			
	6-9"	RTBA168	
<b>87-96 Wrangler YJ</b>			
Front OEM Track Bar Relocation Bracket			
	2-5"	JB40F	
Rear OEM Track Bar Relocation Bracket			
	2-5"	JB40	
Front Extended Track Bar			
	6"	TBA70	
<b>84-01 Cherokee XJ 4WD, 2WD</b>			
Adjustable Front Track Bar Assembly			
	2-5"	TBA10	
	6"	TBA60	
	8"	TBA80	
Front OEM Track Bar Relocation Bracket			
	2-4"	JTBF	
<b>93-98 Grand Cherokee ZJ 4WD, 2WD</b>			
Adjustable Front Track Bar Assembly			
	3-4"	TBA10	
Front OEM Track Bar Relocation Bracket			
	3-4"	JTBF	
<b>5TH LINK TRACTION BAR</b>			
Part #	NOTES		
<b>87-96 Wrangler YJ 4WD</b>			
<b>5th Link Traction Bar Assembly</b>			
YJ5LK	E6		
KIT NOTES: E6. # YJ5LK - 5th Link Traction Bar is Highly Recommended for Skyjacker®'s 6" YJ Monolinear Kit & for Any Spring Over Applications.			
			
<b>5th Link Traction Bar Only - Universal</b>			
TB500K			

## TRANSFER CASE LOWERING KITS

Description	LIFT	Part #
<b>03-06 Wrangler TJ + Rubicon 4WD</b>		
	2-2.5"	TCL103
	3.5-4"	TCL153
<b>97-02 Wrangler TJ 4WD</b>		
	2-2.5"	TCL101
	3.5-4"	TCL151
<b>87-96 Wrangler YJ 4WD</b>		
	2-4"	TCL25
<b>76-86 CJ5, CJ7 &amp; CJ8 4WD</b>		
	2-4"	TCL35
<b>55-75 CJ5, CJ6 4WD</b>		
	2-4"	TCL45
<b>94-01 Cherokee XJ 4WD, 2WD</b>		
	3"	TCL31
<b>84-93 Cherokee XJ 4WD, 2WD</b>		
	3"	TCL30

## MAZDA - Accessories

### ALIGNMENT SHIMS

Description	DEGREE	Part #
<b>90-94 Mazda Navajo &amp; 94-97 BSeries 4WD</b>		
Caster / Camber Shims	0-2	1039H
<b>90-94 Mazda Navajo &amp; 94-97 BSeries 2WD</b>		
Caster / Camber Shims	0-2	1029H

### CENTER HINGE DROP BRACKETS - Pair

Description	LIFT	Part #
<b>90-94 Mazda Navajo &amp; 94-97 BSeries 4WD</b>		
Heavy-Duty - Class I	4-6"	CHB35
Heavy-Duty - Class II	4-6"	CHB352

### CENTER HINGE PIVOT BUSHINGS

Re-Uses Existing OEM Metal Outer Shells	Part #
<b>94-96 B Series Pickup 4WD</b>	CHB80
<b>90-94 Mazda Navajo 4WD</b>	CHB80

### RADIUS/STRUT ARM BUSHINGS

Description	Part #
<b>OEM Replacement</b>	
<b>94-97 B Series Pickup 4WD, 2WD</b>	SAB83
<b>91-94 Navajo 4WD, 2WD</b>	SAB83

### SWAY BAR EXTENDED END LINKS

End Links Include Polyurethane Bushings			
		LOCATION	
Description	LIFT	FRONT	REAR
<b>90-94 Mazda Navajo 4WD, 2WD</b>			
	3-4"	SBE734	

### SWAY BAR LOWERING KITS

Description	LIFT	Part #
<b>94-97 B Series Pickup 4WD</b>	4-6"	SBL20
<b>91-94 Navajo 4WD, 2WD</b>	4-6"	SBL20

## TOYOTA - Accessories

### DRAG LINK & TIE ROD ASSEMBLIES

Description	LIFT	Part #	NOTES
<b>79-85 Pickup, 4Runner 4WD</b>			
Offset Adjustable Drag Link			
	5-7"	TDL5	V8

KIT NOTES: V8. 7" Lifts REQUIRE the following: Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).


### FRAME SHACKLE BUSHING KITS

Description	FRONT	REAR	NOTES
<b>Original Equipment</b>			
<b>79-85 Pickup, 4Runner 4WD</b>	SE31T		

### SPRING EYE BUSHING KITS

Description	FRONT	REAR	NOTES
<b>Skyjacker® Softride®</b>			
<b>79-85 Pickup, 4Runner 4WD</b>	SE30T		


79-88 Pickup, 4Runner 4WD		SE35T	
89-95 Pickup, 4Runner 4WD		SE39T	
64-80 LandCruiser FJ40 4WD	SE32T	SE32T	
<b>SWAY BAR EXTENDED END LINKS</b>			
End Links Include Polyurethane Bushings			
		LOCATION	
Description	LIFT	FRONT	REAR
<b>07-11 Tundra 4WD</b>			
	6"	TU76SBL	
<b>79-85 Pickup, 4Runner 4WD</b>			
	3-5"	SBE30	
<b>TRACK BAR COMPONENTS</b>			
Description	LIFT	Part #	NOTES
<b>79-85 Pickup, 4Runner 4WD</b>			
Front OEM Torque Bar Relocation Bracket			
	3-7"	TB30	
<b>UNIVERSAL APPLICATIONS - Accessories</b>			
<b>UNIVERSAL BODY LIFT BLOCKS</b>			
Description		SIZE	
2" Universal Body Lift Block		2"	BPS227B
3" Universal Body Lift Block		3"	BPS237B
<b>DEGREE SHIMS</b>			
Description		SIZE	
<b>FLAT - Pair Shims for Springs On Top of Axle</b>			
(Tie Bolts Ordered Separately)			
Description		DEGREE	Part #
2-2.25" Wide Leaf Springs		3	WS30
2.5-3" Wide Leaf Springs		4	WS325
3" Wide Leaf Springs		4	WS430
<b>CONTOURED - Pair Shims for Springs Below Axle</b>			
(Tie Bolts Ordered Separately)			
Description		DEGREE	Part #
1.75" Wide Leaf Springs		6	WSC61
2.5" Wide Leaf Springs		6	WSC60
2.5" Wide Leaf Springs		8	WSC80
<b>HI-LIFT JACK</b>			
Polyurethane Isolator			HLI100
<b>LIMITING STRAPS</b>			
All Applications			
Pair of 16" Limiting Straps - RED			LS16K
Pair of 20" Limiting Straps - RED			LS20K
Pair of 24" Limiting Straps - RED			LS24K
Pair of 28" Limiting Straps - RED			LS28K
Pair of 32" Limiting Straps - RED			LS32K
<b>POLY BUMP STOPS - Pair</b>			
	LIFT	FRONT	REAR
<b>Bump Stop with Single Stud Mount</b>			
	4.5"	BP45	BP45
<b>ROCK READY GRAB HANDLES</b>			
DESCRIPTION			Part #
2" RR Grab Handles Pair-Red			RRGH20-R
3" RR Grab Handles Pair-Red			RRGH30-R
2" RR Grab Handles Pair-Black			RRGH20-K
3" RR Grab Handles Pair-Black			RRGH30-K
<b>ROCK READY GRAB HANDLES - RETAIL PACKAGING</b>			
2" RR Grab Handles Pair-Red			RRGH20RP-R
3" RR Grab Handles Pair-Red			RRGH30RP-R
2" RR Grab Handles Pair-Black			RRGH20RP-K

3" RR Grab Handles Pair-Black		RRGH30RP-K
<b>ROD ENDS &amp; JAM NUTS</b>		
<b>NG Rebuildable Rod Ends</b>		
		
Description	SIZE	Part #
1.25" Rod Ends with .75" Bolt Hole		
- LEFT Hand Threads	1.25" X .75"	RR114X1L
1.25" Rod Ends with .75" Bolt Hole		
- RIGHT Hand Threads	1.25" X .75"	RR114X1R
.75" Rod Ends with .625" Bolt Hole		
- LEFT Hand Threads	.75" X .625"	RR34X58L
.75" Rod Ends with .625" Bolt Hole		
- RIGHT Hand Threads	.75" X .625"	RR34X58R
<b>Rebuild Kits For NG Rebuildable Rod Ends</b>		
1.25" Rod Ends with .75" Bolt Hole	1.25" X .75"	RBK114
.75" Rod Ends with .625" Bolt Hole	.75" X .625"	RBK34
<b>Heavy-Duty Kevlar®/Teflon® lined self-lubricating Rod Ends</b>		
Description	SIZE	Part #
1.25" Rod Ends with 1" Bolt Hole		
- LEFT Hand Threads	1.25" X 1"	RE114X1L
1.25" Rod Ends with 1" Bolt Hole		
- RIGHT Hand Threads	1.25" X 1"	RE114X1R
.75" Rod Ends with .75" Bolt Hole		
- LEFT Hand Threads	.75" X .75"	RE34X34L
.75" Rod Ends with .75" Bolt Hole		
- RIGHT Hand Threads	.75" X .75"	RE34X34R
<b>Jam Nuts</b>		
NOTE: The following Jam Nuts can be used for both rebuildable and self-lubricating rod ends		
1.25" Jam Nut with Fine Threads		
- LEFT Hand Threads	1.25"	114LFTJN
1.25" Jam Nut with Fine Threads		
- RIGHT Hand Threads	1.25"	114RFTJN
.75" Jam Nut with Fine Threads		
- LEFT Hand Threads	.75"	34LFTJN
.75" Jam Nut with Fine Threads		
- RIGHT Hand Threads	.75"	34RFTJN
<b>SPRING SPACER PLATES</b>		
Description	SIZE	Part #
<b>ANY &amp; ALL - LEAF SPRING MODELS</b>		
<b>with 2.5-3" Wide Leaf Springs on Top of Rear Axle</b>		
2.5" Wide Leaf Spring Spacer Plates	.5"	SP1225
3" Wide Leaf Spring Spacer Plates	.5"	SP1230
<b>TIE BOLTS - Pair</b>		
Description	SIZE	Part #
3/8 x 3 inch Tie Bolts w/Nuts	3/8" x 3"	3803
3/8 x 6 inch Tie Bolts w/Nuts	3/8" x 6"	3806
3/8 x 10 inch Tie Bolts w/Nuts	3/8" x 10"	3810
5/16 x 3 inch Tie Bolts w/Nuts	5/16" x 3"	5163
7/16 x 4 inch Tie Bolts w/Nuts	7/16" x 4"	7164
7/16 x 6 inch Tie Bolts w/Nuts	7/16" x 6"	7166
1/2 x 4 inch Tie Bolts w/Nuts	1/2" x 4"	1204
1/2 x 6 inch Tie Bolts w/Nuts	1/2" x 6"	1206

# POLYURETHANE CLEARANCE KITS / BODY LIFTS

Skyjacker® has 2" and 3" Body Lifts available for the following Jeep Applications. Installing a Body Lift is the perfect time to replace those worn Cab Mount Bushings with new, longer lasting Polyurethane Units (See Pages 192-193).

There is also a '1" Clearance Kit' available. This Kit Completely Replaces the factory rubber body mounts with a more durable, long-lasting Polyurethane material. 1" of Clearance Lift is attained by using 1" Taller Mounts.

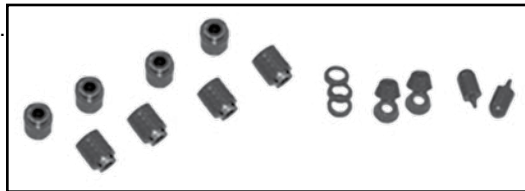

Replacement Shocks are also recommended, but not required. (See Shock Application Guide - Page 155).

1" Lift Part #	2" Lift Part #	3" Lift Part #	Includes Bumper Brackets	Automatic or Manual Transmission	KIT NOTES
<b>JEEP</b>					
<b>97-06 Wrangler TJ + Rubicon - Clearance Kit</b>					
SS941P			(Clearance Kit)	BOTH	Ø21
KIT NOTES: Ø21. Completely Replaces Factory Body Mounts. 1" of Clearance Lift Attained by Using 1" Taller Polyurethane Mounts.					
<b>97-06 Wrangler TJ + Rubicon</b>					
SS951	SS952	SS953		BOTH	
<b>87-96 Wrangler YJ</b>					
<b>87-96 Wrangler YJ - Clearance Kit</b>					
SS931P			(Clearance Kit)	BOTH	Ø20
KIT NOTES: Ø20. Completely Replaces Factory Body Mounts. 1" of Clearance Lift Attained by Using 1" Taller Polyurethane Mounts. 1" Motor Mount Kit #MM100 (6 Cylinder ONLY) is Recommended to Maintain Proper Cooling Fan to Radiator Alignment & Eliminates Trimming of Radiator Shroud.					
<b>87-96 Wrangler YJ with Manual Transmission Only</b>					
SS931	SS932	SS933		Manual Only	
<b>87-96 Wrangler YJ with Automatic Transmission Only</b>					
SS931	SS932A	SS933A		Auto Only	
<b>72-86 CJ5, CJ7 &amp; Scrambler</b>					
<b>80-86 CJ5, CJ7 - Clearance Kit</b>					
SS951P			(Clearance Kit)	BOTH	Ø20
KIT NOTES: Ø20. Completely Replaces Factory Body Mounts. 1" of Clearance Lift Attained by Using 1" Taller Polyurethane Mounts. 1" Motor Mount Kit #MM100 (6 Cylinder ONLY) is Recommended to Maintain Proper Cooling Fan to Radiator Alignment & Eliminates Trimming of Radiator Shroud.					
<b>76-79 CJ5, CJ7 - Clearance Kit</b>					
SS961P			(Clearance Kit)	BOTH	Ø20
<b>UNIVERSAL</b>					
<b>Universal Body Lift Blocks - Single</b>					
	BPS227B			BOTH	
		BPS237B		BOTH	

**WARNING.** . . Skyjacker® Suspensions Does NOT Recommend the Combined Use of Body Lifts & Suspension Lifts or Other Lifting Devices.




Softride® is the best way of describing the ride quality of our Long Add-A-Leafs. The Softride® Long Add-A-Leafs will bring new life & lift to your fatigued stock springs. And you can rest easy knowing that the Skyjacker® Softride® Technology is at work in each pair.

Also available are the Heavy-Duty Add-A-Leafs. These units are shorter and are designed for extra payload capacity.

Tie Bolts are included in each Pair of Skyjacker® Add-A-Leafs.

Also available are 'Fitted Leafs'. Fitted Leafs are designed as an option Exclusively for Skyjacker® Softride® Lifted Leaf Springs. These are used when the additional weight of aftermarket accessories are installed such as a heavy winch bumper, an engine conversion, a swing-away tire carrier, all your extra gear, etc.). The Fitted Leafs Application are listed in the Leaf Spring Charts. Start at Page 211 for Front & Page 214 for Rear Applications.

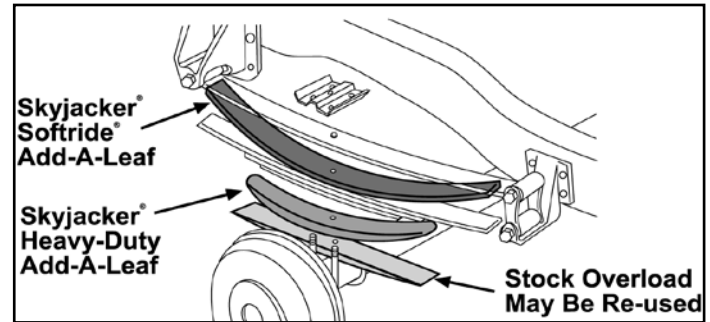

## ADD-A-LEAFS - Pair with Tie Bolts

FRONT	FRONT	FRONT	REAR	REAR	REAR	Add Pre-Fix H7=HYDRO, N8=NITRO			KIT
LIFT	SOFTTRIDE®	HEAVY-DUTY	LIFT	SOFTTRIDE®	HEAVY-DUTY	FRONT	REAR	QUAD	NOTES

## CHEVROLET/GMC

### 04-11 Colorado/Canyon 4WD/2WD

2.5"	RCC25					084			
------	-------	--	--	--	--	-----	--	--	--

### 99-06 1/2 & 3/4 Ton Pickup 4WD - IFS

1.5"	R1115					017			
------	-------	--	--	--	--	-----	--	--	--

### 88-98 1/2, 3/4 Ton Pickup 4WD - IFS

2"				R225		083			
----	--	--	--	------	--	-----	--	--	--

### 67-87 1/2, 3/4 & 1 Ton Pickup 4WD

2"	F1100		2"	R1120	R225	051	053	058	
----	-------	--	----	-------	------	-----	-----	-----	--

### 73-87 1/2 & 3/4 Ton Pickup 4WD

2"	F1100		2"	R1120	R225	051	041	058	
----	-------	--	----	-------	------	-----	-----	-----	--

### 67-72 1/2 & 3/4 Ton Pickup 4WD

2"	F1100		2"	R1120	R225	051	041	058	
----	-------	--	----	-------	------	-----	-----	-----	--

### 73-87 1 Ton Pickup 4WD

1.5-2"	F1100		1.5-2"	R1120	R225	051	053	058	
--------	-------	--	--------	-------	------	-----	-----	-----	--

### 67-91 Blazer / Jimmy 4WD

2"	F1100		2"	R1120	R225	051	053	058	
----	-------	--	----	-------	------	-----	-----	-----	--

### 67-72 Blazer / Jimmy 4WD

2"	F1100		2"	R1120	R225	051	041	058	
----	-------	--	----	-------	------	-----	-----	-----	--

### 67-91 Suburban 4WD

2"	F1100		1.5-2"	R1120	R225	051	053	058	
----	-------	--	--------	-------	------	-----	-----	-----	--

### 73-91 Suburban 4WD

2"	F1100					051		058	
----	-------	--	--	--	--	-----	--	-----	--

### 67-72 Suburban 4WD

2"	F1100					051		058	
----	-------	--	--	--	--	-----	--	-----	--

### 83-97 S10 / S15 Models 4WD - Except ZR2

2"				R225		083			
----	--	--	--	------	--	-----	--	--	--

## DODGE

### 61-11 1/2, 3/4 & 1 Ton Ram Pickup 4WD

2"			2"		R332		017		
----	--	--	----	--	------	--	-----	--	--

4"			4"		R334		017		
----	--	--	----	--	------	--	-----	--	--

### 94-01 1/2 & 3/4 Ton Ram Pickup 4WD with 2.5" Wide Rear Springs

2"			2"		R222		017		
----	--	--	----	--	------	--	-----	--	--

4"			4"		R224		017		
----	--	--	----	--	------	--	-----	--	--

### 94-01 3/4 & 1 Ton Ram Pickup 4WD with 3" Wide Rear Springs

1-1.5"			1-1.5"		R372		036		
--------	--	--	--------	--	------	--	-----	--	--

3"			3"		R370		036		
----	--	--	----	--	------	--	-----	--	--

### 61-93 1/2, 3/4 & 1 Ton Pickup 4WD - Full-Size

2"	F1100		2"	R1120	R225	027	038		
----	-------	--	----	-------	------	-----	-----	--	--

# ADD-A-LEAFs

## ADD-A-LEAFs - Pair with Tie Bolts

FRONT LIFT	FRONT SOFTTRIDE®	FRONT HEAVY-DUTY	REAR LIFT	REAR SOFTTRIDE®	REAR HEAVY-DUTY	Add Pre-Fix	H7=HYDRO, N8=NITRO	KIT	NOTES
						FRONT	REAR	QUAD	
<b>FORD</b>									
<b>66-11 F-100, F-150 Pickup 4WD, 2WD</b>									
<b>09-11 F-150 Pickup 4WD</b>									
	-----	-----	1"	R3910			060		
	-----	-----	4"	R3940			060		
<b>04-08 F-150 Pickup 4WD</b>									
	-----	-----	1.5"	R3415			060		
			4"	R3440			060		
<b>97-03 F-150 Pickup 4WD</b>									
	-----	-----	2"	R2520			061		
<b>80-96 F-100, F-150 Pickup 4WD</b>									
	-----	-----	2"	R3120	R300		060		
<b>80-96 F-100, F-150 Pickup 2WD</b>									
	-----	-----	2"	-----	R225		058		
<b>73-79 F-100, F-150 Pickup 4WD</b>									
	-----	-----	2"	R3120	R300		057		
<b>70-72 F-100, F-150 Pickup 4WD</b>									
	-----	-----	2"	-----	R225		057		
<b>66-69 F-100, F-150 Pickup 4WD</b>									
	-----	-----	2"	-----	R225		041		
<b>00-05 Excursion 4WD</b>									
2.5 -3"	F9320	-----	2.5"	R300	-----	023	034		Q9
KIT NOTES: Q9. Front Add-A-Leafs REQUIRE # TB9203 Track Bar Bracket.									
<b>08-11 F-250 Super Duty 4WD</b>									
			1.5"	R3815			060		
<b>05-07 F-250 Super Duty 4WD</b>									
			1"	R3510			060		
			2.5"	R300			060		
<b>99-04 F-250 Super Duty 4WD</b>									
<b>99-04 F-250 Super Duty 4WD - Built AFTER March '99</b>									
2-2.5"	F9320	-----	2.5"	R300	-----	023	079		Q9
KIT NOTES: Q9. Front Add-A-Leafs REQUIRE # TB9203 Track Bar Bracket.									
<b>99-04 F-250 Super Duty 4WD - Built BEFORE March '99</b>									
2-2.5"	F9320	-----	2.5"	R300	-----	023	079		Q10
KIT NOTES: Q10. Front Add-A-Leafs REQUIRE # TB920 Track Bar Bracket.									
<b>80-98 F-250 4WD, 2WD</b>									
<b>87-98 F-250 4WD IFS with 460 &amp; Diesel Engine</b>									
2"	F46D	-----	1.5-2"	R3120	R300	023	060		
<b>87-98 F-250 4WD IFS with 302 &amp; 351 Gas Engine</b>									
2"	F35G	-----	1.5-2"	R3120	R300	023	060		
<b>80-86 F-250 4WD IFS with 460 &amp; Diesel Engine</b>									
2"	F46D	-----	1.5-2"	R3120	R300	054	060		
<b>80-86 F-250 4WD IFS with 302 &amp; 351 Gas Engine</b>									
2"	F35G	-----	1.5-2"	R3120	R300	054	060		
<b>80-98 F-250 2WD</b>									
	-----	-----	2"	-----	R225		058		
<b>66-79 F-250 4WD</b>									
<b>77.5-79 F-250 4WD</b>									
2"	F46D	-----	1.5-2"	R3120	R300		057		
<b>66-77 F-250 4WD</b>									
	-----	-----	1.5-2"	-----	R225		058		
<b>08-11 F-350 Super Duty 4WD</b>									
			1.5"	R3815			060		
<b>05-07 F-350 Super Duty 4WD</b>									
			1"	R3510			060		
			2.5"	R300					

ADD-A-LEAFs - Pair with Tie Bolts									
FRONT LIFT	FRONT SOFTRIDE®	FRONT HEAVY-DUTY	REAR LIFT	REAR SOFTRIDE®	REAR HEAVY-DUTY	Add Pre-Fix	H7=HYDRO, N8=NITRO	KIT	NOTES
						FRONT	REAR	QUAD	
<b>99-04 F-350 Super Duty 4WD</b>									
2-2.5"	F9320	-----	2.5"	R300	-----	023	079		
<b>86-98 F-350 &amp; Super Duty 4WD</b>									
<b>86-98 F-350 4WD - Except Crew Cabs</b>									
1.5"	F35G	-----	1.5-2"	R3120	R300	023	060		
<b>86-98 F-350 &amp; Super Duty 4WD</b>									
<b>86-98 F-350 Crew Cab 4WD</b>									
2-2.5"	F35G + F46D	-----	1.5-2"	R3120	R300	023	060		Q11
KIT NOTES: Q11. Front Add-A-Leafs REQUIRE # UFF Front U-Bolt Kit.									
<b>80-85 F-350 &amp; Super Duty 4WD</b>									
<b>80-85 F-350 4WD IFS with 460 &amp; Diesel Engine</b>									
2"	F46D	-----	1.5-2"	R3120	R300	054	060		
<b>80-85 F-350 4WD IFS with 302 &amp; 351 Gas Engine</b>									
2"	F35G	-----	1.5-2"	R3120	R300	054	060		
<b>66-96 Bronco</b>									
<b>80-96 Bronco 4WD</b>									
	-----	-----	2"	R3120	R300		058		
<b>78-79 Bronco 4WD</b>									
	-----	-----	2"	R3120	R300		026		
<b>67-77 Bronco 4WD</b>									
	-----	-----	2"	-----	R225		058		
<b>66 Bronco 4WD</b>									
	-----	-----	2"	-----	R225		055		
<b>83-97 Ranger, Bronco II, Explorer 4WD, 2WD</b>									
<b>83-97 Ranger 4WD</b>									
	-----	-----	2"	R3135	-----		060		
<b>83-97 Ranger 2WD</b>									
	-----	-----	2"	R3135	-----		058		
<b>83-90 Bronco II 4WD</b>									
	-----	-----	2"	R3135	-----		058		
<b>90-94 Explorer 4WD, 2WD</b>									
	-----	-----	2"	-----	R225		029		
<b>JEEP</b>									
<b>84-01 Cherokee XJ 4WD, Comanche Pickup</b>									
<b>84-01 Cherokee XJ 4WD</b>									
	-----	-----	2"	R3136	-----		018		
<b>86-92 Comanche Pickup</b>									
	-----	-----	2"	R3136	-----		023		
<b>TOYOTA</b>									
<b>95.5-10 Tundra 4WD, Tacoma 4WD, 2WD</b>									
<b>00-05 Tundra 4WD</b>									
	-----	-----	2"	RTU20	-----		048		
<b>05-10 Tacoma 4WD, 2WD</b>									
	-----	-----	2"	RTC515	-----		056		
<b>95.5-04 Tacoma 4WD, 2WD</b>									
	-----	-----	2"	RTC20	-----		027		
<b>79-95 Pickup 4WD</b>									
<b>89-95 Pickup 4WD</b>									
	-----	-----	2"	-----	R225		047		
<b>84-88 Pickup 4WD</b>									
	-----	-----	2"	R5005	-----		027		
<b>79-83 Pickup 4WD</b>									
	-----	-----	2"	R5005	-----		058		
<b>85-89 4Runner 4WD</b>									
	-----	-----	2"	-----	R225		047		



# BRAKE LINES

STAINLESS STEEL BRAIDED BRAKE LINES					
	LIFT	FRONT	UNIT	REAR	UNIT
<b>CHEVROLET/GMC</b>					
<b>04-11 Colorado / Canyon 4WD</b>					
	3-4"	FBL48	Pair		
<b>88-98 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
<b>88-98 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
	0-3"	FBL97	Pair	RBL88	Single
	4-6"	FBL88	Pair	RBL88	Single
<b>68-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
<b>(3/4 Tons 7200 GVWR or Less)</b>					
<b>79-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
<b>(3/4 Tons 7200 GVWR or Less)</b>					
	3-4"	FBL17	Pair	RBL21	Single
	6-8"	FBL19	Pair	RBL20	Single
<b>73-78 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
<b>(3/4 Tons 7200 GVWR or Less)</b>					
	3-4"	FBL16	Pair	RBL21	Single
	6-8"	FBL18	Pair	RBL20	Single
<b>70-72 1/2 &amp; 3/4 Ton Pickup 4WD with Disc Brakes</b>					
<b>(3/4 Tons 7200 GVWR or Less)</b>					
	3-4"	FBL16	Pair	RBL12	Single
	6-8"	FBL18	Pair	RBL13	Single
<b>68-69 1/2 &amp; 3/4 Pickup Ton 4WD With Drum Brakes ONLY</b>					
<b>- Will NOT Fit Suburbans</b>					
	3-4"	FBL12	Pair	RBL12	Single
	6-8"	FBL13	Pair	RBL13	Single
<b>68-87 3/4 &amp; 1 Ton Pickup 4WD</b>					
<b>(3/4 Tons 8600 GVWR or Greater)</b>					
<b>79-87 3/4 &amp; 1 Ton Pickup 4WD</b>					
<b>(3/4 Tons 8600 GVWR or Greater)</b>					
	3-4"	FBL27	Pair	RBL21	Single
	6-8"	FBL29	Pair	RBL20	Single
<b>73-78 3/4 &amp; 1 Ton Pickup 4WD</b>					
<b>(3/4 Tons 8600 GVWR or Greater)</b>					
	3-4"	FBL26	Pair	RBL21	Single
	6-8"	FBL28	Pair	RBL20	Single
<b>70-72 3/4 &amp; 1 Ton Pickup 4WD</b>					
<b>(3/4 Tons 8600 GVWR or Greater)</b>					
	3-4"	FBL26	Pair	RBL12	Single
	6-8"	FBL28	Pair	RBL13	Single
<b>68-69 1/2 &amp; 3/4 Pickup Ton 4WD with Drum Brakes ONLY</b>					
<b>- Will NOT Fit Suburbans</b>					
	3-4"	FBL12	Pair	RBL12	Single
	6-8"	FBL13	Pair	RBL13	Single
<b>68-98 Blazer / Jimmy, Tahoe \ Yukon 4WD - Full-Size</b>					
<b>92-98 Blazer / Jimmy, Tahoe \ Yukon 4WD - Full-Size</b>					
	0-3"	FBL97	Pair	RBL88	Single
	4-6"	FBL88	Pair	RBL88	Single
<b>79-91 Blazer / Jimmy 4WD - Fullsize</b>					
	3-4"	FBL17	Pair	RBL21	Single
	6-8"	FBL19	Pair	RBL20	Single
<b>73-78 Blazer / Jimmy 4WD - Full-Size</b>					
	3-4"	FBL16	Pair	RBL21	Single
	6-8"	FBL18	Pair	RBL20	Single
<b>70-72 Blazer / Jimmy 4WD - Full-Size - with Disc Brakes</b>					
	3-4"	FBL16	Pair	RBL12	Single
	6-8"	FBL18	Pair	RBL13	Single

STAINLESS STEEL BRAIDED BRAKE LINES					
	LIFT	FRONT	UNIT	REAR	UNIT
<b>68-69 Blazer 4WD with Drum Brakes ONLY - Will NOT Fit Suburbans</b>					
	3-4"	FBL12	Pair	RBL12	Single
	6-8"	FBL13	Pair	RBL13	Single
<b>70-98 Suburban 4WD</b>					
<b>92-98 Suburban 4WD</b>					
	0-3"	FBL97	Pair	RBL88	Single
	4-6"	FBL88	Pair	RBL88	Single
<b>79-91 Suburban 4WD</b>					
	3-4"	FBL27	Pair	RBL21	Single
	6-8"	FBL29	Pair	RBL20	Single
<b>73-78 Suburban 4WD</b>					
	3-4"	FBL26	Pair	RBL21	Single
	6-8"	FBL28	Pair	RBL20	Single
<b>70-72 Suburban 4WD</b>					
	3-4"	FBL26	Pair	-----	-----
	6-8"	FBL28	Pair	-----	-----
<b>DODGE</b>					
<b>94-01 1/2, 3/4 &amp; 1 Ton Ram Pickup 4WD</b>					
<b>94-01 1/2, 3/4 &amp; 1 Ton Ram Pickup 4WD</b>					
	1-4"	-----	-----	RBL60	Single
<b>61-93 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD</b>					
<b>82-93 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD</b>					
	4-8"	FBL60	Single	RBL60	Single
<b>76-81 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD</b>					
	4-8"	FBL60	Single	RBL61	Single
<b>72-75 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD</b>					
	4-8"	FBL65	Single	RBL65	Single
<b>69-71 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD</b>					
	4-8"	FBL61	Single	-----	Single
<b>61-68 1/2, 3/4 &amp; 1 Ton Pickup, Ramcharger, Trailduster 4WD</b>					
	4-8"	FBL61	Single	-----	-----
	LIFT	FRONT	UNIT	REAR	UNIT
<b>FORD</b>					
<b>66-96 F-100, F-150 4WD, 2WD</b>					
<b>90-96 F-150 4WD, 2WD</b>					
	4-8"	FBL81	Pair	RBL80	Single
<b>80-89 F-150 4WD, 2WD</b>					
	4-8"	FBL80	Pair	RBL80	Single
<b>76-79 F-100, F-150 4WD</b>					
	3-9"	FBL78	Single	RBL76	Single
<b>66-75 F-100, F-150 4WD</b>					
	3-9"	-----	-----	RBL76	Single
<b>73-11 F-250, F-350, Super Duty / Excursion 4WD, 2WD</b>					
<b>08-11 F-250 / F-350 Super Duty 4WD</b>					
	4"	FBL84	Pair		
	6-8"	FBL86	Pair		
<b>05-07 F-250 / F-350 Super Duty 4WD</b>					
	4"	FBL54	Pair		
	6-8"	FBL56	Pair		

STAINLESS STEEL BRAIDED BRAKE LINES					
	LIFT	FRONT	UNIT	REAR	UNIT
<b>FORD - Continued</b>					
<b>2004 F-250 / F-350 Super Duty / Excursion 4WD</b>					
	4-6"	FBL92	Pair	RBL99	
<b>00-03 F-250 / F-350 Super Duty / Excursion 4WD</b>					
	4-8"	FBL92	Pair	RBL99	Single
<b>99 F-250 / F-350 Super Duty / Excursion 4WD</b>					
	4-8"	FBL99	Pair	RBL99	Single
<b>90-98 F-250, F-350 4WD, 2WD</b>					
	4-6"	FBL91	Pair	RBL90	Single
<b>80-89 F-250, F-350 4WD, 2WD - ONLY Fits Vehicles with a 7/16" Banjo Bolt</b>					
	4-6"	FBL90	Pair	RBL90	Single
<b>76-79 F-250, F-350 4WD</b>					
	4-6"	FBL93	Pair	RBL93	Single
<b>73-75 F-250, F-350 4WD</b>					
	4-6"	FBL95	Pair	RBL95	Single
<b>66-96 Bronco 4WD</b>					
<b>90-96 Bronco 4WD</b>					
	4-8"	FBL81	Pair	RBL80	Single
<b>80-89 Bronco 4WD</b>					
	4-8"	FBL80	Pair	RBL80	Single
<b>78-79 Bronco 4WD</b>					
	3-9"	FBL78	Single	RBL76	Single
<b>66-77 Bronco 4WD</b>					
	3-7"	FBL77	Single	RBL77	Single
<b>83-97 Ranger, Bronco II, Explorer 4WD, 2WD</b>					
<b>89-97 Ranger, Bronco II - Will NOT Fit with ABS</b>					
	4-6"	FBL36	Pair	RBL35	Single
<b>83-88 Ranger, Bronco II 4WD, 2WD</b>					
	4-6"	FBL35	Pair	RBL35	Single
<b>83-97 Ranger, Bronco II 4WD, 2WD with 8" Lift - Will NOT Fit with ABS</b>					
	8"	FBL38	Pair	RBL35	Single
<b>90-94 Explorer 4WD, 2WD - Will NOT Fit with ABS</b>					
	4-6"	FBL36	Pair	RBL35	Single
<b>MAZDA</b>					
<b>94-97 Mazda B4000 4WD, 2WD - Will NOT Fit with ABS</b>					
	4-6"	FBL36	Pair	RBL35	Single
<b>91-94 Navajo 4WD - Will NOT Fit with ABS</b>					
	4-6"	FBL36	Pair	RBL35	Single
<b>JEEP</b>					
<b>87-11 Wrangler 4WD</b>					
<b>07-11 Wrangler JK 4WD</b>					
	4-7"	JKFBL60	Pair	JKRBL60	Pair
<b>97-06 Wrangler TJ 4WD</b>					
	4-8"	FBL44	Pair	RBL98	Single
<b>87-96 Wrangler YJ 4WD</b>					
	3.5-6"	FBL47	Pair	RBL47	Single
<b>55-86 CJs &amp; Scrambler 4WD</b>					
<b>82-86 CJs &amp; Scrambler 4WD</b>					
	0-2.5"	FBL402	Pair	RBL402	Single
	3-5"	FBL40	Pair	RBL40	Single

STAINLESS STEEL BRAIDED BRAKE LINES					
	LIFT	FRONT	UNIT	REAR	UNIT
<b>76-81 CJs &amp; Scrambler 4WD with Disc Brakes</b>					
	0-2.5"	FBL412	Pair	RBL402	Single
	3-5"	FBL41	Pair	RBL40	Single
<b>76-81 CJs &amp; Scrambler 4WD with Drum Brakes</b>					
	0-2.5"	-----	Pair	RBL402	Single
	3-5"	FBL46	Pair	RBL40	Single
<b>74-75 CJs 4WD</b>					
	2.5-4"	FBL42	Pair	RBL42	Single
<b>67-73 CJs 4WD</b>					
	2.5-4"	FBL43	Pair	RBL43	Single
<b>55-66 CJs 4WD</b>					
	2.5-4"	FBL45	Pair	RBL45	Single
<b>84-01 Cherokee XJ 4WD</b>					
<b>84-01 Cherokee XJ 4WD</b>					
	3-8"	FBL44	Pair	RBL44	Single
<b>74-83 Cherokee, Wagoneer 4WD - Full-Size</b>					
<b>79-83 Cherokee, Wagoneer 4WD - Full-Size</b>					
	2.5-4"	FBL40	Pair	RBL41	Single
<b>74-78 Cherokee, Wagoneer 4WD - Full-Size - with Disc Brakes</b>					
	2.5-4"	FBL41	Pair	RBL41	Single
<b>84-91 Grand Wagoneer 4WD - Full-Size</b>					
	2.5-4"	FBL40	Pair	RBL41	Single
<b>74-88 J10, J20 Pickup 4WD - Full Size</b>					
<b>79-88 J10, J20 Pickup 4WD - Full-Size - with Disc Brake Only</b>					
	2.5-4"	FBL40	Pair	RBL41	Single
<b>74-78 J10, J20 Pickup 4WD - Full-Size - with Disc Brake Only</b>					
	2.5-4"	FBL41	Pair	RBL41	Single
<b>TOYOTA</b>					
<b>79-95 Pickup &amp; 4Runner 4WD</b>					
	3-7"	FBL30	Pair	RBL30	Single
<b>64-82 LandCruiser FJ40 4WD - Will NOT Fit 64-74 LandCruiser with Front 2-Line Wheel Cylinder</b>					
	2-4"	FBL31	Single	RBL30	Single
<b>INTERNATIONAL</b>					
<b>74-80 Scout II 4WD</b>					
	2-4"	FBL50	Pair	RBL50	Single

# SOFTTRIDE® COIL SPRINGS

	LIFT	COILS - PAIR		KIT
	Height	Front	Rear	NOTES
<b>CHEVROLET / GMC</b>				
<b>00-06 GM Avalanche, Tahoe, Suburban, Yukon 4WD</b>				
	4.5"		C40R	
<b>DODGE</b>				
<b>94-01 1/2, 3/4 &amp; 1 Ton Ram Pickup 4WD</b>				
<b>94-01 1/2 &amp; 3/4 Ton Ram Pickup 4WD V-8 with 2.5" Wide Rear Springs</b>				
	2"	D20		Q14
	3"	D30		Q14
	5"	D50		Q14
	7"	D70		Q14
KIT NOTES: Q14. 00-01 Models Equipped with Factory 'OFF-ROAD Package' Will Receive 1" Less Lift.				
<b>94-10 3/4 Ton Heavy Duty &amp; 1 Ton Ram Pickup 4WD with 3" Wide Rear Springs</b>				
	2-2.5"	D25		
	4-4.5"	D45		
	7"	D75		
<b>03-11 3/4 Ton &amp; 1 Ton Ram Pickup 4WD</b>				
	2.5"	D25		
	5"	D45		
<b>FORD</b>				
<b>83-97 Ranger 4WD, 2WD - Leveling Kits</b>				
<b>90-97 Ranger 4WD with 4 Cylinder Engine</b>				
	1.5-2"	132		
<b>90-97 Ranger XLT 4WD with 6 Cylinder Engine</b>				
	1.5-2"	132X		
<b>90-97 Ranger 2WD with 2.3, 2.9 &amp; 3.0 Liter Engine</b>				
	1.5-2"	132		
<b>90-97 Ranger 2WD with 4.0 Liter Engine</b>				
	1.5-2"	132X		
<b>87-89 Ranger STX 4WD</b>				
	1.5-2"	132X		
<b>83-89 Ranger 4WD, 2WD - Except Super Cab with 2.9 Liter Engine</b>				
	1.5-2"	132		
<b>83-89 Ranger Super Cab 4WD, 2WD with 2.9 Liter Engine</b>				
	1.5-2"	132X		
<b>83-97 Ranger 4WD, 2WD - 4", 6" &amp; 8" Lifts</b>				
<b>83-97 Ranger 4WD, 2WD</b>				
	4"	134		
	6"	136		
	8"	138		
<b>83-90 Bronco II 4WD, 2WD</b>				
<b>83-90 Bronco II 4WD, 2WD</b>				
	1.5-2"	132		
	4"	134		
	6"	136		
	8"	138		
<b>66-96 F-100, F-150 4WD, 2WD</b>				
<b>80-96 F-100, F-150 4WD, 2WD &amp; 80-96 Bronco 4WD</b>				
	2"	182		
	4"	184		
	6"	186		
	8"	188		

	LIFT	COILS - PAIR		KIT
	Height	Front	Rear	NOTES
<b>66-79 F-100, F-150 4WD &amp; 78-79 Bronco 4WD</b>				
	2"	172		
	4"	174		
	6"	176		
	9"	179		
<b>66-77 Bronco 4WD</b>				
	3"	172		
	5"	174		
	7"	176		
<b>05-11 F-250, F-350 Diesel 4WD</b>				
<b>05-11 F-250, F-350 Diesel 4WD</b>				
	2"	F525		
	4"	F545		
	6"	F565		
	8.5"	F585		
<b>05-11 F-250, F-350 Gas 4WD</b>				
	2"	F520		
	4"	F540		
	6"	F560		
	8.5"	F580		
<b>02-08 Hummer H2</b>				
	5.5"		H250R	
<b>JEEP</b>				
<b>07-11 Jeep Wrangler JK 2 and 4-Door</b>				
	2.5-3.5"	JK25F	JK25R	
	4-5"	JK40F	JK40R	
	6-7"	JK60F	JK60R	
<b>97-06 Wrangler TJ/Rubicon</b>				
	2.5"	TJ25F	TJ25R	
	4"	TJ40F	TJ40R	
	6"	TJ60F	TJ60R	
	8"	TJ80F	TJ80R	
	9"		TJ90R	
<b>04-06 Wrangler Unlimited</b>				
	2.5"	TJ25F	TJ25RU	
	4"	TJ40F	TJ40RU	
	4"	TJ40F	TJ40RU	
	6"	TJ60F	TJ60RU	
	8"	TJ80F	TJ90R	
<b>84-01 Cherokee XJ</b>				
	3"	JC30F		
	6"	JC60F		
	8"	JC80F		
<b>93-98 Grand Cherokee ZJ</b>				
	2"		GC20R	
	3"	JC30F		
<b>86-92 Comanche MJ</b>				
	3"	JC30F		



# FRONT SOFTRIDE® LEAF SPRINGS

**Softride® Technology** gives you all the vigorous off-road handling needed while providing the smooth street riding characteristics that you demand. Skyjacker's advanced method of shotpeening, tapered, leaves, Teflon® wear pads and 'presetting' process achieves articulation at its best...without sacrificing the life of the spring.

From this chart, you can find a 'Pair of Springs with Bushings' or 'Single Springs' and the 'Bushings Sets' needed for the Single unit (Ordered Separately). Also available are '**Fitted Leafs**'. Fitted Leafs are designed as an option Exclusively for Skyjacker® Softride® Lifted Leaf Springs. These are used when the additional weight of aftermarket accessories are installed such as a heavy winch bumper, an engine conversion, a swing-away tire carrier, all your extra gear, etc.).

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
<b>CHEVROLET/GMC</b>						
<b>73-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>						
2.5"		C125S	2	SE11C	1	FLC125
4"		C140S	2	SE11C	1	FLC140
6"		C160S	2	SE11C	1	FLC160
8"		C180S	2	SE11C	1	FLC180
<b>67-72 1/2 &amp; 3/4 Ton Pickup 4WD</b>						
2.5"		C225S	2	SE11C	1	FLC225
4"		C240S	2	SE11C	1	FLC240
6"		C260S	2	SE11C	1	FLC260
8"		C280S	2	SE11C	1	FLC280
<b>77-87 1 Ton Pickup</b>						
2.5"		C125S	2	SE11C	1	FLC125
4"		C140S	2	SE11C	1	FLC140
6"		C160S	2	SE11C	1	FLC160
8"		C180S	2	SE11C	1	FLC180
<b>88-91 Blazer, Jimmy - Full-Size</b>						
2.5"		C125S	2	SE17C	1	FLC125
4"		C140S	2	SE17C	1	FLC140
6"		C160S	2	SE17C	1	FLC160
8"		C180S	2	SE17C	1	FLC180
<b>73-87 Blazer, Jimmy - Full-Size</b>						
2.5"		C125S	2	SE11C	1	FLC125
4"		C140S	2	SE11C	1	FLC140
6"		C160S	2	SE11C	1	FLC160
8"		C180S	2	SE11C	1	FLC180
<b>67-72 Blazer, Jimmy - Full-Size</b>						
2.5"		C225S	2	SE11C	1	FLC225
4"		C240S	2	SE11C	1	FLC240
6"		C260S	2	SE11C	1	FLC260
8"		C280S	2	SE11C	1	FLC280
<b>88-91 Suburban 1/2 &amp; 3/4 Ton 4WD</b>						
2.5"		C125S	2	SE17C	1	FLC125
4"		C140S	2	SE17C	1	FLC140
6"		C160S	2	SE17C	1	FLC160
8"		C180S	2	SE17C	1	FLC180
<b>73-87 Suburban 1/2 &amp; 3/4 Ton 4WD</b>						
2.5"		C125S	2	SE11C	1	FLC125
4"		C140S	2	SE11C	1	FLC140
6"		C160S	2	SE11C	1	FLC160
8"		C180S	2	SE11C	1	FLC180
<b>67-72 Suburban 1/2 &amp; 3/4 Ton 4WD</b>						
2.5"		C225S	2	SE11C	1	FLC225
4"		C240S	2	SE11C	1	FLC240
6"		C260S	2	SE11C	1	FLC260
8"		C280S	2	SE11C	1	FLC280
<b>DODGE</b>						
<b>61-93 1/2 &amp; 3/4 Ton Pickup 4WD</b>						
2.5"		D200S	2	SE12D	1	FLD200
4"		D400S	2	SE12D	1	FLD400

# FRONT SOFTRIDE® LEAF SPRINGS

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
<b>DODGE - Continued</b>						
<b>61-93 1/2 &amp; 3/4 Ton Pickup 4WD</b>						
6"		D600S	2	SE12D	1	FLD600
8"		D800S	2	SE12D	1	FLD800
<b>87-93 3/4 &amp; 1 Ton Pickup 4WD with Diesel Engine</b>						
1"		D100CS	2	SE12D	1	FLD200
2"		D200CS	2	SE12D	1	FLD400
4"		D400CS	2	SE12D	1	FLD600
6"		D600CS	2	SE12D	1	FLD800
<b>74.5-93 1 Ton Pickup 4WD with Gas Engine</b>						
1.5-2"		D200S	2	SE12D	1	FLD200
3-4"		D400S	2	SE12D	1	FLD400
5-6"		D600S	2	SE12D	1	FLD600
7-8"		D800S	2	SE12D	1	FLD800
<b>72-93 Ramcharger, Trailduster 4WD</b>						
2.5"		D200S	2	SE12D	1	FLD200
4"		D400S	2	SE12D	1	FLD400
6"		D600S	2	SE12D	1	FLD600
8"		D800S	2	SE12D	1	FLD800
<b>FORD</b>						
<b>00-04 Excursion 4WD with Gas Engine</b>						
4"		F920S	2	SE90F		
6"		F940S	2	SE90F		
8"		F960S	2	SE90F		
<b>00-04 Excursion 4WD with Diesel Engine</b>						
6"		F945S	2	SE90F		
8"		F965S	2	SE90F		
<b>99-04 F-250, F-350 Super Duty 4WD with Gas Engine</b>						
2"		F920S	2	SE90F		
4"		F940S	2	SE90F		
6"		F960S	2	SE90F		
8"		F965S	2	SE90F		
<b>99-04 F-250, F-350 Super Duty 4WD with Diesel Engine</b>						
1.5"		F920S	2	SE90F		
4"		F945S	2	SE90F		
6"		F965S	2	SE90F		
8"		F985S	2	SE90F		
<b>80-98 F-250 4WD</b>						
4"		F840S	2	SE80F	1	FLF840
6"		F860S	2	SE80F	1	FLF860
<b>77.5-79 F-250 4WD</b>						
4"		F724S	2	SE70F	1	FLF724
6"		F746S	2	SE70F	1	FLF746
<b>67-77 F-250 Highboy</b>						
2"		F724S	2	SE70F	1	FLF724
4"		F746S	2	SE70F	1	FLF746
<b>86-98 F-350 Straight Axle 4WD</b>						
3-4"		F840S	2	SE80F	1	FLF840
5-6"		F860S	2	SE80F	1	FLF860
<b>80-85 F-350 4WD</b>						
4"		F840S	2	SE80F	1	FLF840
6"		F860S	2	SE80F	1	FLF860
<b>79 F-350 Low Boy</b>						
3-4"		F724S	2	SE70F	1	FLF724
5-6"		F746S	2	SE70F	1	FLF746

# FRONT SOFTRIDE® LEAF SPRINGS

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
<b>JEEP</b>						
<b>87-96 Wrangler YJ</b>						
2-2.5"		YJ20FS	2	SE4YJ	1	FLYJ20F
3.5"-4"		YJ40FS	2	SE4YJ	1	FLYJ40F
<b>87-96 Wrangler YJ Rock Ready® Double Military Wrap</b>						
2.5"		YJ25FS	2	SE45YJ		
4"		YJ45FS	2	SE45YJ		
<b>76-86 CJ &amp; Scrambler</b>						
2-2.5"		J20FS	2	SE40J	1	FLJ20F
3.5"-4"		J40FS	2	SE40J	1	FLJ40F
<b>55-75 CJ</b>						
2-2.5"		J32FS	2	SE34J	1	FLJ32F
3.5"-4"		J34FS	2	SE34J	1	FLJ34F
<b>84-91 Grand Wagoneer 4WD - Full-Size</b>						
3.5-4"		JP40FS	2	SE4JP	1	FLJP40F
<b>74-83 Cherokee, Wagoneer 4WD - Full-Size</b>						
3.5-4"		JP40FS	2	SE4JP	1	FLJP40F
<b>74-88 J10, J20 Pickup 4WD - Full-Size</b>						
3.5-4"		JP40FS	2	SE4JP	1	FLJP40F
<b>TOYOTA</b>						
<b>79-85 Pickup &amp; 4Runner 4WD</b>						
3"		T303S	2	SE30T	1	FLT303
5"		T305S	2	SE30T	1	FLT305
7"		T307S	2	SE30T	1	FLT307
<b>64-80 FJ40 LandCruiser 4WD</b>						
2.5"		L20FS	2	SE40L	1	FLL20F
4"		L40FS	2	SE40L	1	FLL40F
<b>INTERNATIONAL</b>						
<b>72-82 Scout II, Terra, Traveler 4WD</b>						
2"		S20FS	2	SE40S	1	FLS20F
4"		S40FS	2	SE40S	1	FLS40F



# REAR SOFTRIDE® LEAF SPRINGS

**Softride® Technology** enhances every steely aspect of leaf spring performance, giving you all the vigorous off-road handling needed while providing the smooth street riding characteristics that you demand. Skyjacker's advanced method of shotpeening, tapered leaves, Teflon® wear pads and 'presetting' process achieves articulation at its best... without sacrificing the life of the spring. From this chart, you can find a 'Pair of Springs with Bushings' or 'Single Springs' and the 'Bushings Sets' needed for the Single unit (Ordered Separately). Also available are 'Fitted Leaves'. Fitted Leaves are designed as an option Exclusively for Skyjacker® Softride® Lifted Leaf Springs. These are used when the additional weight of aftermarket accessories are installed such as a heavy winch bumper, an engine conversion, a swing-away tire carrier, all you extra gear, etc.).

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
<b>CHEVROLET/GMC</b>						
<b>99-11 1500 1/2 Ton Pickup 4WD</b>						
5"		CR55S	2	Pre-Installed Rubber		
<b>01-08 1500HD / 2500 Pickup 4WD</b>						
5"		CR75S	2	Pre-Installed Rubber		
<b>01-10 2500HD 3/4 &amp; 1 Ton Pickup 4WD</b>						
5"		CR75S	2	Pre-Installed Rubber		
<b>88-98 1/2, 3/4 Ton 6-Lug Pickup 4WD</b>						
5-5.5"		CR35S	2	Pre-Installed Rubber		FLCR35
<b>69-87 1/2, 3/4 Ton Pickup 4WD with 52" Rear Springs</b>						
2"		CR12S	2	Pre-Installed Rubber		FLCR12
4"		CR14S	2	Pre-Installed Rubber		FLCR14
6"		CR16S	2	Pre-Installed Rubber		FLCR16
8"		CR18S	2	Pre-Installed Rubber		FLCR18
<b>69-87 1/2 &amp; 3/4 Ton Pickup 4WD with 56" Rear Springs</b>						
4"		CR24S	2	Pre-Installed Rubber		FLCR24
6"		CR26S	2	Pre-Installed Rubber		FLCR26
<b>92-98 Blazer\Tahoe, Jimmy\Yukon 4WD</b>						
2"		CR12S	2	Pre-Installed Rubber		FLCR12
4"		CR14S	2	Pre-Installed Rubber		FLCR14
6"		CR16S	2	Pre-Installed Rubber		FLCR16
8"		CR18S	2	Pre-Installed Rubber		FLCR18
<b>73-91 Blazer, Jimmy 4WD</b>						
2"		CR12S	2	Pre-Installed Rubber		FLCR12
4"		CR14S	2	Pre-Installed Rubber		FLCR14
6"		CR16S	2	Pre-Installed Rubber		FLCR16
8"		CR18S	2	Pre-Installed Rubber		FLCR18
<b>69-72 Blazer, Jimmy 4WD</b>						
2"		CR14S	2	Pre-Installed Rubber		FLCR14
4"		CR16S	2	Pre-Installed Rubber		FLCR16
6"		CR18S	2	Pre-Installed Rubber		FLCR18
<b>92-99 Suburban 1/2, 3/4 Ton 6-Lug &amp; 8-Lug 4WD</b>						
2"		CR32S	2	Pre-Installed Rubber		FLCR32
<b>69-91 Suburban 4WD with 52" Rear Springs</b>						
2"		CR14S	2	Pre-Installed Rubber		FLCR14
4"		CR16S	2	Pre-Installed Rubber		FLCR16
6"		CR18S	2	Pre-Installed Rubber		FLCR18
<b>69-91 Suburban 4WD with 56" Rear Springs</b>						
4"		CR24S	2	Pre-Installed Rubber		FLCR24
6"		CR26S	2	Pre-Installed Rubber		FLCR26
<b>DODGE</b>						
<b>02-06 1/2 Ton Ram Pickup 4WD</b>						
5"		DR250S	2	Pre-Installed Rubber		
<b>94-01 1/2 &amp; 3/4 Ton Ram Pickup 4WD with 2.5" Wide Rear Springs</b>						
2"	Q7	DR56S	2	Pre-Installed Rubber		
4"		DR54S	2	Pre-Installed Rubber		FLDR54

# REAR SOFTRIDE® LEAF SPRINGS

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
<b>DODGE - Continued</b>						
<b>94-01 1/2 &amp; 3/4 Ton Ram Pickup 4WD with 2.5" Wide Rear Springs</b>						
6"		DR56S	2	Pre-Installed Rubber		
KIT NOTES: Q7. The Factory Block is Removed.						
<b>03-11 3/4 Ton Ram Pickup 4WD</b>						
4"		DR374S	2	Pre-Installed Rubber		
<b>94-01 3/4 Ton Heavy Duty &amp; 1 Ton Ram Pickup 4WD with 3" Wide Rear Springs</b>						
1-1.5"	Q7	DR76S	2	Pre-Installed Rubber		FLDR76
4"		DR74S	2	Pre-Installed Rubber		FLDR74
6"		DR76S	2	Pre-Installed Rubber		FLDR76
KIT NOTES: Q7. The Factory Block is Removed.						
<b>72-93 1/2 &amp; 3/4 Ton Pickup 4WD</b>						
4"	Q6	DR40S	2	Pre-Installed Rubber		FLDR40
6"	Q6	DR60S	2	Pre-Installed Rubber		FLDR60
KIT NOTES: Q6. Factory Block Can Be Removed to Reduce Lift 3.5" (Cummins Models will be 4-6" Less Lift). Some 3/4 & 1 Ton Models have 3/4" Spring Eye Bolts and REQUIRE Bushing Kit # SE17D.						
<b>72-93 Ramcharger, Trailduster 4WD</b>						
6"	Q6	DR40S	2	Pre-Installed Rubber		FLDR40
8"	Q6	DR60S	2	Pre-Installed Rubber		FLDR60
KIT NOTES: Q6. Factory Block Can Be Removed to Reduce Lift 3.5" (Cummins Models will be 4-6" Less Lift). Some 3/4 & 1 Ton Models have 3/4" Spring Eye Bolts and REQUIRE Bushing Kit # SE17D.						
<b>FORD</b>						
<b>09-11 F-150 4WD</b>						
4"		FR904S	2	Pre-Installed Rubber		
<b>04-08 F-150 4WD</b>						
4.5"		FR44S	2	Pre-Installed Rubber		FLFR44
<b>97-03 F-150 4WD Includes SuperCrew</b>						
5"		FR15S	2	Pre-Installed Rubber		
<b>73-96 F-100, F-150 4WD</b>						
2"		FR52S	2	Pre-Installed Rubber		FLFR52
4"	Q1	FR54S	2	Pre-Installed Rubber		FLFR54
6-8"	Q1	FR56S	2	Pre-Installed Rubber		FLFR56
KIT NOTES: Q1. Factory Block Can Be Removed on 4WD to Reduce Lift 2" on 80-86 Models or 3.25" on 73-79 Models.						
<b>80-96 F-100, F-150 2WD</b>						
2"		FR34S	2	Pre-Installed Rubber		
4"		FR36S	2	Pre-Installed Rubber		
<b>78-96 Bronco 4WD</b>						
2"		FR51S	2	Pre-Installed Rubber		FLFR51
4"		FR52S	2	Pre-Installed Rubber		FLFR52
6"		FR54S	2	Pre-Installed Rubber		FLFR54
8"		FR56S	2	Pre-Installed Rubber		FLFR56
<b>66-77 Bronco 4WD</b>						
4.5"		FR64S	2	Pre-Installed Rubber		FLFR64
<b>00-04 Excursion 4WD</b>						
4"		FR94S	2	Pre-Installed Rubber		
6"		FR96S	2	Pre-Installed Rubber		
8"		FR98S	2	Pre-Installed Rubber		
<b>80-98 F-250 4WD, 2WD</b>						
1-2"		FR52S	2	Pre-Installed Rubber		FLFR52
3-4"	Q1	FR54S	2	Pre-Installed Rubber		FLFR54
5-6"	Q1	FR56S	2	Pre-Installed Rubber		FLFR56
KIT NOTES: Q1. Factory Block Can Be Removed on 4WD to Reduce Lift 2" on 80-86 Models or 3.25" on 73-79 Models.						
<b>77.5-79 F-250 Lowboy 4WD</b>						
1-2"		FR52S	2	Pre-Installed Rubber		FLFR52
3-4"	Q3	FR54S	2	Pre-Installed Rubber		FLFR54

# REAR SOFTRIDE® LEAF SPRINGS

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
5-6"	Q3	FR56S	2	Pre-Installed Rubber		FLFR56
KIT NOTES: Q3. Factory Block Can Be Removed to Reduce Lift 3.25".						
<b>FORD - Continued</b>						
<b>08-11 F-250/F-350 Super Duty 4WD</b>						
4"		FR84S	2	Pre-Installed Rubber		
6"		FR86S	2	Pre-Installed Rubber		
8"		FR88S	2	Pre-Installed Rubber		
<b>99-07 F-250/F-350 Super Duty 4WD</b>						
4"		FR94S	2	Pre-Installed Rubber		
6"		FR96S	2	Pre-Installed Rubber		
8"		FR98S	2	Pre-Installed Rubber		
<b>66-77 F-250 Highboy 4WD</b>						
4"		FR74S	2	Pre-Installed Rubber		FLFR74
<b>79-98 F-350 4WD</b>						
1"		FR52S	2	Pre-Installed Rubber		FLFR52
3"		FR54S	2	Pre-Installed Rubber		FLFR54
5"		FR56S	2	Pre-Installed Rubber		FLFR56
<b>83-97 Ranger 4WD, 2WD</b>						
4"	Q2	FR34S	2	Pre-Installed Rubber		FLFR34
6"	Q2	FR36S	2	Pre-Installed Rubber		FLFR36
KIT NOTES: Q2. Factory Block Can Be Removed to Reduce Lift 2-3" Depending on Factory Block Size.						
<b>83-90 Bronco II 4WD, 2WD</b>						
4"		FR34S	2	Pre-Installed Rubber		FLFR34
6"		FR36S	2	Pre-Installed Rubber		FLFR36
<b>JEEP</b>						
<b>87-96 Wrangler YJ</b>						
2-2.5"		YJ20RS	2	SE4YJ	1	FLYJ20R
3.5"-4"		YJ40RS	2	SE4YJ	1	FLYJ40R
<b>87-96 Wrangler YJ Rock Ready® Double Military Wrap</b>						
2.5"		YJ25RS	2	SE45YJ	1	
4"		YJ45RS	2	SE45YJ	1	
<b>76-86 CJs &amp; Scrambler</b>						
2-2.5"		J20RS	2	SE45J	1	FLJ20R
3.5"-4"		J40RS	2	SE45J	1	FLJ40R
<b>55-75 CJs</b>						
2-2.5"		J32RS	2	SE34J	1	FLJ32R
3.5"-4"		J34RS	2	SE34J	1	FLJ34R
<b>84-01 Cherokee XJ 4WD, 2WD</b>						
2.5"		JC25RS	2	Pre-Installed Rubber		FLJC25R
5.5"	Q5	JC55RS	2	Pre-Installed Rubber		
7.5"	Q5	JC75RS	2	Pre-Installed Rubber		
KIT NOTES: Q5. Skyjacker Shackles # SH130 Are REQUIRED.						
<b>84-91 Grand Wagoneer 4WD - Full-Size</b>						
3-4"		JP40RS	2	Pre-Installed Rubber		FLJP40R
<b>76-83 Cherokee, Wagoneer 4WD - Full-Size</b>						
4"		JP40RS	2	Pre-Installed Rubber		FLJP40R
<b>74-88 J10, J20 Pickup 4WD - Full-Size</b>						
4"	Q8	JP40RS	2	Pre-Installed Rubber		FLJP40R
KIT NOTES: Q8. 74-75 Models MUST Have 131" Wheel Base & 7,200 lb. GVWR or more for Rear Springs to Fit.						
<b>TOYOTA</b>						
<b>07-11 Tundra 4WD</b>						
4-4.5"		TUR74S	2	Pre-Installed Rubber		
<b>05-10 Tacoma 4WD</b>						
1.5"-2"		TCR515S	2	Pre-Installed Rubber		



# REAR SOFTRIDE® LEAF SPRINGS

FRONT LIFT	NOTES	SINGLE Spring	Qty.	Bushing SETS To Fit 2 Single Springs	Qty.	FITTED LEAFS For Pair
<b>98-04 Tacoma 4WD, 2WD</b>						
2.5"		TCR25S	2	Pre-Installed Rubber		
<b>95-97 Tacoma 4WD, 2WD</b>						
3.5"		TR39S	2	SE39T	1	FLTR49
<b>89-95 Pickup 4WD</b>						
4"		TR49S	2	SE39T	1	FLTR49
<b>79-88 Pickup 4WD</b>						
2"		TR20S	2	SE35T	1	FLTR20
4"		TR40S	2	SE35T	1	FLTR40
6"		TR60S	2	SE35T	1	FLTR60
<b>85-89 4Runner 4WD</b>						
0-1"		TR20S	2	SE35T	1	FLTR20
<b>85-89 4Runner 4WD</b>						
2-3"		TR40S	2	SE35T	1	FLTR40
4-5"		TR60S	2	SE35T	1	FLTR60
<b>64-80 FJ40 LandCruiser 4WD</b>						
2.5"		L20RS	2	SE40L	1	FLL20R
3.5"		L40RS	2	SE40L	1	FLL40R
<b>INTERNATIONAL</b>						
<b>72-82 Scout II, Terra, Traveler 4WD</b>						
2"		S20RS	2	SE40S	1	FLS20R
4"		S40RS	2	SE40S	1	FLS40R



<b>LEAF SPRING ACCESSORIES</b>		
<b>Replacement Teflon® Wear Pads - Each</b>		
<b>- Fits LEAF SPRING MODELS with 2", 2.5 or 3" Wide Leaf Springs.</b>		
Spring Width	Button Style	Part #
2"	Single	IN200C
2.5"	Single	IN212C
2.5"	Double	IN212D
2.5"	Off-Center	IN212O
3"	Single	IN300C
3"	Double	IN300D

# STEERING COMPONENTS

## PITMAN ARMS, STEERING ARMS & DRAG LINKS

LIFT HEIGHT	NOTES	PITMAN ARM		STEERING		OFFSET & ADJUSTABLE DRAGLINK
		DROP	EXTREME DROP	ARM	BLOCK	
CHEVROLET/GMC						
67-91 1/2, 3/4 & 1 ton Pickup 4WD						
67-91 1 ton Pickup 4WD - For Open Knuckles Only						
2.5-4"		CA50			SB60	
6"						GMDL4
67-87 1/2 & 3/4 Pickup 4WD - Must Have 3-Bolt Steering Knuckle						
2.5"		CA50				
4-6"				CA100		GMDL4
6-8"				CA150		
67-91 1/2, 3/4 Blazer, Jimmy, Suburban - Must Have 3-Bolt Steering Knuckle						
67-91						
2.5"		CA50				
4-6"				CA100		GMDL4
6-8"				CA150		
DODGE						
61-11 1/2, 3/4 & 1 Ton Ram Pickup 4WD						
09-11 2500/3500 Ram Pickup 4WD						
4-5"		DA309				
03-11 2500/3500 Ram Pickup 4WD						
4-5"		DA303				
00-02 3/4 & 1 Ton Ram Pickup 4WD						
3-5"		DA302				
5-8"			DA602			
00-01 1/2 Ton Ram Pickup 4WD						
3-5"		DA302				
5-8"			DA602			
94-99 1/2, 3/4 & 1 Ton Ram Pickup 4WD						
3-6"		DA300				
6-8"			DA600			
87-93 Ram Pickup 3/4, 1 Ton with Cummins Diesel and Power Steering						
4"		DA20			SB60	
6"		DA45			SB60	
78-93 Ram Pickup 1/2, 3/4, 1 ton 4WD Except Cummins Diesel and Power Steering Models						
2"	V10	DA20			SB60	
4"	V10	DA40			SB60	
KIT NOTE: V10. Steering Block for 1 Ton 4x4 Dana 60 Applications Only.						
78-93 Ram Pickup 1/2, 3/4, 1 ton 4WD Must Have 3-Bolt Steering Knuckle						
6"	25			DA60	SB60	
KIT NOTE: V10. Steering Block for 1 Ton 4x4 Dana 60 Applications Only.						
72-93 Full Size 4WD To Replace Factory Non-Adjustable Drag Link						
ALL						DL10
72-77 Full Size 4WD - Must Have 3-Bolt Steering Knuckle & Must Use Adjustable Drag Link # DL10.						
8"				DA65		
61-77 Full Size 4WD - Must Have 3-Bolt Steering Knuckle						
4-6"				DA60		
8"				DA65		
61-93 Full Size 4WD Dana 60 Axles - Open Knuckles Only.						
2.5"					SB60	
FORD						
66-11 ALL FORD MODELS						
05-11 F-250, F-350 Super-Duty 4WD						
4-8.5"		FA450				

PITMAN ARMS, STEERING ARMS & DRAG LINKS						
LIFT HEIGHT	NOTES	PITMAN ARM		STEERING		OFFSET & ADJUSTABLE DRAGLINK
		DROP	EXTREME DROP	ARM	BLOCK	
99-04 Excursion, F-250, F-350 Super-Duty 4WD (After March '99)						
4-6"		FA499				
8"			FA699			
66-05 ALL FORD MODELS						
99 F-250, F-350 Super-Duty 4WD (Before March '99)						
4-6"		FA400				
8"			FA600			
83-97 Ranger, Bronco II & Explorer 4WD, 2WD with Power Steering						
4-6"		FA400				
6-8"			FA600			
80-97 F-150, F-250, F-350 & Bronco 4WD, 2WD with Power Steering						
4-6"		FA400				
6-8"			FA600			
78-79 Bronco 4WD with Power Steering						
4-6"		FA300				
6-9"			FA500			
77.5-79 F-250 4WD with Power Steering (for 5-6" Lifts - Combine with # SDL250 Drag Link)						
2-3"		FA325				
77.5-79 F-250, F-350 4WD (for 5-6" Lifts - Combine with # FA325 Pitman Arm)						
3-4"						SDL250
76-79 F-100, F-150 4WD with Power Steering						
4-6"	V6	FA300				
6-9"	V6		FA500			
KIT NOTE: V6. Pitman Arm ONLY Fits 76-79 Models with Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" style. Order # FDL70 and # TRA70.						
66-77 Bronco 4WD with Power or Manual Steering						
4-5"	V7	FA300				
KIT NOTE: V7. Pitman Arm Fits Manual and Power Steering. 76-77 Models MUST Change Drag Link & Tie Rod Assembly to "T" style. Order # FDL67 and # TRA60.						
JEEP						
07-11 Jeep JK 2 and 4-Door 4WD						
07-11 Jeep JK 2 and 4-Door with power steering						
4-7"		JA770				
72-06 JEEP TJ, YJ, CJ						
97-06 Wrangler TJ with Power Steering						
4-6"	V10	JA750				
8-10"	V10	JA500				
KIT NOTE: V10. Designed for Skyjacker Lifts only.						
97-06 Wrangler TJ Right Hand Steer with Power Steering						
4-6"		JA250				
97-06 Wrangler TJ with Manual Steering						
4-6"		JA850				
87-96 Wrangler YJ with Power Steering						
3.5-4"		JA750				
87-96 Wrangler YJ with Manual Steering						
3.5-4"		JA850				
76-86 CJ & Scrambler with Power Steering						
3.5-4"		JA250				
76-86 CJ & Scrambler with Manual Steering						
3.5-4"		JA150				
72-75 CJ & Scrambler with Power Steering						
2"		JA552				
72-75 JEEP CJ						
72-75 CJ with Manual Steering						
2"		JA652				



# STEERING COMPONENTS

## PITMAN ARMS, STEERING ARMS & DRAG LINKS

LIFT HEIGHT	NOTES	PITMAN ARM		STEERING		OFFSET & ADJUSTABLE DRAGLINK
		DROP	EXTREME DROP	ARM	BLOCK	
72-75 CJ with Manual Steering						
3-4"		JA650				
74-01 JEEP SUV						
84-01 Cherokee XJ, 4WD, 2WD 5.25" Drop below factory arm						
4-8"			JA500			
93-98 Grand Cherokee ZJ, 4WD, 2WD 5.25" Drop below factory arm						
4-8"			JA500			
84-91 Grand Wagoneer Full-Size 4WD with Power Steering						
3.5-4"		JA350				
74-83 Cherokee, Wagoneer Full-Size 4WD with Power Steering						
3.5-4"		JA350				
74-88 J10, J20 Pickup 4WD with Power Steering						
3.5-4"		JA350				
TOYOTA						
79-85 Pickup, 4Runner 4WD						
79-85 Pickup, 4Runner 4WD						
4-7"	V8					TDL5
KIT NOTE: V8. 7" Lifts REQUIRE the following: # TDL5 Adjustable Drag Link, # FBL30 & # RBL30 Longer Stainless Steel Brake Lines, Lengthening of Front Driveshaft and Modifying Factory Steering Arm so that Ball is Pointing Out the Top of Arm (Rather than Pointing Down).						
INTERNATIONAL						
72-81Scout II 4WD						
72-81 Scout II 4WD with Power Steering						
2-4"	SA40					



# REAR BLOCKS & U-BOLT KITS

REAR BLOCKS & U-BOLT KITS					
Make/ Model Year	REAR LIFT HEIGHT				
	1 1/4"	2"	3.5"	4.5"	5.5"
<b>CHEVROLET/GMC</b>					
<b>Colorado/Canyon 2WD/4WD</b>					
04-11	BUK12571				
<b>1/2 &amp; 3/4 Ton 6-Lug Pickup 2WD</b>					
99-06	BUK12562				
<b>1/2 &amp; 3/4 Ton 6-Lug Pickup 4WD</b>					
07-11	BUK12563	BUK2063			
99-06	BUK12563	BUK2063	BUK3564	BUK4565	
88-98	BUK12563	BUK2061		BUK4564	
69-72					
73-87			BUK3588	BUK4589	BUK5589
<b>3/4 Ton 8-Lug Pickup 4WD - 00-04 Fits 2500HD</b>					
2011		BUK2789			
00-10	BUK12581	BUK2082	BUK3584	BUK4584	
88-98		BUK2061		BUK4564	
73-87					BUK5592
<b>1 Ton Pickup 4WD - Except Crew Cab &amp; Dually</b>					
88-98		BUK2082	BUK3584	BUK4584	
73-87		BUK2082	BUK3584	BUK4584	
<b>1 Ton Crew Cab Pickup 4WD - Except Dually</b>					
92-98		BUK2082	BUK3584		
73-91		BUK2082	BUK3584		
<b>Blazer, Jimmy, Tahoe, Yukon 4WD</b>					
92-99	BUK12563	BUK2061		BUK4564	
73-91			BUK3588	BUK4589	BUK5589
69-72		BUK2080			
<b>Suburban 1/2 &amp; 3/4 Ton 6-Lug 4WD</b>					
92-99	BUK12563	BUK2061		BUK4564	
73-91			BUK3588	BUK4589	BUK5589
<b>Suburban 3/4 Ton 8-Lug 4WD</b>					
92-99	BUK12563	BUK2063		BUK4564	
73-87		BUK2091	BUK3592	BUK4592	BUK5592
<b>DODGE</b>					
<b>1/2 Ton Pickup, Ramcharger \ Trailduster</b>					
69-01		BUK2064	BUK3565	BUK4564	
<b>3/4 Ton Pickup 4WD - Except Diesel</b>					
69-93		BUK2064	BUK3565	BUK4564	



<b>FORD</b>					
<b>F-100, F-150 4WD</b>					
97-03		BUK2071	BUK3572	BUK4573	BUK5573

80-96			BUK3572		BUK5574
66-79			BUK3572		BUK5574
<b>F-100, F-150 2WD</b>					
80-96		BUK2071	BUK3572	BUK4573	BUK5573
<b>Bronco</b>					
80-96		BUK2071	BUK3572	BUK4573	BUK5573
78-79		BUK2071	BUK3572	BUK4573	BUK5573
66-77		BUK2071	BUK3572	BUK4573	BUK5573
<b>F-250 4WD with Factory 2" Block</b>					
99-09		BUK2095	BUK3596	BUK4597	BUK5598
<b>F-250 4WD</b>					
80-97		BUK2091	BUK3592	BUK4593	BUK5592
<b>F-250 2WD</b>					
80-97		BUK2090	BUK3591	BUK4592	BUK5593
<b>F-350 4WD with Factory 2" Block (No Overload)</b>					
99-09		BUK2095	BUK3596	BUK4597	BUK5598
<b>F-350 4WD - Except Dually</b>					
83-97		BUK2091	BUK3592	BUK4593	BUK5593
<b>Ranger 4WD</b>					
83-97		BUK2024	BUK3524	BUK4526	BUK5526
<b>Ranger 2WD</b>					
83-97		BUK2033	BUK3524	BUK4526	BUK5526
<b>Bronco II</b>					
84-90		BUK2023	BUK3524	BUK4526	BUK5526
<b>JEEP</b>					
<b>J-10, J20 Pickup, Cherokee \ Wagoneer Full-Size 4WD</b>					
74-90		BUK2071	BUK3572	BUK4573	BUK5573
<b>TOYOTA</b>					
<b>Tundra 2WD/4WD</b>					
07-11	BUK12592				
<b>Pickup 4WD with 2.5" Wide U-Bolt - Except 89-96 Short Bed Standard Cab</b>					
79-96		BUK2068	BUK3563		
<b>Short Bed Standard Cab Pickup 4WD with 3.25" Wide U-Bolt</b>					
89-96					
<b>4Runner 4WD</b>					
79-86		BUK2068	BUK3563		

## LIFT BLOCKS, REAR - Pair

Blocks are High Quality Ductile Iron (NOT Gray Iron), Tapered & Are 1-Piece Construction with Axle Pins Built-In.

NOTE: Blocks Are Designed for Rear Springs on Top of Rear Axle Applications ONLY.




Description	LIFT	Part #
Center Pinned, Flat Block	1.25"	RBF2125
Center Pinned, 3 Degree	2"	RB220
Center Pinned, Flat Block	2"	RBF220
Off-Center Pinned, 5 Degree	3.5"	RB235
Off-Center Pinned, Flat Block	4.25"	RBF2425
Off-Center Pinned, 5 Degree	4.5"	RB245
Off-Center Pinned, Flat Block	5"	RBF2250
Center Pinned, Flat Block	5"	RBF250
Off-Center Pinned, 5 Degree	5.5"	RB255

# U-BOLTS - SINGLE

## U-BOLTS - EACH - Includes Nylon Insert Lock Nuts

NUT	I.D.	I.D.	U-Bolt	PART
SIZE	WIDTH	LENGTH	SHAPE	NUMBER
<b>5/16 THREAD SIZE</b>				
5/16	1	1-3/4	ROUND	516X1X134
5/16	1-1/4	1-3/4	ROUND	516X114X134
5/16	1-1/2	2-1/4	ROUND	516X112X214
<b>3/8 THREAD SIZE</b>				
3/8	3-1/8	3-1/2	ROUND	38X318X312
<b>1/2 THREAD SIZE</b>				
1/2	2-1/2	4-1/4	ROUND	12X212X414
1/2	2-1/2	5-1/4	ROUND	12X212X514
1/2	2-1/2	6-1/4	ROUND	12X212X614
1/2	2-3/4	6	ROUND	12X234X6
1/2	2-3/4	8-1/2	ROUND	12X234X812
1/2	2-3/4	9-1/2	ROUND	12X234X912
1/2	2-3/4	10-1/2	ROUND	12X234X1012
1/2	3	10-1/2	ROUND	12X3X1012
1/2	3-1/8	6-1/2	ROUND	12X318X612
1/2	3-1/8	8-1/2	ROUND	12X318X812
1/2	3-3/4	9-1/2	ROUND	12X334X912
<b>9/16 THREAD SIZE</b>				
9/16	2-1/4	8-1/2	SQUARE	916X214X812
9/16	2-1/2	7	SQUARE	916X212X7
9/16	2-1/2	8-3/4	SQUARE	916X212X834
9/16	2-1/2	10-1/2	SQUARE	916X212X1012
9/16	2-1/2	12	SQUARE	916X212X12
9/16	2-1/2	13-1/2	SQUARE	916X212X1312
9/16	2-1/2	15-1/2	SQUARE	916X212X1512
9/16	2-1/2	17	SQUARE	916X212X17
9/16	3	7-1/2	ROUND	916X3X712
9/16	3-1/8	8-1/2	SQUARE	916X318X812
9/16	3-1/8	9-1/2	SQUARE	916X318X912
9/16	3-1/8	9-1/2	SEMI-Round	916X318X912FS
9/16	3-1/8	10-1/2	SEMI-Round	916X318X1012FS
9/16	3-1/8	13-1/2	SQUARE	916X318X1312
9/16	3-1/4	7-1/2	ROUND	916X314X712
9/16	3-1/4	9-1/2	ROUND	916X314X912
9/16	3-1/4	11-1/2	ROUND	916X314X1112
9/16	3-1/4	13-1/2	ROUND	916X314X1312
9/16	3-1/4	15-1/2	ROUND	916X314X1512
9/16	3-3/4	8-1/4	ROUND	916X334X814
9/16	4	9-1/2	ROUND	916X4X912
9/16	3-5/8	8	ROUND	916X358X8
9/16	3-5/8	12-1/2	ROUND	916X358X1212
<b>5/8 THREAD SIZE</b>				
5/8	2-3/4	9	SQUARE	58X234X9
5/8	2-3/4	10-1/2	SQUARE	58X234X1012
5/8	2-3/4	12-1/2	SQUARE	58X234X1212
5/8	2-5/8	14-1/2	SQUARE	58X258X1412
5/8	3	17-1/2	SQUARE	58X3X1712
5/8	3-1/8	7-1/2	ROUND	58X318X712
5/8	3-1/8	9-1/2	ROUND	58X318X912
5/8	3-1/8	11	ROUND	58X318X11
5/8	3-1/8	12-1/2	ROUND	58X318X1212
5/8	3-1/8	16-1/2	SQUARE	58X318X1612
5/8	3-3/8	9-1/2	ROUND	58X338X912
5/8	3-3/8	13	ROUND	58X338X13
5/8	3-3/8	14-1/2	ROUND	58X338X1412
5/8	3-3/8	16-1/2	ROUND	58X338X1612
5/8	3-3/8	19	ROUND	58X338X19
5/8	3-1/2	12	ROUND	58x312x12
5/8	3-1/2	14	ROUND	58x312x14
5/8	3-1/2	16	ROUND	58x312x16

5/8	3-1/2	18	ROUND	58x312x18
5/8	3-5/8	9-1/4	ROUND	58X358X914
5/8	4	10	ROUND	58X4X10

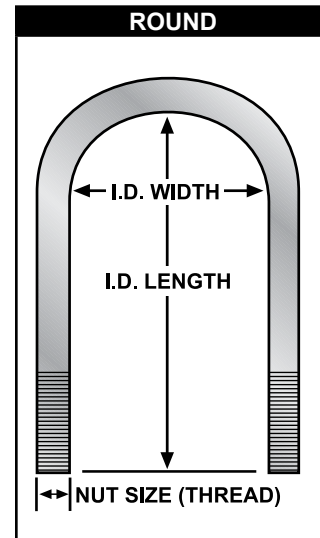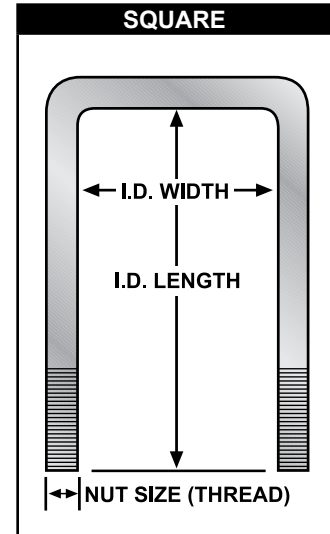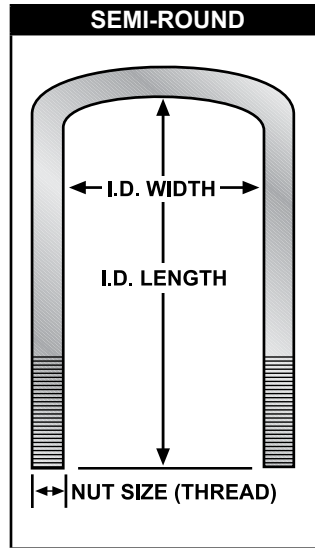




Part # Consists of:  
1 U-Bolt AND  
2 Nylon Insert Lock Nuts



# U-BOLTS KIT BREAKDOWN

U-BOLT KIT BREAKDOWN - ALL U-Bolt KITS Include Nuts						
KIT		SINGLE	NUT	I.D.	I.D.	U-Bolt
Part #	Qty.	U-Bolt #	SIZE	WIDTH	LENGTH	SHAPE
UCABF	3	58X318X712	5/8	3-1/8	7-1/2	Round
	1	58X358X914	5/8	3-5/8	9-1/4	Round
UCCF	2	58X318X912	5/8	3-1/8	9-1/2	Round
	1	58X4X10	5/8	4	10	Round
	2	58X314CTB	5/8	Stud	3-1/4	Bolt
UC1ASR	4	58X318X912	5/8	3-1/8	9-1/2	Round
UC1BSR	4	58X338X912	5/8	3-3/8	9-1/2	Round
UC1CSR	4	58X234X1012	5/8	2-3/4	10-1/2	Square
UC125BR	4	58X338X11	5/8	3-3/8	11	Round
UC140AR	4	58X318X11	5/8	3-1/8	11	Round
UC140BR	4	58X338X13	5/8	3-3/8	13	Round
UC140CR	4	58X234X1212	5/8	2-3/4	12-1/2	Square
UC168AR	4	58X318X1212	5/8	3-1/8	12-1/2	Round
UC168BR	4	58X338X1412	5/8	3-3/8	14-1/2	Round
UC168CR	4	58X258X1412	5/8	2-5/8	14-1/2	Square
UDCF	2	916X314X712	9/16	3-1/4	7-1/2	Round
	1	916X4X912	9/16	4	9-1/2	Round
	2	916X3CTB	9/16	Stud	3	Bolt
UDWR	4	916X212X7	9/16	2-1/2	7	Square
UDBR	4	916X212X1012	9/16	2-1/2	10-1/2	Square
UDB2R	4	916X212X1312	9/16	2-1/2	13-1/2	Square
UDBBR	4	916X212X1512	9/16	2-1/2	15-1/2	Square
UDB3R	4	916X212X17	9/16	2-1/2	17	Square
UDB6R	4	58X318X1612	5/8	3-1/8	16-1/2	Square
U3WR	4	12X234X812	1/2	2-3/4	8-1/2	Round
U3B2R	4	12X234X1012	1/2	2-3/4	10-1/2	Round
U3B4R	4	12X338X712	1/2	3-3/8	7-1/2	Round
U4WR	4	12X3X1012	1/2	3	10-1/2	Round
U5WWR	4	916X314X712	9/16	3-1/8	7-1/2	Round
U5WR	4	916X314X912	9/16	3-1/8	9-1/2	Round
U5B2R	4	916X314X1112	9/16	3-1/8	11-1/2	Round
U5B3R	4	916X314X1312	9/16	3-1/8	13-1/2	Round
U5B5R	4	916X314X1512	9/16	3-1/8	15-1/2	Round
U5B7R	4	916X318X1312	9/16	3-1/8	13-1/2	Square
U5B8R	4	916X4X15	9/16	4	15	Round
UFF	4	916X318X912	9/16	3-1/8	9-1/2	Square
U9FF	4	916X318X912	9/16	3-1/8	9-1/2	Semi-Round
U7B1R	4	58X338X11	5/8	3-3/8	11	Round
U7B2R	4	58X338X13	5/8	3-3/8	13	Round
U7B3R	4	58X338X1412	5/8	3-3/8	14-1/2	Round
U7B4R	4	58X338X1612	5/8	3-3/8	16-1/2	Round
U9B5R	4	58X3X1712	5/8	3	17-1/2	Square
U9B6R	4	58X312X12	5/8	3-1/2	12	Round
U9B7R	4	58X312X14	5/8	3-1/2	14	Round
U9B8R	4	58X312X16	5/8	3-1/2	16	Round
U9B9R	4	58X312X18	5/8	3-1/2	18	Round

UJPF	2	916X3X712	9/16	3	7-1/2	Round
	2	916X334X814	9/16	3-3/4	8-1/4	Round
UJ3R	4	12X234X6	1/2	2-3/4	6	Round
UJ4R	4	12X212X614	1/2	2-1/2	6-1/4	Round
UTF	4	916X214X812	9/16	2-1/4	8-1/2	Square
UTWR	4	916X212X7	9/16	2-1/2	7	Square
UTBR	4	916X212X1012	9/16	2-1/2	10-1/2	Square

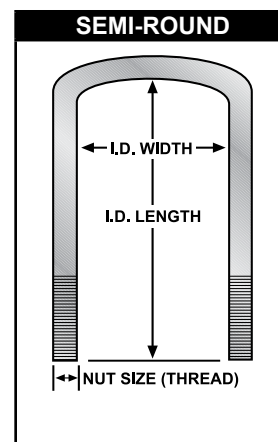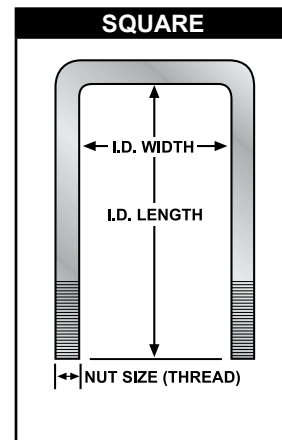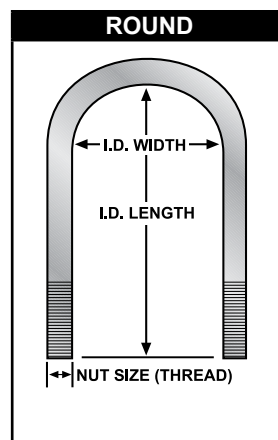

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
<b>132XRS</b>	<b>SYS BOX, 2"87-97RANGER STX</b>	
U134RSR	U-BOLT KIT REAR FOR 134RHKS	1
<b>134RH</b>	<b>COMP KIT BOX,4"HD 82-90 RAN</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
RB20	2" REAR BLOCK	2
12X234X1012U	1/2 X 2 3/4 X 8 1/2 U-BOLT	4
HB-1346H	HDWR BAG FOR 134&6 H KTS&S	1
HB-134E2	HDWR BAG/ #2 RANGER/BRONCO	1
IFR246	INSTRUCTIONS:RAN/BROII 2-6"	1
<b>134RHS</b>	<b>COMP KIT BOX,4"HD RAN W/RSP</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
12X234X812U	1/2 X 2 3/4 X 8 1/2 U-BOLT	4
HB-1346H	HDWR BAG FOR 134&6 H KTS&S	1
HB-134E2	HDWR BAG/ #2 RANGER/BRONCO	1
IFR246	INSTRUCTIONS:RAN/BROII 2-6"	1
<b>136BH</b>	<b>COMP KIT BOX,6"HD 83-90 BR2</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
RB55	5.5" REAR BLOCK	2
12X234X1312U	1/2 X 2 3/4 X 13 1/2 U-BOLT	4
HB-1346H	HDWR BAG FOR 134&6 H KTS&S	1
SBE734	SWAY BAR END LINK KIT RANGE	1
HB-134E2	HDWR BAG/ #2 RANGER/BRONCO	1
IFR246	INSTRUCTIONS:RAN/BROII 2-6"	1
<b>136BHS</b>	<b>COMP KIT BOX,6"HD BR2 W/RSP</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
12X234X812U	1/2 X 2 3/4 X 8 1/2 U-BOLT	4
HB-1346H	HDWR BAG FOR 134&6 H KTS&S	1
SBE734	SWAY BAR END LINK KIT RANGE	1
HB-134E2	HDWR BAG/ #2 RANGER/BRONCO	1
IFR246	INSTRUCTIONS:RAN/BROII 2-6"	1
<b>136R2</b>	<b>COMP BOX, 6" 82-97 RANGER 2</b>	
LHB3262-5	LEFT HINGE BRKT 2WD RANGER	1
RHB3262-6	RIGHT HINGE BRKT 2WD RANGER	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
12X234X1012U	1/2 X 2 3/4 X 10 1/2 U-BOLT	4
RB45	4.5" REAR BLOCK	2
HB-13462	HDWR BAG FOR 134&6 2WD	1
IFR2WD	INSTRUCTIONS:RANGER/EXP 2WD	1
<b>136RH</b>	<b>COMP KIT BOX,6"HD 82-95 RAN</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
RB45	4.5" REAR BLOCK	2
12X234X1312U	1/2 X 2 3/4 X 13 1/2 U-BOLT	4
HB-1346H	HDWR BAG FOR 134&6 H KTS&S	1
HB-134E2	HDWR BAG/ #2 RANGER/BRONCO	1
IFR246	INSTRUCTIONS:RAN/BROII 2-6"	1
<b>136RHS</b>	<b>COMP KIT BOX,6"HD RAN W/RSP</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
LRBE30-5	LEFT RAD BRKT 4-6" RANGER S	1
RRBE30-6	RIGHT RAD BRKT 4-6" RANGER	1
12X234X912U	1/2 X 2 3/4 X 9 1/2 U-BOLT	4
HB-1346H	HDWR BAG FOR 134&6 H KTS&S	1
HB-134E2	HDWR BAG/ #2 RANGER/BRONCO	1
IFR246	INSTRUCTIONS:RAN/BROII 2-6"	1
<b>138RH</b>	<b>COMP BOX, 8" 83-97 RANGER 4</b>	
RB45	4.5" REAR BLOCK	2
12X234X1312U	1/2 X 2 3/4 X 13 1/2 U-BOLT	4
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
HB-12FTN	HDWR BAG:8 - 12FTN LOCKNUTS	1
FBL38	FRONT BRAKE LINES 8" RANGER	1
RBL38	REAR BRAKE LINE RANGER/BRON	1
SBE938	SWAY BAR END LINK 9 3/8"	1
IF883	INSTRUCTIONS:8"83-95 RAN/B2	1
<b>138RHS</b>	<b>SYS BOX, 8" 83-97 RANGER 4W</b>	
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
FBL38	FRONT BRAKE LINES 8" RANGER	1
RBL35	REAR BRAKE LINE RANGER/BRON	1
12X234X912U	1/2 X 2 3/4 X 9 1/2 U-BOLT	4
SBE938	SWAY BAR END LINK 9 3/8"	1
HB-12FTN	HDWR BAG:8 - 12FTN LOCKNUTS	1
IF883	INSTRUCTIONS:8"83-95 RAN/B2	1

Part#	Description	QTY
<b>174BS</b>	<b>COMP KIT BOX,4" 78-79 BRO S</b>	
916X314X912	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>174EB</b>	<b>COMP KIT BOX,5" EARLY BRO</b>	
BUK4572	4.5"B/UB KT,66-96 BRO/F1502	1
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>174EBS</b>	<b>SYS BOX, 5" 66-77 BRONCO</b>	
916X314X712	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>174PS</b>	<b>SYS BOX, 4" 73-79 F150</b>	
916X314X1112	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>176B</b>	<b>COMP BOX, 6" 78-79 BRONCO</b>	
RB55	5.5" REAR BLOCK	2
916X314X1312	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>176BS</b>	<b>SYS BOX, 6" 78-79 BRONCO</b>	
916X314X912	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>176EBS</b>	<b>SYS BOX, 7" 66-77 BRONCO</b>	
U5WR	4 U-BOLTS/916X314X912 ROUND	1
RB20	2" REAR BLOCK	2
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>176P</b>	<b>COMP BOX, 6" 69-79 F150</b>	
BUK4574	4.5"B/UB KT 66-96F150/79F25	1
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>176PS</b>	<b>SYS BOX, 6" 73-79 F150</b>	
916X314X1112	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>179B</b>	<b>COMP BOX, 9" 78-79 BRONCO</b>	
BUK5573	5.5" B/UB KT,66-96BRO/1502W	1
<b>179BS</b>	<b>SYS BOX, 9" 78-79 BRONCO</b>	
916X314X912	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>179P</b>	<b>COMP BOX 9" 73-79 F150</b>	
BUK5574	5.5" B/UB KT,66-96 F150 4X4	1
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>179PS</b>	<b>SYS BOX, 9" 73-79 F150</b>	
RB20	2" REAR BLOCK	2
916X314X1312	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF79150	INSTRUCTIONS:79&BACK F150/B	1
<b>182BS</b>	<b>SYS BOX, 2" 80-96 BRONCO</b>	
916X314X712	1 U-BOLT W/ NYLON LOCK-NUTS	4
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>184B</b>	<b>COMP BOX, 4" 80-96 BRONCO</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X1112U	9/16 X 3 1/4 X 11 1/2 U-BOL	4
RB35	3.5" REAR BLOCK	2
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>184BS</b>	<b>SYS BOX, 4" 80-96 BRONCO</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	4
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>184F2</b>	<b>COMP BOX, 4" 80-96 F250 2WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
58X338X11U	5/8 X 3 3/8 X 11 U-BOLT RD	4
RB20	2" REAR BLOCK	2
HB-1846F2	HDWR BAG FOR 184&6-F2 KITS	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>184P</b>	<b>COMP BOX, 4" 80-96 F150 4WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X1112U	9/16 X 3 1/4 X 11 1/2 U-BOL	4
RB20	2" REAR BLOCK	2
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>184PS</b>	<b>SYS BOX, 4" 80-96 F150 4WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X912U	9/16 X 3 1/4 X 9 1/2 U-BOLT	4
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1

Part#	Description	QTY
<b>186B</b>	<b>COMP BOX, 6" 80-96 BRONCO</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X1312U	9/16 X 3 1/4 X 13 1/2 U-BOL	4
RB55	5.5" REAR BLOCK	2
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>186BS</b>	<b>SYS BOX, 6" 80-96 BRONCO</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X912U	9/16 X 3 1/4 X 9 1/2 U-BOLT	4
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>186F2</b>	<b>COMP BOX, 6" 80-96 F150 4WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
58X338X13U	5/8 X 3 3/8 X 13 U-BOLT RD	4
RB35	3.5" REAR BLOCK	2
HB-1846F2	HDWR BAG FOR 184&6-F2 KITS	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>186P</b>	<b>COMP BOX, 6" 80-96 F150 4WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X1512U	9/16 X 3 1/4 X 15 1/2 U-BOL	4
RB45	4.5" REAR BLOCK	2
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>186PS</b>	<b>SYS BOX, 6" 80-96 F150 4WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
LRB54-5	LEFT RAD BRKT F150/BRONCO S	1
RRB54-6	RIGHT RAD BRKT F150/BRONCO	1
916X314X912U	9/16 X 3 1/4 X 9 1/2 U-BOLT	4
HB-1846	HDWR BAG FOR 184&6 4WD 2WD	1
IF80150	INSTRUCTIONS: 80-96 F150/BR	1
<b>188B</b>	<b>COMP BOX,8" 80-96 BRONCO</b>	
R300	ADD-A-LEAF'S REAR FORD	1
FSB80-B	FRAME SUPPORT BAR F150/BRON	1
916X314X1312U	9/16 X 3 1/4 X 13 1/2 U-BOL	4
RB55	5.5" REAR BLOCK	2
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
SBL40	4" SWAY BAR LWR BRKT	1
FBL81	FRT BRAKE LINES 90-96 F150/	1
RBL80	REAR BRAKE LINE 80-96 F150/	1
HP188BP	HDWR PKG FOR 188 KITS	1
IF880	INSTRUCTIONS:8"80-96 F150/B	1
<b>188BS</b>	<b>SYS BOX,8" 80-96 BRONCO</b>	
FSB80-B	FRAME SUPPORT BAR F150/BRON	1
916X314X912U	9/16 X 3 1/4 X 9 1/2 U-BOLT	4
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
SBL40	4" SWAY BAR LWR BRKT	1
FBL81	FRT BRAKE LINES 90-96 F150/	1
RBL80	REAR BRAKE LINE 80-96 F150/	1
HP188BP	HDWR PKG FOR 188 KITS	1
IF880	INSTRUCTIONS:8"80-96 F150/B	1
<b>188C</b>	<b>COMP BOX,8" 80-96 F150 4WD,</b>	
LHB58-5	LEFT HINGE BRKT 8" F150 SGL	1
LHB58-5BP	LEFT HINGE BRKT-BACKING PLA	1
RHB58-6	RIGHT HINGE BRKT 8" F150 SG	1
RHB58-6BP	RIGHT HINGE BRKT BACKING PL	1
LRB58-5	LEFT RADIUS BRKT 8"F150 SGL	1
RRB58-6	RIGHT RADIUS BRKT 8"F150 SG	1
<b>188P</b>	<b>COMP BOX,8" 80-96 F150 4WD</b>	
R300	ADD-A-LEAF'S REAR FORD	1
FSB80-B	FRAME SUPPORT BAR F150/BRON	1
916X314X1512U	9/16 X 3 1/4 X 15 1/2 U-BOL	4
RB45	4.5" REAR BLOCK	2
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
SBL40	4" SWAY BAR LWR BRKT	1
FBL81	FRT BRAKE LINES 90-96 F150/	1
RBL80	REAR BRAKE LINE 80-96 F150/	1
HP188BP	HDWR PKG FOR 188 KITS	1
IF880	INSTRUCTIONS:8"80-96 F150/B	1
<b>188P2</b>	<b>COMP BOX,8" 80-96 150 2WD</b>	
R225	ADD-A-LEAF'S REAR	1
FSB80-B	FRAME SUPPORT BAR F150/BRON	1
916X314X1312U	9/16 X 3 1/4 X 13 1/2 U-BOL	4
RB45	4.5" REAR BLOCK	2
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1

All Installation Instructions are Available On Line At Skyjacker.Com

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
FBL81	FRT BRAKE LINES 90-96 F150/	1
RBL80	REAR BRAKE LINE 80-96 F150/	1
HP188BP	HDWR PKG FOR 188 KITS	1
IF880	INSTRUCTIONS:8"80-96 F150/B	1
<b>188PS</b>	<b>SYS BOX,8" 80-96 F150 4WD</b>	
F5880-B	FRAME SUPPORT BAR F150/BRON	1
916X314X1112U	9/16 X 3 1/4 X 11 1/2 U-BOL	4
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
SBL40	4" SWAY BAR LWR BRKT	1
FBL81	FRT BRAKE LINES 90-96 F150/	1
RBL80	REAR BRAKE LINE 80-96 F150/	1
HP188BP	HDWR PKG FOR 188 KITS	1
IF880	INSTRUCTIONS:8"80-96 F150/B	1
<b>234BHS</b>	<b>SYS BOX,4"84-90 BRONCO II 4</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE638	SWAY BAR END LINK 6 3/8"	1
12X234X812U	1/2 X 2 3/4 X 8 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>234RH</b>	<b>COMP BOX,4" 83-97 RANGER 4W</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE638	SWAY BAR END LINK 6 3/8"	1
RB20	2" REAR BLOCK	2
12X234X1012U	1/2 X 2 3/4 X 10 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>234RHS</b>	<b>SYS BOX,4" 83-97 RANGER 4WD</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE638	SWAY BAR END LINK 6 3/8"	1
12X234X812U	1/2 X 2 3/4 X 8 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>236BH</b>	<b>COMP BOX,6"84-90 BRONCO II</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE734	SWAY BAR END LINK KIT RANGE	1
RB55	5.5" REAR BLOCK	2
12X234X1312U	1/2 X 2 3/4 X 13 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>236BHS</b>	<b>SYS BOX,6"84-90 BRONCO II 4</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE734	SWAY BAR END LINK KIT RANGE	1
RB55	5.5" REAR BLOCK	2
12X234X1312U	1/2 X 2 3/4 X 13 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>236R2</b>	<b>COMP BOX,6" 82-97 RANGER 2W</b>	
LHB3262-5	LEFT HINGE BRKT 2WD RANGER	1
RHB3262-6	RIGHT HINGE BRKT 2WD RANGER	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	1
RBP2W-R	RANGER BUMP STOP 2WD, RIGHT	1
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE638	SWAY BAR END LINK 6 3/8"	1
RB45	4.5" REAR BLOCK	2
12X234X1012U	1/2 X 2 3/4 X 10 1/2 U-BOLT	4
HB-23462	HDWR BAG FOR 234&236 2WD	1
<b>236R2S</b>	<b>SYS BOX,6" 82-97 RANGER 2WD</b>	
LHB3262-5	LEFT HINGE BRKT 2WD RANGER	1
RHB3262-6	RIGHT HINGE BRKT 2WD RANGER	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	1
RBP2W-R	RANGER BUMP STOP 2WD, RIGHT	1
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE638	SWAY BAR END LINK 6 3/8"	1
12X234X812U	1/2 X 2 3/4 X 8 1/2 U-BOLT	4
HB-23462	HDWR BAG FOR 234&236 2WD	1
<b>236RH</b>	<b>COMP BOX,6" 83-97 RANGER 4W</b>	

Part#	Description	QTY
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE734	SWAY BAR END LINK KIT RANGE	1
12X234X1312U	1/2 X 2 3/4 X 13 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>236RHS</b>	<b>SYS BOX,6" 83-97 RANGER 4WD</b>	
LHB352-5	LEFT HINGE BRKT RANGER CLII	1
LHB352-5BP	LEFT HINGE BRKT RANGER CLII	1
RHB35-6	RIGHT HINGE BRKT RANGER SGL	1
FA400	PITMAN ARM 80-96 FORD W/PS	1
RBP2W-L	RANGER BUMP STOP 2WD, LEFT	2
BPPY	BUMP STOPS PYRAMID SHAPE	2
SBE734	SWAY BAR END LINK KIT RANGE	1
12X234X912U	1/2 X 2 3/4 X 9 1/2 U-BOLT	4
HB-2346	HDWR BAG FOR 234&6 RANGER/	1
<b>284BS</b>	<b>SYS BOX,4" 80-96 BRONCO CLA</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
LHB542-5BP	LEFT HINGE BRKT F150 II BAC	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
BP125-1	BUMP STOP BRKT F150 SGL	2
FA400	PITMAN ARM 80-96 FORD W/PS	1
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	4
HB-2846	HDWR BAG FOR 284&6 4WD 2WD	1
IF2846	INSTR: 80-96 F150/BRO CLSII	1
<b>284BS</b>	<b>SYS BOX,6" 80-96 F150 4WD C</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
LHB542-5BP	LEFT HINGE BRKT F150 II BAC	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
BP125-1	BUMP STOP BRKT F150 SGL	2
FA400	PITMAN ARM 80-96 FORD W/PS	1
916X314X912U	9/16 X 3 1/4 X 9 1/2 U-BOLT	4
HB-2846	HDWR BAG FOR 284&6 4WD 2WD	1
IF2846	INSTR: 80-96 F150/BRO CLSII	1
<b>286B</b>	<b>COMP BOX,6" 80-96 BRONCO CL</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
LHB542-5BP	LEFT HINGE BRKT F150 II BAC	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
BP125-1	BUMP STOP BRKT F150 SGL	2
FA400	PITMAN ARM 80-96 FORD W/PS	1
916X314X1312U	9/16 X 3 1/4 X 13 1/2 U-BOL	4
RB55	5.5" REAR BLOCK	2
HB-2846	HDWR BAG FOR 284&6 4WD 2WD	1
IF2846	INSTR: 80-96 F150/BRO CLSII	1
<b>286BS</b>	<b>SYS BOX,6" 80-96 BRONCO CLA</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
LHB542-5BP	LEFT HINGE BRKT F150 II BAC	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
BP125-1	BUMP STOP BRKT F150 SGL	2
FA400	PITMAN ARM 80-96 FORD W/PS	1
916X314X1512U	9/16 X 3 1/4 X 15 1/2 U-BOL	4
HB-2846	HDWR BAG FOR 284&6 4WD 2WD	1
IF2846	INSTR: 80-96 F150/BRO CLSII	1
<b>286P</b>	<b>COMP BOX, 6" 80-96 F150 4WD</b>	
LHB543-5	LEFT HINGE BRKT F150 SGL	1
LHB542-5BP	LEFT HINGE BRKT F150 II BAC	1
RHB543-6	RIGHT HINGE BRKT F150 SGL	1
BP125-1	BUMP STOP BRKT F150 SGL	2
FA400	PITMAN ARM 80-96 FORD W/PS	1
916X314X1512U	9/16 X 3 1/4 X 15 1/2 U-BOLT	4
HB-2846	HDWR BAG FOR 284&6 4WD 2WD	1
IF2846	INSTR: 80-96 F150/BRO CLSII	1
<b>C1178A</b>	<b>COM BX: 7" 2011 GM 2500HD</b>	
C1178L	C1178,LEFT STEERING KNUCKLE	1
C1178R	C1178,RIGHT STEERING KNUCKL	1
<b>C1178B</b>	<b>COM BX: 7" 2011 GM 2500HD</b>	
C1178FCM-B	C1178 FRONT CROSSMEMBER	1
C1178RCM-B	C1178 REAR CROSSMEMBER	1
C1178BSB-DF	C1178 DRV FRT BUMP STOP BRK	1
C1178BSB-PF	C1178 PASS FRT BUMP STOP BR	1
C1178SKD-S	C1178 FRONT DIFF SKID PLATE	1
H-BOX C1178B	HDWR BOX: C1178B COMP BOX	1
I-C1178	INSTRUCTION SHEET: C1178	1

Part#	Description	QTY
<b>C1178N</b>	<b>COM BX:NITRO-SK 11 GM2500HD</b>	
N8095	NITRO SHOCK W/RED BOOT	2
N8064	NITRO SHOCK W/RED BOOT	2
<b>C1178TR</b>	<b>COM BX:7" RTB 11 GM 2500HD</b>	
C1178TBR-D	C1178 DRIVER RAISED TB BRKT	1
C1178TBR-P	C1178 PASS RAISED TB BRKT	1
<b>C124AS</b>	<b>SYS BOX,2.5-4"73-87GM1/2 PK</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	4
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C124AS8</b>	<b>SYS BOX,2.5-4"88-91 GM BLAZ</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	4
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C124BS</b>	<b>SYS BOX,73-87 GM 3/4T PICKU</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X912U	5/8 X 3 3/8 X 9 1/2 U-BOLT	4
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C124BS8</b>	<b>SYS BOX,2.5-4" GM 88-91 3/4</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X912U	5/8 X 3 3/8 X 9 1/2 U-BOLT	4
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C124CS</b>	<b>SYS BOX,2.5-4"77-87CHEVY/GM</b>	
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	2
58X4X10U	5/8 X 4 X 10 U-BOLT RD	1
58X234X1012U	5/8 X 2 3/4 X 10 1/2 U-BOLT	4
58X314CTB	5/8 X 3 1/4 COARSE THREAD B	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C125A</b>	<b>COMP BOX,2.5"73-87 1/2T PKU</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	4
RB20	2" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C125AB</b>	<b>COMP BOX,2.5"88-91 GM BLAZ,</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	4
RB20	2" REAR BLOCK	2
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C125B</b>	<b>COMP BOX,2.5"73-87 GM 3/4TO</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X11U	5/8 X 3 3/8 X 11 U-BOLT RD	4
RB20	2" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C125C</b>	<b>COMP BOX,2.5"77-87 CHEVY/GM</b>	
58X234X1012U	5/8 X 2 3/4 X 10 1/2 U-BOLT	4
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	2
58X4X10U	5/8 X 4 X 10 U-BOLT RD	1
58X314CTB	5/8 X 3 1/4 COARSE THREAD B	2
RB20	2" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
<b>C140A</b>	<b>COMP BOX,4"73-87GM 1/2T PKU</b>	
58X318X11U	5/8 X 3 1/8 X 11 U-BOLT RD	4
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
RB35	3.5" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C140AB</b>	<b>COMP BOX,4"88-91 1/2T PKUP,</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X11U	5/8 X 3 1/8 X 11 U-BOLT RD	4
RB35	3.5" REAR BLOCK	2
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C140B</b>	<b>COMP BOX,4"73-87 GM 3/4T PI</b>	

All Installation Instructions Are Available On Line At [Skyjacker.Com](http://Skyjacker.Com)



# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X13U	5/8 X 3 3/8 X 13 U-BOLT RD	4
RB35	3.5" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C140B8</b>	<b>COMP BOX,4," 88-91 3/4 TON S</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X13U	5/8 X 3 3/8 X 13 U-BOLT RD	4
RB35	3.5" REAR BLOCK	2
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C140C</b>	<b>COMP BOX,4,"77-87 CHEVY/GMC</b>	
58X234X1212U	5/8 X 2 3/4 X 12 1/2 U-BOLT	4
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	2
58X4X10U	5/8 X 4 X 10 U-BOLT RD	1
58X314CTB	5/8 X 3 1/4 COARSE THREAD B	2
RB35	3.5" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C160CS</b>	<b>SYS BOX,6," 77-87 CHEVY/GMC</b>	
58X234X1012U	5/8 X 2 3/4 X 10 1/2 U-BOLT	4
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	2
58X4X10U	5/8 X 4 X 10 U-BOLT RD	1
58X314CTB	5/8 X 3 1/4 COARSE THREAD B	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168A</b>	<b>COMP BOX,6,"87-87 PKU</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X1212U	5/8 X 3 1/8 X 12 1/2 U-BOLT	4
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168A8</b>	<b>COMP BOX,6,"88-91 BLAZER,J</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X1212U	5/8 X 3 1/8 X 12 1/2 U-BOLT	4
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168AS</b>	<b>SYS BOX,6,"73-87GM PKUP,BL</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	4
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168AS8</b>	<b>SYS BOX,6,"88-91 1/2T BLAZ</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X1412U	5/8 X 3 3/8 X 14 1/2 U-BOLT	4
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168B</b>	<b>COMP BOX,6,"73-87 3/4 TON S</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X1412U	5/8 X 3 3/8 X 14 1/2 U-BOLT	4
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168B8</b>	<b>COMP BOX,6,"88-91 3/4 TON</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X1412U	5/8 X 3 3/8 X 14 1/2 U-BOLT	4
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168BS</b>	<b>SYS BOX,6,"73-87GM 3/4T PK</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X912U	5/8 X 3 3/8 X 9 1/2 U-BOLT	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168BS8</b>	<b>SYS BOX,6,"88-91 GMC 3/4TO</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X912U	5/8 X 3 3/8 X 9 1/2 U-BOLT	2
BE15	BRAKE LINE EXTENSIONS	2

Part#	Description	QTY
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C168C</b>	<b>COMP BOX,6,"77-87 CHEVY/GMC</b>	
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	2
58X4X10U	5/8 X 4 X 10 U-BOLT RD	1
58X258X1412U	5/8 X 2 5/8 X 14 1/2 U-BOLT	4
58X314CTB	5/8 X 3 1/4 COARSE THREAD B	2
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C180ASD8</b>	<b>SYS BOX,8,"88-91 GMC BLAZER,</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X11U	5/8 X 3 1/8 X 11 U-BOLT RD	4
RB20	2" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV8	HDWR BAG FOR 88-91 CHEVY/G	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C180BSD</b>	<b>SYS BOX,8,"73-87 GM 3/4TON P</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X318X11U	5/8 X 3 1/8 X 11 U-BOLT RD	4
RB20	2" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
BE15	BRAKE LINE EXTENSIONS	2
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C180BSD8</b>	<b>SYS BOX,8,"88-91 GMC 3/4 TO</b>	
58X318X712U	5/8 X 3 1/8 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X338X11U	5/8 X 3 3/8 X 11 U-BOLT RD	4
RB20	2" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C180CS</b>	<b>SYS BOX,8,"77-87 CHEVY/GMC 1</b>	
58X234X1012U	5/8 X 2 3/4 X 10 1/2 U-BOLT	4
58X318X912U	5/8 X 3 1/8 X 9 1/2 U-BOLT	2
58X4X10U	5/8 X 4 X 10 U-BOLT RD	1
58X314CTB	5/8 X 3 1/4 COARSE THREAD B	2
RB20	2" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C224AS</b>	<b>SYS BOX,2.5,"69-72 CHEVY/GM</b>	
58X234X712U	5/8 X 2 3/4 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X234X9U	5/8 X 2 3/4 X 9 U-BOLT SQ	4
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C225A</b>	<b>COMP BOX 2.5" 67-72 CHEVY 1</b>	
58X234X712U	5/8 X 2 3/4 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X234X9U	5/8 X 2 3/4 X 9 U-BOLT SQ	4
RB20	2" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C240A</b>	<b>COMP BOX,4," 67-72 CHEVY 1/2</b>	
58X234X712U	5/8 X 2 3/4 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X234X1012U	5/8 X 2 3/4 X 10 1/2 U-BOLT	4
RB35	3.5" REAR BLOCK	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C256</b>	<b>COMP BOX,2.2,"88-96 CHEVY/</b>	
C256-L	2" IFS GM DRVR SIDE A-ARM	1
C256-R	2" IFS GM PASS SIDE A-ARM	1
C256-DP	2" IFS GM DIFF BRKT PASS SI	1
C256-DDR	2" IFS GM DIFF DRVR SIDE RE	1
C256-DDFL	2" IFS GM DIFF DRVR FRT LEF	1
C256-DDFR	2" IFS GM DIFF DRVR FRT RIG	1
HB-C256	HDWR BAG FOR C256	1
I-C256	INSTRUCTIONS FOR C256/C2567	1
<b>C2567</b>	<b>COMP BOX,2.2,"97-98 CHEVY</b>	
C256-L	2" IFS GM DRVR SIDE A-ARM	1
C256-R	2" IFS GM PASS SIDE A-ARM	1
C256-DP	2" IFS GM DIFF BRKT PASS SI	1
C256-DDR	2" IFS GM DIFF DRVR SIDE RE	1
C256-DDFL-97	2" IFS GM DIFF DRVR SIDE 97	1
C256-DDFR-97	2" IFS GM PASS SIDE 97 ONLY	1
FBL97	FRONT BRAKE LINES, 88-98 GM	1
HB-C256	HDWR BAG FOR C256	1
I-C256	INSTRUCTIONS FOR C256/C2567	1
<b>C268A</b>	<b>COMP BOX,6,"67-72 PICKUP,B</b>	
58X234X712U	5/8 X 2 3/4 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X234X1212U	5/8 X 2 3/4 X 12 1/2 U-BOLT	4

Part#	Description	QTY
RB55	5.5" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C268AS</b>	<b>SYS BOX,6,"69-72CHEV PKUP,</b>	
58X234X712U	5/8 X 2 3/4 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X234X9U	5/8 X 2 3/4 X 9 U-BOLT SQ	4
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C280ASD</b>	<b>SYS BOX,8," 69-72 CHEV 3/4T,</b>	
58X234X712U	5/8 X 2 3/4 X 7 1/2 U-BOLT	3
58X358X914U	5/8 X 3 5/8 X 9 1/4 U-BOLT	1
58X234X1012U	5/8 X 2 3/4 X 10 1/2 U-BOLT	4
RB20	2" REAR BLOCK	2
BE15	BRAKE LINE EXTENSIONS	2
HB-CHEV	HDWR BAG: 67-87 CHEVY/GMC	1
IGM2468	INSTRUCTIONS: GM 2,4,6,8"	1
<b>C46</b>	<b>COMP BOX,6,"88-98 CHEVY/GMC</b>	
C46-CSA	CENTERLINK STAB ARM KIT	1
C46-2	FRT DIFF DROP BRKT DRVR	1
C46-3	LWR A-ARM REAR DROP BRKT	2
C46-4	REAR CROSSMEMBER	1
C46-5	FRT UPR CROSSMEMBER	1
C46-6	LOWER A-ARM FRT DROP BRKT	2
C46-7	FRT LWR CROSSMEMBER	1
C46-8	COMPRESSION STRUT BAR	2
C46-9	STRUT BAR REAR MOUNTING BRK	2
C46-10	TORSION BAR CROSSMEMBER DR	2
<b>C4626S</b>	<b>SYS BOX,6,"88-92CHEV/GMC PKU</b>	
C462	IDLER ARM SPACER KIT 88-92	1
FBL88	FRONT BRAKE LINES, 88-98 GM	1
C46-SP	DIFFERENTIAL SKID PLATE	1
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
<b>C4636</b>	<b>COMP BOX,6,"93-98CHEV/GMC PK</b>	
C463	IDLER ARM SPACER KIT 93 & U	1
FBL88	FRONT BRAKE LINES, 88-98 GM	1
C46-SP	DIFFERENTIAL SKID PLATE	1
RB45	4.5" REAR BLOCK	2
916X212X1312	1 U-BOLT WITH NUTS	4
<b>C4636S</b>	<b>SYS BOX,6,"93-98CHEV/GMC PKU</b>	
C463	IDLER ARM SPACER KIT 93 & U	1
FBL88	FRONT BRAKE LINES, 88-98 GM	1
C46-SP	DIFFERENTIAL SKID PLATE	1
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
<b>C466</b>	<b>COMP BOX,6,"88-98CHEV/GMC PK</b>	
C466-1	CENTER STEERING LINK	1
C466-2	FRT DIFF DROP BRKT PASS	1
C466-3	UPPER A-ARM DROP BRKT DRVR	1
C466-4	UPPER A-ARM DROP BRKT PASS	1
HB-C466	HDWR BOX FOR C466	1
I-C466	INSTR:88-98 IFS GM 4.5"6"	1
<b>C7361A</b>	<b>COMP BOX, 3" 07 GM 1500</b>	
C736L	3" 07 GM 1500, DRVR KNUCKLE	1
C736R	3" 07 GM 1500, PASS KNUCKLE	1
C736FCM-B	3.5"07-GM1500,FRONT X-MEMBR	1
C736RCM-B	3.5"07-GM1500,REAR X-MEMBER	1
H-BOX C7361A	HDWR BAG: C7361A COMP BOX	1
<b>C7361AR</b>	<b>COM BOX, 3"07 AUTO RIDE 07 GM</b>	
C735MS-S	07 GM 3.5" ALUM FRT SPACER	2
HB-716X2DES	HARDWARE BAG/ALUM SPCR KITS	1
10MMN	10 MM N/I LOCKNUT	6
38SAEW	3/8 SAE WASHER	6
C736RSE-D	C736,REAR SHOCK EXT, DRIVER	1
C736RSE-P	C736,REAR SHOCK EXT,PASSENG	1
HB-C736-RSE	HDWR BAG:C736 REAR SHOK EXT	1
CRLL375-S	REAR LEVELING LNK,AUTO-RIDE	2
<b>C7361PR</b>	<b>COM BOX:3"07 1500 P/U REAR</b>	
RB20	2" REAR BLOCK "FLAT"	2
916X212X1012	1 U-BOLT WITH NUTS	4
<b>C7361SR</b>	<b>COM BOX:3"07 1500 SUV REAR</b>	
CLL963-L	3"GM/CAD, LOWER LINK, REAR	2
RBSB322-B	3"GM/CAD,REAR BUMP STOP EXT	2
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
TJ90RS	9" WRANGLER TJ REAR COIL	2
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-C963-RBS	HDWR BAG:C963 REAR BUMP EXT	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
<b>C7361ST</b>	<b>COM BOX, 3" STRUT 07 GM</b>	
C735STS	3-3.5" 07 GM STRUT	2
10MMN	10 MM N/I LOCKNUT	4
38SAEW	3/8 SAE WASHER	4
<b>C7660SP</b>	<b>COM BOX,6,"SPCR 07-10 GM1500</b>	
C760MS-B	6"FRONT SPCR 07-09 GM 1500	2
HB-10MM/NFN	HDWR BAG: 10MM FLANGE NUTS	1
I-C766SP	INST SHEET: 6" 07-09 GM1500	1

All Installation Instructions Are Available On Line At Skyjacker.Com

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
<b>C7661A</b>	<b>COMP BOX,6" 07-10 GM 1500</b>	
C766L	6" 07 GM 1500, DRVR KNUCKLE	1
C766R	6" 07 GM 1500, PASS KNUCKLE	1
C7662FCM-B	6" 07>GM 1500 FRONT X-MEMBR	1
C7662RCM-B	6" 07>GM 1500 REAR X-MEMBER	1
C766SKD-S	07-10 GM 1500 DIFF SKD PLT	1
H-BOX C7661A	HDWR BOX: C7661A COMP BOX	1
<b>C7661PR</b>	<b>COMP BOX,REAR 07-10 GM1500</b>	
RB45	4.5" REAR BLOCK	2
916X212X1312	1 U-BOLT WITH NUTS	4
<b>C7661PRS</b>	<b>SYS BOX: 07 GM 1500 4X4 6"</b>	
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>C7661SR</b>	<b>COM BOX:6"07&gt;1500 SUV REAR</b>	
ARLBD-B	AVALANCHE REAR LK BRKT-DRVR	1
ARLBP-B	AVALANCHE REAR LK BRKT-PASS	1
ARBP42-B	AVALANCHE REAR BUMP STOP LR	2
C766RTB-B	07 GM 6" REAR TRK BAR BRKT	1
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
HB-C963RCAB	HDW BAG:C963 RR CONTROL BRK	1
HB-C963RBS	HDWR BAG:C963 RR BUMP STOPS	1
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-C766RTB	HDWR BAG:C766 REAR TRK BRKT	1
C50RS	GM 4-5" SUB,YUK,XK COIL-SGL	2
<b>C7661ST</b>	<b>COM BOX, 6" STRUT 07 GM</b>	
C760STS	6" 07 GM STRUT	2
10MMN	10 MM NI LOCKNUT	4
3BSAEW	3/8 SAE WASHER	4
I-C766	INST SHEET: 07 6" GM 1500	1
<b>C9331</b>	<b>COM BOX: 3"99-06 GM1500 P/U</b>	
C963L	3" 1/2TON 6LUG,LEFT KKNLE	1
C963R	3" 1/2TON 6LUG,RIGHT KKNLE	1
C963FCM-S	3"GM/CAD FRONT CROSSMEMBER	1
H-BOX C9331	HDWR BOX: C9331 COMP BOX	1
<b>C933PA</b>	<b>COM BOX,3"ESCA&amp;EXT,DENALI</b>	
C963L	3" 1/2TON 6LUG,LEFT KKNLE	1
C963R	3" 1/2TON 6LUG,RIGHT KKNLE	1
C963FCM-S	3"GM/CAD FRONT CROSSMEMBER	1
C963RCM1-D	3"GM/CAD REAR DRIVE CROSSME	1
C963RCM2-P	3"GM/CAD REAR PASS CROSSMEM	1
C963TBD-C	3"GM AVALCHE,TAH,SUB,ESCALA	2
C963PDB-B	3"GM/CAD DIFF,PASS UPPER	1
C963CVS-D	C963/3"CV SPCR,DRIVER,1.99"	1
C963CVS-P	C963/3"CV SPCR,PASSEN,813"	1
C963FSB-B	3"GM/CAD,FRT SHK EXT,AUTORD	2
BSS275-B	BUMP STOP SPACER,2.75" TALL	2
HB-C963-CVS	HDWR BAG:3",C963 CV SPACERS	1
HB-C963-CM	HDWR BAG:3",C963 CROSS-MEMB	1
HB-C963-FSE	HDWR BAG:3"FRT SHK EXT,AUTO	1
HB-C963-TBC	HDWR BAG:3"TORSION,CAD,DENA	1
HB-C963-SBBS	HDWR BAG:3"GM/CAD SWAY,BUMP	1
HB-C963-DB	HDWR BAG:3",C963 DIFF BRKTS	1
I-C933	INST SHEET:3"GM,ESC,SUB,YUK	1
<b>C933PAR</b>	<b>COM BOX,3"00-05ESCAL,DENALI</b>	
CLL963-L	3"GM/CAD, LOWER LINK, REAR	2
RBSB322-B	3"GM/CAD,REAR BUMP STOP EXT	2
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
CRLL375-S	REAR LEVELING LNK,AUTO-RIDE	2
C963RSE-D	3"GM/CAD,RR SHOCK EXT,DRIVE	1
C963RSE-P	3"GM/CAD,RR SHOCK EXT,PASSE	1
TJ90RS	9" WRANGLER TJ REAR COIL	2
HB-C963-RBS	HDWR BAG:C963 REAR BUMP EXT	1
HB-C963-RSE	HDWR BAG:C963 REAR SHOC EXT	1
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
<b>C933R</b>	<b>COM BOX,3"1500 AVAL,TAH,YUK</b>	
CLL963-L	3"GM/CAD, LOWER LINK, REAR	2
C963TBD-C	3"GM AVALCHE,TAH,SUB,ESCALA	2
RBSB322-B	3"GM/CAD,REAR BUMP STOP EXT	2
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
TJ90RS	9" WRANGLER TJ REAR COIL	2
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-C963-RBS	HDWR BAG:C963 REAR BUMP EXT	1
HB-C963-TBC	HDWR BAG:3"TORSION,CAD,DENA	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
<b>C9341</b>	<b>COM BOX ,3"02-05 AVALANC 15</b>	
C963L	3" 1/2TON 6LUG,LEFT KKNLE	1
C963R	3" 1/2TON 6LUG,RIGHT KKNLE	1
C963FCM-S	3"GM/CAD FRONT CROSSMEMBER	1
C963RCM1-D	3"GM/CAD REAR DRIVE CROSSME	1
C963RCM2-P	3"GM/CAD REAR PASS CROSSMEM	1
C963PDB-B	3"GM/CAD DIFF,PASS UPPER	1
C963CVS-D	C963/3"CV SPCR,DRIVER,1.99"	1
C963CVS-P	C963/3"CV SPCR,PASSEN,813"	1
C963TBD-C	3"GM AVALCHE,TAH,SUB,ESCALA	2
BSS275-B	BUMP STOP SPACER,2.75" TALL	2
HB-C963-CVS	HDWR BAG:3",C963 CV SPACERS	1

Part#	Description	QTY
HB-C963-CM	HDWR BAG:3",C963 CROSS-MEMB	1
HB-C963-SBBS	HDWR BAG:3"GM/CAD SWAY,BUMP	1
HB-C963-DB	HDWR BAG:3",C963 DIFF BRKTS	1
HB-C963-TBC	HDWR BAG:3"TORSION,CAD,DENA	1
I-C933	INST SHEET:3"GM,ESC,SUB,YUK	1
<b>C934PA</b>	<b>COM BOX,3"ESCA ESVDEN XL</b>	
C963L	3" 1/2TON 6LUG,LEFT KKNLE	1
C963R	3" 1/2TON 6LUG,RIGHT KKNLE	1
C963FCM-S	3"GM/CAD FRONT CROSSMEMBER	1
C963RCM1-D	3"GM/CAD REAR DRIVE CROSSME	1
C963RCM2-P	3"GM/CAD REAR PASS CROSSMEM	1
C963TBD-C	3"GM AVALCHE,TAH,SUB,ESCALA	2
C963PDB-B	3"GM/CAD DIFF,PASS UPPER	1
C963CVS-D	C963/3"CV SPCR,DRIVER,1.99"	1
C963CVS-P	C963/3"CV SPCR,PASSEN,813"	1
C963FSB-B	3"GM/CAD,FRT SHK EXT,AUTORD	2
BSS275-B	BUMP STOP SPACER,2.75" TALL	2
HB-C963-CVS	HDWR BAG:3",C963 CV SPACERS	1
HB-C963-CM	HDWR BAG:3",C963 CROSS-MEMB	1
HB-C963-FSE	HDWR BAG:3"FRT SHK EXT,AUTO	1
HB-C963-TBC	HDWR BAG:3"TORSION,CAD,DENA	1
HB-C963-SBBS	HDWR BAG:3"GM/CAD SWAY,BUMP	1
HB-C963-DB	HDWR BAG:3",C963 DIFF BRKTS	1
I-C933	INST SHEET:3"GM,ESC,SUB,YUK	1
<b>C934PAR</b>	<b>COM BOX ,3"00-05CAD ESVDEN</b>	
CLL963-L	3"GM/CAD, LOWER LINK, REAR	2
RBSB322-B	3"GM/CAD,REAR BUMP STOP EXT	2
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
CRLL375-S	REAR LEVELING LNK,AUTO-RIDE	2
C963RSE-D	3"GM/CAD,RR SHOCK EXT,DRIVE	1
C963RSE-P	3"GM/CAD,RR SHOCK EXT,PASSE	1
C25RS	2-2.5"REAR COIL SUB,YUK-XL	2
HB-C963-RBS	HDWR BAG:C963 REAR BUMP EXT	1
HB-C963-RSE	HDWR BAG:C963 REAR SHOC EXT	1
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
<b>C934R</b>	<b>COM BOX,3"1500 SUB,YUK XL</b>	
CLL963-L	3"GM/CAD, LOWER LINK, REAR	2
C963TBD-C	3"GM AVALCHE,TAH,SUB,ESCALA	2
RBSB322-B	3"GM/CAD,REAR BUMP STOP EXT	2
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
C25RS	2-2.5"REAR COIL SUB,YUK-XL	2
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-C963-RBS	HDWR BAG:C963 REAR BUMP EXT	1
HB-C963-TBC	HDWR BAG:3"TORSION,CAD,DENA	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
<b>C9381</b>	<b>COM BOX,3" 01-10 GMC 2500HD</b>	
C938L	3" 2500HD 4X4,LEFT KKNLE	1
C938R	3" 2500HD 4X4,RIGHT KKNLE	1
C9382FCM-S	01-09 GM2500 FRONT X-MEMBER	1
C9382RCM-S	01-09 GM 2500 REAR X-MEMBER	1
H-BOX C9381	HDWR BOX: C9381 COMP BOX	1
<b>C9631A</b>	<b>COM BOX ,6"02&gt;1500-TAH,AVA,</b>	
C966L	GM 1/2TON 6 LUG LEFT KKNLE	1
C966R	GM 1/2TON 6 LUG RIGHT KKNLE	1
C96AVTBD-S	CHEVY AVAL TOR BAR DROP BRK	2
HB-C963-TBB	HDWR BAG:C963 TORSION BRKTS	1
I-C9631	INST SHEET:C9631 AV,TA,YU,S	1
<b>C9631B</b>	<b>COM BOX ,6"02&gt;1500-TAH,AVA,</b>	
C9662FCM-B	99-06 GM1500 FRONT X-MEMBER	1
C9662RCM-B	99-06 GM 1500 REAR X-MEMBER	1
C966PS-S	GM 1/2TON DIFF DROP BRKT PA	1
C9662BSB-D	99-06 GM1500 DRV BMPSTP BRK	1
C9662BSB-P	99-06 GM1500 PAS BMPSTP BRK	1
C9662SKD-S	99-06 GM 1500 DIFF SKD PLT	1
C966CVS-D	C966 AXLE SPCR,DRIV,3.35"LG	1
C966CVS-P	C966 AXLE SPCR,PASS 1.175"W	1
C9662FDB-B	99-06 GM1500 FRT DIFF BRKT	1
ARBP42-B	AVALANCHE REAR BUMP STOP LR	2
ARLBD-B	AVALANCHE REAR LK BRKT-DRVR	1
ARLBP-B	AVALANCHE REAR LK BRKT-PASS	1
GM SUV REAR TRACK BAR BRKT	GM SUV REAR TRACK BAR BRKT	1
SBE506-L	REAR,SWAY BAR END LK,SINGLE	2
HB-C963RCAB	HDW BAG:C963 RR CONTROL BRK	1
HB-C963RBS	HDWR BAG:C963 RR BUMP STOPS	1
HB-RSBL963	HDWR BAG:REAR END LKS/C9631	1
HB-C963BLE	HDWR BAG:RR BRK LNK EXT,C963	1
HB-C9662-CM	HDWR BAG: X-MEMBER GM 1500	1
HB-C966-CVS	HDWR BAG/CV SPACERS GM 1/2	1
HB-H268-RTBB	HDWR BAG:H2 RR TRK BAR BRKT	1
HB-C9662FDB	HDWR BAG:C9662 FRT DIFF BRK	1
HB-SKD	HDWR BAG: SKID PLATE	1
SBE1125	FRONT,OE SWAY BAR ENDLINKS	1
<b>C9651HA</b>	<b>COM BOX,6" 01-031500HD&amp;2500</b>	
GM256-LB	GM 2500HD 6" LEFT/DRV KNUC	1
GM256-RB	GM 2500HD 6"RIGHT/PASS KNUC	1
C9615TBD-S	TORSION DROP BR,1500HD/2500	2

Part#	Description	QTY
HB-C965H-TBB	HDWR BAG:1500HD TORSION BRK	1
I-C965	INS:6"01-03CH/GMC1500HD4X4	1
<b>C9661A-NSP</b>	<b>COM BX,6"99-06GMC,NO SKD PL</b>	
C966L	GM 1/2TON 6 LUG LEFT KKNLE	1
C966R	GM 1/2TON 6 LUG RIGHT KKNLE	1
C966TBD-S	GM 1/2TON TORSION BAR DROP	2
HB-C966TBBNSP	HDWR BAG: C966-NSP COM BOX	1
<b>C9662B</b>	<b>COMP BOX: 6" 99-06 GM K1500</b>	
C9662FCM-B	99-06 GM1500 FRONT X-MEMBER	1
C9662RCM-B	99-06 GM 1500 REAR X-MEMBER	1
C9662BSB-D	99-06 GM1500 DRV BMPSTP BRK	1
C9662BSB-P	99-06 GM1500 PAS BMPSTP BRK	1
C9662SKD-S	99-06 GM 1500 DIFF SKD PLT	1
R1115S	SGL ADD-A-LEAF NO TIE BOLT	2
HB-BOX C9662B	HDWR BOX: C9662B COMP BOX	1
I-C966	INSTR-99-02 GM 1/2TN 4WD 6"	1
<b>C9662BS</b>	<b>COMP BOX: 6" 99-06 GM K1500</b>	
C9662FCM-B	99-06 GM1500 FRONT X-MEMBER	1
C9662RCM-B	99-06 GM 1500 REAR X-MEMBER	1
C9662BSB-D	99-06 GM1500 DRV BMPSTP BRK	1
C9662BSB-P	99-06 GM1500 PAS BMPSTP BRK	1
C9662SKD-S	99-06 GM 1500 DIFF SKD PLT	1
H-BOX C9662BS	HDWR BOX: C9662BS COMP BOX	1
I-C966	INSTR-99-02 GM 1/2TN 4WD 6"	1
<b>C9671A</b>	<b>COM BOX ,6"02&gt;2500-TAH,AVA,</b>	
GM256-LB	GM 2500HD 6" LEFT/DRV KNUC	1
GM256-RB	GM 2500HD 6"RIGHT/PASS KNUC	1
C967TBD-S	TORS DROP BRKT,2500 AVALANC	2
HB-C967-TBB	HDWR BAG:C967 TORSION BRKTS	1
I-C9671	INST SHEET:C9671 AV,TA,YU,S	1
<b>C9671B</b>	<b>COM BOX ,6"02&gt;2500-TAH,AVA,</b>	
C9682FCM-B	01-09 GM2500 FRONT X-MEMBER	1
C9682RCM-B	01-09 GM2500 REAR X-MEMBER	1
C9682FDB-B	01-09 GM2500 FRT DIFF BRKT	1
C9682PS-S	01-09 GM1500 PAS DIFF BRKT	1
C9682BSB-D	01-09 GM2500 DRV BMPSTP BRK	1
C9682BSB-P	01-09 GM2500 PAS BMPSTP BRK	1
C9682SKD-S	01-09 GM 2500HD DIFF SKDPLT	1
C968CVS-D	CV SPACER,2500HD,3.063"WIDE	1
C968CVS-P	CV SPACER,2500HD,15/16"WIDE	1
CBL2500	CARR BRG LWRG KIT, 2500 HD	1
RB45	4.5" REAR BLOCK	2
58X234X1212U	5/8 X 2 3/4 X 12 1/2 U-BOLT	4
HB-C9682-CM	HDWR BAG: X-MEMBER GM 2500	1
HB-C968-CVS	HDWR BAR/CV SPACERS C968	1
HB-C9682FDB	HDWR BAG:C9682 FRT DIFF BRK	1
HB-C968-SBL	HDWR BAG/SWAY BAR-MISC C96	1
HB-C968-SKD	HDWR BAG: C968 DIF SKID PLT	1
HB-58	HDWR BAG/ 8 - 5/8" NYLON L	1
<b>C9681A-NSP</b>	<b>COMP BOX,6" 01-10 GM 2500HD</b>	
GM256-LB	GM 2500HD 6" LEFT/DRV KNUC	1
GM256-RB	GM 2500HD 6"RIGHT/PASS KNUC	1
C968TBD-S	GM 3/4TON TORSION DROP BRKT	2
HB-C968-TBB	HDWR BAG/TORSION BRKTS C96	1
<b>C9682</b>	<b>COM BOX ,CLASS II,01 &gt; 2500</b>	
MS968	MULTIPLE FRT SHK KIT,2500HD	1
LCS968	LATERAL STRUT BARS,C968 KIT	1
<b>C9682B</b>	<b>COM BX:6"01-09GM2500/2500HD</b>	
C9682FCM-B	01-09 GM2500 FRONT X-MEMBER	1
C9682RCM-B	01-09 GM2500 REAR X-MEMBER	1
C9682BSB-D	01-09 GM2500 DRV BMPSTP BRK	1
C9682BSB-P	01-09 GM2500 PAS BMPSTP BRK	1
C9682SKD-S	01-09 GM 2500HD DIFF SKDPLT	1
H-BOX C9682B	HDWR BOX: C9682B COMP BOX	1
I-C9681	INST SHEET FOR C968 2500HD	1
<b>C9682BS</b>	<b>COM BX:6"01-09GM2500/2500HD</b>	
C9682FCM-B	01-09 GM2500 FRONT X-MEMBER	1
C9682RCM-B	01-09 GM2500 REAR X-MEMBER	1
C9682BSB-D	01-09 GM2500 DRV BMPSTP BRK	1
C9682BSB-P	01-09 GM2500 PAS BMPSTP BRK	1
C9682SKD-S	01-09 GM 2500HD DIFF SKDPLT	1
HB-C9682BS	HDWR BOX: C9682BS COMP BOX	1
I-C9681	INST SHEET FOR C968 2500HD	1
<b>CC401</b>	<b>COM BOX,4"04-08COLORADO/CAN</b>	
CC49L	09 COLORADO LEFT KNUCKLE	1
CC49R	09 COLORADO RIGHT KNUCKLE	1
CC42FCM-S	4" COLORADO FRONT X-MEMBER	1
CC42RCM-S	4" COLORADO REAR X-MEMBER	1
H-BOX CC401	HDWR BOX: CC401 COMP BOX	1
<b>CC409</b>	<b>COM BOX:04-10 COLO/CAN 4WD</b>	
CC49L	09 COLORADO LEFT KNUCKLE	1
CC49R	09 COLORADO RIGHT KNUCKLE	1
CC42FCM-S	4" COLORADO FRONT X-MEMBER	1
CC42RCM-S	4" COLORADO REAR X-MEMBER	1
H-BOX CC409	HDWR BOX: CC409 COMP BOX	1
<b>CC421</b>	<b>COM BOX,4"04-08COLO/CAN 2WD</b>	
CC49L	09 COLORADO LEFT KNUCKLE	1

All Installation Instructions Are available On Line At [Skyjacker.Com](http://Skyjacker.Com)

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
CC49R	09 COLORADO RIGHT KNUCKLE	1
CC42FCM-S	4" COLORADO FRONT X-MEMBER	1
CC42RCM-S	4" COLORADO REAR X-MEMBER	1
CC40TBD-L	4"COLO,TORSION BRKT, DRIVER	1
CC40TBD-R	4"COLO,TORSION BRKT,PASS	1
CC40RCMB-S	4"COLO,REAR CROSSMEMBER BUS	2
BSE40-S	BUMP STOP, 4" COLORADO	2
FBL48	FRT BRK LINES F150,COLO,CAN	1
HB-CC40FCM	HDWR BAG:CC40 FRONT CROSSME	1
HB-CC40RCM	HDWR BAG:CC40 REAR CROSSMEM	1
HB-CC40TBB	HDWR BAG:CC40 TORSION BRKTS	1
HB-CC40SBLR	HDWR BAG:CC40 SWAY BAR LKNS	1
HB-CC42BSS	HDWR BAG:CC42 BUMP,STG KNKL	1
HB-CC40RBLU	HDWR BAG:BRK LINE BRKT/UBLT	1
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	4
HB-CC421	TRANS SPACER / DEGREE SHIMS	1
I-CC40	INST SHEET:4"COLORADO/CANYN	1
<b>CC429</b>	<b>COM BOX,4"09-10COLO/CAN 2WD</b>	
CC49L	09 COLORADO LEFT KNUCKLE	1
CC49R	09 COLORADO RIGHT KNUCKLE	1
CC42FCM-S	4" COLORADO FRONT X-MEMBER	1
CC42RCM-S	4" COLORADO REAR X-MEMBER	1
H-BOX CC429	HDWR BOX: CC429 COMP BOX	1
<b>COF65</b>	<b>6"COIL-OVERS,00-03 F250/350</b>	
SKY2525-S	SKY 2.5"O/C SHK 25.425 EXT	2
DSK45S	DODGE PLATINUM COIL, 4.5" V	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	8
I-PSA	INST:PLATINUM COILOVER ASSY	1
I-FZ9468-W	WARNING PG:4,6,8"ZLINK F250	1
<b>COF85</b>	<b>8"COIL-OVERS,00-03 F250/350</b>	
SKDGE45-S	COIL-OVER PLATINUM SHOCK 4.	2
DSK75S	DODGE PLATINUM COIL, 7" V10	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	8
I-PSA	INST:PLATINUM COILOVER ASSY	1
I-FZ9468-W	WARNING PG:4,6,8"ZLINK F250	1
<b>D240A</b>	<b>COMP BOX,2-4" 61-74 DGE PKU</b>	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X212X1312U	9/16 X 2 1/2 X 13 1/2 U-BOL	4
RB20	2" REAR BLOCK	2
HB-DA	HDWR BAG FOR DODGE A KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240B</b>	<b>COMP BOX,2-4" 74-5-93 DGE P</b>	
916X212X1312U	9/16 X 2 1/2 X 13 1/2 U-BOL	4
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
RB20	2" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240BA</b>	<b>COMP BOX,2-4" 74.5-93 DGE P</b>	
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X3CTB	9/16 X 3 COARSE THREAD BOLT	2
916FTN	9/16-18 NYLON INSERT LOCKNU	6
SE12D	SPRING BUSH KIT 61-93 DODGE	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240BS</b>	<b>SYS BOX,2-4" 74.5-93 DGE PK</b>	
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240CD</b>	<b>COMP BOX,2-4" 87-91 DODGE C</b>	
916X212X1312U	9/16 X 2 1/2 X 13 1/2 U-BOL	4
916X4X912U	9/16 X 4 X 9 1/2 U-BOLT RD	1
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	2
RB20	2" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240CDA</b>	<b>COMP BOX,2-4" 87-93 DODGE C</b>	
UDCF	U-BOLT KIT/FRONT DODGE CUMM	1
SE12D	SPRING BUSH KIT 61-93 DODGE	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240CDS</b>	<b>SYS BOX,2-4" 87-91 DODGE C</b>	
UDCF	U-BOLT KIT/FRONT DODGE CUMM	1
UDWR	4 U-BOLTS 916X212X7 SQ	1
SE12D	SPRING BUSH KIT 61-93 DODGE	1
SE17D	SPRING EYE BUSH DODGE CUMMI	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D240CS</b>	<b>SYS BOX,2-4" 74.5-93 1 TON</b>	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X4X912U	9/16 X 4 X 9 1/2 U-BOLT RD	1
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D251</b>	<b>COMP BOX,2.5"94-99 DODGE CL</b>	
R372S	SGL DODGE V10/C ADD-A-LEAF	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	1

Part#	Description	QTY
DLL23-L	DODGE LWR LINK 2-3"	2
BP40S	BUMP STOP DODGE RAM 2-3"	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
I-D2530	INSTRUCTIONS: DGE RAM 2-3"	1
<b>D2512</b>	<b>COMP BOX,2.5"00-01 DODGE CL</b>	
R372S	SGL DODGE V10/C ADD-A-LEAF	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	1
DLL23-L	DODGE LWR LINK 2-3"	2
BP40S	BUMP STOP DODGE RAM 2-3"	2
HB-LL1752	HDWR BAG/DODGE LWR LINK 2K	1
I-D2530	INSTRUCTIONS: DGE RAM 2-3"	1
<b>D2513</b>	<b>COM BOX ,2.5"03 DODGE,V10/C</b>	
R332S	ADD-A-LEAF,2003 DGE V10/CUM	2
H-BOX D2513	HDWR BOX: D2513 COMP BOX	1
<b>D2601A-NSP</b>	<b>COMP BOX,6" 02 DODGE 1500 4</b>	
D296L	D296, LEFT STEERING KNUCKLE	1
D296R	D296, RIGHT STEERING KNUCKL	1
SBE5069-L	SWAY BAR LINK,D260,90DEGREE	2
HB-D260-SBL	HDWR BAG:SWAY BAR LKS D260	1
HB-D260-A	HDWR BAG:D260 KNKLS/MISC	1
I-D260	INST SHEET:6" 2002 DGE 1500	1
<b>D2601B</b>	<b>COMP BOX ,6"02 DODGE 1500 4</b>	
D260FCM-S	DODGE 02,FRONT CROSSMEMBER	1
D260RCM-S	DODGE 02,REAR CROSSMEMBER	1
H-BOX D2601B	HDWR BOX: D2601B COMP BOX	1
<b>D2601BS</b>	<b>SYS BOX,6"02 DODGE 1500 4X4</b>	
D260FCM-S	DODGE 02,FRONT CROSSMEMBER	1
D260RCM-S	DODGE 02,REAR CROSSMEMBER	1
H-BOX D2601BS	HDWR BOX: D2601BS COMP BOX	1
<b>D301</b>	<b>COMP BOX,3" 94-99 DODGE CLA</b>	
R222S	SGL DODGE RAM 1500 2" ADD-A	2
3806	3/8 X 6" TIE BOLTS, PR W/NU	1
DLL23-L	DODGE LWR LINK 2-3"	2
BP40S	BUMP STOP DODGE RAM 2-3"	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
I-D2530	INSTRUCTIONS: DGE RAM 2-3"	1
<b>D3012</b>	<b>COMP BOX,3" 00-01 DODGE CL</b>	
R222S	SGL DODGE RAM 1500 2" ADD-A	2
3806	3/8 X 6" TIE BOLTS, PR W/NU	1
DLL23-L	DODGE LWR LINK 2-3"	2
BP40S	BUMP STOP DODGE RAM 2-3"	2
HB-LL1752	HDWR BAG/DODGE LWR LINK 2K	1
I-D2530	INSTRUCTIONS: DGE RAM 2-3"	1
<b>D301S</b>	<b>SYS BOX,3" 94-99 DODGE CLAS</b>	
916X212X834U	9/16 X 2 1/2 X 8 3/4 U-BOLT	4
DLL23-L	DODGE LWR LINK 2-3"	2
BP40S	BUMP STOP DODGE RAM 2-3"	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
I-D2530	INSTRUCTIONS: DGE RAM 2-3"	1
<b>D302S</b>	<b>SYS BOX,3"94-01 DODGE CLASS</b>	
916X212X834U	9/16 X 2 1/2 X 8 3/4 U-BOLT	4
DLL23-L	DODGE LWR LINK 2-3"	2
DUL25-L	DODGE UPR LINK 2-5" LIFT	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
HB-DUL23	HDWR BAG/DODGE UPR LINKS 2	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
BP40S	BUMP STOP DODGE RAM 2-3"	2
DSP2345	DODGE LWR LINK SKID PLATES	1
DS390	DUAL SHOCK KIT NEW DODGE RA	1
I-D2530	INSTRUCTIONS: DGE RAM 2-3"	1
<b>D400BR</b>	<b>COMP BOX, 4" 74.5-93 RAMCH/</b>	
916X212X1512U	9/16 X 2 1/2 X 15 1/2 U-BOL	4
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
RB35	3.5" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D451</b>	<b>COMP BOX,4.5"94-01 DODGE CL</b>	
R370S	SINGLE DODGE V10 ADD-A-LEAF	2
WS430S-17/32	4 DEGREE 3"WIDE DRILL 17/32	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	1
VH10	VENT HOSE 5/16" X 18 3/4"	1
916X318X1312U	9/16 X 3 1/8 X 13 1/2 U-BOL	4
7017WR	WHITE DODGE RAM STAB W/RED	1
<b>D4513</b>	<b>COM BOX 5" 03-07 DODGE 2500</b>	
R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2
H-BOX D4513	HDWR BOX: D4513 COMP BOX	1
<b>D4513H</b>	<b>COM BOX ,4.5"03&gt;DGE 2500,TO</b>	
R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2
WSP334S	WEDGE SHIM PLATE FOR R334S	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	2
58X4X16U	5/8 X 4 X 16 UBOLT/ROUND	4
7013	OEM STABILIZER,03 DODGE	1
HB-58	HDWR BAG/ 8 - 5/8" NYLON L	1
<b>D4513M</b>	<b>COM BOX,4.5-5.5 05&gt;DGE MEGA</b>	
R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2

Part#	Description	QTY
H-BOX D4513M	HDWR BOX: FOR D4513M	1
<b>D4513S</b>	<b>SYS BOX ,5"2003 DODGE 25004</b>	
916X312X11U	9/16 X 3 1/2 X 11 U-BOLT RD	4
7013	OEM STABILIZER,03 DODGE	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>D451H</b>	<b>COM BOX,4.5"94-01 DGE CLS I</b>	
CHEVY BOX		1
R370S	SINGLE DODGE V10 ADD-A-LEAF	2
WS430S-17/32	4 DEGREE 3"WIDE DRILL 17/32	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	1
VH10	VENT HOSE 5/16" X 18 3/4"	1
58X318X1612	5/8 X 3 1/8 X 16 1/2 U-BOLT	4
7017WR	WHITE DODGE RAM STAB W/RED	1
<b>D451S</b>	<b>SYS BOX,4.5"94-01 DODGE CLA</b>	
VH10	VENT HOSE 5/16" X 18 3/4"	1
916X318X1312U	9/16 X 3 1/8 X 13 1/2 U-BOL	4
7017	OEM STABILIZER W/RED BOOT	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>D452</b>	<b>COMP BOX,4.5" 94-01 DODGE C</b>	
7017WR	WHITE DODGE RAM STAB W/RED	1
R370S	SINGLE DODGE V10 ADD-A-LEAF	2
WS430S-17/32	4 DEGREE 3"WIDE DRILL 17/32	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	1
VH10	VENT HOSE 5/16" X 18 3/4"	1
916X318X1312U	9/16 X 3 1/8 X 13 1/2 U-BOL	4
DSP2345	DODGE LWR LINK SKID PLATES	1
DS390	DUAL SHOCK KIT NEW DODGE RA	1
<b>D4523</b>	<b>COM BOX ,CLII 5"03 DODGE 25</b>	
R334S	ADD-A-LEAF,2003 DGE 3/4 4"	2
WSP334S	WEDGE SHIM PLATE FOR R334S	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	2
916X312X11U	9/16 X 3 1/2 X 11 U-BOLT RD	4
7013	OEM STABILIZER,03 DODGE	1
DS393	FRT DUAL SHK KIT,03DGE 2500	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>D4523S</b>	<b>SYS BOX ,CLII 5"03 DODGE 25</b>	
916X312X11U	9/16 X 3 1/2 X 11 U-BOLT RD	4
7013	OEM STABILIZER,03 DODGE	1
DS393	FRT DUAL SHK KIT,03DGE 2500	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>D452H</b>	<b>COMP BOX,4.5"94-01 DGE CLII</b>	
CHEVY BOX		1
R370S	SINGLE DODGE V10 ADD-A-LEAF	2
WS430S-17/32	4 DEGREE 3"WIDE DRILL 17/32	2
1206	1/2 X 6 TIE BOLTS PR W/NUTS	1
VH10	VENT HOSE 5/16" X 18 3/4"	1
58X318X1612	5/8 X 3 1/8 X 16 1/2 U-BOLT	4
7017WR	WHITE DODGE RAM STAB W/RED	1
DSP2345	DODGE LWR LINK SKID PLATES	1
DS390	DUAL SHOCK KIT NEW DODGE RA	1
<b>D452S</b>	<b>SYS BOX ,CLII 5"03 DODGE C</b>	
7017WR	WHITE DODGE RAM STAB W/RED	1
VH10	VENT HOSE 5/16" X 18 3/4"	1
916X318X1312U	9/16 X 3 1/8 X 13 1/2 U-BOL	4
DSP2345	DODGE LWR LINK SKID PLATES	1
DS390	DUAL SHOCK KIT NEW DODGE RA	1
<b>D4550</b>	<b>COMP BOX,4.5-5"94-01 DODGE</b>	
DUL25-L	DODGE UPR LINK 2-5" LIFT	2
DLL45-L	DODGE LWR LINK 4-5"	2
DULRB-L	DODGE UPR LINK RELOC BRKT L	1
DULRB-R	DODGE UPR LINK RELOC BRKT R	1
DTB45-B	DODGE TRK BAR DROP BRKT 4-5	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA300	DODGE RAM PITMAN ARM, 94-99	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4550-LK	HDWR BAG/ D45 & D50 LINKS	1
HB-D4550-BB	HDWR BAG/ D45 & D50 BRK BL	1
HB-D4550-BL	HDWR BAG/ D45 & D50 BRAKE	1
HB-D4550-TB	HDWR BAG/ D45 & D50 TRK BAR	1
I-D4550	INSTRUCTIONS: DGE RAM 4-5"	1
<b>D4550-SX</b>	<b>COMP BOX,4.5-5"94-01 DODGE,</b>	
DUL25-SX	DODGE UPR LINK 2-5" SGL FLE	1
DLL45-SX	DODGE LWR LINKS 4-5" SGL FL	1
DULRB-L	DODGE UPR LINK RELOC BRKT L	1
DULRB-R	DODGE UPR LINK RELOC BRKT R	1
DTB45-B	DODGE TRK BAR DROP BRKT 4-5	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA300	DODGE RAM PITMAN ARM, 94-99	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4550-BB	HDWR BAG/ D45 & D50 BRK BL	1
HB-D4550-BL	HDWR BAG/ D45 & D50 BRAKE	1
HB-D4550-TB	HDWR BAG/ D45 & D50 TRK BAR	1
I-D4550	INSTRUCTIONS: DGE RAM 4-5"	1
<b>D45510</b>	<b>COM BOX: 5" 10 DGE 2500 4WD</b>	
DUL253-L	03 DGE UPPER LINK 2-5"LIFT	2

All Installation Instructions Are Available On Line At Skyjacker.Com



# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
DLL45-L	DODGE LWR LINK 4-5"	2
DULRB3-B	03 DGE UPPER LINK RELOC BRK	2
DTB50-B	10 DGE TRK BAR DROP BRKT,5"	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA309	2009 DODGE DROP PITMAN ARM	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4513-BL	HDWR BAG/ BRAKE LINE BRKTS	1
HB-D4513-ULB	HDWR BAG:UPR LK BRKTS/SBL20	1
HB-D45510-LK	HDWR BAG:5"2010 DGE LWR LKS	1
HB-DTB50-TB	HDWR BAG: DTB50 TRK BAR BRK	1
I-D4519	INSTRUCTION SHEET: D45529	1
<b>D4552</b>	<b>COMP BOX,4.5-5" 00-01 DODGE</b>	
DUL25-L	DODGE UPR LINK 2-5" LIFT	2
DLL45-L	DODGE LWR LINK 4-5"	2
DULRB-L2K	DODGE UPR LINK RELOC BRKT L	1
DULRB-R2K	DODGE UPR LINK RELOC BRKT R	1
DTB45-B	DODGE TRK BAR DROP BRKT 4-5	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA309	DODGE RAM PITMAN ARM 2000-U	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4552-LK	HDWR BAG/4-5" 2000 DODGE L	1
HB-D4550-BB	HDWR BAG/ D45 & D50 BRK BL	1
HB-D4550-BL	HDWR BAG/ D45 & D50 BRAKE	1
HB-D4550-TB	HDWR BAG/ D45 & D50 TRK BAR	1
I-D4550	INSTRUCTIONS: DGE RAM 4-5"	1
<b>D45523</b>	<b>COM BOX,5" 03-08 DODGE 2500</b>	
DUL253-L	03 DGE UPPER LINK 2-5" LIFT	2
DLL45-L	DODGE LWR LINK 4-5"	2
DULRB3-B	03 DGE UPPER LINK RELOC BRK	2
DTB53-B	03 DGE TRK BAR DROP BRKT,5"	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA303	2003 DODGE DROP PITMAN ARM	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4552-LK	HDWR BAG/4-5" 2000 DODGE L	1
HB-D4513-ULB	HDWR BAG:UPR LK BRKTS/SBL20	1
HB-D4513-BL	HDWR BAG/ BRAKE LINE BRKTS	1
HB-DTB53-TB	HDWR BAG FOR DTB53	1
I-D4513	INSTR:03DGE 3/4 & 1 TN 5"	1
<b>D45529</b>	<b>COM BOX,5" 09 DGE 2500 4WD</b>	
DUL253-L	03 DGE UPPER LINK 2-5" LIFT	2
DLL45-L	DODGE LWR LINK 4-5"	2
DULRB3-B	03 DGE UPPER LINK RELOC BRK	2
DTB53-B	03 DGE TRK BAR DROP BRKT,5"	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA309	2009 DODGE DROP PITMAN ARM	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4510-LK	HDWR BAG: 5"2010 DGE LWR LK	1
HB-D4552-LK	HDWR BAG/4-5" 2000 DODGE L	1
HB-D4513-ULB	HDWR BAG:UPR LK BRKTS/SBL20	1
HB-D4513-BL	HDWR BAG/ BRAKE LINE BRKTS	1
HB-DTB53-TB	HDWR BAG FOR DTB53	1
I-D4519	INSTRUCTION SHEET: D45529	1
<b>D4552-SX</b>	<b>COMP BOX,4.5-5" 00-01 DODGE,</b>	
DUL252-SX	DODGE UPR LINK 2K 2-5" SGL	1
DLL452-SX	DODGE LWR LINKS 2K 4-5" SGL	1
DULRB-L2K	DODGE UPR LINK RELOC BRKT L	1
DULRB-R2K	DODGE UPR LINK RELOC BRKT R	1
DTB45-B	DODGE TRK BAR DROP BRKT 4-5	1
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
DA302	DODGE RAM PITMAN ARM 2000-U	1
BP60S	BUMP STOP DODGE RAM 4-5"	2
HB-D4550-BB	HDWR BAG/ D45 & D50 BRK BL	1
HB-D4550-BL	HDWR BAG/ D45 & D50 BRAKE	1
HB-D4550-TB	HDWR BAG/ D45 & D50 TRK BAR	1
I-D4550	INSTRUCTIONS: DGE RAM 4-5"	1
<b>D492CDS</b>	<b>SYS BOX, 4" 92-93 DODGE DIE</b>	
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	2
916X4X912U	9/16 X 4 X 9 1/2 U-BOLT RD	1
916X3CTB	9/16 X 3 COARSE THREAD BOLT	2
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	1
RB20	2" REAR BLOCK	2
SE12D	SPRING BUSH KIT 61-93 DODGE	1
SE17D	SPRING EYE BUSH DODGE CUMMI	1
916FTN	9/16-18 NYLON INSERT LOCKNU	14
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D501</b>	<b>COMP BOX,5" 94-01 DODGE CLA</b>	
7017WR	WHITE DODGE RAM STAB W/RED	1
R224S	SINGLE DODGE RAM 1500 3.625	2
WS325S-13/32	4 DEGREE 2.5"WIDE DRILL 13/	2
3806	3/8 X 6" TIE BOLTS, PR W/NU	1
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1

Part#	Description	QTY
<b>D501S</b>	<b>SYS BOX, 5" 94-01 DODGE CLA</b>	
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
7017	OEM STABILIZER W/RED BOOT	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>D502</b>	<b>COMP BOX,5" 94-01 DODGE CLA</b>	
R224S	SINGLE DODGE RAM 1500 3.625	2
WS325S-13/32	4 DEGREE 2.5"WIDE DRILL 13/	2
3806	3/8 X 6" TIE BOLTS, PR W/NU	1
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
DSP2345	DODGE LWR LINK SKID PLATES	1
DS390	DUAL SHOCK KIT NEW DODGE RA	1
7017WR	WHITE DODGE RAM STAB W/RED	1
<b>D502S</b>	<b>SYS BOX,5" 94-01 DODGE CLAS</b>	
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
DSP2345	DODGE LWR LINK SKID PLATES	1
DS390	DUAL SHOCK KIT NEW DODGE RA	1
7017WR	WHITE DODGE RAM STAB W/RED	1
<b>D600CD</b>	<b>COMP BOX, 6" 87-91 DODGE CU</b>	
916X212X1512U	9/16 X 2 1/2 X 15 1/2 U-BOL	4
916X4X912U	9/16 X 4 X 9 1/2 U-BOLT RD	1
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	2
RB45	4.5" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D600CDS</b>	<b>SYS BOX, 6" 87-91 DODGE CUM</b>	
UDCF	U-BOLT KIT/FRONT DODGE CUMM	1
916X212X1012	1 U-BOLT WITH NUTS	4
SE12D	SPRING BUSH KIT 61-93 DODGE	1
SE17D	SPRING EYE BUSH DODGE CUMMI	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D680A</b>	<b>COMP BOX,6-8" 61-74 DODGE P</b>	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X212X1512U	9/16 X 2 1/2 X 15 1/2 U-BOL	4
RB45	4.5" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D680AS</b>	<b>COMP BOX,6-8" 72-74 DODGE P</b>	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
HB-DA	HDWR BAG FOR DODGE A KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D680B</b>	<b>COMP BOX,6-8"74.5-93 DODGE</b>	
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X212X1512U	9/16 X 2 1/2 X 15 1/2 U-BOL	4
RB45	4.5" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D680BR</b>	<b>COMP BOX,6-8" 74.5-93 DODGE</b>	
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X212X1512U	9/16 X 2 1/2 X 15 1/2 U-BOL	4
RB55	5.5" REAR BLOCK	2
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D680BS</b>	<b>SYS BOX, 6-8" 74.5-93 DODGE</b>	
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	1
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
HB-DB	HDWR BAG FOR DODGE B KITS	1
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D692CD</b>	<b>COMP BOX,6" 92-93 DODGE DIE</b>	
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	2
916X4X912U	9/16 X 4 X 9 1/2 U-BOLT RD	1
916X3CTB	9/16 X 3 COARSE THREAD BOLT	2
916X212X1312U	9/16 X 2 1/2 X 13 1/2 U-BOL	4
RB45	4.5" REAR BLOCK	2
SE12D	SPRING BUSH KIT 61-93 DODGE	1
SE17D	SPRING EYE BUSH DODGE CUMMI	1
916FTN	9/16-18 NYLON INSERT LOCKNU	14
ID2468	INSTRUCTIONS:DODGE 2,4,6,8"	1
<b>D702</b>	<b>COMP BOX, 7" 94-01 DODGE GA</b>	
D70-TM-B-MAN	DODGE 94-01 7" TRANS MT-5 S	1
D70BP-6	DODGE 94-01 7" BUMP STOP-BR	2
D70TM-8	DODGE 94-01 7" TRANS MNT-AU	1
HB-D70TM82	TRANS SPACER KIT,7"DODGE	1
R224S	SINGLE DODGE RAM 1500 3.625	2
3806	3/8 X 6" TIE BOLTS, PR W/NU	1
916X212X1312U	9/16 X 2 1/2 X 13 1/2 U-BOL	4

Part#	Description	QTY
RB20	2" REAR BLOCK	2
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
BP25S	2 1/2" BUMP STOPS TAPERED	2
DS397	DUAL SHOCK KIT D70/75 7" DO	1
DSP2345	DODGE LWR LINK SKID PLATES	1
7017	OEM STABILIZER W/RED BOOT	1
HB-D702	HDWR BAG FOR D702 BOX	1
<b>D702S</b>	<b>SYS BOX, 7" 94-01 DODGE GAS</b>	
D70-TM-B-MAN	DODGE 94-01 7" TRANS MT-5 S	1
D70BP-6	DODGE 94-01 7" BUMP STOP-BR	2
D70TM-8	DODGE 94-01 7" TRANS MNT-AU	1
HB-D70TM82	TRANS SPACER KIT,7"DODGE	1
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
BP25S	2 1/2" BUMP STOPS TAPERED	2
DS397	DUAL SHOCK KIT D70/75 7" DO	1
DSP2345	DODGE LWR LINK SKID PLATES	1
7017	OEM STABILIZER W/RED BOOT	1
HB-D702	HDWR BAG FOR D702 BOX	1
<b>D7075-DX</b>	<b>COMP BOX, 7" 94-01 D70&amp;D75,</b>	
DUL75-DX	DODGE UPPER LINKS 7" DBL FL	1
DLL75-DX	DODGE LWR LINKS 7" DBL FLEX	1
D70CM-5	DODGE 94-01 7" CROSSMEMBER	1
D70FDI-1	DODGE 94-01 7" FRAME DRV R	1
D70FPI-2	DODGE 94-01 7" FRAME PASS I	1
D70FPO-3	DODGE 94-01 7" FRAME PASS O	1
D70FDO-4	DODGE 94-01 7" FRAME DRV R O	1
D70SP-7	DODGE 94-01 7" SKID PLATE	1
DTB70-B	DGE 94-01 7" TRK BAR BRKT	1
D70TB	DODGE 7" TRK BAR ASSEMBLED	1
IXR10	INDEX RING,7" 94-01 DODGE	1
TCS2675	T-CASE SEAL,D2601/D7075 KIT	1
DTSA10	DODGE,TRANSMIS SEAL ADAPTER	1
RBL60	REAR BRAKE LINE 82-92 DODGE	1
VT53229	VACUUM TUBING-5/32"X29" LON	1
HB-D7075-1	HDWR BAG/ D7075 MAIN BAG	1
HB-D7075-BL	HDWR BAG/ D7075 BRAKE EXT	1
HB-D75SHK	SHOCK HARDWARE/ 7" DODGE	1
I-D7075	INSTRUCTIONS:DODGE D70/D75	1
<b>D752</b>	<b>COMP BOX, 7" 94-01 DODGE V1</b>	
D70-TM-B-MAN	DODGE 94-01 7" TRANS MT-5 S	1
D70BP-6	DODGE 94-01 7" BUMP STOP-BR	2
D70TM-8	DODGE 94-01 7" TRANS MNT-AU	1
HB-D70TM82	TRANS SPACER KIT,7"DODGE	1
R370S	SINGLE DODGE V10 ADD-A-LEAF	2
1206	1/2 X 6 TIE BOLTS PR W/NUITS	1
RB27	2" BLOCK DRILLED FOR 7" DOD	2
58X318X1612U	5/8 X 3 1/8 X 16 1/2 U-BOLT	4
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
BP25S	2 1/2" BUMP STOPS TAPERED	2
DS397	DUAL SHOCK KIT D70/75 7" DO	1
DSP2345	DODGE LWR LINK SKID PLATES	1
7017	OEM STABILIZER W/RED BOOT	1
VH17	VENT HOSE 7" DODGE CUT 21"	1
HB-D702	HDWR BAG FOR D702 BOX	1
HB-58FTN		1
<b>D752S</b>	<b>SYS BOX, 7" 94-01 DODGE V10</b>	
D70-TM-B-MAN	DODGE 94-01 7" TRANS MT-5 S	1
D70BP-6	DODGE 94-01 7" BUMP STOP-BR	2
D70TM-8	DODGE 94-01 7" TRANS MNT-AU	1
HB-D70TM82	TRANS SPACER KIT,7"DODGE	1
916X318X1312U	9/16 X 3 1/8 X 13 1/2 U-BOL	4
SBL20-L	2.5" SWAY BAR LWG BRKT-LEFT	1
SBL20-R	2.5"SWAY BAR LWG BRKT-RIGHT	1
BP25S	2 1/2" BUMP STOPS TAPERED	2
DS397	DUAL SHOCK KIT D70/75 7" DO	1
DSP2345	DODGE LWR LINK SKID PLATES	1
VH17	VENT HOSE 7" DODGE CUT 21"	1
7017	OEM STABILIZER W/RED BOOT	1
HB-D702	HDWR BAG FOR D702 BOX	1
<b>D940C</b>	<b>COMP BOX: 4" 09 DODGE 1500</b>	
D935RS	3" 09 DODGE 1500 COIL/SGL	2
D964RBS-D	4"REAR BUMP STOP BRKT 09DGE	1
D964RBS-P	4"REAR BUMP STOP BRKT 09DGE	1
HB-D946-RBS	HDWR BAG:D946 BUMP/STP BRKT	1
<b>D946A</b>	<b>COMP BOX:4-6" 09 DODGE 1500</b>	
D296L	D296, LEFT STEERING KNUCKLE	1
D296R	D296, RIGHT STEERING KNUCKL	1
D960FCM-B	D946 FRONT CROSSMEMBER	1
D960CM-B	D946 REAR CROSSMEMBER	1
D960RLB-D	D946 DRIVER REAR LINK BRKT	1
D960RLB-P	D946 PASS REAR LINK BRACKET	1
HB-D946-CM	HDWR BAG: D946 CROSSMEMBER	1
HB-D946-RLB	HDWR BAG:D946 REAR LK BRKTS	1

All Installation Instructions Are Available On Line At Skyjacker.Com

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
<b>D946B</b>	<b>COMP BOX:4-6" 09 DODGE 1500</b>	
D960DSS-S	D946 FRONT DRIVESHAFT SPCR	1
D960DDS-S	D946 DRIVER SIDE DIFF BRKT	1
D960DPS-S	D946 PINION SUPPORT BRACKET	1
D960MS-S	D946 FRONT STRUT SPACER	2
D960PDB-S	D946 PASS SIDE DIFF BRACKET	1
D960RTB-B	D946 REAR TRACK BAR BRACKET	1
D960RTB-TEM	D946 REAR TRK BAR TEMPLATE	1
D960SKD-S	D946 FRONT DIFF SKID PLATE	1
SBE1125	FRONT,OE SWAY BAR ENDLINKS	1
SBE509	09 DODGE ENDLINKS REAR, PR	1
HB-D946-BLE	HDWR BAG: D946 B/L EXT BRKT	1
HB-D946-DB	HDWR BAG: D946 DIFF BRKTS	1
HB-D946-DSS	HDWR BAG: D946 D-SHAFT SPCR	1
HB-D946-RTB	HDWR BAG:D946 REAR TRK/BAR	1
HB-SKD	HDWR BAG: SKID PLATE	1
HB-10MM/NFN	HDWR BAG: 10MM FLANGE NUTS	1
I-D946	INSTRUCTION SHEET: D946	1
<b>D960C</b>	<b>COM BOX: 6" 09 DODGE 1500</b>	
D950RS	5" 09 DODGE 1500 COIL/SGL	2
D960CS-S	D964 FRT STRUT COIL SPACER	2
D965RBS-D	6"REAR BUMP STOP BRKT 09DGE	1
D965RBS-P	6"REAR BUMP STOP BRKT 09DGE	1
HB-D946-RBS	HDWR BAG:D946 BUMP/STP BRKT	1
<b>DEFG114SP</b>	<b>DEF/JUREA SKD PL 11 GM2500HD</b>	
C1178DEF-SP	10 GM 2500HD DEF SKID PLATE	1
HB-SKD	HDWR BAG: SKID PLATE	1
I-DEFG114SP	INSTRUCTION SHEET:DEFG114SP	1
<b>F11451</b>	<b>COMP BOX,4" KIT 11 F250 4WD</b>	
7011-B	STAB BRKT,2011 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
TB1146-B	4-6"TRACK BAR BKT 11FORD SD	1
H-BOX F11451	HDWR BOX: F11451 COMP BOX	1
<b>F11451S</b>	<b>COMP BOX,4" SYS 11 F250 4WD</b>	
7011-B	STAB BRKT,2011 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
TB1146-B	4-6"TRACK BAR BKT 11FORD SD	1
H-BOX F11451S	HDWR BOX: F11451S COMP BOX	1
<b>F11651</b>	<b>COMP BOX,6" KIT 11 F250 4WD</b>	
7011-B	STAB BRKT,2011 F250	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
TB1146-B	4-6"TRACK BAR BKT 11FORD SD	1
H-BOX F11651	HDWR BOX: F11651 COMP BOX	1
<b>F11651S</b>	<b>COMP BOX,6" SYS 11 F250 4WD</b>	
7011-B	STAB BRKT,2011 F250	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
TB1146-B	4-6"TRACK BAR BKT 11FORD SD	1
H-BOX F11651S	HDWR BOX: F11651S COMP BOX	1
<b>F11852</b>	<b>COMP BX,8.5"KIT 11 F250 4WD</b>	
7011-B	STAB BRKT,2011 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
H-BOX F11852	HDWR BOX: F11852 COMP BOX	1
<b>F11852S</b>	<b>COMP BX,8.5"SYS 11 F250 4WD</b>	
7011-B	STAB BRKT,2011 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
H-BOX F11852S	HDWR BOX: F11852S COMP BOX	1
<b>F4601A</b>	<b>SUPERSEDE: PART# F4601A-NSP</b>	
F460L	F460, LEFT STEERING KNKLE	1
F460R	F460,RIGHT STEERING KNKLE	1
F460LSP-S	FORD 04F150,LOWER SKID PLAT	1
F460USP-S	FORD 04F150,UPPER SKID PLAT	1
F460SPD-S	FORD 04F150,SIDE SKID DRIVE	1
F460SPS-S	FORD 04F150,SIDE SKID PASSE	1
F460SPCM-S	FORD 04F150,SKID PLT CROSSM	1
HB-F460-SP	HDWR BAG: F460 SKID PLATES	1
<b>F4601A-NSP</b>	<b>COMP BOX,6" 04-08 F150 4WD</b>	
F460L	F460, LEFT STEERING KNKLE	1
F460R	F460,RIGHT STEERING KNKLE	1
<b>F4602BSST</b>	<b>SYS BOX:6" 04-08 F150 4WD</b>	
F4602FCM-S	6" 04-08FORD F150 FRT X-MEM	1
F4602RCM-S	6" 04-08 F150 REAR X-MEM	1
F4602SKD-S	04-08FORD F150 DIFF SKD PLT	1
F460DDS-S	FORD 04F150,DRIVR DIFF DROP	1
F460DPS-S	FORD 04F150,PASS. DIFF DROP	1
F04ST-R500	1/2" FORD STRUT SPACER RING	2
F60STS	FORD F150 6" STRUT-SINGLE	2
SBL460-B	SWAY BAR LWRG BRKT,F460 KIT	2
916X318X1012U	9/16 X 3 1/8 X 10 1/2 SQUAR	4
HB-F460-BLE	HDWR BAG:F460 FR/RR BL BRKT	1
HB-F460DXBU	HDWR BAG:F460 DIFF BRKTS	1
HB-F4602-CM	HDWR BAG: F4602 X-MEMBER	1
HB-SBL	HDWR BAG:SWAY BAR LOW BRKTS	1
HB-SKD	HDWR BAG: SKID PLATE	1

Part#	Description	QTY
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
I-F4601ST	INST SHEET:04-08 F150/F4601	1
<b>F4602BST</b>	<b>COMP BOX:6" 04-08 F150 4WD</b>	
F4602FCM-S	6" 04-08FORD F150 FRT X-MEM	1
F4602RCM-S	6" 04-08 F150 REAR X-MEM	1
F4602SKD-S	04-08FORD F150 DIFF SKD PLT	1
F460DDS-S	FORD 04F150,DRIVR DIFF DROP	1
F460DPS-S	FORD 04F150,PASS. DIFF DROP	1
F04ST-R500	1/2" FORD STRUT SPACER RING	2
F60STS	FORD F150 6" STRUT-SINGLE	2
SBL460-B	SWAY BAR LWRG BRKT,F460 KIT	2
R3440S	SGL ADD-A-LEAF,3.5-4"04F150	2
WS4320	SHIM KIT,2004 F150 4X4	1
916X318X1012U	9/16 X 3 1/8 X 10 1/2 SQUAR	4
HB-F460-BLE	HDWR BAG:F460 FR/RR BL BRKT	1
HB-F460DXBU	HDWR BAG:F460 DIFF BRKTS	1
HB-F4602-CM	HDWR BAG: F4602 X-MEMBER	1
HB-SBL	HDWR BAG:SWAY BAR LOW BRKTS	1
HB-SKD	HDWR BAG: SKID PLATE	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
I-F4601ST	INST SHEET:04-08 F150/F4601	1
<b>F4621A</b>	<b>COM BOX,6" 04-F150 2WD ONLY</b>	
F462L	F462, LEFT STEERING KNKLE	1
F462R	F462,RIGHT STEERING KNKLE	1
F462FCM-S	F150 2WD 6" FRONT CROSS-MBR	1
F462RCM-S	F150 2WD 6" REAR CROSS-MBR	2
SBL462-B	6" F462, SWAY BAR BRACKET	2
HB-SBL	HDWR BAG:SWAY BAR LOW BRKTS	1
HB-F462-CM	HDWR BAG:F462 CROSSMEMBERS	1
<b>F4621BSST</b>	<b>SYS BOX, 6" 04-UP F150 2WD</b>	
F60STS	FORD F150 6" STRUT-SINGLE	2
916X318X1012U	9/16 X 3 1/8 X 10 1/2 SQUAR	4
HB-F460-BLE	HDWR BAG:F460 FR/RR BL BRKT	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
I-F4621	INST SHEET: 6" 04 F-150 2WD	1
<b>F4621BST</b>	<b>COMP BOX, 04-UP F150 2WD</b>	
F60STS	FORD F150 6" STRUT-SINGLE	2
R3440S	SGL ADD-A-LEAF,3.5-4"04F150	2
WS4320	SHIM KIT,2004 F150 4X4	1
916X318X1012U	9/16 X 3 1/8 X 10 1/2 SQUAR	4
HB-F460-BLE	HDWR BAG:F460 FR/RR BL BRKT	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
I-F4621	INST SHEET: 6" 04 F-150 2WD	1
<b>F5451</b>	<b>COMP BOX, 4"KIT 2005 F250 4</b>	
TB540-B	TRK BAR,4" 2005 F250/350	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"/8"LFT 05F250	1
H-BOX F5451	HDWR BOX: F5451 COMP BOX	1
<b>F5451H</b>	<b>COM BOX,4" F-350 KIT</b>	
TB540-B	TRK BAR,4" 2005 F250/350	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"/8"LFT 05F250	1
H-BOX F5451H	HDWR BOX: F5451H COMP BOX	1
<b>F5451S</b>	<b>COM BOX,4"SYS 2005 F250 4WD</b>	
TB540-B	TRK BAR,4" 2005 F250/350	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"/8"LFT 05F250	1
H-BOX F5451SH	HDWR BOX: F5451SH COMP BOX	1
<b>F5651</b>	<b>COMP BOX,6"05-07 F250/F350</b>	
TB560-B	TRK BAR BRKT,6" 2005 F250	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F5651	HDWR BOX: F5651 COMP BOX	1
<b>F5651H</b>	<b>COM BOX,6" F-350 KIT</b>	
TB560-B	TRK BAR BRKT,6" 2005 F250	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F5651H	HDWR BOX: F5651H COMP BOX	1
<b>F5651S</b>	<b>COM BOX,6"SYS 2005 F250 4WD</b>	
TB560-B	TRK BAR BRKT,6" 2005 F250	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F5651SH	HDWR BOX: F5651SH COMP BOX	1

Part#	Description	QTY
<b>F58484LU</b>	<b>SUPER DUTY 4-LINK CONV 4-8"</b>	
F58484UL-L	05 F250 UPPER CLASS II LINK	2
F58484LL-L	05 F250 LOWER CLASS II LINK	2
HDRB114X1R	HD NG ROD END 1 1/4" RH	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
HB-F58484LU	HDWR BAG: SUPER DUTY 4-LINK	1
I-F58484LU	INST SHEET: F-250 4-LINK	1
<b>F5852A</b>	<b>COM BOX,8.5" 05-F250 4WD</b>	
TB580-B	TRK BAR BRKT,8.5"05 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5956	SWAY BAR LNKS,6"FRT 05 F250	1
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7154	SINGLE STAB,4"/8"LFT 05F250	1
FBL56	FRT BRK LNS,6-8"05-07F2/350	1
CBL206	CARR BRG LWR BRKT, 2"DROP	1
RB45	4.5" REAR BLOCK	2
58X312X18U	5/8 X 3 1/2 X 18 U-BOLT RD	4
HB-5250TBS	HDWR BAG:TRACK,BUMP,SWAY 05	1
HB-RAB585	HDWR BAG:RAD BRKTS,05-F250	1
HB-5250-1	HDWR BAG:BRK,CAR BRG,05F250	1
VH32	REAR VENT HOSE-5/16"X 32"	1
I-F580/585	INST SHEET FOR F580/F585	1
<b>F5852AH</b>	<b>COM BOX,8.5" F-350 KIT</b>	
TB580-B	TRK BAR BRKT,8.5"05 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5956	SWAY BAR LNKS,6"FRT 05 F250	1
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7154	SINGLE STAB,4"/8"LFT 05F250	1
FBL56	FRT BRK LNS,6-8"05-07F2/350	1
CBL206	CARR BRG LWR BRKT, 2"DROP	1
58X4X18U	5/8 X 4 X 18 UBOLT/ROUND	4
HB-5250TBS	HDWR BAG:TRACK,BUMP,SWAY 05	1
HB-RAB585	HDWR BAG:RAD BRKTS,05-F250	1
HB-5250-1	HDWR BAG:BRK,CAR BRG,05F250	1
VH32	REAR VENT HOSE-5/16"X 32"	1
I-F580/585	INST SHEET FOR F580/F585	1
<b>F5852AS</b>	<b>SYS BOX,8.5" 05 F250 4WD</b>	
TB580-B	TRK BAR BRKT,8.5"05 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5956	SWAY BAR LNKS,6"FRT 05 F250	1
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7154	SINGLE STAB,4"/8"LFT 05F250	1
FBL56	FRT BRK LNS,6-8"05-07F2/350	1
CBL206	CARR BRG LWR BRKT, 2"DROP	1
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
HB-5250TBS	HDWR BAG:TRACK,BUMP,SWAY 05	1
HB-RAB585	HDWR BAG:RAD BRKTS,05-F250	1
HB-5250-1	HDWR BAG:BRK,CAR BRG,05F250	1
VH32	REAR VENT HOSE-5/16"X 32"	1
I-F580/585	INST SHEET FOR F580/F585	1
<b>F5852ASH</b>	<b>COM BOX,8.5" F-350 SYSTEM</b>	
TB580-B	TRK BAR BRKT,8.5"05 F250	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5956	SWAY BAR LNKS,6"FRT 05 F250	1
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7154	SINGLE STAB,4"/8"LFT 05F250	1
FBL56	FRT BRK LNS,6-8"05-07F2/350	1
CBL206	CARR BRG LWR BRKT, 2"DROP	1
58X4X12U	5/8 X 4 X 12 UBOLT/ROUND	4
HB-5250TBS	HDWR BAG:TRACK,BUMP,SWAY 05	1
HB-RAB585	HDWR BAG:RAD BRKTS,05-F250	1
HB-5250-1	HDWR BAG:BRK,CAR BRG,05F250	1
VH32	REAR VENT HOSE-5/16"X 32"	1
I-F580/585	INST SHEET FOR F580/F585	1
<b>F5852B</b>	<b>COM BOX,8.5" 05 F250 4WD</b>	
DLB250-B	DIFF LINK BRKT,AXLE 05F250	2
F580UL-L	UPPER LINK,8.5"05 F250	1
F580LL-L	LOWER LINK,8.5" 05 F250	2
HB-L250-43	HDWR BAG:05LINKS W/3643BUSH	1
HB-L250-46	HDWR BAG:05LINKS W/3446BUSH	1
HB-DLB250	HDWR BAG: DLB250 DIFF BRKTS	1
<b>F720S</b>	<b>COMP BOX, 2" 66-77 F250 HIG</b>	
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X318X11U	5/8 X 3 1/8 X 11 U-BOLT RD	4
RB20	2" REAR BLOCK	2
HB-F740S	HDWR BAG FOR F740S & F720S	1
I-F7246	INST SHEET: 66-79 FORD F250	1
<b>F7240</b>	<b>COMP BOX FOR F720K OR F740K</b>	
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
HB-F740	HDWR BAG FOR F740 & F720'S	1
I-F7246	INST SHEET: 66-79 FORD F250	1
<b>F740S</b>	<b>COMP BOX, FOR A F740KS</b>	

All Installation Instructions Are Available On Line At Skyjacker.Com

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X318X1212U	5/8 X 3 1/8 X 12 1/2 U-BOLT	4
HB-F740S	HDWR BAG FOR F740S & F720S	1
IF-F7246	INST SHEET: 66-79 FORD F250	1
<b>F749</b>	<b>COMP BOX, 4" 77-79 F250</b>	
916X314X1312U	9/16 X 3 1/4 X 13 1/2 U-BOL	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
HB-F760	HDWR BAG FOR F760 & F749'S	1
IF-F7246	INST SHEET: 66-79 FORD F250	1
<b>F749S</b>	<b>COMP BOX, 4" 78-79F250 SYS</b>	
F760S	SYS BOX, 6" 77.5-79 F250 LO	1
<b>F760</b>	<b>COMP BOX, 6" 77.5-79 F250</b>	
916X314X1512U	9/16 X 3 1/4 X 15 1/2 U-BOL	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB45	4.5" REAR BLOCK	2
HB-F760	HDWR BAG FOR F760 & F749'S	1
IF-F7246	INST SHEET: 66-79 FORD F250	1
<b>F760S</b>	<b>SYS BOX, 6" 77.5-79 F250 LO</b>	
916X314X1112U	9/16 X 3 1/4 X 11 1/2 U-BOL	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
HB-F760	HDWR BAG FOR F760 & F749'S	1
IF-F7246	INST SHEET: 66-79 FORD F250	1
<b>F840M</b>	<b>COMP BOX, 4" F350M NO TWP</b>	
58X338X1412U	5/8 X 3 3/8 X 14 1/2 U-BOLT	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
TB35-B	TRK BAR EXT BRKT F350 SGL	1
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F840MH</b>	<b>COMP BOX, 4" 86-96 F350 MON</b>	
58X338X1612U	5/8 X 3 3/8 X 16 1/2 U-BOLT	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
TB35-B	TRK BAR EXT BRKT F350 SGL	1
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F840MS</b>	<b>COMP BOX, 4" 86-96 F350 MON</b>	
58X338X13U	5/8 X 3 3/8 X 13 U-BOLT RD	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
TB35-B	TRK BAR EXT BRKT F350 SGL	1
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F840T</b>	<b>COMP BOX, 4" 80-96 F250 IFS</b>	
LHB75-5	LEFT HINGE BRKT F250-SGL	1
RHB75-6	RIGHT HINGE BRKT F250-SGL	1
58X338X13U	5/8 X 3 3/8 X 13 U-BOLT RD	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F840TH</b>	<b>COMP BOX, 4" 80-96 F250 IFS</b>	
LHB75-5	LEFT HINGE BRKT F250-SGL	1
RHB75-6	RIGHT HINGE BRKT F250-SGL	1
58X338X1412U	5/8 X 3 3/8 X 14 1/2 U-BOLT	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F840TS</b>	<b>SYSTEM BOX, 4" 80-96 F250 I</b>	
LHB75-5	LEFT HINGE BRKT F250-SGL	1
RHB75-6	RIGHT HINGE BRKT F250-SGL	1
58X338X11U	5/8 X 3 3/8 X 11 U-BOLT RD	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F8451</b>	<b>COMP BX,4"KIT 08 F250 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"78"LFT 05F250	1
H-BOX F8451	HDWR BOX: F8451 COMP BOX	1
<b>F8451H</b>	<b>COMP BX,4"KIT 08 F350 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"78"LFT 05F250	1
H-BOX F8451H	HDWR BOX: F8451H COMP BOX	1
<b>F8451S</b>	<b>COMP BX,4"SYS 08 F250 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"78"LFT 05F250	1
H-BOX F8451S	HDWR BOX: F8451S COMP BOX	1
<b>F8451SH</b>	<b>COMP BX,4"SYS 08 F350 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
7154	SINGLE STAB,4"78"LFT 05F250	1
H-BOX F8451SH	HDWR BOX: F8451SH COMP BOX	1
<b>F860M</b>	<b>COMP BOX, 6" 96-96 F350 MON</b>	

Part#	Description	QTY
58X338X1612U	5/8 X 3 3/8 X 16 1/2 U-BOLT	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB35	3.5" REAR BLOCK	2
TB35-B	TRK BAR EXT BRKT F350 SGL	1
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F860MH</b>	<b>COMP BOX, 6" 86-96 F350 MO</b>	
58X338X19U	5/8 X 3 3/8 X 19 U-BOLT RD	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB35	3.5" REAR BLOCK	2
TB35-B	TRK BAR EXT BRKT F350 SGL	1
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F860MS</b>	<b>SYS BOX, 6" 86-96 F350 MONO</b>	
58X338X13U	5/8 X 3 3/8 X 13 U-BOLT RD	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
TB35-B	TRK BAR EXT BRKT F350 SGL	1
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F860T</b>	<b>COMP BOX, 6" 80-96 F250 IFS</b>	
LHB75-5	LEFT HINGE BRKT F250-SGL	1
RHB75-6	RIGHT HINGE BRKT F250-SGL	1
58X338X1412U	5/8 X 3 3/8 X 14 1/2 U-BOLT	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB45	4.5" REAR BLOCK	2
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F860TH</b>	<b>COMP BOX, 6" 80-96 F250 IFS</b>	
LHB75-5	LEFT HINGE BRKT F250-SGL	1
RHB75-6	RIGHT HINGE BRKT F250-SGL	1
58X338X1612U	5/8 X 3 3/8 X 16 1/2 U-BOLT	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB45	4.5" REAR BLOCK	2
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F860TS</b>	<b>SYS BOX, 6" 80-96 F250 IFS</b>	
LHB75-5	LEFT HINGE BRKT F250-SGL	1
RHB75-6	RIGHT HINGE BRKT F250-SGL	1
58X338X11U	5/8 X 3 3/8 X 11 U-BOLT RD	4
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
HB-F8TM	HDWR BAG FOR F840-60 T & M	1
IF250	INST.SHEET:F250 1&2,2,4,6"	1
<b>F8651</b>	<b>COMP BOX,6"08-10 F250/350</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F8651	HDWR BOX: F8651 COMP BOX	1
<b>F8651H</b>	<b>COMP BX,6"KIT 08 F350 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F8651H	HDWR BOX: F8651H COMP BOX	1
<b>F8651S</b>	<b>COMP BX,6"SYS 08 F250 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F8651S	HDWR BOX: F8651SH COMP BOX	1
<b>F8651SH</b>	<b>COMP BX,6"SYS 08 F350 4WD</b>	
TB846-B	TRACK BAR BRKT 4-6" 08 SD	1
RAB565-L	RADIUS BRKT,DRIVER 6"05F250	1
RAB565-R	RADIUS BRKT,PASSEN 6"05F250	1
7156	SINGLE STAB,6" LIFT 05 F250	1
H-BOX F8651SH	HDWR BOX: F8651SH COMP BOX	1
<b>F8852</b>	<b>COM BOX, 8.5" 08 F250 4WD</b>	
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5086-L	SWAY BAR LINK 08 SD 6"	2
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7156	SINGLE STAB,6" LIFT 05 F250	1
CBL206-B	CARR BRG LOWER BRKT,2" DROP	1
RB540	FRONT BRK LNS,6-8"08>F2/350	1
RB540	5" REAR BLOCK "FLAT"	2
58X4X18U	5/8 X 4 X 18 U-BOLT/ROUND	4
HB-RABF546	HDWR BAG:RAD DROP BRKTS,F54	1
HB-8250TBS	HDWR BAG:TRACK,BUMP,SWAY 08	1
IF-F545/65	INST SHEET FOR F545/F565	1
<b>F8852S</b>	<b>SYS BOX, 8.5" 08 F250 4WD</b>	
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5086-L	SWAY BAR LINK 08 SD 6"	2
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7156	SINGLE STAB,6" LIFT 05 F250	1
CBL206-B	CARR BRG LOWER BRKT,2" DROP	1
FB186	FRONT BRK LNS,6-8"08>F2/350	1
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
HB-RABF546	HDWR BAG:RAD DROP BRKTS,F54	1
HB-8250TBS	HDWR BAG:TRACK,BUMP,SWAY 08	1
IF-F545/65	INST SHEET FOR F545/F565	1
<b>F8852SH</b>	<b>SYS BOX, 8.5" 08 F250 4WD</b>	
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5086-L	SWAY BAR LINKS 08 SD 6"	2
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7156	SINGLE STAB,6" LIFT 05 F250	1
CBL206-B	CARR BRG LOWER BRKT,2" DROP	1
FB186	FRONT BRK LNS,6-8"08>F2/350	1
58X4X12U	5/8 X 4 X 12 U-BOLT/ROUND	4
HB-RABF546	HDWR BAG:RAD DROP BRKTS,F54	1
HB-8250TBS	HDWR BAG:TRACK,BUMP,SWAY 08	1
IF-F545/65	INST SHEET FOR F545/F565	1
<b>F9202M</b>	<b>COMP BOX, 2" 00-02 SUPER-DU</b>	
SE90F	SPRING EYE BUSH KIT 99 F250	1
916X318X912FS	1 U-BOLT (SEMI-RD) WITH NUT	4
TB9203	TRK BAR BRKT 2" 03/99 F250	1
<b>F9203M</b>	<b>COM BOX,2" 03/99-99F2/350SD</b>	
TB920	TRK BRKT SMALL,2" 99F250 SD	1
SE90F	SPRING EYE BUSH KIT 99 F250	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
58X312X14U	5/8 X 3 1/2 X 14 U-BOLT RD	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
HB-916	HDWR BAG/ 8 - 5/8" NYLON	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9302M</b>	<b>COMP BOX, 2.5-3" EXCURSION</b>	
TB9203	TRK BAR BRKT 2" 03/99 F250	1
RB220	2" REAR BLOCKS TAPERED, PR	1
58X312X14	1 U-BOLT WITH NUTS	4
<b>F9402M</b>	<b>COMP BOX, 4" 00-02 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE407	SWAY BAR LKS 3-4"FT 2K F250	1
RB35	3.5" REAR BLOCK	2
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F943M	HDWR BAG FOR F9403M/MMS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9402MS</b>	<b>SYS BOX, 4" 00-02 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE407	SWAY BAR LKS 3-4"FT 2K F250	1
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	4
58X312X1012U	5/8 X 3 1/2 X 10 1/2 RD UBT	4
HB-F943M	HDWR BAG FOR F9403M/MMS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9403M</b>	<b>COMP BOX, 4" 03/99-99 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
RB35	3.5" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F943M	HDWR BAG FOR F9403M/MMS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9403MS</b>	<b>SYS BOX, 4" 03/99-99 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
RB20	2" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F943M	HDWR BAG FOR F9403M/MMS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9403M</b>	<b>COMP BOX, 4" 99-02/99 F250/350</b>	
TB948-B	TRK BAR F-BRKT 8" 99-2/99 S	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
RB20	2" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F94M	HDWR BAG FOR F9403M/MMS BOX	1

Part#	Description	QTY
CBL206-B	CARR BRG LOWER BRKT,2" DROP	1
FB186	FRONT BRK LNS,6-8"08>F2/350	1
RB540	5" REAR BLOCK "FLAT"	2
58X4X18U	5/8 X 4 X 18 UBOLT/ROUND	4
HB-RABF546	HDWR BAG:RAD DROP BRKTS,F54	1
HB-8250TBS	HDWR BAG:TRACK,BUMP,SWAY 08	1
IF-F545/65	INST SHEET FOR F545/F565	1
F8852S	SYS BOX, 8.5" 08 F250 4WD	
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5086-L	SWAY BAR LINK 08 SD 6"	2
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7156	SINGLE STAB,6" LIFT 05 F250	1
CBL206-B	CARR BRG LOWER BRKT,2" DROP	1
FB186	FRONT BRK LNS,6-8"08>F2/350	1
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
HB-RABF546	HDWR BAG:RAD DROP BRKTS,F54	1
HB-8250TBS	HDWR BAG:TRACK,BUMP,SWAY 08	1
IF-F545/65	INST SHEET FOR F545/F565	1
F8852SH	SYS BOX, 8.5" 08 F250 4WD	
TB1180-B	8" TRACK BAR BKT 11 FORD SD	1
RAB545-S	RADIUS DROP BRKTS,4" 05F250	2
SBE5086-L	SWAY BAR LINK 08 SD 6"	2
BSB70-DB	BUMP STOP BRKT,7"TALL-DRIVR	1
BSB70-PB	BUMP STOP BRKT,7"TALL PASS.	1
7156	SINGLE STAB,6" LIFT 05 F250	1
CBL206-B	CARR BRG LOWER BRKT,2" DROP	1
FB186	FRONT BRK LNS,6-8"08>F2/350	1
58X4X12U	5/8 X 4 X 12 UBOLT/ROUND	4
HB-RABF546	HDWR BAG:RAD DROP BRKTS,F54	1
HB-8250TBS	HDWR BAG:TRACK,BUMP,SWAY 08	1
IF-F545/65	INST SHEET FOR F545/F565	1
F9202M	COMP BOX, 2" 00-02 SUPER-DU	
SE90F	SPRING EYE BUSH KIT 99 F250	1
916X318X912FS	1 U-BOLT (SEMI-RD) WITH NUT	4
TB9203	TRK BAR BRKT 2" 03/99 F250	1
F9203M	COMP BOX,2" 03/99-F92F350SD	
TB920	TRK BRKT SMALL, 2" 99F250 SD	1
SE90F	SPRING EYE BUSH KIT 99 F250	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
RB20	2" REAR BLOCK	2
58X312X14U	5/8 X 3 1/2 X 14 U-BOLT RD	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
HB-58	HDWR BAG/ 8 - 5/8" NYLON L	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
F9302M	COMP BOX, 2.5-3" EXCURSION	
TB9203	TRK BAR BRKT 2" 03/99 F250	1
RB220	2" REAR BLOCKS TAPERED, PR	1
58X312X14	1 U-BOLT WITH NUTS	4
F9402M	COMP BOX, 4" 00-02 F250/350	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE407	SWAY BAR LKS 3-4"FT 2K F250	1
RB35	3.5" REAR BLOCK	2
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F943M	HDWR BAG FOR F9403M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
F9402MS	SYS BOX, 4" 00-02 F250/350	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE407	SWAY BAR LKS 3-4"FT 2K F250	1
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	4
58X312X1012U	5/8 X 3 1/2 X 10 1/2 RD UB	4
HB-F943M	HDWR BAG FOR F9403M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
F9403M	COMP BOX, 4" 03/99-99 F250	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
RB35	3.5" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F943M	HDWR BAG FOR F9403M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
F9403MS	SYS BOX, 4" 03/99-99 F250/3	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
HB-F943M	HDWR BAG FOR F9403M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
F940M	COMP BOX, 4" 99-02/99 F250/	
TB948-B	TRK BAR F-BRKT 8" 99-2/99 S	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
RB20	2" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X16U	5/8 X 3 1/2 X 16 U-BOLT RD	4
HB-F94M	HDWR BAG FOR F940M/MS BOX	1



# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F940MS</b>	<b>COMP BOX, 4" 99-02/99 F250/</b>	
TB948-B	TRK BAR F-BRKT 8" 99-2/99 S	1
SBE402	SWAY BAR LINKS FRT SD 3-4"	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
HB-F94M	HDWR BAG FOR F940M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9461A</b>	<b>COMP BX,09-10 FORD F150 4WD</b>	
F946L	F946, LEFT STEERING KNUCKLE	1
F946R	F946,RIGHT STEERING KNUCKLE	1
F960FCM-B	F960 FRONT CROSSMEMBER	1
F960RCM-B	F960 REAR CROSSMEMBER	1
F960DDB-B	F960 DRIVER SIDE DIFF BRKT	1
F960DRB-B	F960 DRV SIDE PINION SUP BK	1
F960PDB-B	F960 PASS SIDE DIFF BRACKET	1
F960SBL-P	F960 PASS SIDE SWAY BAR BRK	1
HB-F946-KB	HDWR BAG:F946 KNUCKLE BUSH	1
<b>F9461B</b>	<b>COMP BX,09-10 FORD F150 4WD</b>	
F946STS	F150 09-UP STRUT	2
F960SKD-S	09 FORD F150 DIFF SKID PLT	1
R3940S	SGL ADD-A-LEAF 3.5-4"09F150	2
H-BOX F9461B	HDWR BOX: F9461B COMP BOX	1
<b>F9461BS</b>	<b>COMP BX,09-10 FORD F150 4WD</b>	
F946STS	F150 09-UP STRUT	2
F960SKD-S	09 FORD F150 DIFF SKID PLT	1
H-BOX F9461BS	HDWR BOX: F9461BS COMP BOX	1
<b>F9602M</b>	<b>COMP BOX, 6" 00-03 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9203-B	TRK BAR BRKT LWR 3/99UP F25	1
SBE408	SWAY BAR LINKS FRT 5-8"2KF2	1
RB55	5.5" REAR BLOCK	2
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	4
58X312X18U	5/8 X 3 1/2 X 18 U-BOLT RD	4
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9602MS</b>	<b>SYS BOX, 6" 00-02 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9203-B	TRK BAR BRKT LWR 3/99UP F25	1
SBE408	SWAY BAR LINKS FRT 5-8"2KF2	1
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	4
58X312X1012U	5/8 X 3 1/2 X 10 1/2 RD UBT	4
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9603M</b>	<b>COMP BOX, 6" 03/99-99 F250/</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9203-B	TRK BAR BRKT LWR 3/99UP F25	1
SBE403	SWAY BAR LINKS FRT SD 5-8"	1
RB55	5.5" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X18U	5/8 X 3 1/2 X 18 U-BOLT RD	4
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9603MS</b>	<b>SYS BOX, 6" 03/99-99 F250/3</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9203-B	TRK BAR BRKT LWR 3/99UP F25	1
SBE403	SWAY BAR LINKS FRT SD 5-8"	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F960M</b>	<b>COMP BOX, 6" 99-02/99 F250/</b>	
TB948-B	TRK BAR F-BRKT 8" 99-2/99 S	1
TB920-B	TRK BAR BRKT 99 F250	1
SBE403	SWAY BAR LINKS FRT SD 5-8"	1
RB45	4.5" REAR BLOCK	2
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X18U	5/8 X 3 1/2 X 18 U-BOLT RD	4
HB-F96M	HDWR BAG FOR F960M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F960MS</b>	<b>COMP BOX, 6" 99-02/99 F250/</b>	
TB948-B	TRK BAR F-BRKT 8" 99-2/99 S	1
TB920-B	TRK BAR BRKT 99 F250	1
SBE403	SWAY BAR LINKS FRT SD 5-8"	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X14U	5/8 X 3 1/2 X 14 U-BOLT RD	4
HB-F96M	HDWR BAG FOR F960M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9701A</b>	<b>COMP BOX, 6" 97-03 F150 4X4</b>	
F970L	FORD F150,LEFT STRG KNKLE	1
F970R	FORD F150,RIGHT STG KNKLE	1
F970SKID-S	FORD F150,FRONT SKID PLATE	1
H-BOX F9701A	HDWR BOX: F9701A COMP BOX	1
<b>F9701A-NSP</b>	<b>COMP BOX,6" 97-03 F150 4X4</b>	
F970L	FORD F150,LEFT STRG KNKLE	1
F970R	FORD F150,RIGHT STG KNKLE	1
F970TBD-S	FORD F150,TORSION DROP BRKT	2

Part#	Description	QTY
HB-F970-TBB	HDWR BAG:F970 TORSION BRKTS	1
I-F970	INST SHEET:97-02 F150 F9701	1
<b>F9701B</b>	<b>COMP BOX, 6" 97-03 F150 4X4</b>	
F970FCM-S	FORD F150 FRONT CROSSMEMBER	1
F970RCM-S	FORD F150,REAR CROSSMEMBER	1
H-BOX F9701B	HDWR BOX: F9701B COMP BOX	1
<b>F9701BS</b>	<b>SYS BOX,6" 97-03 F150 4X4</b>	
F970FCM-S	FORD F150 FRONT CROSSMEMBER	1
F970RCM-S	FORD F150,REAR CROSSMEMBER	1
H-BOX F9701BS	HDWR BOX: F9701BS COMP BOX	1
<b>F970FSP</b>	<b>FRT SKDPLT 6" F150 97-03 4X4</b>	
F970SKID-S	FORD F150,FRONT SKID PLATE	1
F970SP-P	FORD F150,PASS.SIDE SKD PLT	1
F970SPD-S	FORD F150,DRV.SIDE SKD PLT	1
HB-F970-SP	HDWR BAG:F970 SKID PLATES	1
I-F970	INST SHEET:97-02 F150 F9701	1
<b>F9802MS</b>	<b>SYS BOX, 8" 00-02 F250/350</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9283-B	TRK BAR BRKT LWR 8" 3/99UP	1
SBE408	SWAY BAR LINKS FRT 5-8"2KF2	1
SBE406	SWAY BAR LINKS REAR 7-8" 2K	1
FA699	DROP PITMAN ARM 3/99/SD/EX	1
916X318X912SR	9/16 X 3 1/8 X 9 1/2 FSR	2
916X318X1012S	916X318X1012 SEMI-ROUND	2
58X312X1012U	5/8 X 3 1/2 X 10 1/2 RD UBT	4
FBL92-RBL99	BRAKE LINE SET 00-01 F250/3	1
CBL214	CARR BRG LWR KIT 2-2.25"	1
VT53229	VACUUM TUBING-5/32"X29" LON	2
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F9803MS</b>	<b>SYS BOX, 8" 03/99-99 F250/3</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9283-B	TRK BAR BRKT LWR 8" 3/99UP	1
SBE403	SWAY BAR LINKS FRT SD 5-8"	1
SBE406	SWAY BAR LINKS REAR 7-8" 2K	1
FA699	DROP PITMAN ARM 3/99/SD/EX	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X12U	5/8 X 3 1/2 X 12 U-BOLT RD	4
FBL99-RBL99	BRAKE LN SET 99 F250 SD	1
CBL214	CARR BRG LWR KIT 2-2.25"	1
VT53229	VACUUM TUBING-5/32"X29" LON	2
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>F980MS</b>	<b>COMP BOX, 8" 99-02/99 F250/</b>	
TB948-B	TRK BAR F-BRKT 8" 99-2/99 S	1
TB920-B	TRK BAR BRKT 99 F250	1
SBE403	SWAY BAR LINKS FRT SD 5-8"	1
SBE406	SWAY BAR LINKS REAR 7-8" 2K	1
FA600	PITMAN ARM 5.5 "DROP 80 FOR	1
916X318X912U	9/16 X 3 1/8 X 9 1/2 SQUARE	4
58X312X14U	5/8 X 3 1/2 X 14 U-BOLT RD	4
FBL99-RBL99	BRAKE LN SET 99 F250 SD	1
VT53229	VACUUM TUBING-5/32"X29" LON	2
CBL214	CARR BRG LWR KIT 2-2.25"	1
HB-F963M	HDWR BAG FOR F9603M/MS BOX	1
IF946M	INST/99&UP F2-350,EXC 4-8"	1
<b>FJ730</b>	<b>COM BOX,3" PLAT. FJ CRUISER</b>	
TOY20153-S	TOY 2.5-3" COIL-2" C/O SHK	2
SKY201-S	SKY 2"C/O SHK 3.68 LONG EYE	2
TSUMS-B	05 TOCOMA,UPPER SHOCK MOUNT	2
HB-FJ730	HDWR BAG FOR FJ730	1
FJ25R	2-2.5" FJ CRSR REAR CLS,PR	1
SBE702	END LINKS REAR 3" FJ CRUISR	1
TS5BB-S	SWAY BAR LWRG BLK,FOR TC530	2
I-FJ730	INST SHEET: 3" FJ COIL OVER	1
<b>FZ962</b>	<b>COM BOX,6"Z-LINK,00-03 F250</b>	
FZULF305-L	6"UPPER Z-LINK,30 3/16"LONG	2
FZLLR43-L	6"UPPER Z-LINK,42 3/4"LONG	2
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9203-B	TRK BAR BRKT LWR 3/99UP F25	1
SBE409	FRT SWAY BAR LKS,6-8" ZLINK	1
RB55	5.5" REAR BLOCK	2
58X312X18U	5/8 X 3 1/2 X 18 U-BOLT RD	4
HB-FZ9623	HDWR BAG:6&8"ZLNK 99-04F250	1
HB-ZLINKS	HDW BG,ZLINK,UPR/LOWR LINKS	1
I-FZ9468-W	WARNING PG:4,6,8"ZLINK F250	1
HB-FZCB60	HDWR BAG: FZCB60 X-MEM BRKT	1
FZCB60-B	CROSSMEMBER BRKT,00>ZLINK F	1
I-FZCB60	INST SHEET FOR FZCB60 BRKT	1
<b>FZ962S</b>	<b>SYS BOX,6"Z-LINK,00-03 F250</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9203-B	TRK BAR BRKT LWR 3/99UP F25	1
FZULF305-L	6"UPPER Z-LINK,30 3/16"LONG	2
FZLLR43-L	6"UPPER Z-LINK,42 3/4"LONG	2
SBE409	FRT SWAY BAR LKS,6-8" ZLINK	1
58X312X1012U	5/8 X 3 1/2 X 10 1/2 RD UBT	4
HB-FZ9623	HDWR BAG:6&8"ZLNK 99-04F250	1

Part#	Description	QTY
HB-ZLINKS	HDW BG,ZLINK,UPR/LOWR LINKS	1
I-FZ9468-W	WARNING PG:4,6,8"ZLINK F250	1
FZCB60-B	CROSSMEMBER BRKT,00>ZLINK F	1
HB-FZCB60	HDWR BAG: FZCB60 X-MEM BRKT	1
I-FZCB60	INST SHEET FOR FZCB60 BRKT	1
<b>FZ968</b>	<b>COM BOX ,MAIN 6&amp;8"ZLINK,99&gt;</b>	
FZCBD1-B	Z-LINK,UPPER C/O BRKT,DRIVE	1
FZCBP2-B	Z-LINK,UPPER C/O BRKT,PASSE	1
FZLFBDB3-B	Z-LINK FRAME BRACKET,DRIVER	1
FZLFBP4-B	Z-LINK FRAME BRKT,PASS	1
FZUABD5-B	Z-LINK,UPPER AXLE BRKT,DRIV	1
FZUABP6-B	Z-LINK,UPPER AXLE BRKT,PASS	1
FZLABD7-B	Z-LINK,LOWER AXLE BRKT,DRIV	1
FZLABP8-B	Z-LINK,LOWER AXLE BRKT,PASS	1
FZCFBP9-B	Z-LINK,UPR FRAME BACK PLATE	2
12X358X6U	1/2 X 3 5/8 X 6 U-BOLT ROUN	2
HB-ZLINK2	HDWR BAG 2,ZLINK PASS	1
HB-ZLINK3	HDWR BAG 3,ZLINK DRIVER SID	1
I-FZ968	INST SHEET:6&8"ZLNK 99>F250	1
<b>FZ982S</b>	<b>SYS BOX,8"Z-LINK 00-04 F250</b>	
TB9483-B	TRK BAR BRKT UPR 3/99UP F25	1
TB9283-B	TRK BAR BRKT LWR 8" 3/99UP	1
FZULF8-L	8" UPPER Z-LINK,30 1/2"LONG	2
FZLLR8-L	8" LOWER Z-LINK,43 3/8"LONG	2
SBE407	SWAY BAR LKS 3-4"FT 2K F250	1
SBE406	SWAY BAR LINKS REAR 7-8" 2K	1
58X312X1012U	5/8 X 3 1/2 X 10 1/2 RD UBT	4
FBL92-RBL99	BRAKE LINE SET 00-01 F250/3	1
CBL214	CARR BRG LWR KIT 2-2.25"	1
VT53229	VACUUM TUBING-5/32"X29" LON	2
HB-FZ9623	HDWR BAG:6&8"ZLNK 99-04F250	1
HB-ZLINKS	HDW BG,ZLINK,UPR/LOWR LINKS	1
I-FZ9468-W	WARNING PG:4,6,8"ZLINK F250	1
FZCB60-B	CROSSMEMBER BRKT,00>ZLINK F	1
HB-FZCB60	HDWR BAG: FZCB60 X-MEM BRKT	1
I-FZCB60	INST SHEET FOR FZCB60 BRKT	1
<b>FZ988</b>	<b>COMP BOX ,MAIN 8"ZLNK,99&gt;F2</b>	
FZ968	COM BOX ,MAIN 6&8"ZLINK,99>	1
<b>GC30</b>	<b>COMP BOX, 3" 93-98 GRAND CH</b>	
TJLL24-L	JEEP LWR LINKS TJX/JJZJ 2-4	2
GLLR3-L	GRAND CHER. LWR LINK REAR 3	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
JTBF	JEEP TRK BAR BRKT FRT	1
I-JC30	INST:JEEP COM,CHER,G.CH STD	1
<b>GC30-SVX</b>	<b>COM BOX,3"93-98GRD ZJ VALFX</b>	
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	2
DUL25-SX-L	DODGE UPR LINK 2-5" SGL FLE	2
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
HB-LL-NGSX	HDWR BAG:LWR LNK NG SGL FLX	1
HB-GC30-SX	HDWR BAG:GC30-SX,RR LWR LKS	1
SBE124	SWAY BAR END LINK G CHER 2.	1
JTBF	JEEP TRK BAR BRKT FRT	1
I-JC30-SVX	INST SHEET:JC30/GC30 VAL FX	1
<b>J24</b>	<b>COMP BOX, 2-4" 76-86 JEEP C</b>	
12X212X534U	1/2 X 2 1/2 X 5 3/4 U-BOLT	3
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	1
12X212X614U	1/2 X 2 1/2 X 6 1/4 U-BOLT	4
SE40J8	HDWR BAG/76-86 CJ FRONT 2&	1
SE45J8	HDWR BAG/ 76-86 CJ REAR 2&	1
IJ24	INSTRUCTIONS: JEEP CJ, PU	1
<b>J34</b>	<b>COMP BOX, 2-4" 55-75 CJ</b>	
12X212X534U	1/2 X 2 1/2 X 5 3/4 U-BOLT	3
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT RD	4
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	1
HB-J34	HDWR BAG FOR J32 & J34 KTS	1
IJ24	INSTRUCTIONS: JEEP CJ, PU	1
<b>JC30</b>	<b>COMP BOX, 3" 84-01 CHEROKEE</b>	
TJLL24-L	JEEP LWR LINKS TJX/JJZJ 2-4	2
JTBF	JEEP TRK BAR BRKT FRT	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
I-JC30	INST:JEEP COM,CHER,G.CH STD	1
<b>JC30S</b>	<b>SYS BOX, 3" 84-01 CHEROKEE</b>	
TJLL24-L	JEEP LWR LINKS TJX/JJZJ 2-4	2
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	4
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT RD	4
JTBF	JEEP TRK BAR BRKT FRT	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
HB-12	HDWR BAR/ 1/2 NUTS/WASHERS	1
I-JC30	INST:JEEP COM,CHER,G.CH STD	1
<b>JC30S-SVX</b>	<b>SYS BOX,3"CHER XJ,VALU FLEX</b>	
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	2
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	2
114RFTJN	1 1/4" RIGHT HAND JAM NUT	2
HB-LL-NGSX	HDWR BAG:LWR LNK NG SGL FLX	1
JTBF	JEEP TRK BAR BRKT FRT	1
SBE320	SWAY BAR END LINK CHER XJ	1

All Installation Instructions Are Available On Line At [Skyjacker.Com](http://Skyjacker.Com)

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	4
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT RD	4
HB-12	HDWR BAR 1/2 NUTS/WASHERS	1
I-JC30-SVX	INST SHEET:JC30/GC30 VAL FX	1
<b>JC30-SVX COM BOX,3"CHER XJ,VALU FLEX</b>		
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	2
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	2
114RFTJN	1 1/4" RIGHT HAND JAM NUT	2
HB-LL-NGSX	HDWR BAG/LWR LNK NG SGL FLX	1
JTBF	JEEP TRK BAR BRKT FRT	1
SBE320	SWAY BAR END LINK CHER XJ	1
I-JC30-SVX	INST SHEET:JC30/GC30 VAL FX	1
<b>JC60 COMP BOX, 89-99 CHER XJ 6"</b>		
JC60FCM-B-ALL	JEEP CHEROKEE CROSSMEMBER-	1
JULF24-FX	JEEP UPR FRT LINK FLEX SER	1
TBA60	FRT ADJ TRACK BAR 6"	1
ABSS2535	BUMP STOP SPACER,3.5" TALL	2
SBE326	SWAY BAR LINKS 84-00 JK 6"	1
JC60RBS-B	RR BUMP STOP SPACERS 6"XJ	2
HB-JC6065	HDWR BAG/ JC60/JC65 KIT BO	1
I-JC30-SVX	INST SHEET:JC30/GC30 VAL FLX	1
<b>JC68-DX COMP BOX, 6-8"89-99 XJ,DBL</b>		
JC60DFB-B	JEEP CHER 6-8" DRVR FRAME B	1
JC60DUB-B	JEEP CHER 6" DRVR UPPER BRK	1
JC60PFB-B	JEEP CHER 6"PASS FRAME BRKT	1
JC60PUB-B	JEEP CHER 6" PASS UPPER BRK	1
XJ55RS	XJ REAR SHACKLES FOR JC55R	1
JA500	PITMAN ARM JEEP XJ/ZJ/MJ	1
BL44-RBL44	BRAKE LINE SET 84-99 CHER 3	1
SBE638-6XJ	END LINKS REAR 6-8" CHER XJ	1
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	4
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT RD	4
HB-JC68	HDWR BAG FOR JC68 KIT BOX	1
TT200X1312-1	THREAD/THRD 2"OD X 13 1/2"	2
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	2
RR114X1L	NG ROD END 1 1/4" LEFT HAND	2
114RFTJN	1 1/4" RIGHT HAND JAM NUT	2
114FTJN	1 1/4" LEFT HAND JAM NUT	2
RR114-14	ROD END BUSHING 14MM ID	8
<b>JC68-SVX COM BOX,6-8"89-99XJ,VAL FLX</b>		
JC60DFB-B	JEEP CHER 6-8" DRVR FRAME B	1
JC60DUB-B	JEEP CHER 6" DRVR UPPER BRK	1
JC60PFB-B	JEEP CHER 6"PASS FRAME BRKT	1
JC60PUB-B	JEEP CHER 6" PASS UPPER BRK	1
XJ55RS	XJ REAR SHACKLES FOR JC55R	1
JA500	PITMAN ARM JEEP XJ/ZJ/MJ	1
JLL68-SVX	JEEP XJ,LOW LKS,6-8"VAL FLX	1
BL44-RBL44	BRAKE LINE SET 84-99 CHER 3	1
SBE638-6XJ	END LINKS REAR 6-8" CHER XJ	1
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	4
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT RD	4
HB-JC68	HDWR BAG FOR JC68 KIT BOX	1
I-JC601	INST SHEET:6"XJ,SGL,DBL FLX	1
<b>JC80 COMP BOX, 89-99 CHER XJ 8"</b>		
JC80FD30-CR	JEEP CHER XJ 8"DANA 30 CRAD	1
JC80FD30-DF	CHER 8" FRT DANA 30 DIFF BR	1
TJ60FD30-PB	TJ 6" FRT DANA 30 PASS BRKT	1
JC60FCM-B-ALL	JEEP CHEROKEE CROSSMEMBER-	1
JULF6TJ-DX	6" TJ FRT UPR LINKS DBL FLE	1
TBA80	FRT TRK BAR 8" TJ/XJ	1
BP51XJS	BUMP STOP W/10MM STUD-CHERO	2
ABSS2535	BUMP STOP SPACER,3.5" TALL	2
SBE328	SWAY BAR LINKS 84-01 XJ 8"	1
JC60RBS-B	RR BUMP STOP SPACERS 6"XJ	2
HB-FD30	HDWR BAG/DANA 30 CTR CRADL	1
HB-JC80	HDWR BAG FOR JC80 BOX	1
I-JC801	INST SHEET:8" RKR CHEROKEE	1
<b>JK24LLX COM BOX,2-4"07-10JK FLEX BX</b>		
JKLL24F-SX	JK LOWER FRONT FLX LKNS 2-5	1
JKLL24R-SX	JK LOWER RR FLX LINKS 2-5	1
I-JK24LLX	INST SHEET: JK24LLX	1
<b>JK2500 COMP BOX, 2.5" 07 JEEP JK</b>		
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
JK25RBS-S	JK 2.5" REAR BUMP STOP BRKT	2
HB-JK2500	HDWR BAG/JK 2.5" LIFT	1
I-JK2500	INST SHEET: 2.5" JEEP JK	1
<b>JK2500U COM BOX,2.5" JK UPGRADE BOX</b>		
JKLL24F	JK FRT LOWER LINKS 2-4"	1
JKLL24R	JK REAR LOWER LINKS 2-4"	1
SBE 126	DBL DISC END LINKS JEEP JK	1
SBE502	SWAY BAR END LINKS JK 2" RR	1
<b>JK2501 2.5"-3.5" JK COMP BOX W/LKS</b>		
JK250B	2.5"-3.5" JK COMP BOX W/BRC	1
JK2500U	COM BOX,2.5" JK UPGRADE BOX	1
<b>JK2501CR 2.5-3.5"JK COM BX W/RED LKS</b>		
JKLL24F-LCR	JK LWR FRONT LK 2-4" / RED	2
JKLL24R-LCR	JK LWR REAR LK 2-4" / RED	2

Part#	Description	QTY
JKBRC15-BCR	JK REAR TRK BAR BRC D44/RED	1
JK25RBS-S	JK 2.5" REAR BUMP STOP BRKT	2
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
SBE126	DBL DISC END LINKS JEEP JK	1
SBE502	SWAY BAR END LINKS JK 2" RR	1
HB-JK2500	HDWR BAG/ LWR LINK 1.75"ID	1
HB-JKBRC15	HARDWARE BAG FOR JKBRC15	1
HB-JKLL175	HDWR BAG: JK LWR LINK 1.75	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
I-JKBRC15	INST SHEET:JK D44 TRK BRACE	1
I-JK2500	INST SHEET: 2.5" JEEP JK	1
<b>JK2501-SVX COMP BOX, JK 2" VALUE FLEX</b>		
JKLL24F-SX-L	JK 2-5" LOWER LINK SNGL FLX	2
DLL23-SX-L	DODGE LWR LINK 2-3" SGL FLE	2
HB-JKLLF-SX	HDWR BAG:JK LWR SNG FLX FRT	1
HB-JKLLR-SX	HDWR BAG:JK LWR SNG FLX RR	1
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
JK25RBS-S	JK 2.5" REAR BUMP STOP BRKT	2
HB-JK2501	HDWR BAG/JK 2.5" LIFT	1
SBE126	DBL DISC END LINKS JEEP JK	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
I-JK2501-SVX	INST SHEET:2.5" JK VALUE FX	1
<b>JK250B 2.5"-3.5" JK COMP BOX W/BRC</b>		
JK2500	COMP BOX, 2.5" 07 JEEP JK	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
<b>JK401 COMP BOX, 4" JEEP JK</b>		
JKLL24F-L	JK LOWER FRONT LINK 2-4"	2
JKLL24R-L	JK LOWER REAR LINK 2-4"	2
HB-JKLL175	HDWR BAG: JK LWR LINK 1.75	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
ABSS3040	BUMP STOP SPACER 4" TALL	2
JKFTB-B	JK 4" FRONT TRK BAR BRKT	1
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
SBE126	DBL DISC END LINKS JEEP JK	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
HB-JK40	HDWR BAG/ JK 4"	1
HB-JK4BL	HDWR BAG:JK 4" BRK LINE BRK	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
I-JK401	INST SHEET: JEEP JK 4"	1
<b>JK401CR COM BOX,4-5"07-09JKW/REDLKS</b>		
JKLL24F-LCR	JK LWR FRONT LK 2-4" / RED	2
JKLL24R-LCR	JK LWR REAR LK 2-4" / RED	2
JKBRC15-BCR	JK REAR TRK BAR BRC D44/RED	1
JKBRC34-1CR	JK FRONT TRK BAR BRC / RED	1
JKBRC34-2CR	JK FRT TRK BAR SUP BRC / RED	1
JKBRC34-30CR	JK FRT TRK BAR BRC D30 / RED	1
JKBRC34-44CR	JK FRT TRK BAR BRC D44 / RED	1
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
JKFTB-B	JK 4" FRONT TRK BAR BRKT	1
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
ABSS3040	BUMP STOP SPACER 4" TALL	2
SBE126	DBL DISC END LINKS JEEP JK	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
HB-JKLL175	HDWR BAG: JK LWR LINK 1.75	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
HB-JK40	HDWR BAG/ JK 4"	1
HB-JK4BL	HDWR BAG:JK 4" BRK LINE BRK	1
HB-JKBRC15	HARDWARE BAG FOR JKBRC15	1
HB-JKBRC34	HARDWARE BAG FOR JKBRC34	1
I-JKBRC15	INST SHEET:JK D44 TRK BRACE	1
I-JKBRC34	INST SHEET FOR JKBRC34	1
I-JK401	INST SHEET: JEEP JK 4"	1
<b>JK401-SVX COMP BOX, JK 4" VALUE FLEX</b>		
JKLL24F-SX-L	JK 2-5" LOWER LINK SNGL FLX	2
DLL23-SX-L	DODGE LWR LINK 2-3" SGL FLE	2
HB-JKLLF-SX	HDWR BAG:JK LWR SNG FLX FRT	1
HB-JKLLR-SX	HDWR BAG:JK LWR SNG FLX RR	1
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
ABSS3040	BUMP STOP SPACER 4" TALL	2
JKFTB-B	JK 4" FRONT TRK BAR BRKT	1
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
SBE126	DBL DISC END LINKS JEEP JK	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
HB-JK40	HDWR BAG/ JK 4"	1
HB-JK4BL	HDWR BAG:JK 4" BRK LINE BRK	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
I-JK401-SVX	INST SHEET: JK 4" VALUE FLX	1
<b>JK40B COM BX,4"JEEP JK, NO LINKS</b>		
CAM700	CAM BOLTS JK UPR R/LWR FRT	2
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
ABSS3040	BUMP STOP SPACER 4" TALL	2

Part#	Description	QTY
JKFTB-B	JK 4" FRONT TRK BAR BRKT	1
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
HB-JK40	HDWR BAG/ JK 4"	1
HB-JK4BL	HDWR BAG:JK 4" BRK LINE BRK	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
I-JK40B	INST SHEET: 4" JK W/O LINKS	1
<b>JK40LA COMP BOX, 4" LONG ARM JK</b>		
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
JKFTB-B	JK 4" FRONT TRK BAR BRKT	1
JK24RTB-B	JK 2-4" REAR TRK BAR BRKT	1
SBE126	DBL DISC END LINKS JEEP JK	1
SBE504	SWAY BAR LINK JEEP JK REAR	1
ABSS3040	BUMP STOP SPACER 4" TALL	2
HB-JK4BL	HDWR BAG:JK 4" BRK LINE BRK	1
HB-JK40	HDWR BAG/ JK 4"	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
<b>JK46LA-SX COMP BOX, 4-6" LONG ARM BOX</b>		
JKLL46FD-SX-L	JK 4-6" FRONT DRVR LONG ARM	1
JKLL46FP-SX-L	JK 4-6" FRONT PASS LONG ARM	1
JKLL46RD-SX-L	JK 4-6" REAR DRVR LONG ARM	1
JKLL46RP-SX-L	JK 4-6" REAR PASS LONG ARM	1
JKUL46F-SX-L	JK UPPER FRONT LINK 4-6"	2
JKUL46R-SX-L	JK 4-6" REAR UPPER LINK	2
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
RR34X58R	NG ROD END 3/4" RIGHT HAND	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
3/4RFTJN	3/4" RIGHT HAND JAM NUT	4
RR114-14	ROD END BUSHING 14MM ID	8
JK46LAFB-D	JK 4-6" LONG ARM F BKT-DRVR	1
JK46LAFB-P	JK 4-6" LONG ARM F BKT-PASS	1
JK46LARLB-D	JK 4-6" LONG ARM R BKT-DRIV	1
JK46LARLB-P	JK 4-6" LONG ARM R BKT-PASS	1
HB-JK6FLB	HDWR BAG:JK 6"FRT LINK BRKT	1
HB-JK6RLB	HDWR BAG:JK 6"REAR LINK BRK	1
HB-JKULF-SX	HDWR BAG:JK UPPER FRT LINK	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	1
HB-JKULR-SX	HDWR BAG:JK UPPER REAR LINK	1
I-JK4601	INST SHEET: JK LONG ARM KT	1
<b>JK60LA COMP BOX, 6" JK LONG ARM</b>		
BP50	BUMP STOP FOR WRANGLER-TJ	1
ABSS3040	BUMP STOP SPACER 4" TALL	2
JK40RBS-S	JK 4" REAR BUMP STOP BRKT	2
JKFTB6-B	JK FRT TRACK BAR BRKT 6-7"	1
JK6RTB-B	JK 6" REAR TRACK BAR BRKT	1
SBE127	DBL DISC END LINKS 6" JK	1
SBE507	END LINKS 6" JK REAR	1
JKBL60	FRONT/REAR SET JK BRAKELINE	1
HB-JK60	HDWR BAG: 6" LONG ARM JK	1
JKBRC15	JK RR TRK BAR BRACE DANA 44	1
JKRBS10	JK POLY REAR BUMP STOP	2
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
<b>JKFTB35BR 3"-5"JK 4WD FRT TB BRKT&amp;BRC</b>		
JKFTB	JK FRT TRACK BAR BRKT 3-5"	1
JKBRC34	JK FRT TRK BAR BRACE D30&44	1
I-JK401	INST SHEET: JEEP JK 4"	1
<b>JP40 COMP BOX, 4" 74-83 JEEP PU/</b>		
916X314X1112U	9/16 X 3 1/4 X 11 1/2 U-BOL	4
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	2
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
RB35	3.5" REAR BLOCK	2
HB-JP40	HDWR BAG FOR JP40 KITS	1
IJP40K	JEEP CHEROKEE FULLSIZE KIT	1
<b>JP40S SYS BOX, 74-83 J10,20,CHER,</b>		
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	6
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	2
HB-JP40	HDWR BAG FOR JP40 KITS	1
IJP40K	JEEP CHEROKEE FULLSIZE KIT	1
<b>JP45 COMP BOX, 84-91 GRAND WAGON</b>		
916X314X1112U	9/16 X 3 1/4 X 11 1/2 U-BOL	4
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	2
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	2
RB35	3.5" REAR BLOCK	2
SBE506	USED IN JP45/JP45S BOX	1
JB40	TRK BAR EXT BRKT YJ-REAR	1
JB40	TRK BAR EXT BRKT YJ-REAR	1
HB-JP40	HDWR BAG FOR JP40 KITS	1
IJP40K	JEEP CHEROKEE FULLSIZE KIT	1
<b>JP45S SYS BOX, 84-91 GRAND WAGONE</b>		
916X3X712U	9/16 X 3 X 7 1/2 U-BOLT RD	6
916X334X814U	9/16 X 3 3/4 X 8 1/4 U-BOLT	2
SBE506	USED IN JP45/JP45S BOX	1
JB40	TRK BAR EXT BRKT YJ-REAR	1
JB40	TRK BAR EXT BRKT YJ-REAR	1
HB-JP40	HDWR BAG FOR JP40 KITS	1

All Installation Instructions Are Available On Line At [Skyjacker.Com](http://www.skyjacker.com)

# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
UP40K	JEEP CHEROKEE FULLSIZE KIT	1
L24S	SYS BOX, 64-80 FJ40 LANDCRU	
916X314X712U	9/16 X 3 1/4 X 7 1/2 U-BOLT	7
916X314X912U	9/16 X 3 1/4 X 9 1/2 U-BOLT	1
HB-LAND	HDWR BAG FOR TOY LANDCRUIS	1
ITL	INSTRUCTIONS: TOY LANDCRUIS	1
LIB250	COMP BOX,2.5" JEEP LIBERTY	
LIB25FS	LIBERTY FRONT COIL 2.5"	2
9050S	PERFORMANCE SHK 4 STRUT APP	2
LSM279	LIBERTY SCOIL MOUNT,2.79"	2
HB-LIB250	HDWR BAG: LIBERTY LIB250	1
PSD	PLATINUM SHOCK DECAL	2
I-LIB250	INST SHEET: LIBERTY KJ	1
NG114L-12	1 1/4" NG ROD END LH-12MM	
RR114X1L	NG ROD END 1 1/4" LEFT HAND	1
114LFTJN	1 1/4" LEFT HAND JAM NUT	1
RR114-12	ROD END BUSHING 12MM ID	2
NG114L-14	1 1/4" NG ROD END LH-14MM	
RR114X1L	NG ROD END 1 1/4" LEFT HAND	1
RR114-14	ROD END BUSHING 14MM ID	2
114LFTJN	1 1/4" LEFT HAND JAM NUT	1
NG114R-14	1 1/4" NG ROD END RH-14MM	
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	1
RR114-14	ROD END BUSHING 14MM ID	2
114RFTJN	1 1/4" RIGHT HAND JAM NUT	1
NG34L-10	3/4" NG ROD END LH-10MM	
RR34X58L	NG ROD END 3/4" LEFT HAND	1
RR34-10	ROD END BUSHING 10MM ID	2
34LFTJN	3/4" LEFT HAND JAM NUT	1
NG34R-10	3/4" NG ROD END RH-10MM	
RR34X58R	NG ROD END 3/4" RIGHT HAND	1
RR34-10	ROD END BUSHING 10MM ID	2
34RFTJN	3/4" RIGHT HAND JAM NUT	1
S24	SYS BOX, 2-4" 72-82 SCOUT I	
12X234X6U	1/2 X 2 3/4 X 6 U-BOLT RD	6
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	2
12X334X912U	1/2 X 3 3/4 X 9 1/2 U-BOLT	2
HB-S40	HDWR BAG FOR S20 & S40 KIT	1
IS24	INSTRUCTIONS: SCOUT 2,4"	1
SFA-JC601	SUB FRAME ASSY/6-8"CHERO XJ	
JC60DFB-B	JEEP CHER 6-8" DRVR FRAME B	1
JC60DUB-B	JEEP CHER 6" DRVR UPPER BRK	1
JC60FCM-B-ALL	JEEP CHEROKEE CROSSMEMBER-	1
JC60PFB-B	JEEP CHER 6"PASS FRAME BRKT	1
JC60PUB-B	JEEP CHER 6" PASS UPPER BRK	1
HB-SFA	HDWR BAG:SUB FRM ASSY/JC601	1
SKDGE30	3" DODGE COIL-OVER	
SKTJ6-S	PLATINUM TJ 6" SHOCK	2
SKEXTDGE-SEAT	EXTENDED DODGE SEAT	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	4
DSK30S	DODGE PLATINUM COIL, 3"1/2	2
SW250	SPANNER WRENCH ALL 2.5" BOD	1
I-PSA	INST:PLATINUM COILOVER ASSY	1
SKDGE45	4.5" DODGE, PLATINUM COIL-O	
SKDGE45-S	COIL-OVER PLATINUM SHOCK,4.	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	4
DSK45S	DODGE PLATINUM COIL, 4.5" V	2
I-PSA	INST:PLATINUM COILOVER ASSY	1
SKDGE50	5" DODGE PLATINUM COIL-OVER	
SKY2525-S	SKY 2.5"C/O SHK 25.425 EXT	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	4
DSK50S	DODGE PLATINUM COIL, 5" 1/2	2
I-PSA	INST:PLATINUM COILOVER ASSY	1
SKDGE70	7" DODGE PLATINUM COIL-OVER	
SKDGE45-S	COIL-OVER PLATINUM SHOCK,4.	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	4
DSK70S	DODGE PLATINUM COIL,7" 1/2	2
I-PSA	INST:PLATINUM COILOVER ASSY	1
SKDGE75	7" DODGE PLATINUM COIL-OVER	
SKDGE75-S	COIL-OVER PLATINUM SHOCK 7"	2
SKSPC-DGEUPR	SHOCK SPACERS-DODGE UPPER	4
DSK75S	DODGE PLATINUM COIL, 7" V10	2
I-PSA	INST:PLATINUM COILOVER ASSY	1
SKDGBE1	BRKT BOX, ALL DGE, PLATINUM	
DSKUP-BKT	DODGE UPPER BRACKET	2
DSKUP-RING	DODGE UPPER RING	2
HB-SKDGBE1	HDWR BAG FOR DODGE	1
I-PSDGBE1	INST SHEET:PLAT COIL-OVERS	1
SKTJB1	BRKT BOX, ALL TJ, PLATINUM	
TJSKDM-B	TJ DRIVER, MAIN BRACKET	1
TJSKDF-P	TJ DRIVER, FRONT PLATE	1
TJSKDR-P	TJ DRIVER, REAR PLATE	1
TJSKPM-B	TJ PASS, MAIN BRACKET	1
TJSKPF-P	TJ PASS, FRONT PLATE	1
TJSKPR-P	TJ PASS, REAR PLATE	1
TJSKD30-L	TJ DANA 30 BOTTOM LEFT PLAT	1
TJSKD30-R	TJ DANA 30 BOTTOM RIGHT PLA	1

Part#	Description	QTY
HB-SKTJB1	HDWR BAG FOR TJ	1
I-POSTJB1	INST:PLATINUM TJ BRKT ASSEM	1
SKTOY30	3" TACOMA PLATINUM COIL-OVE	
TOY20153-S	TOY 2.5-3" COIL-2" C/O SHK	2
SKY202-S	SKY 2"C/O SHK 1.95 SHRT EYE	2
HB-SKTTTC	HDWR BAG FOR PLATINUM TACO	1
I-POSTOY30	INST. SHEET FOR SKTOY30	1
SKTUN30	PLATINUM C/O-3"TOYOTA TUNDR	
TOY20153-S	TOY 2.5-3" COIL-2" C/O SHK	2
SKY202-S	SKY 2"C/O SHK 1.95 SHRT EYE	2
HB-SKTTCT	HDWR BAG FOR PLATINUM TACO	1
I-POSTOY30	INST. SHEET FOR SKTOY30	1
T303P	COMP BOX, 3" 79-85 TOYOTA	
HB-T303P	HDWR BAG FOR T303P KITS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T303PS	SYS BOX, 3" 79-85 TOYOTA SY	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X214X812U	9/16 X 2 1/4 X 8 1/2 U-BOLT	4
SE35T	SPRING BUSH KIT REAR 79-88	1
HB-T305P	HDWR BAG FOR T305P&S 303PS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T305P	COMP BOX, 5" 79-85 TOYOTA	
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
916X214X812U	9/16 X 2 1/4 X 8 1/2 U-BOLT	4
TB30	TRK BAR EXT BRKT79-85 TOY	1
RB45	4.5" REAR BLOCK	2
HB-T305P	HDWR BAG FOR T305P&S 303PS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T305PS	SYS BOX, 5" 79-85 TOYOTA SY	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X214X812U	9/16 X 2 1/4 X 8 1/2 U-BOLT	4
TB30	TRK BAR EXT BRKT79-85 TOY	1
SE35T	SPRING BUSH KIT REAR 79-88	1
HB-T305P	HDWR BAG FOR T305P&S 303PS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T307P	COMP BOX, 7" 79-85 TOYOTA	
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
916X214X812U	9/16 X 2 1/4 X 8 1/2 U-BOLT	4
RB45	4.5" REAR BLOCK	2
TB30-B	TRK BAR EXT BRKT TOY SINGLE	1
HB-T307P	HDWR BAG FOR T307P&S KITS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T307PS	SYS BOX, 7" 79-85 TOYOTA SY	
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
916X214X812U	9/16 X 2 1/4 X 8 1/2 U-BOLT	4
TB30-B	TRK BAR EXT BRKT TOY SINGLE	1
SE35T	SPRING BUSH KIT REAR 79-88	1
HB-T307P	HDWR BAG FOR T307P&S KITS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T307RS	SYS BOX, 7" 84-85 TOYOTA 4R	
R820	2" REAR BLOCK	2
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOL	4
916X214X812U	9/16 X 2 1/4 X 8 1/2 U-BOLT	4
TB30-B	TRK BAR EXT BRKT TOY SINGLE	1
SE35T	SPRING BUSH KIT REAR 79-88	1
HB-T307P	HDWR BAG FOR T307P&S KITS	1
IT357	INSTRUCTIONS: TOYOTA 3,5,7"	1
T421R	COMP BOX, 86-95 TOYOTA	
R835	3.5" REAR BLOCK	2
916X212X1012	1 U-BOLT WITH NUTS	4
I-BUK	INST. SHEET BLOCK/U-BOLT KI	1
T421RS	COMP BOX, 86-95 TOYOTA	
916X212X7	1 U-BOLT WITH NUTS	4
SE39T	SPRING BUSH KIT REAR 89-UP	1
T422	COMP BOX, 4" 86-95 TOYOTA C	
T4SP-B	TOY 4" SKID PLATE BRKT	1
401-L	TOY 4" SPINDLE - LEFT	1
401-R	TOY 4" SPINDLE - RIGHT	1
T4FCM-B	TOY 4" FRT A-ARM CROSS MEMB	1
T4RCM-B	TOY 4"REAR A-ARM CROSS MEMB	1
T4DDB-B	TOY 4" DRVR DIFF DROP BRKT	1
T4CDB-B	TOY 4" CTR DIFF DROP BRKT	1
T4PDB-B	TOY 4" PASS DIFF DROP BRKT	1
T4BP-B	TOY 4" BUMP STOP SPACER BRK	4
T4SBL-L	TOY 4" SWAY BAR LWR BRKT-LE	1
T4SBL-R	TOY 4" SWAY BAR LWR BRKT-RI	1
BK-T421	BRAKE LINE HDWR/ TOY IFS	1
HB-T421	HDWR BAG/ 86-95 TOY IFS	1
IT422/432	INST:86-95 TOYOTA IFS PKUP	1
MACHINE 401-L	MACHINE 401-L TOY SPINDLE	1
MACHINE 401-R	MACHINE 401-R TOY SPINDLE	1
T431R	COMP BOX, 89-95 TOYOTA STAN	
R835	3.5" REAR BLOCK	2
916X318X912	1 U-BOLT WITH NUTS	4
T431RS	SYS BOX, 89-95 TOYOTA STAND	
916X318X812	1 U-BOLT WITH NUTS	4
SE39T	SPRING BUSH KIT REAR 89-UP	1

Part#	Description	QTY
TC530	COM BOX,2.5-3" 05-06 TACOMA	
TOY20153-S	TOY 2.5-3" COIL-2" C/O SHK	2
SKY201-S	SKY 2"C/O SHK 3.68 LONG EYE	2
T5USM-B	05 TOCOMA,UPPER SHOCK MOUNT	2
T5SBB-S	SWAY BAR LWRG BLK,FOR TC530	2
916X212X7U	9/16 X 2 1/2 X 7 U-BOLT SQ	4
HB-TC530	HDWR BAG FOR TC530	1
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
I-TC530	INST SHEET: 2.5-3"05>TACOMA	1
TJ250	COMP BX,2.5"97-06TJ W/O LKS	
CAM500	CAMBOLTS,UPPER REAR 98>TJ	1
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
HB-TJ25	HDWR BAG/ TJ 2.5" LIFT	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
TJ251	COMP BOX, 2.5" 97-02 TJ STA	
TJLL24-L	JEEP LWR LINKS TJX/JZJ 2-4	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ25	HDWR BAG/ TJ 2.5" LIFT	1
TCLTJ25	TRANSFER CASE LWR TJ 2.5"	1
TCL10SX2012-R	TRANSFER CASE LWR 1X1.5X20.	1
TCL10SX2358-L	TRANSFER CASE LWR 1X1.5X23.	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
TJ251CR	COM BX:2.5"97-02TJ W/REDLKS	
TJLL24-LCR	JEEP RED LWR LKS TJX/JZJ	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
TCLTJ25	TRANSFER CASE LWR TJ 2.5"	1
TCL10SX2012CR	TRANS CASE LWR RED 1X1.5X20	1
TCL10SX2358CR	TRANS CASE LWR RED 1X1.5X23	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ25	HDWR BAG/ TJ 2.5" LIFT	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
TJ251-SVX	COMP BOX, 2.5" 97-02 TJ VAL	
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	4
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
RRSP20-S	STRG GEAR BX SKID PLATE R/R	1
TCL10SX2012-R	TRANSFER CASE LWR 1X1.5X20.	1
TCL10SX2358-L	TRANSFER CASE LWR 1X1.5X23.	1
SBE120	DBL DISC LINKS TJ 2-4" FRT	1
SBE500	SWAY BAR END LINKS REAR PR	1
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
TCLTJ25	TRANSFER CASE LWR TJ 2.5"	1
HB-TJ25	HDWR BAG/ TJ 2.5" LIFT	1
HB-TJ24SVX	HDWR BAG/ 284" TJ VAL FLEX	1
I-TJ24SVX	INST SHEET:2.5&4"VALUE FLEX	1
TJ253	COMP BOX, 2.5" 2003 TJ STA	
TJLL24-L	JEEP LWR LINKS TJX/JZJ 2-4	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ253	HDWR BAG:TJ253,-DX,-SX,-SVX	1
TCLTJ253	HDWR BAG:TJ253,-DX,-SX,-SVX	1
TCL10SX2234-1	TRANSFER CASE LWR 1"X1.5"S2	2
TCL10SX2-1	TRANSMISSION LWR 1"X1.5"X2"	2
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
TJ253CR	COM BOX:2.5"03-06TJW/REDLKS	
TJLL24-LCR	JEEP RED LWR LKS TJX/JZJ	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
TCLTJ253	HDWR BAG:TJ253,-DX,-SX,-SVX	1
TCL10SX2234CR	TRANS CASE LWR RED 1X1.5X22	2
TCL10SX2CR	TRANS LWR RED 1X1.5X2	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ253	HDWR BAG:TJ253,-DX,-SX,-SVX	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
TJ253-SVX	COMP BOX ,2.5"03 TJ VALUE F	
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	4
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
RRSP20-S	STRG GEAR BX SKID PLATE R/R	1
TCL10SX2234-1	TRANSFER CASE LWR 1"X1.5"S2	2
TCL10SX2-1	TRANSMISSION LWR 1"X1.5"X2"	2
SBE120	DBL DISC LINKS TJ 2-4" FRT	1
SBE500	SWAY BAR END LINKS REAR PR	1
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
TCLTJ253	HDWR BAG:TJ253,-DX,-SX,-SVX	1
HB-TJ253	HDWR BAG:TJ253,-DX,-SX,-SVX	1
HB-TJ24SVX	HDWR BAG/ 284" TJ VAL FLEX	1
I-TJ24SVX	INST SHEET:2.5&4"VALUE FLEX	1
TJ401	COMP BOX, 4" 97-02 TJ STAND	
TJLL24-L	JEEP LWR LINKS TJX/JZJ 2-4	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
BP50S	BUMP STOP WRANGLER TJ	2
JA750	PITMAN ARM T.J.Y J W/PWR STRG	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ40	HDWR BAG/ TJ 4"	1
TCLTJ40	TRANSFER CASE LWR TJ 4"	1
SBE401	END LINKS,FRONT 97-06TJ 4"	1

All Installation Instructions Are Available On Line At [Skyjacker.Com](http://www.skyjacker.com)



# COMPONENT BOX BREAKDOWN

Part#	Description	QTY
SBE500	SWAY BAR END LINKS REAR PR	1
TCL15SX2012-R	TRANSFER CASE LWR 1.5SQX20	1
TCL15SX2358-L	TRANSFER CASE LWR 1.5SQX23	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
<b>TJ401CR</b>	<b>COM BOX:4"97-02TJ W/RED LKS</b>	
JLL24-LCR	JEEP RED LWR LKS TJ/X/JZJ	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
BP50S	BUMP STOP WRANGLER TJ	2
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
SBE401	END LINKS.FRONT 97-06TJ 4"	1
SBE500	SWAY BAR END LINKS REAR PR	1
TCLTJ40	TRANSFER CASE LWR TJ 4"	1
TCL15SX2012CR	TRANS CASE LWR RED 1.5X2012	1
TCL15SX2358CR	TRANS CASE LWR RED 1.5X2358	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ40	HDWR BAG/ TJ 4"	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
<b>I-J401-SVX</b>	<b>COMP BOX, 4" 97-02 TJ VALUE</b>	
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	4
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
RRSP20-S	STRG GEAR BX SKID PLATE R/R	1
TCL15SX2012-R	TRANSFER CASE LWR 1.5SQX20	1
TCL15SX2358-L	TRANSFER CASE LWR 1.5SQX23	1
SBE120	DBL DISC LINKS TJ 2-4" FRT	1
SBE500	SWAY BAR END LINKS REAR PR	1
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
BP50S	BUMP STOP WRANGLER TJ	2
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
TCLTJ40	TRANSFER CASE LWR TJ 4"	1
HB-TJ40	HDWR BAG/ TJ 4"	1
HB-TJ24SVX	HDWR BAG/ 2&4" TJ VAL FLEX	1
I-TJ24SVX	INST SHEET:2.5&4"VALUE FLEX	1
<b>TJ403</b>	<b>COMP BOX,4" 03-06TJ STANDRD</b>	
TJLL24-L	JEEP LWR LINKS TJ/X/JZJ 2-4	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
BP50S	BUMP STOP WRANGLER TJ	2
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ43	HDWR BAG:TJ403,-DX,-SX,-SVX	1
TCLTJ43	TRANSFER CASE HDWR BAG/ 4"	1
SBE401	END LINKS.FRONT 97-06TJ 4"	1
SBE500	SWAY BAR END LINKS REAR PR	1
TCL15SX2234-1	TRANSFER CASE LWR 1.5SQX22	2
TCL15SX2-1	TRANSMISSION LWR 1.5SQX2"	2
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
<b>TJ403CR</b>	<b>COM BOX:4"03-06TJ W/RED LKS</b>	
JLL24-LCR	JEEP RED LWR LKS TJ/X/JZJ	4
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
BP50S	BUMP STOP WRANGLER TJ	2
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
SBE401	END LINKS.FRONT 97-06TJ 4"	1
SBE500	SWAY BAR END LINKS REAR PR	1
TCLTJ43	TRANSFER CASE HDWR BAG/ 4"	1
TCL15SX2234CR	TRANS CASE LWR RED 1.5X2234	2
TCL15SX2CR	TRANS LWR RED 1.5 X 2	2
HB-LL175	HDWR BAG/ LWR LINK 1.75"ID	2
HB-TJ43	HDWR BAG:TJ403,-DX,-SX,-SVX	1
I-TJ24	INSTRUCTIONS: WRAN TJ, 2-4"	1
<b>I-TJ403-SVX</b>	<b>COMP BOX, 4"2003TJ VALUE FL</b>	
JLL24-SX-L	JEEP LWR LINK 2-4"SGL FLEX	4
RR114X1R	NG ROD END 1 1/4"RIGHT HAND	4
114RFTJN	1 1/4" RIGHT HAND JAM NUT	4
RRSP20-S	STRG GEAR BX SKID PLATE R/R	1
TCL15SX2234-1	TRANSFER CASE LWR 1.5SQX22	2
TCL15SX2-1	TRANSMISSION LWR 1.5SQX2"	2
SBE120	DBL DISC LINKS TJ 2-4" FRT	1
SBE500	SWAY BAR END LINKS REAR PR	1
TJRTB-B	TJ REAR TRK BAR RELOC BRKT	1
BP50S	BUMP STOP WRANGLER TJ	2
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
TCLTJ43	TRANSFER CASE HDWR BAG/ 4"	1
HB-TJ43	HDWR BAG:TJ403,-DX,-SX,-SVX	1
HB-TJ24SVX	HDWR BAG/ 2&4" TJ VAL FLEX	1
I-TJ24SVX	INST SHEET:2.5&4"VALUE FLEX	1
<b>TJ40RRX</b>	<b>COM BOX:4"97-06TJ RCK RDY 1</b>	
TJ60DFB-B	TJ 6-9"/DRVR FRAME BRACKET	1
TJ60PFB-B	TJ 6-9"/ PASS FRAME BRKT	1
JLL2501-SVX	TJ LWR LNK BENT SGL FLEX/PR	1
JLL2501-SVX	TJ LWR LNK BENT SGL FLEX/PR	1
TJRTB	TJ REAR TRACK BAR BRACKET	1
FBL44-RBL98	BRAKE LINE SET 97-01 TJ	1
TJRSB10	99>TJ,REAR SHOCK RELOC BRKT	1
HB-TJ40RRX	HDWR BAG: TJ40RRX COM BOX	1
JSRB231A	NP231 TRANSFER CASE SHIFTER	1
I-TJ40RRX1	INSTRUCTION SHEET: TJ40RRX	1
<b>TJ40RRR1</b>	<b>COM BOX,4"97-06TJ RCK RDY 1</b>	

Part#	Description	QTY
SBE120	DBL DISC LINKS TJ 2-4" FRT	1
SBE500	SWAY BAR END LINKS REAR PR	1
BP50S	BUMP STOP WRANGLER TJ	2
RRSP20	STRG BX SKID PLATE 97-06 TJ	1
TBA10	ADJ FRT TRK BAR W/STRG ST	1
TJ403SP	SKID PLATE BRKTS/2003 TJ	1
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
<b>TJ60RR1</b>	<b>COM BOX,6"97-06TJ RCK RDY 1</b>	
RRSP20	STRG BX SKID PLATE 97-06 TJ	1
SBE226	SWAY BAR END LINK FRT 6" TJ	1
SBE606	END LINKS REAR 97-01 6-8" T	1
TBA60	FRT ADJ TRACK BAR 6"	1
BP50S	BUMP STOP WRANGLER TJ	4
ABSS252	BUMP STOP SPACR,3"OD-2"TALL	4
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
TJ68SP	SKID PLT BRKTS,03->TJ 6",8"	1
HB-ABSS252	HDWR BAG FOR ABSS252	1
I-TJ60RRX1	INSTRUCTION SHEET: TJ60RR1	1
<b>TJ60URRX</b>	<b>COM BX,6"04-06TJ ULT RCKRDY</b>	
TJ65UDFB-B	TJ,6"DRVR FRAME BRKT,05UNLT	1
TJ65UPFB-B	TJ,6"PASS FRAME BRKT,05UNLT	1
TJ6VXRDRB-B	6"TTJ VAL FLEX,REAR DRVR REL	1
TJ6VXPRRB-B	6"TTJ VAL FLEX,REAR PASS REL	1
TJ6VXFDRB-B	6"TTJ VAL FLEX,FRT DRVR RELO	1
TJ6VXFPRB-B	6"TTJ VAL FLEX,FRT PASS RELO	1
JLL2501-SVX	TJ LWR LNK BENT SGL FLEX/PR	2
TJ60RTB	TJ 6-8"/REAR TRACK BRKT KIT	1
JSRB2315U	JEEP SHIFT REL BRKT/05 UNLT	1
FBL44	FRONT BRK LN,84-01CHER,3-6"	1
TJRSB10	99>TJ,REAR SHOCK RELOC BRKT	1
RBL60U-S	REAR BRK EXT,6"VAL FX,UNLTD	1
HB-TJ68RRX	HDWR BAG: TJ68RRX COM BOX	1
<b>TJ60X2</b>	<b>COM BOX,6"97-06TJ RCK RDY 2</b>	
JULF24-FX	JEEP UPR FRT LINK FLEX SER	1
JULR24-SX	JEEP UPR REAR LINK.SGL FLEX	1
TBA60	FRT ADJ TRACK BAR 6"	1
SBE226	SWAY BAR END LINK FRT 6" TJ	1
SBE606	END LINKS REAR 97-01 6-8" T	1
BP50S	BUMP STOP WRANGLER TJ	4
ABSS252	BUMP STOP SPACR,3"OD-2"TALL	4
RRSP20	STRG BX SKID PLATE 97-06 TJ	1
TJ68SP	SKID PLT BRKTS,03->TJ 6",8"	1
JA750	PITMAN ARM TJ,YJ W/PWR STRG	1
HB-ABSS252	HDWR BAG FOR ABSS252	1
I-TJ68X2	INSTR SHEET:TJ60X2 & TJ80X2	1
<b>TJ68RRX</b>	<b>COM BOX,6-8"97-06TJ RCK RDY</b>	
TJ60DFB-B	TJ 6-9"/DRVR FRAME BRACKET	1
TJ60PFB-B	TJ 6-9"/ PASS FRAME BRKT	1
TJ6VXFURB	6-8"TTJ,VAL FX,FRNT UPR BRKT	1
TJ6VXRURB	6-8"TTJ,VAL FX,REAR UPR BRKT	1
JLL2501-SVX	TJ LWR LNK BENT SGL FLEX/PR	1
JLL2501-SVX	TJ LWR LNK BENT SGL FLEX/PR	1
TJ60RTB	TJ 6-8"/REAR TRACK BRKT KIT	1
FBL44-RBL98	BRAKE LINE SET 97-01 TJ	1
TJRSB10	99>TJ,REAR SHOCK RELOC BRKT	1
JSRB231A	NP231 TRANSFER CASE SHIFTER	1
HB-TJ68RRX	HDWR BAG: TJ68RRX COM BOX	1
<b>TJ80X2</b>	<b>COM BOX,8"97-06TJ RCK RDY 2</b>	
JULF24-FX	JEEP UPR FRT LINK FLEX SER	1
JULR24-SX	JEEP UPR REAR LINK.SGL FLEX	1
TBA80	FRT TRK BAR 8" TJ/XJ	1
RTBA168	REAR TRACK BAR TJ 1 HEIM	1
SBE228	SWAY BAR END LINKS FRT 8" T	1
SBE606	END LINKS REAR 97-01 6-8" T	1
BP50S	BUMP STOP WRANGLER TJ	4
ABSS2535	BUMP STOP SPACER,3.5" TALL	2
ABSS3035	BUMP STOP 3X3.5" 2-FLATS	2
RRSP20	STRG BX SKID PLATE 97-06 TJ	1
TJ68SP	SKID PLT BRKTS,03->TJ 6",8"	1
JA500	PITMAN ARM JEEP XJ/ZJ/MJ	1
HB-ABSS35	HDWR BAG: ABSS2535/ABSS3035	1
I-TJ68X2	INSTR SHEET:TJ60X2 & TJ80X2	1
<b>TSQ25</b>	<b>COMP BOX, 2.5" 01-02 TOY SE</b>	
T25	MASTER BAG TOY VAL KITS	1
HB-TSQ25	HDWR POLY BAG FOR TSQ25	1
TSQ3297R	POLY SPACER SEQUOIA 2.5" RE	2
B10RS	RED BOOT	2
BTIE	RED BOOT TIE	2
I-TSQ25	INST. SHEET FOR TSQ25	1
<b>TU710R</b>	<b>COM BOX: 3" 07 TUNDRA REAR</b>	
916X212X834U	9/16 X 2 1/2 X 8 3/4 U-BOLT	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
RBF125	1.25" FLAT REAR BLOCK	2
<b>TU730</b>	<b>COM BOX: 1-3" 07 TUNDRA C/O</b>	
SKY203-S	SKY 2" C/O SHK 5.26 LONG EYE	2
TOY20153-S	TOY 2.5-3" COIL-2" C/O SHK	2
TU705M-B	07 TUNDRA UPPER COILOVR MNT	2

Part#	Description	QTY
HB-TU730	HDWR BAG: TU730 TUNDRA KIT	1
I-TU730	INST SHEET:07TUNDRA 3" C/O	1
<b>TU761A</b>	<b>COMP BOX,6" 07 TUNDRA 4X4</b>	
TU76SSTS	07 TUNDRA 5-6"ADJ PERF STRT	2
TU76L	6" 07 TUNDRA, DRIVR KNUCKLE	1
TU76R	6" 07 TUNDRA, PASS KNUCKLE	1
TU76FCM-B	TUNDRA 6" FRT CROSSMEMBER	1
TU76RCM-B	TUNDRA 6" REAR CROSSMEMBER	1
TU76BSB-D	TUNDRA 6" BUMP STOP DRIVER	1
TU76BSB-P	TUNDRA 6" BUMP STOP PASSNGR	1
TU76SBL	END LINKS 6" 07 TUNDRA	1
TUCBL214-B	TUNDRA, 2.25" CARR BRG LWR	2
SBL20	2.5"SWAY BAR LWRG BRACKETS	1
FBL07T	FRT BRK LINES,6" 07> TUNDRA	1
RBL07T	REAR BRK LINES 6" 07 TUNDRA	1
HB-TU76BL/CBL	HDWR BAG:TU76 BRK LN / CBL	1
HB-TU76S/DB	HDWR BAG:TU76 BMP STP/DIFF	1
HB-TU76C	HDWR BAG:REAR X-MEMBER CAPS	1
HB-TU76-CM	HDWR BAG:TU76 / 6" X-MEMBER	1
HB-TU76SSE	HDWR BAG:STERRING STOP EXT	1
I-TU761	INST SHEET: 07 TUNDRA 6"	1
<b>TU761PR</b>	<b>COM BOX, 6" 07 TUNDRA REAR</b>	
916X212X12U	9/16 X 2 1/2 X 12 U-BOLT SQ	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
RBF425	4.25" FLAT REAR BLOCK	2
<b>TU761PRS</b>	<b>REAR SYSTEM BOX,6" 07TUNDRA</b>	
916X212X734U	9/16 X 2 1/2 X 7 3/4 U-BOLT	4
HB-916	HDWR BAG/ 8 - 9/16" NYLON	1
<b>YJ20</b>	<b>COMP BOX, 2.5" 86.5-95 JEEP</b>	
12X212X534U	1/2 X 2 1/2 X 5 3/4 U-BOLT	2
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	2
12X212X614U	1/2 X 2 1/2 X 6 1/4 U-BOLT	4
HB-YJ20	HDWR BAG FOR YJ20 KITS	1
IYJ	INSTRUCTIONS: WRANGLER YJ	1
<b>YJ25</b>	<b>COMP BOX, 2.5" 87-95 JEEP Y</b>	
12X212X534U	1/2 X 2 1/2 X 5 3/4 U-BOLT	2
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	2
12X212X614U	1/2 X 2 1/2 X 6 1/4 U-BOLT	4
HB-YJ25	HDWR BAG FOR YJ25 ROCKREAD	1
IYJ	INSTRUCTIONS: WRANGLER YJ	1
<b>YJ40</b>	<b>COMP BOX, 4" 87-95 JEEP YJ</b>	
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	2
12X212X614U	1/2 X 2 1/2 X 6 1/4 U-BOLT	6
JB40F-B	TRK BAR EXT BRKT YJ-FRT-SGL	1
JB40F-B	TRK BAR EXT BRKT YJ SGL	1
HB-YJ40	HDWR BAG FOR YJ40 KITS	1
IYJ	INSTRUCTIONS: WRANGLER YJ	1
<b>YJ45</b>	<b>COMP BOX, 4" 87-95 JEEP YJ</b>	
12X318X612U	1/2 X 3 1/8 X 6 1/2 U-BOLT	2
12X212X614U	1/2 X 2 1/2 X 6 1/4 U-BOLT	6
JB40F-B	TRK BAR EXT BRKT YJ-FRT-SGL	1
JB40-B	TRK BAR EXT BRKT YJ SGL	1
HB-YJ45	HDWR BAG FOR YJ45	1
IYJ	INSTRUCTIONS: WRANGLER YJ	1
<b>YJ60M</b>	<b>COMP BOX, 6" 87-95 JEEP YJ</b>	
YJ65MS	7" MONO SPRING FRT OR REAR	4
TBA70-B	TRACK BAR FOR JEEP YJ 6-7"	1
H-BOX YJ60M	HDWR BOX: YJ60M COMP BOX	1

All Installation Instructions Are Available On Line At [Skyjacker.Com](http://Skyjacker.Com)

# SKYJACKER® WHEEL & TIRE SPECIFICATIONS

Vehicle		Lift	Maximum Tire			Wheel	
Year	Model		Height	Width	Diameter	Width	Offset
Chevrolet / GM / GMC							
07-11	K1500, Avalanche, Tahoe, SUV, Etc.(Coil-Over Assembly) <sup>1,2,3</sup>	2"	265	75	17"	8"	OEM
		3"	285	75	17"	8"	4.5"
		6"	315	75	17"	8"	4.5"
00-06	Cadillac Escalade, ESV, EXT <sup>1,3</sup>	3"	285	75	16"/17"	8"	4.5"
04-11	Colorado/Canyon 4WD <sup>2</sup>	4"	285	70	17"	8"	4.75
00-06	Tahoe/Yukon/Suburban 4WD <sup>2</sup>	3"	285	75	16"	8"	4.5"
		6"	285	75	16"	8"	4.5"
00-06	Denali/Yukon XL 4WD <sup>2</sup>	3"	285	75	16"	8"	4.5"
02-06	Avalanche 4WD <sup>2</sup>	3"	285	75	16"	8"	4.5"
		6"	315	75	16"	8"	4"
02-08	Hummer H2 4WD	5.5"	38"	12.5"	17"	9"	4.5"
2011	GM 2500HD 4WD	7"	37"	12.5"	17"	8"	5-5.26"
		7"	37"	12.5"	18"	8-9"	5-5.5"
		7"	37"	12.5"	20"	8.5-10"	5-6"
01-10	GM 2500HD 4WD <sup>2,3</sup>	3"	285	75	16"	8"	4.5"
		6"	315	75	16"	8"	4"
01-06	1500HD, 2500	6"	315	75	16"	8"	4"
99-06	K1500 IFS 4WD <sup>2,3</sup>	3"	285	75	16"	8"	4.5"
		6"	315	75	16"	8"	4.5"
88-98	Full-Size IFS 4WD <sup>2</sup>	2.5"	285	75	15"	8-9"	4.5"
		6"	35"	12.5"	15"-16"	8-9"	4.5"
88-91	Full-Size Blazer, Jimmy, Suburban 4WD	2.5"	33"	12.5"	15"-16"	8-9"	3.5"- 4"
		4"	35"	12.5"	15"-16"	8-9"	3.5"- 4"
		6"	37"	12.5"	15"-16"	8-9"	3.5"- 4"
		8"	39"	12.5"	15"-16"	10"	3.5"- 4"
73-87	Full-Size 4WD	2.5"	33"	12.5"	15"-16"	10"	3.5"- 4"
		4"	35"	12.5"	15"-16"	10"	3.5"- 4"
		6"	37"	12.5"	15"-16"	10"	3.5"- 4"
		8"	39"	12.5"	15"-16"	10"	3.5"- 4"
67-72	Full-Size 4WD	2.5"	34"	12.5"	15"-16"	10"	3.5"- 4"
		4"	36"	12.5"	15"-16"	10"	3.5"- 4"
		6"	38"	12.5"	15"-16"	10"	3.5"- 4"
		8"	40"	12.5"	15"-16"	10"	3.5"- 4"
DODGE							
09-10	Ram Pickup 1500 4WD <sup>3</sup>	4"	35"	12.5"	18"-20"	8-10"	5"
		6"	37"	12.5"	18"-20"	8-10"	5"
06-07	Ram Pickup 1500 4WD <sup>3</sup>	2"	33"	12.5"	17"	9"	OEM
02-05	Ram Pickup 1500 4WD <sup>2</sup>	6"	37"	12.5"	17"	9"	5"
03-08	Ram 2500, 3500 Pickup 4WD Mega Cab <sup>2</sup>	3"	34"	12.5"	15"-16"	10"	4.625"
		5"	37"	12.5"	15"-16"	10"	4.625"
94-01	Ram Pickup 4WD	2"-3"	33"	12.5"	15"-16"	10"	4.625"
		4"-5"	35"	12.5"	15"-16"	10"	4.625"
		7"	38"	12.5"	15"-16"	10"	4.625"

Vehicle		Lift	Maximum Tire			Wheel	
Year	Model		Height	Width	Diameter	Width	Offset
61-93	Full-Size 1500, 2500 4WD	2"	33"	12.5"	15"-16"	10"	4"
		4"	35"	12.5"	15"-16"	10"	4"
		6"	37"	12.5"	15"-16"	10"	4"
		8"	39"	12.5"	15"-16"	10"	4"
FORD F-150, Bronco, Expedition							
09-10	F-150 4WD <sup>2</sup>	2"	33"	12.5	17"	8"	5"
		6"	35"	12.5	20"	9"	5"
04-08	F-150 4WD, 2WD <sup>2,3</sup>	2"-3"	285	75	16"	8"	4.5"
04-08	F-150 4WD, 2WD <sup>2</sup>	6"	315	75	16"	8"	4.5"
97-03	F-150 4WD	6"	35"	12.5"	16"	8"	4.5"
92-96	F-150, Bronco 4WD, 2WD	2"	32"	12.5"	15"	10"	4"
		4"	33"	12.5"	15"	10"	4"
		6"	35"	12.5"	15"	10"	4"
		8"	37"	12.5"	15"	10"	4"
87-91	F-150, Bronco 4WD, 2WD	2"	34"	12.5"	15"	10"	4"
		4"	36"	12.5"	15"	10"	4"
		6"	38"	12.5"	15"	10"	4"
		8"	39"	12.5"	15"	10"	4"
80-86	F-150, Bronco 4WD, 2WD	2"	33"	12.5"	15"	10"	4"
		4"	35"	12.5"	15"	10"	4"
		6"	37"	12.5"	15"	10"	4"
		8"	38.5"	12.5"	15"	10"	4"
69-79	F-150, 78-79 Bronco 4WD	2"	33"	12.5"	15"	10"	4"
		4"	35"	12.5"	15"	10"	4"
		6"	37"	12.5"	15"	10"	4"
		9"	40"	12.5"	15"	10"	4"
66-77	Bronco 4WD with Cut-Outs	3"	33"	12.5"	15"	10"	4"
		5"	35"	12.5"	15"	10"	4"
		7"	37"	12.5"	15"	10"	4"
03-08	Expedition 4WD	2"	32"	11.5"	16"	8"	3.625"
FORD 66-09 F-250, F-350							
05-11	F-250, F-350 4WD Super Duty <sup>2</sup>	1"	32"	12.5"	16.5"	9"	5"
		2"	33"	12.5"	16.5"	9"	5"
		4"	35"	12.5"	16.5"	9"	5"
		6"	36"	12.5"	16.5"	9"	5"
		8.5"	38"	12.5"	16.5"	9"	5"
99-04	F-250, F-350 4WD Super Duty	2"	33"	12.5"	16.5"	9.75"	4.625"
		4"	35"	12.5"	16.5"	9.75"	4.625"
		6"	36"	12.5"	16.5"	9.75"	4.625"
		8"	38"	12.5"	16.5"	9.75"	4.625"
92-98	F-350 4WD Mono Beam	2"	34"	12.5"	16.5"	9.75"	4.625"
		4"	36"	12.5"	16.5"	9.75"	4.625"
		6"	38"	12.5"	16.5"	9.75"	4.625"
86-91	F-350 4WD Mono Beam	2"	36"	12.5"	16.5"	9.75"	4.625"
		4"	38"	12.5"	16.5"	9.75"	4.625"
		6"	40"	12.5"	16.5"	9.75"	4.625"
92-98	F-250 4WD Twin I Beam	2"	33"	12.5"	16.5"	9.75"	4.625"
		4"	35"	12.5"	16.5"	9.75"	4.625"
		6"	37"	12.5"	16.5"	9.75"	4.625"
80-91	F-250, F-350 4WD Twin I Beam	2"	33"	12.5"	16.5"	9.75"	4.625"
		4"	35"	12.5"	16.5"	9.75"	4.625"
		6"	37"	12.5"	16.5"	9.75"	4.625"

# SKYJACKER® WHEEL & TIRE SPECIFICATIONS

Vehicle		Lift	Maximum Tire			Wheel	
Year	Model		Height	Width	Diameter	Width	Offset
92-96	F-250, F-350 2WD	2"	32"	12.5"	16"	8"	3.75"
		4"	34"	12.5"	16"	8"	3.75"
		6"	36"	12.5"	16"	8"	3.75"
78-79	F-250 Low Boy 4WD	2"	35"	12.5"	16.5"	9.75"	3.75"
		4"	37"	12.5"	16.5"	9.75"	3.75"
		6"	40"	12.5"	16.5"	9.75"	3.75"
66-77	F-250 High Boy 4WD	2"	38"	12.5"	16.5"	9.75"	3.75"
		4"	40"	12.5"	16.5"	9.75"	3.75"
FORD Ranger, Bronco II, Explorer, Navajo							
93-97	Ranger 4WD	2"	32"	12.5"	15"	8"	4"
		4"	33"	12.5"	15"	8"	4"
		6"	34"	12.5"	15"	8"	4"
		8"	36"	12.5"	15"	8"	4"
90-94	Explorer, Navajo 4WD	2"	31"	12.5"	15"	8"	4"
83-92	Ranger, Bronco II 4WD	2"	28"	12.5"	15"	8"	4"
		4"	30"	12.5"	15"	8"	4"
		6"	32"	12.5"	15"	8"	4"
HONDA							
06-11	Ridgeline 4WD <sup>2</sup>	2"	275	60	17"	8"	5"
72-82	Scout II 4WD	2"	31"	12.5"	15"	8"	3.75"
72-82	Scout II 4WD	4"	33"	12.5"	15"	8"	3.75"
ISUZU							
05-06	Isuzu i-Series	4"	285	75	17"	8"	4.75"
JEEP							
07-11	Wrangler JK 2-Door & 4-Door <sup>1,2</sup>	2"	33"	12.5"	16"	8	4.5
		2.5-3.5"	305	75	16"	8"	4.5
		4-5"	35"	12.5"	16"	8"	4.5
		6-7"	37"	12.5"	16"	8"	4.5
04-06	Wrangler Unlimited, Rubicon	2"	32"	11.5"	15"	8"	3.75"
		4"	34"	12.5"	15"	8"	3.75"
		6"	35"	12.5"	15"	10"	3.75"
		8"	37"	12.5"	15"	10"	3.75"
97-03	Wrangler TJ	2"	32"	11.5"	15"	8"	3.75"
		4"	34"	12.5"	15"	8"	3.75"
		6"	35"	12.5"	15"	10"	3.75"
		8"	37"	12.5"	15"	10"	3.75"
		10"	38"	12.5"	15"	10"	3.75"
87-96	Wrangler YJ	2"	31"	10.5"	15"	8"	3.75"
		4"	33"	12.5"	15"	8"	3.75"
		6"	35"	12.5"	15"	8"	3.75"
55-86	CJ and Scrambler	2"	31"	12.5"	15"	8"	3.75"
		4"	33"	12.5"	15"	10"	3.75"
05-11	Grand Cherokee WK 4WD, 2WD <sup>2</sup>	2"	245	70	17"	8"	OEM
99-04	Grand Cherokee WJ 4WD	2"	31"	10.5"	16"	8"	3.75"
93-98	Grand Cherokee ZJ 4WD, 2WD	3"	31"	10.5"	15"	8"	3.75"
02-11	Liberty 4WD, 2WD <sup>1</sup>	2.5"	30"	10.5"	16"	8"	5"
84-01	Cherokee XJ 4WD, 2WD	2"	30"	9.5"	15"	7"	3.75"
		3"	31"	10.5"	15"	8"	3.75"
		6"	33"	12.5"	15"	8"	3.75"
		8"	35"	12.5"	15"	8"	3.75"

Vehicle		Lift	Maximum Tire			Wheel	
Year	Model		Height	Width	Diameter	Width	Offset
06-10	Jeep Commander XK <sup>2</sup>	2"	245	70	17"	8"	OEM
86-92	Comanche 4WD, 2WD	3"	31"	10.5"	15"	8"	3.75"
74-91	J10, J20, Cherokee, Wagoneer	4"	35"	12.5"	15"	10"	3.75"
NISSAN							
04-07	Titan 4WD <sup>2</sup>	2.5"	285	75	18"	7"	5
04-05	Armada 4WD <sup>2</sup>	2.5"	285	75	18"	7"	5
TOYOTA							
07-11	FJ Cruiser <sup>2</sup>	2"	265	75	17"	8"	OEM
		3"	285	75	17"	8"	4.5
01-04	Sequoia 4WD	2.5"	32"	11.5"	16"	8"	3.5"
00-06	Tundra 4WD	2"	32"	11.5"	16"	8"	3.5"
00-06	Tundra 4WD	3"	32"	11.5"	16"	8"	3.5"
07-11	Tundra 4WD	2"	32"	11.5"	16"	8"	3.5"
		3"	32"	11.5"	16"	8"	3.5"
		6"	35"	12.5"	17"	8"	4.5"
05-10	Tacoma 4WD, Pre-Runner 2WD <sup>2</sup>	2"	31"	11.5	16	8"	4.5"
		2.5"-3"	285	75	16"	8"	4.5"
96-04	Tacoma 4WD, Pre-Runner 2WD	2.5"-3"	31"	10.5"	15"	8"	3.5"
86-95	IFS Pickup 4WD	4"	33"	12.5"	15"	8"	3.75"
96-01	4Runner 4WD	2.5"	31"	11.5"	15"	8"	3.5"
84-85	Pickup, 4Runner 4WD	3"	33"	12.5"	15"	8"	3.75"
		5"	35"	12.5"	15"	8"	3.75"
		7"	37"	12.5"	15"	8"	3.75"
79-83	Pickup, 4Runner 4WD	3"	35"	12.5"	15"	8"	3.75"
		5"	37"	12.5"	15"	8"	3.75"
		7"	39"	12.5"	15"	8"	3.75"
91-97	FJ80 LandCruiser 4WD	2.5"	33"	12.5"	15"	8"	3.75"
64-80	LandCruiser 4WD	2"	32"	12.5"	15"	8"	3.75"
		4"	35"	12.5"	15"	8"	3.75"

<sup>1</sup> Footnote: Requires minor trimming.

<sup>2</sup> Footnote: If you change the Tire Diameter/Wheel Size on this application, you must still maintain the equivalent 'Section Width' and 'Overall Diameter' to the 'Height' and 'Width' dimensions listed in the chart. If 20" Diameter or larger wheels, OE back spacing may be used.

<sup>3</sup> Footnote: Can use OEM Wheel

**NOTE:** This Chart is to be Used Strictly as a REFERENCE Due to Actual Lift Heights and Variances in Tire Sizes from Various Manufacturers.



# WARRANTY INFORMATION

**SKYJACKER®** warrants to the original retail purchaser that its suspension products, shocks, and steering stabilizers are free from defects in material and workmanship for as long as that purchaser owns the vehicle on which such products were originally installed. Suspensions not used in conjunction with **SKYJACKER®** shock absorbers may void the warranty. Products installed on a vehicle used in any form of competition or racing are not covered by this warranty, and the warranty shall extend only 1 year on commercial vehicles. Warranty on tie rod ends, u-joints, drag links, and such shall not exceed 1 year. Skyjacker's rebuildable rod ends and coil-over shocks, both being made serviceable in design, are not replaced under this warranty, but rebuild kits are offered for a period of 1 year and can be purchased after 1 year.

This limited lifetime warranty does not apply to products characterized by one or more of the following:

- 1) Products that have been subject to abuse, neglect, accident, fire, improper installation or adjustment, and corrosion.
- 2) Products that have been modified or altered outside of or beyond **SKYJACKER®** specifications.
- 3) Products used in application other than those recommended in the current **SKYJACKER®** catalog or in the instructions accompanying the product.
- 4) Products that are used for competition or racing activities.
- 5) This limited lifetime warranty does not include polyurethane components, product finish, and any conditions caused by normal wear and use.

In a situation where a **SKYJACKER®** product is found to contain a defect in material or workmanship within the stated warranty period (unless caused by one or more of the above stated conditions), **SKYJACKER®**, at its option, will either replace the product or repair the product. To make a claim under this limited lifetime warranty, purchaser must:

- 1) Call **SKYJACKER®** at (318) 388-0816 for customer service to receive a return authorization number which must be written on the outside of the product's package.
- 2) Include the original purchase receipt (or copy) indicating the place of purchase, date of purchase, and amount paid.
- 3) An authorized **SKYJACKER®** dealer

must inspect the product and confirm that the "Driver Warning" decal is properly displayed, and

- 4) Return the product, freight prepaid to the place of business originally purchased.

Each of these above mentioned terms must be met in order to qualify for warranty coverage. Freight charges, installation cost, labor cost, damage to related components, cost incurred due to down time of vehicle, normal wear and tear, lost profits and incidental or consequential damages are not covered under this lifetime warranty. If any questions exist in regard to this limited lifetime warranty, please write to:

## **SKYJACKER SUSPENSIONS®**

Attention: Customer Service Department,  
P.O. Box 1678, West Monroe, Louisiana  
71294, or call our office at (318) 388-0816.

This limited lifetime warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. There are no warranties expressed or implied (including any implied warranties of merchantability and fitness), which extend beyond this limited lifetime warranty described herein.

**NOTICE: SKYJACKER®** strongly recommends the installation of products be done by a certified mechanic. If this does not occur, be certain the person(s) installing the product read, understand and follow all instructions and warnings pertaining to the application before installation.

## **PRODUCT SAFETY WARNING:**

Installation of suspension lift kits or any other lifting kits or devices will raise the center of gravity. For this reason, **SKYJACKER®** urges that extreme caution be used when encountering driving conditions which may cause vehicle imbalance. Furthermore, the driver's field of vision and judgment will not be as good due to the height of the vehicle. Due to the installation of larger tires, the speedometer will read slower than the actual speed being traveled and more distance will be required to stop the vehicle. It is the owner's responsibility to caution and warn any potential driver of the vehicle about these driving and handling conditions. **SKYJACKER®** will not be held liable or responsible for damages or personal injuries resulting from the use of lifting devices and or related products. The tires and rims should be changed to sufficiently increase the vehicle's total overall width and stability to help accommodate lifting devices.

**SKYJACKER®** also recommends that the steering system on lifted vehicles be appropriately corrected to reduce steering stress and angles. Once completed, the vehicle should be inspected by a professional mechanic including such areas as the steering system, brake system, speedometer recalibration, and clearance, for tire and suspension travel and tightness of all installed products. Every **SKYJACKER®** suspension kit includes a "Driver Warning" decal and literature explaining this information which should be read and understood completely before driving, and the decal should be placed in a position clearly visible by the driver and all occupants.

**NOTICE:** Most states have some type of law limiting vehicle height. The amount of lift allowed, and how the lift can be achieved, varies greatly. Several states offer exemptions for farm and commercial registered vehicles. It is the vehicle owner's responsibility to check state and local laws to ensure that their vehicle will be in compliance.

**SKYJACKER®** reserves the right to make changes in design, materials and specifications as deemed necessary without prior notice and without assuming obligation to modify any product previously manufactured. Obligation or liabilities will not be assumed with respect to similar products previously advertised.

Every effort has been made to avoid printing errors in this catalog. However, in the event of an error, we only have authority to say 'I'm Sorry'.

All **Skyjacker®** material is copy righted. **SKYJACKER SUSPENSIONS®** is a division of Lonnie McCurry's 4-Wheel Drive Center, Inc.