



All Sales Manufacturing Inc.

ROCK IT HARD

BILLET CANDY FOR YOUR RIDE[®]

AUTOMOTIVE ACCESSORIES FOR CARS & TRUCKS



2009 CATALOG

Table of CONTENTS

PRODUCT	PAGE #
"Rock It Hard®" Jeep Accessories.....	3
Door Handles	4-5
Tailgate Handles.....	6
Pedal Pads	7
Hood Vents	8
FJ Accessories	8
Exhaust Tips	9
Kodiak & Big Rig Accessories	9
Show Hooks	10
Hitch Covers	11
Fuel Doors.....	12-13
Antennas	14
License Plate Frames	15
3rd Brake Light Covers	16-17
Gwing	18
Dash Accents	19
Locks & Knobs	20-21
Door Sills.....	22
Mirrors.....	23

We are very excited to present to you the new completely redesigned 2009 AMI catalog.

This year has been another exciting one for our team here at AMI celebrating our second year in our new facility. As always we commit to bringing you quality products built to last and add character to your vehicle. We are proud to introduce to you our exciting new ROCK IT HARD® product line.

A huge thank you to our wonderful distributors who are an invaluable asset to making AMI's products available to the public. To all of our customers whether you are a returning loyal customer, or a brand new admirer we hope you enjoy browsing this years 2009 AMI catalog and find something new and exciting to add to your ride.

The AMI Team

Jeep Part # Reference Guide

APPLICATION	PART #
HINGE COVER - PAIR	
'07-'09 WRANGLER JK	3503
ANTENNA COVER	
'07-'09 WRANGLER JK	3505
'97-'06 WRANGLER TJ	3405
WINDSHIELD STRAP BAR	
'97-'09 WRANGLER TJ, JK	3506
WINDSHIELD BUMPER - PAIR	
'97-'09 WRANGLER TJ, JK	3507
HOOD LATCH - PAIR	
'07-'08 WRANGLER JK	3508
TAILLIGHT COVERS - PAIR	
'07-'08 WRANGLER JK	3509
TAILGATE HINGE COVER - 4 PIECES	
'07-'08 WRANGLER JK	3510
A/C VENTS	
'07-'08 WRANGLER JK COMPLETE SET OF 4	3512
'07-'08 WRANGLER JK BEZELS ONLY SET OF 4	3513
STEP PLATES	
'07-'08 WRANGLER JK FRONT-SET OF 2 BALL-MILLED	3514
'07-'08 WRANGLER JK REAR-SET OF 2 BALL-MILLED	3515
TIRE COVER	
UNIVERSAL	3519
MASTER KITS	
'07-'08 WRANGLER JK POLISHED	JKKIT-A-2DR
'07-'08 WRANGLER JK POLISHED	JKKIT-A-4DR
'07-'08 WRANGLER JK NO DOOR HANDLES - POLISHED	JKKIT-B-2DR
'07-'08 WRANGLER JK NO DOOR HANDLES - POLISHED	JKKIT-B-4DR

All come standard polished and clear powder coat.

Add "K" to part number for black powder coat.

Chrome; add "C" to part number.

JJKIT-A-2DR INCLUDES			JJKIT-B-2DR INCLUDES		
3503	3	HINGE COVER - PAIR	3503	3	HINGE COVER - PAIR
3505	1	ANTENNA COVER	3505	1	ANTENNA COVER
3506	1	WINDSHIELD STRAP BAR	3506	1	WINDSHIELD STRAP BAR
3507	1	WINDSHIELD BUMPER - PAIR	3507	1	WINDSHIELD BUMPER - PAIR
3508	1	HOOD LATCH - PAIR	3508	1	HOOD LATCH - PAIR
3509	1	TAILLIGHT COVERS - PAIR	3509	1	TAILLIGHT COVERS - PAIR
3510	1	TAILGATE HINGE COVER - 4 PCS	3510	1	TAILGATE HINGE COVER - 4 PCS
301	1	POLISHED LH & RH HANDLE	1035	1	"ROCK IT HARD" HITCH COVER
303	1	POLISHED TAILGATE ASSEMBLY	6032P	1	FUEL DOOR
1035	1	"ROCK IT HARD" HITCH COVER	32000P	1	3RD BRAKE COVER "RECTANGLE"
6032P	1	FUEL DOOR			
32000P	1	3RD BRAKE COVER "RECTANGLE"			
JJKIT-A-4DR INCLUDES			JJKIT-B-4DR INCLUDES		
3503	5	HINGE COVER - PAIR	3503	5	HINGE COVER - PAIR
3505	1	ANTENNA COVER	3505	1	ANTENNA COVER
3506	1	WINDSHIELD STRAP BAR	3506	1	WINDSHIELD STRAP BAR
3507	1	WINDSHIELD BUMPER - PAIR	3507	1	WINDSHIELD BUMPER - PAIR
3508	1	HOOD LATCH - PAIR	3508	1	HOOD LATCH - PAIR
3509	1	TAILLIGHT COVERS - PAIR	3509	1	TAILLIGHT COVERS - PAIR
3510	1	TAILGATE HINGE COVER - 4 PCS	3510	1	TAILGATE HINGE COVER - 4 PCS
301	2	POLISHED LH & RH HANDLE	1035	1	"ROCK IT HARD" HITCH COVER
303	1	POLISHED TAILGATE ASSEMBLY	6032P	1	FUEL DOOR
1035	1	"ROCK IT HARD" HITCH COVER	32000P	1	3RD BRAKE COVER "RECTANGLE"
6032P	1	FUEL DOOR			
32000P	1	3RD BRAKE COVER "RECTANGLE"			

JEEP ACCESSORIES

NEW PRODUCT FOR 2009

For over sixty-five years JEEP® has been a staple in American automotive culture. We are proud to introduce our full line of "Rock It Hard®" Jeep accessories, designed and built specifically with Jeep's body and style in mind. The "Rock It Hard" line is crafted from solid 6061-T6 aircraft quality aluminum.



"ROCK IT HARD®"
MIRROR
47394P



WINDSHIELD
STRAP BAR
3506



WINDSHIELD BUMPER
3507



HINGE COVERS
3503
PATENT PENDING



AC VENTS
3512




HOOD LATCHES
3508

ANTENNA COVER
3505



TAILGATE HINGE COVERS
3510

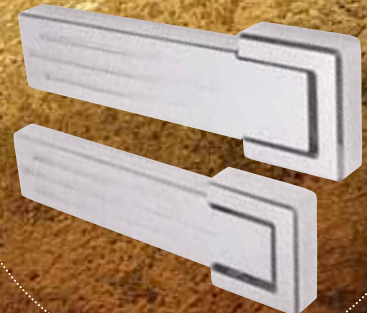

COMPLETE DOOR HANDLES

It's time to lose the unsightly plastic door handle that come factory with your truck, and replace it with our solid billet assembly. These heavy duty brutes are not the imitation stick on overlays, these handles add security and style to your vehicle. Crafted here in the USA. Available finish options: polished chrome or brushed chrome.



Door Handle Assembly Part # Reference Guide

	LH & RH with key lock hole	LH key lock RH no lock	LH & RH no lock for rear doors
CHRYSLER/DODGE			
'02-'08 Full-size trucks	400	401	402
'95-'01 Full-size trucks	410	411	412
'04-'09 Durango	400	401	402
FORD			
'96-'03 F150, no keypad	500	501	502
'04-'08 F150, no keypad	520	521	522
'04-'08 F150, w/keypad	N/A	521K	522
'99-'09 Superduty	510	511	512
'99-'09 Excursion	510	511	512
'96-'03 Expedition, no keypad	500	501	502
GM (INCLUDES CADILLAC)			
'88-'98 1500/2500	920	921	922
'99-'07 CBS 1500/2500	900	901	902
'07 NBS-'09 1500/2500	N/A	941	942
'88-'98 Tahoe, Suburban, Yukon, Avalanche	920	921	922

	LH & RH with key lock hole	LH key lock RH no lock	LH & RH no lock for rear doors
GM (INCLUDES CADILLAC) CONT.			
'99-'06 Tahoe, Suburban, Yukon, Avalanche	900	901	902
'07-'09 Tahoe, Suburban, Yukon, Avalanche	N/A	941	942
Pre '02 Escalade	920	921	922
'02-'06 Escalade	900	901	902
'07-'09 Escalade	N/A	941	942
'04-'09 Colorado, Canyon	930	931	932
HUMMER H2			
'03-'08	600	601	602
JEEP WRANGLER			
'07-'09 JK (Same handle for front and rear doors)	N/A	N/A	301
'07-'09 JK Ball-Milled (Same handle for front and rear doors)	N/A	N/A	306

All come standard polished.

All available in chrome; add "C" to part number.

All available in brushed chrome; add "BC" to part number.

CBS - Classic Body Style • NBS - New Body Style

DOOR HANDLES



TRI-HOLE



IRON CROSS



ANODIZED FLAME



DODGE BUCKET



PLAIN



DIMPLE



HUMMER BUCKET



HUMMER BUCKET



SWISH



LIGHTNING



GM BUCKET



GM BUCKET



FLAME



FORD BUCKET



FORD BUCKET



TRIBAL

This isn't your tired factory equipment, "these" puppies are the handle to your vehicle's soul. With styles matching nearly every attitude you're sure to captivate the attention of passengers and passerbys.

PICK A HANDLE PICK A BUCKET

Create your own custom assembly by picking a handle and then matching it up with your vehicle's custom bucket.

Bucket ONLY Part # Reference Guide

	LH & RH with key lock hole	LH key lock RH no lock	LH & RH no lock for rear doors		LH & RH with key lock hole	LH key lock RH no lock	LH & RH no lock for rear doors		LH & RH with key lock hole	LH key lock RH no lock	LH & RH no lock for rear doors
DODGE				GM				HUMMER			
'02-'08 Full-size Truck	406	407	408	'99-'07 1500, 2500	906	907	908	'03-'08 H2	606	607	608
'04-'09 Durango	406	407	408	'07 MBS-'09 1500, 2500	N/A	927	928	All come standard polished.			
FORD				'99-'06 Tahoe, Yukon, Avalanche	906	907	908	Chrome; add "C" to part number.			
'04-'08 F150	506	507	508	'07-'09 Tahoe, Yukon, Avalanche	N/A	927	928	Brushed chrome; add "BC" to part number.			
'04-'08 with keypad	N/A	507K	508	'02-'06 Escalade	906	907	908	CBS - Classic Body Style • NBS - New Body Style			
				'07-'09 Escalade	N/A	927	928				

Handle ONLY Part # Reference Guide

	PLAIN	FLAME	ANODIZED FLAME	IRON CROSS	LIGHTNING	SWISH	DIMPLE	TRI-HOLE	TRIBAL
FORD									
'04-'08 F150	525	571	571R0	572	573	574	575	576	578
DODGE (OUR BUCKET)									
'02-'08 Full-size Truck	405	471	471R0	472	473	474	475	476	478
'04-'09 Durango	405	471	471R0	472	473	474	475	476	478
OEM BUCKET									
'02-'09 Full-size Truck	OEM405	OEM471	OEM471R0	OEM472	OEM473	OEM474	OEM475	OEM476	OEM478
'04-'09 Durango	OEM405	OEM471	OEM471R0	OEM472	OEM473	OEM474	OEM475	OEM476	OEM478
GM (INCLUDES CADILLAC AND HUMMER)									
'99-'06 Fits All (except Escalade)	905	971	971R0	972	973	974	975	976	978
'02-'06 Escalade	905	971	971R0	972	973	974	975	976	978
'07 CBS 1500, 2500	905	971	971R0	972	973	974	975	976	978
'07-'09 Tahoe, Yukon, Escalade, Avalanche	945	961	961R0	962	963	964	965	966	968
'07 NBS-'09 1500, 2500	945	961	961R0	962	963	964	965	966	968
'04-'09 Colorado, Canyon	805	871	N/A	N/A	N/A	N/A	875	876	878

All come standard polished. • All available in chrome; add "C" to part number. • All available in brushed chrome; add "BC" to part number.

CBS - Classic Body Style • NBS - New Body Style

TAILGATE HANDLES

The tailgate party never ends when you brandish these handles. We build them to last using solid 6061-T6 aircraft aluminum and by engineering them to fit your vehicle perfectly. Available in chrome or brushed chrome finishes. All are also available with dimpled design option.

FORD TRUCK TAILGATE HANDLE (#503)



Tailgate Handle Part # Reference Guide

FORD	COMPLETE	HANDLE ONLY
'96-'03 F150 without lock hole	503	N/A
'04-'08 F150	523	529
'96-'03 F150 with lock hole	503L	N/A
'99-'07 Superduty without lock hole	503	N/A
'99-'07 Superduty with lock hole	503L	N/A
'08-'09 Superduty without camera	523	529
DODGE		
'02-'08 Full-size Truck	403	N/A
'95-'01 Full-size Truck	413	N/A
GM		
'88-'94 Blazer	926	N/A
'99-'06 Tahoe, Yukon with hatchback	918	917
'95-'99 Tahoe, Yukon	926	N/A
'99-'07 CBS 1500, 2500	903	909
'07 NBS-'09 1500, 2500 without lock hole	943	949
'07 NBS-'09 1500, 2500 with lock hole	943L	949
'88-'98 Full-size Truck	923	N/A
'99-'06 Suburban with double doors	916	904
NISSAN		
'04-'09 Titan	N/A	703
JEEP WRANGLER		
'07-'09 JK	303	N/A
'07-'09 JK Ball-Milled	308	N/A

All come standard polished.

All available in chrome; add "C" to part number.

All available in brushed chrome; add "BC" to part number.

All available in dimpled design; add "D" to part number.

CBS- Classic Body Style

NBS- New Body style



GM TRUCK



GM TRUCK



GM TAHOE, SUBURBAN



FORD TRUCK



FORD TRUCK



FORD TRUCK



DODGE



NISSAN TITAN



JEEP WRANGLER

PEDAL PADS

Remember the foot print pedal in your grandpa's 54 Chevy? Well these aren't it. Spinning off that classic billet we've broken the mold by developing our new pedal pads to accentuate the modern vehicle. Our covers fit over your existing pedal and install within minutes. No drilling or patience required, they are that simple to install.



STYLE = CIRCLES

Pedal Pad Part # Reference Guide


	(C)	(F)	(L)
JEEP	CIRCLES	FLAMES	LINES
'07-'09 WRANGLER JK manual	30C	30F	30L
'07-'09 WRANGLER JK automatic	31C	31F	31L
'97-'05 WRANGLER TJ manual	32C	32F	32L
'97-'05 WRANGLER TJ automatic	33C	33F	33L
DODGE (ALL AUTOMATIC)			
'02-'05 1500/2500	40C	40F	40L
'06-'09 1500/2500	41C	41F	41L
FORD (ALL AUTOMATIC)			
'97-'08 F150/EXPEDITION	50C	50F	50L
'99-'07 F250/F350	51C	51F	51L
'08-'09 F250/F350	52C	52F	52L
GM (ALL AUTOMATIC)			
'99-'05 1500, 2500, Tahoe, Yukon (NAP)*	90C	90F	90L
'07-'09 1500, 2500, Tahoe, Yukon (AP)*	91C	91F	91L
'99-'06 1500, 2500, Tahoe, Yukon (AP)*	92C	92F	92L
'06-'09 1500, 2500, Tahoe, Yukon (NAP)*	93C	93F	93L

All come standard polished.

Add "K" to part number for black powder coat (example: 90CK)

*NAP - Non-Adjustable Pedals

*AP - Adjustable Pedals

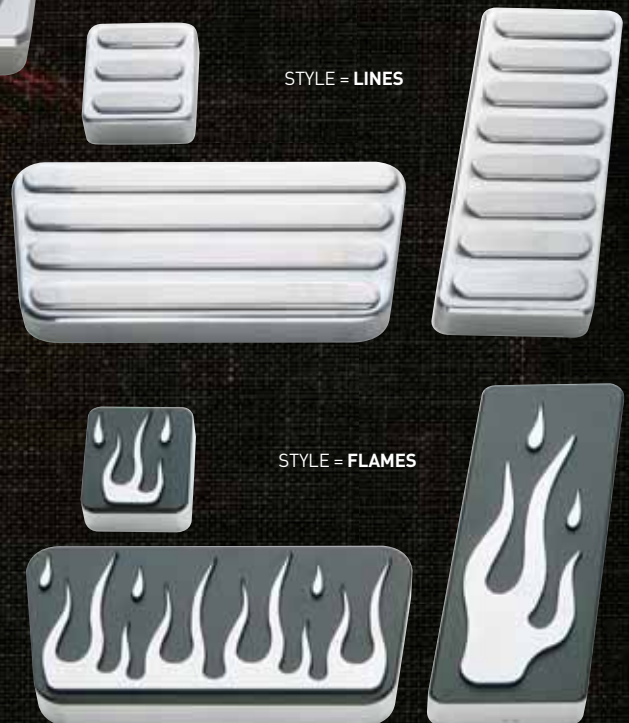

STYLE = LINES



STYLE = FLAMES



NO DRILLING REQUIRED - SIMPLE TO INSTALL



STYLE = LINES
INSTALLATION VIEW



HOOD VENTS

So you're looking to modify your vehicle minus the drilling? No problem, install AMI's solid billet hood vents easily and to your own liking. Our 6061-T6 aircraft aluminum vents are powder-coated, polished and ready to easily install and give your truck that customized look and feel.



5108AP (SINGLE)
5108AP-3 (3 PACK)
UNIVERSAL



5107AP (SINGLE)
5107AP-3 (3 PACK)
UNIVERSAL



5108P (SINGLE)
5108P-3 (3 PACK)
UNIVERSAL



5107P (SINGLE)
5107P-3 (3 PACK)
UNIVERSAL

5104P
UNIVERSAL 3" x 9"
SOLD IN PAIRS
Remove "P" from part # for Brushed Finish

FORD SUPERDUTY CUSTOM HOOD VENTS



5102P
FORD '08 F250 SUPERDUTY
NOT ENTIRE HOUSING - INSERT ONLY
SOLD IN PAIRS
Remove "P" from part # for Brushed Finish



5103P
FORD '99-'07 F250 SUPERDUTY
Make your early truck look like a 2009
with our stick on simulated vent.
SOLD IN PAIRS
Remove "P" from part # for Brushed Finish

TOYOTA FJ ACCESSORIES

Brand new for 2009, accessories for your Toyota FJ Series. Individualize your FJ with our new grille and hood vent replacement kits today.



7106A


7106C

7106B

(NEW) ENTIRE FJ GRILLE REPLACEMENT KIT - 7106

(NEW) FJ HOOD VENT REPLACEMENT KIT - 7107

ALUMINUM EXHAUST TIPS

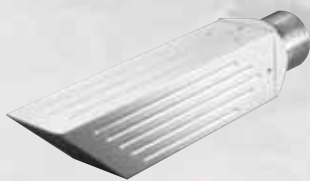

BALL-MILLED

3" SQUARE FITS 2.5" PIPE	2000P
3" SQUARE FITS 2.25" PIPE	2001P
2.5" SQUARE FITS 2" PIPE	2002P


POLISHED ALUMINUM



POWERED BY... "CHEVY BOWTIE"

3" SQUARE FITS 2.5" PIPE	9000P
3" SQUARE FITS 2.25" PIPE	9001P
2.5" SQUARE FITS 2" PIPE	9002P

POLISHED ALUMINUM

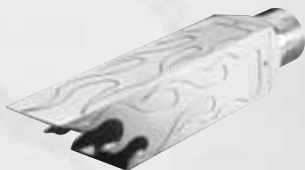

FLAME

3" SQUARE FITS 2.5" PIPE	4000P
3" SQUARE FITS 2.25" PIPE	4001P
2.5" SQUARE FITS 2" PIPE	4002P
4" SQUARE FITS 3.5" PIPE	4003P


POLISHED ALUMINUM

WINDSHIELD WASHER COVERS (NEW)

10A



10B



10C



10(LETTER) SEE EXAMPLE BELOW
WINDSHIELD WASHER COVERS

EXAMPLE: TO ORDER THE LETTER "J"

10J 10 + desired letter

AVAILABLE IN LETTERS A-Z

PATENT PENDING



10F



10J

**UNIVERSAL WINDSHIELD
WASHER COVERS**

AVAILABLE STYLES

10BM Ball-milled

10SK Skull

10HT Heart

10IC Iron Cross

PATENT PENDING

10BM



10SK



10IC



10HT



BIG RIG & KODIAK ACCESSORIES



914

(GRAB HANDLES) KODIAK



915

(HOOD PULL HANDLE)
KODIAK



700

(BILLET BUCKET)
LATE MODEL
PETERBILT

All come standard polished.

Available in chrome; add "C" to part number.

PT CRUISER DUAL PIPE KIT

Simulates dual exhausts without
affecting your emissions. Quick and
easy to install.



7000 • 7001 (TURBO)



9420 "BOWTIE"



5420 "OVAL"



8420 "GRILLE"

Our Driving Lights are made from 6061-T6 aircraft aluminum with Chevy Bowtie, oval or grille design. Great for backup lights, they have a 55w, H3 bulb for legal use on the highway.

SHOW HOOKS

Dress up your front valance with our new bumper inserts and show hooks. Crafted from solid 6061-T6 aircraft aluminum and polished to a high luster. Add a cover plate to some late models and get rid of that unsightly black hole. Show hooks are not rated; use at your own risk.



BUMPER INSERT (#5801) & SHOW HOOK (#5901) INSTALLED ON '07 FORD F250



9902



4902



8801



5901



5801
(BALL-MILLED)



9801LP
(GRILLE STYLE)



9801RP
(GRILLE STYLE)

Show Hook Part # Reference Guide

FORD

'08-'09 F250	5903P-2
'05-'07 F250	5901P-2
'05-'08 F150	5902P-2

DODGE

'02-'09 2500	4902P-2
--------------	---------

UNIVERSAL HOOK

Any Truck	8801P-2
-----------	---------

GM

'07 NBS-'09 2500 HD	9904P-2
'99-'07 CBS 2500/3500 HD	9901P-2
'99-'07 CBS 1500	9902P-2
'07 NBS-'09 Tahoe, Yukon	9903P-2
'07 NBS-'09 1500	9903P-2

All come standard polished. • Sold in Pairs

Show hooks are not rated; use at your own risk.

Bumper Insert Part # Reference Guide

FORD F250/F350

'05-'07 Bumper Insert, left and right BALL-MILLED	5801P
'08-'09 Bumper Insert, left and right BALL-MILLED	5802P
'08-'09 Bumper Insert, left and right GRILLE STYLE	5803P
'08-'09 Bumper Insert, center plate GRILLE STYLE	5803CP

GM

'07 NBS-'09 GMC, both GRILLE STYLE	9801P
'07 NBS-'09 SILVERADO, both GRILLE STYLE	9802P

All come standard polished. • Sold in Pairs

2008 GMC SIERRA - SHOW HOOK (9904P-2) INSERTS(9801P) & LP FRAME (84004P)



2008 FORD F250 - SHOW HOOK (5903P-2) CENTERPLATE (5803CP) & INSERTS (5803P)



HITCH COVERS

An extension of your attitude for all to see, whatever your interest you are sure to find a hitch cover to match your personal style. Our hitch covers are crafted from 6061-T6 aircraft aluminum. Made with a 2" square 2 hole adapter to fit most applications. Order part #1100-S for the 1.25" adapter (the size which is found on most cars).



ROCK IT HARD® - 1035



ALL IN - 1034



SKULL - 1008



IRON CROSS - 1003



IRON CROSS (BORDER) - 1006



FLAG - 1009



TRIBAL - 1026



HANG LOOSE - 1025



HULA-BISCUS - 1020



HULA-HONU - 1023



HULA-TIKI - 1024



HULA-MERIA - 1021



HULA-FLOPS - 1022



PEACE - 1007



STAR - 1004



SOCCER BALL - 1030



HOOP - 1033 ; PATENT #D558101



FOOTBALL - 1032



BASEBALL - 1031



TRUCKER GIRL - 1005



H2® - 1002





H3® - 1001



1.25" SQUARE ADAPTER - 1100-S

BILLET FUEL DOORS

It's no coincidence that these are the best selling fuel doors on the market. Known for their smooth operation and quality finish. Choose between a push to open feature, or a locked door for added security. All are available in several finishes including our new brushed chrome. Crafted from solid 6061-T6 aircraft aluminum. Installation is simple and no drilling is required for most applications.

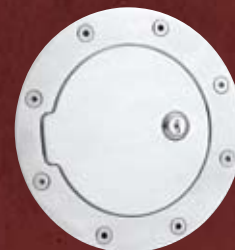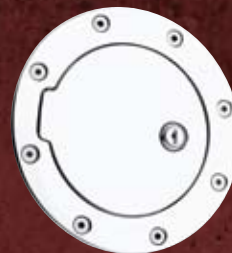

GUIDE TO SELECTING THE CORRECT BILLET FUEL DOOR

- 1) Pick the Part Number (FROM THE CHART ON PAGE 13)
- 2) Pick the Style OPTION (FROM THE LIST BELOW)

AVAILABLE OPTIONS (JUST ADD TO PART NO.)

- C Chrome
- CL Chrome Locking
- K Black Ring and Black Door
- KC Black Ring and Chrome Door
- KCL Black Ring and Chrome Door Locking
- KL Black Ring and Black Door Locking
- L Brushed Locking
- P Polished
- PL Polished Locking
- BC Brushed Chrome
- BCL Brushed Chrome Locking

Add "HD" before any non-locking fuel door part # for Harley Davidson applications.

HD6040P = Polished Harley Davidson Door (HD+(pg 13, part # 6040)+option P)

EXAMPLE: DOOR FOR A '98 DODGE FULL-SIZE TRUCK

6040L = Brushed Door with lock (pg 13, part #6040) + option L

6040PL = Polished Door with lock (pg 13, part #6040) + option PL

Fuel Door Dimensions For Custom Applications

Ring O.D.	Door O.D.	No.	Ring O.D.	Door O.D.	No.
5 1/2"	No Door	6052	6 5/8"	4 1/2"	6055
5 1/2"	4 1/8"	6044	6 11/16"	4 1/2"	6040
5 3/4"	4 1/8"	6043	6 3/4"	5 1/8"	6032
5 3/4"	No Door	6053	6 13/16"	4 1/2"	6041
6 1/4"	4 1/2"	6096	7"	5 1/8"	6070
6 1/4"	4 1/2"	6051	7 1/8"	5 1/8"	6031
6 1/4"	4 1/2"	6054	7 1/8"	5 1/8"	6098
6 1/4"	4 1/2"	6056	7 1/8"	5 1/8"	6100
6 3/8"	4 1/2"	6093	7 1/8"	5 1/8"	6101
6 3/8"	4 1/2"	6091	7 3/8"	5 1/8"	6090
6 3/8"	5 1/8"	6099	8 1/8"	5 1/8"	6092
6 3/8"	4 1/2"	6095	8 1/8"	5 1/8"	6097
6 1/2"	4 1/2"	6050	8 1/4"	5 1/8"	6102



Fuel Door Part # Reference Guide

CHRYSLER, DODGE

'95-'01 Full-size truck	6040
'95-'09 Dakota	6040
'09 Full-size truck	CALL
'02-'08 Full-size truck	6041
'02-'09 Durango	6044
'08-'09 Nitro (NEW)	6044
'05-'09 300, Magnum (NEW)	6046

PT Cruiser All except convertible 6043

GM, INCLUDES CADILLAC

1500-2500

(will not fit Dually with door in fender)

'91-Early '99	6091
Late '99-'07 CBS	6090
'07 NBS-'09	6101

Mid-Size Trucks

'91-Early '02 S10 & S15 Not crew cab	6093
Late '02-'03 S10 & S15	6095
'04-'09 Colorado, Canyon	6096

Tahoe, Suburban, Yukon

'91-Early '99	6091
Late '99-'06	6090
'07-'09 (short wheel base)	6098
'07-'09 Suburban	6100

'03-'09 Trailblazer, Envoy, SSR 6095

Escalade, Avalanche

'91-'02	6091
'02-'06	6090
'07-'09 Escalade	6098
'07-'09 EXT, ESV, Avalanche	6100

FORD

'09 F150	6059
'96-'03 F150	6050
'99-'09 F250, F350 Superduty	6050
'04-'08 F150 except Flareside	6052
'04-'08 F150 Flareside	6053
Van E350 All-Round door (NEW)	6056
'97-'08 Expedition	6050
'00-'06 Excursion	6050
'02-'09 Explorer	6054
'99-'04 Mustang	6051
'05-'09 Mustang	6055

JEEP WRANGLER

'97-'06 TJ	6031
'07-'09 JK	6032

HUMMER

'03-Early '06 H2 (7 1/2" shroud)	6092
Late '06-'09 H2 (8" shroud)	6102
'03-'09 H3 Fits over plastic	6097
'03-'09 H3 Fits inside plastic	6099

LINCOLN

'94-'09 Full-Size	6052
'98-'09 Navigator	6050

TOYOTA

'07-'09 Tundra	6070
'07-'09 FJ (NEW)	6071

Use chart on pg 12 to select correct fuel door style.

STUBBIE ANTENNAS

Listen here! Our stubbie antennas are engineered for exceptional reception. Made from 1/4" stainless steel or 3/16" stainless steel, be sure to check out our new 7/16" "BIG STICK" antenna new for 2009.



STUBBIE ANTENNA STYLE, LENGTH AND FITTING OPTIONS

Choose from the following styles:

Polished, Black Powder Coat, White Powder Coat, O-Ring, Laser Flame or Flat-Top.

Choose from the following lengths:

6", 9", 12", 15" or 21"

Our antennas fit most vehicles.

Antennas include 3 adapters
5mm Male to 6mm Male, 10-24 Male to 6mm Male, 7mm Female to 6mm Male.

Additional Antenna Adapters:

'04-'09 H2. 6201
'07-'09 H3. 6202
'07-'08 Jeep Wrangler 6201
Spring-loaded 6204

POLISHED with Black O-Rings	BLACK available in 3" (6203K)	POLISHED available in 3" (6203P)	WHITE available in 3" (6203W)
<p>7221R, 7215R, 7212R, 7209R, 7206R</p>	<p>6221K, 6215K, 6212K, 6209K, 6206K</p>	<p>6221P, 6215P, 6212P, 6209P, 6206P</p>	<p>6221W, 6215W, 6212W, 6209W, 6206W</p>
FLAT - TOP with Black O-Rings	LASER FLAME	HARLEY DAVIDSON® Black	HARLEY DAVIDSON® Polished
<p>5221R, 5215R, 5212R, 5209R, 5206R</p>	<p>8221F, 8215F, 8212F, 8209F, 8206F</p>	<p>HD6221K, HD6215K, HD6212K, HD6209K, HD6206K</p>	<p>HD6221P, HD6215P, HD6212P, HD6209P, HD6206P</p>



THE BRAND NEW "BIG STICK" – 7/16" ROUND SOLID SHAFT ANTENNA



"Rock it Hard®" with AMI's NEW "BIG STICK" 7/16" solid shaft custom antenna, designed for excellent reception. Choose from 5 lengths and either polished or black finishes.

O-RING KITS

Interchangeable O-Ring Kits for Flat-Top & 7200 Series Antennas

	Flat-Top	7200 Series
RED	5402R	7200R
BLUE	5402B	7200B
WHITE	5402W	7200W
BLACK	5402K	7200K
GRAY	5402G	7200G




Flat-Top Kit Contains
4 large O-Rings

7200 Series Kit Contains
2 large & 2 small O-Rings

LICENSE PLATE FRAMES

Making a dramatic impact is easy when you install an AMI custom license plate frame. Frames are available in choices of plain or flamed style with tag light only, break light only, or with tag and break lights combined. Our plate frames are not stamped or cast they have been crafted from a solid sheet of aluminum. Choose either brushed or polished finish.

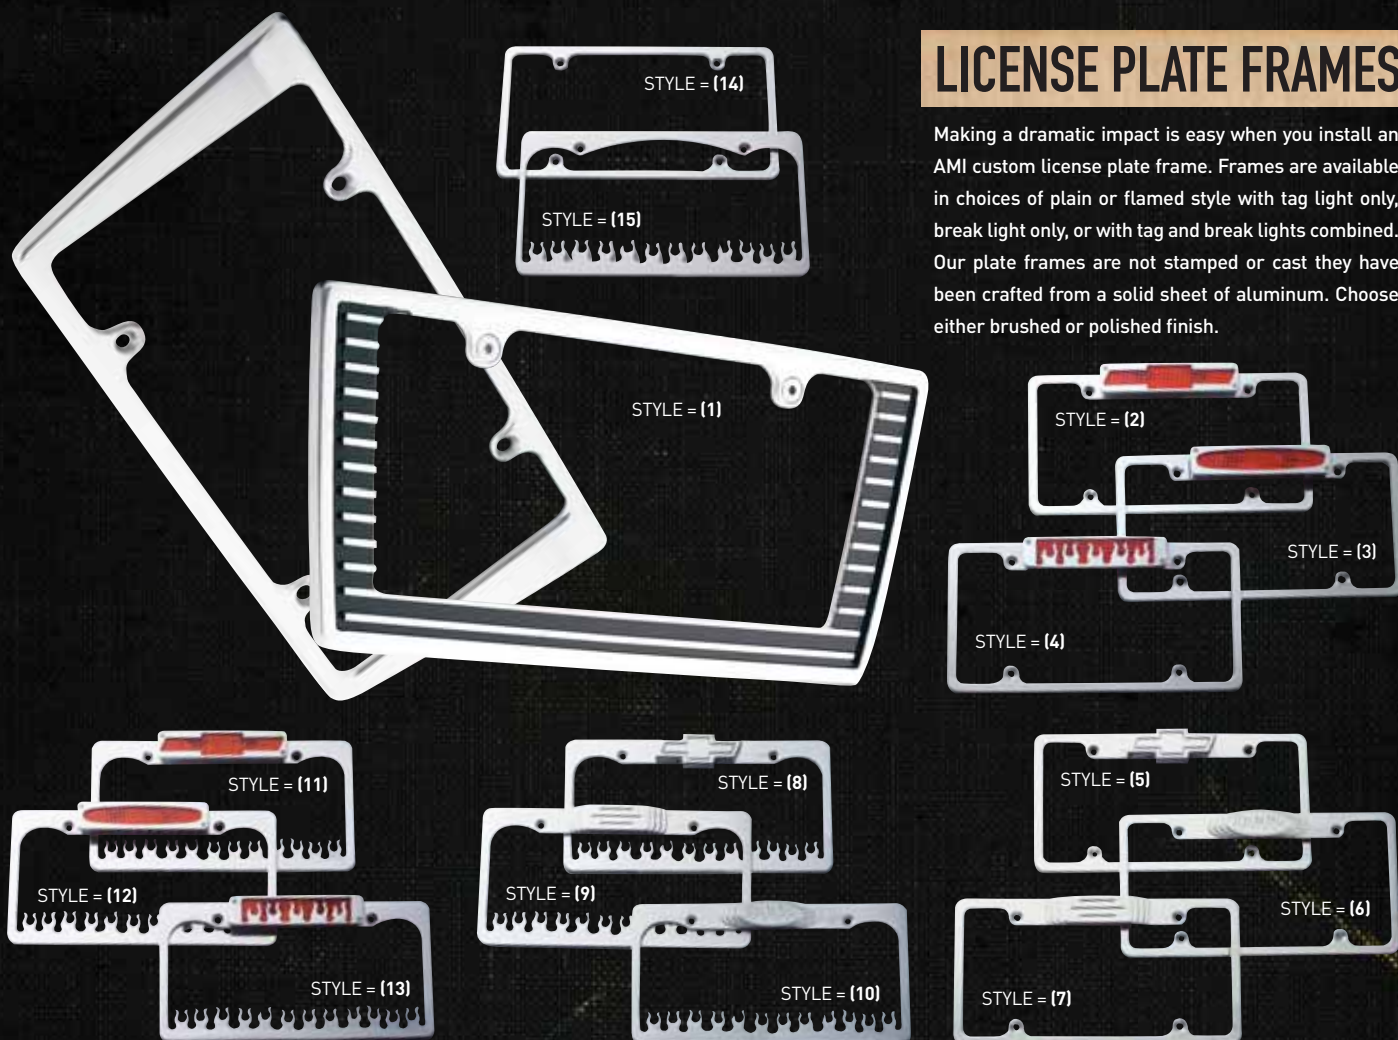

License Plate Frame Part # Reference Guide

STYLE = (1)	84003P	Tapered edge Plain	STYLE = (9)	84015TLP	w/tag lights
	84004P	Tapered edge Grille	STYLE = (10)	54115TLP	w/tag lights
	84215P	Tapered edge Flame	STYLE = (11)	94015LPP	w/o tag lights
STYLE = (2)	94000LPP	w/o tag lights		94115LPP	w/tag lights
	94002LPP	w/tag lights	STYLE = (12)	97015LPP	w/o tag lights
STYLE = (3)	97000LPP	w/o tag lights		97115LPP	w/tag lights
	97002LPP	w/tag lights	STYLE = (13)	98153LPP	w/o tag lights
STYLE = (4)	97153LPP	w/o tag lights		98253LPP	w/tag lights
	97253LPP	w/tag lights	STYLE = (14)	84002P	Universal
STYLE = (5)	94000TLP	w/tag lights	STYLE = (15)	84115P	Universal
STYLE = (6)	54015TLP	w/tag lights			
STYLE = (7)	84000TLP	w/tag lights			
STYLE = (8)	94015TLP	w/tag lights			

All come standard polished.

Remove "P" from part # for brushed finish.



FLAME = 97153P

OVAL = 97003P

BOW TIE = 94003P

PEDESTAL 3RD BRAKE LIGHTS

Choose from three of our rear window-mounted third brake light designs. These pedestal lights will not only add value to your vehicle, but safety as well. They are great for street rods or older vehicles without third brake lights.

Remove "P" from part # for brushed finish.

3RD BRAKE LIGHT COVERS



Add value and enhance the appearance of your vehicle. Third brake light covers easily install over existing third brake light using original holes without modification or drilling. Our complete line of third brake light covers are available to fit most trucks and SUVs*. Crafted from 6061-T6 aircraft aluminum.

BOWTIE

EURO



THIRD BRAKE LIGHT COVER COLLECTION – CHOOSE FROM THESE STYLES

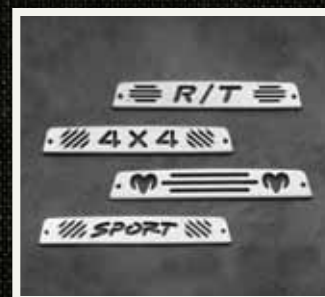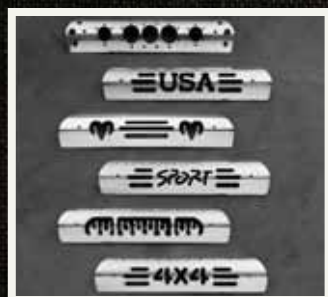


3rd Brake Light Cover Part # Reference Guide

GM	BOWTIE	BLAST	BOMB	4X4	GMC	Z71	FLAME	SS	EURO	USA	TAHOE	YUKON	DENALI	HARLEY
'94-'98 F/S Trucks	94000P	94001P	94002P	94004P	94005P	94008P	94015P	N/A	94020P	94400P	N/A	N/A	N/A	HD94000P
'99-'07 Classic	94009P	94012P	N/A	94014P	94011P	94010P	94115P	94016P	94120P	94409P	N/A	N/A	N/A	HD94009P
'07-'09 new body style	98000P	N/A	N/A	98004P	98005P	98008P	98015P	N/A	98020P	98400P	N/A	N/A	N/A	HD98000P
'94-'03 S15/S10 std cab*	94006P	94013P	N/A	N/A	94007P	N/A	94215P	N/A	94220P	94406P	N/A	N/A	N/A	N/A
'94-'03 S10/15 ext cab*	94006XP	94013XP	N/A	N/A	94007XP	N/A	94215XP	N/A	94220XP	94406XP	N/A	N/A	N/A	N/A
'04-'09 Colorado/Canyon*	95000P	N/A	N/A	95004P	95005P	95008P	95015P	N/A	95020P	95400P	N/A	N/A	N/A	HD95000P
'07 NBS-'09 Tahoe/Yukon*	97000P	N/A	N/A	N/A	97005P	N/A	97015P	N/A	97020P	97400P	97018P	97019P	97017P	HD97000P
FORD	OVAL	BLAST	BOMB	4X4	FLAME	EURO	USA	HARLEY						
'97-'03 F-150 Excursion*	54004P	54007P	N/A	54012P	54015P	54020P	54404P	HD54004P						
'94-'98 F150-350 Bronco	54005P	54008P	54011P	54013P	54115P	54120P	54405P	HD54005P						
'99-'09 F250/F350HD	54006P	54009P	54010P	54014P	54215P	54220P	54406P	HD54006P						
'99-'06 SportTrac	54006P	54009P	54010P	54014P	54215P	54220P	54406P	HD54006P						
'94-'08 Ranger	54006P	54009P	54010P	54014P	54215P	54220P	54406P	HD54006P						
'04-'08 F-150*	55004P	55007P	N/A	55012P	55015P	55020P	55504P	HD54004P						
DODGE	SPORTSMAN	BLAST	4X4	SPORT	BOMB	R/T	FLAME	EURO	USA	HARLEY				
'02-'09 F/S Ram*	43000P	N/A	43004P	43003P	N/A	N/A	43015P	43020P	43400P	HD43000P				
'94-'01 F/S Ram	44000P	44004P	44007P	44003P	44001P	44010P	44015P	44020P	44400P	HD44000P				
'97-'09 Dakota	44011P	44005P	44008P	44002P	44006P	44009P	44115P	44120P	44402P	HD44011P				
JEEP	OVAL	BLAST	SPORT	4X4	FLAME	EURO	USA	HARLEY						
'94-'06 Wrangler TJ	N/A	31001P	31003P	31004P	31015P	31020P	31400P	HD31000P						
'07-'09 Wrangler JK	32000P	N/A	32003P	32004P	32015P	32020P	32400P	HD32000P						
TOYOTA	YO	TOY	LIT/BOLT	TRD	4X4	FLAME	EURO	HARLEY						
'96-'04 T100 & Tacoma	74000P	74001P	74002P	74003P	74004P	74015P	74020P	HD74000P						
'05-'09 T100 & Tacoma	75000P	75001P	75002P	75003P	75004P	75015P	75020P	HD75000P						
'99-'07 Tundra	74005P	74007P	N/A	74009P	74010P	74115P	74120P	HD74005P						
'08-'09 Tundra	76000P	76001P	N/A	76003P	76004P	76015P	76020P	HD76000P						
NISSAN	OVAL	4X4	FLAME	EURO	USA									
'04-'08 Titan	11004P	11014P	11015P	11020P	11404P									

All come standard polished.

Remove "P" from part # for brushed finish.

*Not available in brushed.

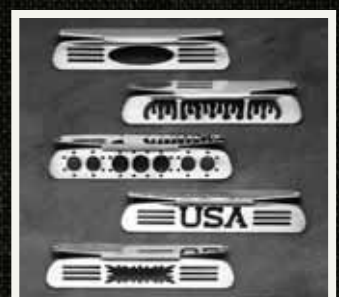



STYLE = (TRIBAL)
EACH STYLE LIGHTS UP IN RED, GREEN OR BLUE



STYLE = (FLAME)
EACH STYLE LIGHTS UP IN RED, GREEN OR BLUE



6" RISER FORMULA



4" RISER SLANT

Comes with pocket-sized remote control. With just a press of a button you can change your spoiler to any vibrant color: Red, Blue, Green, or even mix your colors.



STYLE = (STRIPED)
EACH STYLE LIGHTS UP IN RED, GREEN OR BLUE

Gwing Part # Reference Guide

US PATENT # 7063375

SLANT SIDES

	STRIPED	FLAME	TRIBAL
2" NON-ADJUSTABLE RISER	200L	203L	212L
4" ADJUSTABLE RISER	201L	204L	213L
6" ADJUSTABLE RISER	202L	205L	214L

FORMULA SIDES

	STRIPED	FLAME	TRIBAL
4" ADJUSTABLE RISER	206L	208L	215L
6" ADJUSTABLE RISER	207L	209L	216L

MUSTANG '99-'04 (REPLACES FACTORY ADD-ON)

SLANT SIDES

	STRIPED	FLAME	TRIBAL
2" NON-ADJUSTABLE RISER	210L	211L	220L
4" ADJUSTABLE RISER	217L	218L	219L

May not be legal to light up on the highway in your area; check your local laws.

DASH ACCENTS

Tailor your dashboard to your liking by adding easy to install brushed metal dash accents. Complete with a self-adhesive backing and stainless finish.



Accents Part # Reference Guide

JEEP

'07-'09 Wrangler JK 3400

DODGE

'02-'05 Full-size truck 4700

'06-'09 Full-size truck 4701

FORD

'05-'07 F250, F350 5700

'04-'08 F150 5701

TOYOTA

'07-'09 Tundra 7400

CHEVY, GMC

'03-'07 CBS 9700

'07 NBS-'09 9701

handle above window controls

'07 NBS-'09 9702

handle below window controls

CBS - Classic Body Style

NBS - New Body style



IRON CROSS | STYLE = (IC)



FLAME | STYLE = (F)



SKULL | STYLE = (SK)
The Eyes Light up!



HANG LOOSE | STYLE = (HL)



STAR | STYLE = (ST)



HIBISCUS | STYLE = (H)



O-RING | STYLE = (R)

KNOB SETS

Cap off your truck's interior in style with our huge collection of heater/ac knobs, radio dials, levers and locks. Quick and easy to install...just pull off and push on!

HOW TO SELECT THE CORRECT KNOB SET

When you are ready to select the AC Knob Set for your vehicle, locate the part no. from the application chart at the bottom of this page, then add the options from this list.

EXAMPLE ORDER

Knob Set for a '98 Dodge Full-size Truck
4400R = Plain polished Knob set
(part # 4400 + opt R)
4400SKB= Skull Knob Set Blue
(part # 4400 + opt SK for skull
+ opt B for blue)

All O-ring knob kits come standard with black o-rings. All knob kits come with colored plastic for indicator hole.

Style & Color Options

(Add the style option to the end of the part #)

Iron CrossSTYLE = (IC)
Flame.....STYLE = (F)
Skull.....STYLE = (SK)
Hang Loose.....STYLE = (HL)
Star.....STYLE = (ST)
Hibiscus.....STYLE = (H)
O-Ring.....STYLE = (R)

Knob Color Option

Polished is standard.

BlackSTYLE = (K)
RedSTYLE = (R)
BlueSTYLE = (B)

O-RING KITS Five Custom "O-Ring" Colors Kit contains six O-Rings

Radio Knob O-Rings

Blue 2200B
Gray 2200G
Black 2200K
Red 2200R
White 2200W

Door Lock O-Rings

Blue 5402B
Gray 5402G
Black 5402K
Red 5402R
White 5402W

Tilt/Shift Levers O-Rings

Blue 5403B
Gray 5403G
Black 5403K
Red 5403R
White 5403W



Knob Part # Reference Guide

GM, CHEVY, GMC

	HEATER/AC		HEADLIGHT
'99-'02 Full-size truck	9400	set of 3	9451
'03-'07 CBS with manual controls	9403	set of 2	9451
'03-'04 With computer controls	9405	set of 2	9451
'04-'07 CBS with computer controls	6400	set of 2	9451
'94-'98 Full-size	9401	set of 3	9450

HUMMER H2

'03-'07	6400	set of 2	9451
---------	------	----------	------

CHRYSLER, DODGE

'02-'09 Full-size truck	4401	set of 3	N/A
'02-'09 Laramie	4402	set of 2	N/A
'98-'01 Full-size truck	4400	set of 3	N/A

JEEP

	HEATER/AC		HEADLIGHT
'97-'06 Wrangler TJ with knobs	3400	set of 3	N/A

FORD

'92-'96 F150	5400	set of 3	N/A
'94-'04 F250	5400	set of 3	N/A
'05-'07 F250 Superduty	5411	set of 3	N/A
'05-'07 F250 4WD, knob only	5412	1 knob	N/A
'94-'04 Ranger, Excursion	5400	set of 3	N/A
'97-'03 F150, Expedition	5401	set of 3	N/A
'04-'08 F150	5407	set of 3	N/A
'04-'08 F150 4WD knob	5408	1 knob	N/A
'04-'08 F150 AC+4WD Knob Kit	5409	set of 4	N/A
'05-'08 Mustang	5407	set of 3	N/A

DOOR SILLS

Brilliance is always found in the details. Install our solid 6061-T6 aircraft aluminum sills to your door frame to add personality where you never thought possible. Available in brushed and polished finishes.



Door Sill Part # Reference Guide

'08 FORD Superduty Crew Cab Front Sill Plate Ball-Milled	5200P
'08 FORD Superduty Crew Cab Front Sill Plate Flame	5200FP
'08 FORD Superduty Crew Cab Front Sill Plate S-DUTY	5200SDP
'08 FORD Superduty Crew Cab Front Sill Plate Tribal	5200TP
'08 FORD Superduty Crew Cab Rear Sill Plate Ball-Milled	5201P
'08 FORD Superduty Crew Cab Rear Sill Plate Flame	5201FP
'08 FORD Superduty Crew Cab Rear Sill Plate S-DUTY	5201SDP
'08 FORD Superduty Crew Cab Rear Sill Plate Tribal	5201TP
'07-'08 FORD F-150 Crew Cab Front Sill Plate Ball-Milled	5202P
'07-'08 FORD F-150 Crew Cab Front Sill Plate Flame	5202FP
'07-'08 FORD F-150 Crew Cab Front Sill Plate Tribal	5200TP
'07-'08 FORD F-150 Crew Cab Rear Sill Plate Ball Milled	5203P
'07-'08 FORD F-150 Crew Cab Rear Sill Plate Flame	5203FP
'07-'08 FORD F-150 Crew Cab Rear Sill Plate Tribal	5203TP
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Front Sill Plate Ball-Milled	9200P
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Front Sill Plate D-MAX	9200DMP
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Front Sill Plate Flame	9200FP
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Front Sill Plate Tribal	9200TP
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Rear Sill Plate Ball-Milled	9201P
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Rear Sill Plate D-MAX	9201DMP
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Rear Sill Plate Flame	9201FP
'07 NBS-'08 GM 1500/2500 Crew Cab, Tahoe, Yukon, Avalanche Rear Sill Plate Tribal	9201TP
'07 NBS-'08 GM 1500/2500 Extended Cab Front Sill Plate Ball-Milled	9202P
'07 NBS-'08 GM 1500/2500 Extended Cab Front Sill Plate Flame	9202FP
'07 NBS-'08 GM 1500/2500 Extended Cab Front Sill Plate Tribal	9202TP
'07 NBS-'08 GM 1500/2500 Extended Cab Rear Sill Plate Ball-Milled	9203P
'07 NBS-'08 GM 1500/2500 Extended Cab Rear Sill Plate Flame	9203FP
'07 NBS-'08 GM 1500/2500 Extended Cab Rear Sill Plate Tribal	9203TP

All come standard polished. Remove "P" from part # for brushed finish.

MIRRORS

Add a custom rearview or side mirror in brilliant polish or brushed finish to enhance your vehicle's appearance from both interior and exterior viewpoints. Built using tinted glass to reduce glare and eliminate the need for day/night flipping.



Mirror Part # Reference Guide

XTREME FLAME

TOP	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	97715P
SIDE	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	97415P

OVAL

PLAIN 6"	71000P	71001P	71002P	71003P	71004P	SPECIAL ORDER	SPECIAL ORDER	75872P	71005P
PLAIN 9"	SPECIAL ORDER	91038P	N/A	N/A	91004P	93954P	95557P	95872P	97394P
FLAME ENGRAVED	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	97315P

RECTANGLE

BALL-MILLED	SPECIAL ORDER	21038P	N/A	N/A	21004P	23954P	25557P	25872P	27394P
FLAME ENGRAVED	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	27315P
DICE*	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	57394P
ROCK IT HARD®*	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	47394P
DIMMING MIRROR	SPECIAL ORDER	SPECIAL ORDER	N/A	N/A	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	SPECIAL ORDER	37394P

Remove "P" from part # for brushed finish. *Not available in brushed.

NEW FOR 2009



TOYOTA "FJ" ACCESSORIES
PAGE #8



JEEP "ROCK IT HARD" ACCESSORIES
PAGE #3



NEW FUEL DOORS
PAGE #12-13



THE NEW "BIG STICK" ANTENNA
PAGE #14

WINDSHIELD WASHER COVERS
PAGE #9



All Sales Manufacturing Inc.
5121 Hillside Circle
El Dorado Hills, CA 95762
(P) 916/933.0236 | (F) 916/933.3872
allsalesmig.com



GMC Bow Tie, Z71, H2, H3 and Hummer are registered trademarks of General Motors Corp., used under license by AllSales Manufacturing, El Dorado Hills, CA 95762

All products are manufactured in the United States.
Call for custom applications